

---

**1997**  
**BMW**  
**Z3**  
**(E36/7)**

---

**Electrical**  
**Troubleshooting**  
**Manual**

---

Vehicles Produced 9/96 thru 8/97



# ELECTRICAL TROUBLESHOOTING MANUAL

## SERIES 3 – E36/7 (Z3 Roadster)

### SCHEMATICS

### MODEL YEAR 1997

0100.0	INDEX	6160.1	WIPER/WASHER MODULE (WWM)
0110.0	INTRODUCTION	6167.1	HEADLIGHT WASHER (SRA)
0140.0	SYMBOLS	6169.0	WINDSHIELD WASHER JET
0670.0	POWER DISTRIBUTION CHART		HEATERS
0670.1	FUSE CHART	6211.0	INSTRUMENT CLUSTER
0670.2	POWER DISTRIBUTION	6213.3	DIGITAL CLOCK
0670.3	FUSE DETAILS	6300.0	LIGHT SWITCH DETAILS
0670.4	GROUND DISTRIBUTION	6312.0	HEADLIGHTS/FOG LIGHTS
0670.5	DATA LINK	6313.0	TURN/HAZARD LIGHTS
1210.17	ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)	6314.0	PARK/TAIL/UNDERHOOD LIGHTS
1210.20	ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M44)	6320.0	LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS
1230.0	CHARGING SYSTEM	6322.0	BACK UP LIGHTS
1240.0	START	6325.0	BRAKE LIGHTS
1290.0	E-BOX FAN	6330.3	INTERIOR LIGHTS
2460.2	ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310R)	6332.0	INTERIOR ACCESSORIES
3234.0	SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)	6350.0	CRASH CONTROL MODULE
3450.0	SLIP CONTROL (ABS)	6424.0	REAR WINDOW DEFOGGER
3450.1	SLIP CONTROL (ABS/ASC)	6450.6	INTEGRATED HEATING– AND CLIMATE CONTROL
5116.0	POWER MIRRORS	6510.1	RADIO/HIFI
5126.0	ZKE CENTRAL LOCKING (ZV)	6561.0	CELLULAR TELEPHONE (PROVISIONS)
5133.0	ZKE POWER WINDOWS (FH)	6571.0	CRUISE CONTROL (TEMPOMAT)
5200.0	POWER SEATS	6575.2	ANTI-THEFT SYSTEM (ALPINE)
5203.0	HEATED SEATS	6581.3	BOARD COMPUTER (BC-LOW)
6100.0	CENTRAL BODY ELECTRONICS (ZKE IV)	7000.0	COMPONENT LOCATION CHART
6133.0	HORN	7100.0	COMPONENT LOCATION VIEWS
6135.0	DRIVE-AWAY PROTECTION (EWS II)	8000.0	SPICE LOCATION VIEWS
		8500.0	CONNECTOR VIEWS

ABS CONTROL MODULE/HYDRAULIC UNIT, A202 .....	3450.0
ABS HYDRAULIC UNIT, Y1w .....	3450.1-01
ABS HYDRAULIC UNIT, Y1w .....	3450.1-07
ABS HYDRAULIC UNIT, Y1w .....	3450.1-11
ABS PUMP MOTOR RELAY, K75 .....	3450.1-00
ABS PUMP MOTOR RELAY, K75 .....	3450.1-06
ABS PUMP MOTOR RELAY, K75 .....	3450.1-10
ABS RELAY, K10 .....	3450.1-00
AIR BAG GAS GENERATOR, DRIVER'S, G5 .....	3234.0-00
AIR BAG GAS GENERATOR, PASSENGER'S, G6 .....	3234.0-00
AIR CONDITIONING COMPRESSOR, Y2 .....	6450.6-02
AIR CONDITIONING/RECIRCULATING SWITCH ASSEMBLY, S220 .....	6450.6-01
AIR PUMP, Y6133 .....	1210.17-05
AIR PUMP, Y6133 .....	1210.20-09
ANTENNA AMPLIFIER AM/FM, N8 .....	6510.1-00
ANTI-THEFT CONTROL MODULE (ALPINE), N12w .....	6575.2
ANTI-THEFT HORN (ALPINE), H1w .....	6575.2-01
ANTI-THEFT SYSTEM (ALPINE) .....	6575.2
ASC DIODE, V7 .....	3450.1-00
ASC SWITCH, S6 .....	3450.1-02
ASC SWITCH, S6 .....	3450.1-05
ASC SWITCH, S6 .....	3450.1-09
AUTOMATIC TRANSMISSION RANGE SWITCH, S3 .....	2460.2-08
AUXILIARY FAN MOTOR, M9 .....	6450.6-03
AUXILIARY FAN MOTOR, M9 .....	6450.6-04
AUXILIARY FUSE BOX, P97 .....	0670.2-02
AUXILIARY THROTTLE POSITION MOTOR (ADS), M93 .....	3450.1-02
AUXILIARY THROTTLE POSITION MOTOR (ADS), M93 .....	3450.1-09
AUXILIARY THROTTLE POSITION SENSOR, R31 .....	3450.1-04
AUXILIARY THROTTLE POSITION SENSOR, R31 .....	3450.1-09
AUXILIARY TURN LIGHT, LEFT FRONT, H9 .....	6313.0-02
AUXILIARY TURN LIGHT, RIGHT FRONT, H8 .....	6313.0-02
B+ JUMP START JUNCTION POINT, G6430 .....	0670.2-00
B+ JUMP START JUNCTION POINT, G6430 .....	0670.2-01

BACK UP LIGHT, LEFT, H27 .....	6322.0-00
BACK UP LIGHT, RIGHT, H28 .....	6322.0-00
BACK UP LIGHTS .....	6322.0-00
BATTERY, G1 .....	0670.2-00
BATTERY, G1 .....	0670.2-01
BLOWER MOTOR, M30 .....	6450.6-00
BLOWER RELAY, K4 .....	6450.6-00
BLOWER RESISTORS, R11 .....	6450.6-00
BLOWER SWITCH, S75 .....	6450.6-00
BOARD COMPUTER (BC-LOW) .....	6581.3-00
BOARD COMPUTER (BC-LOW), A35y .....	6581.3-00
BRAKE FLUID LEVEL SWITCH, B18 .....	6211.0-00
BRAKE LIGHT SWITCH, S30 .....	6325.0-00
BRAKE LIGHT, LEFT, H24 .....	6325.0-00
BRAKE LIGHTS .....	6325.0-00
BRAKE PAD SENSOR, LEFT FRONT, B16 .....	6211.0-01
BRAKE PAD SENSOR, RIGHT REAR B17 .....	6211.0-01
CAMSHAFT POSITION SENSOR (CYLINDER IDENTIFICATION), B6204 .....	1210.17-06
CD CHANGER, N22 .....	6510.1
CELLULAR TELEPHONE (PROVISIONS) .....	6561.0-00
CENTRAL BODY ELECTRONICS (ZKE IV) .....	6100.0
CHARCOAL FILTER SHUT-OFF VALVE, B6247 .....	1210.17-10
CHARCOAL FILTER SHUT-OFF VALVE, B6247 .....	1210.20-02
CHARGING SYSTEM .....	1230.0-00
CHIME MODULE, H10 .....	6211.0-05
CLUTCH SWITCH, S32 .....	6571.0-01
COMBINATION SWITCH, S7 .....	6313.0-00
COMPONENT LOCATION CHART .....	7000.0
COMPONENT LOCATION VIEWS .....	7100.0
COMPRESSOR CONTROL RELAY, K19 .....	6450.6-02
CONNECTOR VIEWS .....	8500.0
CONTACT RING, C101 .....	3234.0-00
CONVERTIBLE TOP ACTUATING SWITCH, S143 .....	5430.0-00
CONVERTIBLE TOP END-POSITION MICRO SWITCH, S164 ..	5430.0-00

CONVERTIBLE TOP MOTOR, M101 .....	5430.0-00
CONVERTIBLE TOP RELAY I (CLOSE), K18363 .....	5430.0-00
CONVERTIBLE TOP RELAY II (OPEN), K18364 .....	5430.0-00
CRANKSHAFT POSITION/RPM SENSOR, B6203 .....	1210.17-06
CRANKSHAFT POSITION/RPM SENSOR, B6203 .....	1210.20-04
CRASH CONTROL MODULE .....	6350.0
CRASH CONTROL MODULE, N17 .....	6350.0-01
CRUISE CONTROL (TEMPOMAT) .....	6571.0
CRUISE CONTROL ACTUATOR (TEMPOMAT), M25 .....	6571.0-01
CRUISE CONTROL MODULE (TEMPOMAT), A8 .....	6571.0
CRUISE CONTROL SWITCH, S28 .....	6571.0-00
DATA LINK .....	0670.5
DATA LINK CONNECTOR, D100 .....	0670.5
DIGITAL CLOCK .....	6213.3-00
DIGITAL CLOCK, A110 .....	6213.3-00
DOOR JAMB SWITCH, DRIVER'S, S14 .....	5126.0-01
DOOR JAMB SWITCH, PASSENGER'S, S13 .....	5126.0-01
DOOR LOCK MOTOR, DRIVER'S, M12 .....	5126.0-02
DOOR LOCK MOTOR, PASSENGER'S, M13 .....	5126.0-02
DOOR LOCK SWITCH, DRIVER'S, S47 .....	5126.0-00
DOOR LOCK SWITCH, PASSENGER'S, S49 .....	5126.0-00
DOUBLE TEMPERATURE SWITCH, S36y .....	6450.6-04
DRIVE-AWAY PROTECTION (EWS II) .....	6135.0
DUAL TEMPERATURE SENSOR (COOLANT TEMPERATURE), B6256 .....	1210.17-02
E-BOX FAN .....	1290.0-00
E-BOX FAN, M6506 .....	1290.0-00
ELECTRO-MECHANICAL CONVERTIBLE TOP .....	5430.0
ELECTRONIC IMMOBILIZER CONTROL MODULE (EWS II), A836 .....	6135.0-00
ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310R) .....	2460.2
ENGINE CONTROL MODULE (DME), A6000 .....	1210.17
ENGINE CONTROL MODULE (DME), A6000 .....	1210.20
ENGINE CONTROL MODULE RELAY, K6300 .....	1210.17-00
ENGINE CONTROL MODULE RELAY, K6300 .....	1210.20-00

ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M44) .....	1210.20
ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52) .....	1210.17
ENGINE COOLANT TEMPERATURE SENSOR, B6232 .....	1210.17-02
ENGINE COOLANT TEMPERATURE SENSOR, B6232 .....	1210.20-05
ENGINE COOLANT TEMPERATURE SENSOR, B6232 .....	6211.0-02
ENGINE COOLANT TEMPERATURE SENSOR, B6236 .....	1210.17-02
ENGINE HOOD SWITCH, S21w .....	6575.2-00
EVAPORATIVE EMISSION VALVE, Y6120 .....	1210.17-05
EVAPORATIVE EMISSION VALVE, Y6120 .....	1210.20-01
EVAPORATOR CONTROLLER, S221 .....	6450.6-01
EVAPORATOR TEMPERATURE SENSOR, B14 .....	6450.6-01
FOG LIGHT SWITCH, S10 .....	6312.0-00
FOG LIGHT, LEFT, E26 .....	6312.0-00
FRESH AIR RECIRCULATION MOTOR, M111 .....	6450.6-01
FRONT ASHTRAY LIGHT, E25 .....	6300.0-01
FRONT ASHTRAY LIGHT, E25 .....	6332.0-00
FRONT CIGAR LIGHTER LIGHT, E29 .....	6300.0-01
FRONT CIGAR LIGHTER LIGHT, E29 .....	6332.0-00
FRONT CIGAR LIGHTER, E28 .....	6332.0-00
FRONT FOG LIGHT RELAY, K47 .....	6312.0-00
FRONT POWER DISTRIBUTION BOX, P90 .....	0670.2
FUEL CHANGEOVER VALVE, Y6263 .....	1210.20-09
FUEL INJECTION VALVE, CYL. 1, Y6101 .....	1210.17-01
FUEL INJECTION VALVE, CYL. 1, Y6101 .....	1210.20-01
FUEL INJECTION VALVE, CYL. 2, Y6102 .....	1210.17-01
FUEL INJECTION VALVE, CYL. 2, Y6102 .....	1210.20-01
FUEL INJECTION VALVE, CYL. 3, Y6103 .....	1210.17-01
FUEL INJECTION VALVE, CYL. 3, Y6103 .....	1210.20-01
FUEL INJECTION VALVE, CYL. 4, Y6104 .....	1210.17-01
FUEL INJECTION VALVE, CYL. 4, Y6104 .....	1210.20-01
FUEL INJECTION VALVE, CYL. 5, Y6105 .....	1210.17-01
FUEL INJECTION VALVE, CYL. 6, Y6106 .....	1210.17-01
FUEL PUMP RELAY, K6301w .....	1210.17-04
FUEL PUMP RELAY, K6301w .....	1210.20-02
FUEL PUMP, M2 .....	1210.17-04

FUEL PUMP, M2 .....	1210.20-02
FUEL SENSOR, B6y .....	6211.0-04
FUEL TANK PRESSURE SENSOR, B65 .....	1210.17-10
FUEL TANK PRESSURE SENSOR, B65 .....	1210.20-05
FUSE CHART .....	0670.1
FUSE DETAILS .....	0670.3
GENERATOR, G6509 .....	1230.0-00
GROUND DISTRIBUTION .....	0670.4
HALL EFFECT CAMSHAFT SENSOR, B6209 .....	1210.20-04
HARD TOP CONNECTOR 1, E99 .....	6424.0-00
HAZARD FLASHER RELAY, K16 .....	6313.0-00
HAZARD SWITCH, S18 .....	6313.0-01
HEADLIGHT WASHER (SRA) .....	6167.1-00
HEADLIGHT, LEFT, E7 .....	6312.0-01
HEADLIGHT, RIGHT, E8 .....	6312.0-01
HEADLIGHT/FOG LIGHT WASHER PUMP, M7 .....	6160.1-00
HEADLIGHT/FOG LIGHT WASHER PUMP, M7 .....	6167.1-00
HEADLIGHTS/FOG LIGHTS .....	6312.0
HEAT/A/C CONTROL PANEL ILLUMINATION, E105 .....	6300.0-02
HEAT/A/C CONTROL PANEL ILLUMINATION, E106 .....	6300.0-02
HEATED SEATS .....	5203.0-00
HIFI AMPLIFIER, A18 .....	6510.1
HIGH BEAM LIGHT RELAY, K46 .....	6312.0-01
HIGH BEAM LIGHT, LEFT, E11 .....	6312.0-01
HIGH BEAM LIGHT, RIGHT, E12 .....	6312.0-01
HIGH LEVEL STOP LIGHT, H34 .....	6325.0-00
HIGH RANGE SPEAKER, LEFT FRONT, H59 .....	6510.1-01
HIGH RANGE SPEAKER, RIGHT FRONT, H50 .....	6510.1-02
HIGH SPEED RELAY, K22 .....	6450.6-03
HIGH SPEED RELAY, K22 .....	6450.6-04
HORN .....	6133.0-00
HORN RELAY, K2 .....	6133.0-00
HORN SWITCH, S4 .....	6133.0-00
HORN, LEFT, H2 .....	6133.0-00
HORN, RIGHT, H3 .....	6133.0-00

HOT FILM AIR MASS METER, B6207 .....	1210.17-05
HOT FILM AIR MASS METER, B6217 .....	1210.20-06
IDLE SPEED CONTROL VALVE, Y6130 .....	1210.20-01
IGNITION COIL, CYL. 1, T6151 .....	1210.17-03
IGNITION COIL, CYL. 1, T6151 .....	1210.20-03
IGNITION COIL, CYL. 2, T6152 .....	1210.17-03
IGNITION COIL, CYL. 2, T6152 .....	1210.20-03
IGNITION COIL, CYL. 3, T6153 .....	1210.17-03
IGNITION COIL, CYL. 3, T6153 .....	1210.20-03
IGNITION COIL, CYL. 4, T6154 .....	1210.17-03
IGNITION COIL, CYL. 4, T6154 .....	1210.20-03
IGNITION COIL, CYL. 5, T6155 .....	1210.17-03
IGNITION COIL, CYL. 6, T6156 .....	1210.17-03
IGNITION SWITCH, S2 .....	0670.2-04
INDEX .....	0100.0
INSTRUMENT CLUSTER .....	6211.0
INSTRUMENT CLUSTER, A2w .....	6211.0
INTAKE AIR RESONANCE CHANGEOVER VALVE, Y6131 .....	1210.20-01
INTAKE AIR TEMPERATURE SENSOR, B6205 .....	1210.17-02
INTAKE AIR TEMPERATURE SENSOR, B6205 .....	1210.20-05
INTEGRATED HEATING- AND CLIMATE CONTROL .....	6450.6
INTERIOR ACCESSORIES .....	6332.0-00
INTERIOR LIGHT, FRONT LEFT, E800 .....	6330.3-00
INTERIOR LIGHTS .....	6330.3-00
INTERMEDIATE PRESSURE SWITCH, B9 .....	6450.6-03
INTERMEDIATE PRESSURE SWITCH, B9 .....	6450.6-04
INTRODUCTION .....	0110.0
JET HEATER THERMOSWITCH, S198 .....	6169.0-00
JUMPER PLUG, B900 .....	6571.0-01
KICK-DOWN SWITCH, S8507 .....	2460.2-02
KICK-DOWN SWITCH, S8507 .....	2460.2-06
KNOCK SENSOR, B6240 .....	1210.17-06
KNOCK SENSOR, B6240 .....	1210.20-05
LICENSE PLATE LIGHT, LEFT, E43 .....	6320.0-00
LICENSE PLATE LIGHT, RIGHT, E44 .....	6320.0-00

LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS .....	6320.0-00
LIGHT ASSEMBLY, LEFT REAR, E16 .....	0670.4-12
LIGHT ASSEMBLY, RIGHT REAR E17 .....	0670.4-12
LIGHT SWITCH DETAILS .....	6300.0
LIGHT SWITCH, S8 .....	6300.0-00
LOW BEAM LIGHT RELAY, K48 .....	6312.0-01
LOW BEAM LIGHT, LEFT, E13 .....	6312.0-01
LOW BEAM LIGHT, RIGHT, E14 .....	6312.0-01
LOW RANGE SPEAKER, LEFT FRONT, H58 .....	6510.1-02
LOW RANGE SPEAKER, LEFT REAR, H57 .....	6510.1-01
LOW RANGE SPEAKER, RIGHT FRONT, H51 .....	6510.1-02
LOW RANGE SPEAKER, RIGHT REAR H52 .....	6510.1-01
LUGGAGE COMPARTMENT LIGHT SWITCH, S826 .....	6320.0-00
MARKER LIGHT, LEFT FRONT, E21 .....	6314.0-01
MARKER LIGHT, RIGHT FRONT, E22 .....	6314.0-01
MIDRANGE SPEAKER, LEFT FRONT, H55 .....	6510.1-01
MIDRANGE SPEAKER, RIGHT FRONT, H54 .....	6510.1-02
MIRROR CONTROL SWITCH, S17 .....	5116.0-00
MIRROR, DRIVER'S SIDE, Y5 .....	5116.0-01
MIRROR, PASSENGER'S SIDE, Y6 .....	5116.0-01
NORMAL SPEED RELAY, K21 .....	6450.6-03
NORMAL SPEED RELAY, K21 .....	6450.6-04
OBD II CONNECTOR, D110 .....	0670.5-05
OIL PRESSURE SWITCH, B6231 .....	6211.0-02
ON-BOARD COMPUTER TEMPERATURE SENSOR, B21 .....	6581.3-00
OXYGEN SENSOR (BEHIND CATALYTIC CONVERTER), B62002 .....	1210.20-04
OXYGEN SENSOR (BEHIND CATALYTIC CONVERTER), B6220y .....	1210.17-04
OXYGEN SENSOR (IN FRONT OF CATALYTIC CONVERTER), B62001 .....	1210.20-04
OXYGEN SENSOR (IN FRONT OF CATALYTIC CONVERTER), B6210y .....	1210.17-04
PARK BRAKE SWITCH, S31 .....	6211.0-00
PARK LIGHT, LEFT, E15 .....	6314.0-01

PARK LIGHT, RIGHT, E19 .....	6314.0-01
PARK/TAIL/UNDERHOOD LIGHTS .....	6314.0
POWER DISTRIBUTION .....	0670.2
POWER DISTRIBUTION CHART .....	0670.0
POWER MIRRORS .....	5116.0
POWER SEATS .....	5200.0
POWER WINDOW SWITCH, DRIVER'S, S126y .....	5133.0-01
POWER WINDOW SWITCH, PASSENGER'S, S127y .....	5133.0-01
PRESSURE SWITCH, B8y .....	6450.6-03
PRESSURE SWITCH, B8y .....	6450.6-04
PRESSURE SWITCH, B9508 .....	6450.6-03
PRESSURE SWITCH, B9508 .....	6450.6-04
PROGRAM SWITCH, S8503 .....	2460.2-03
PROGRAM SWITCH, S8503 .....	2460.2-07
PYROTECHNICAL BELT TENSIONER, DRIVER'S SIDE, G12 .....	3234.0-00
PYROTECHNICAL BELT TENSIONER, PASSENGER'S SIDE, G13 .....	3234.0-00
RADIO ANTI-THEFT SWITCH, S20w .....	6575.2-00
RADIO, N9 .....	6510.1
RADIO/HIFI .....	6510.1
REAR DEFOGGER I, E9 .....	6424.0-00
REAR LEFT MID-HIGH RANGE SPEAKER, H55z .....	6510.1-01
REAR RIGHT MID-HIGH RANGE SPEAKER, H54z .....	6510.1-01
REAR WINDOW DEFOGGER .....	6424.0-00
REAR WINDOW DEFOGGER SWITCH, S76 .....	6424.0-00
REAR WOOFER, H500 .....	6510.1-01
RESISTOR, R8554 .....	0670.4-07
REVERSING LIGHT SWITCH, S8511 .....	6322.0-00
RIGHT BRAKE LIGHT, RIGHT, H31 .....	6325.0-00
RIGHT FOG LIGHT, RIGHT, E27 .....	6312.0-00
SEAT BELT SWITCH, DRIVER'S, S58 .....	3234.0-01
SEAT BELT SWITCH, PASSENGER'S, S59 .....	3234.0-01
SEAT CONTROL SWITCH, DRIVER'S SEAT, S51 .....	5200.0-00
SEAT CONTROL SWITCH, DRIVER'S SEAT, S51 .....	5200.0-02

SEAT CONTROL SWITCH, DRIVER'S SEAT, S51 .....	5200.0-04
SEAT CONTROL SWITCH, DRIVER'S SEAT, S51 .....	5200.0-06
SEAT CONTROL SWITCH, PASSENGER'S SEAT, S56 .....	5200.0-01
SEAT CONTROL SWITCH, PASSENGER'S SEAT, S56 .....	5200.0-03
SEAT CONTROL SWITCH, PASSENGER'S SEAT, S56 .....	5200.0-05
SEAT CONTROL SWITCH, PASSENGER'S SEAT, S56 .....	5200.0-07
SEAT HEATER SWITCH, DRIVER'S SEAT, S53 .....	5203.0-00
SEAT HEATER SWITCH, PASSENGER'S SEAT, S54 .....	5203.0-00
SEAT HEATER, DRIVER'S, E57 .....	5203.0-00
SEAT HEATER, PASSENGER'S, E58 .....	5203.0-00
SEAT HEIGHT MOTOR, DRIVER'S, M52 .....	5200.0-00
SEAT HEIGHT MOTOR, DRIVER'S, M52 .....	5200.0-02
SEAT HEIGHT MOTOR, DRIVER'S, M52 .....	5200.0-04
SEAT HEIGHT MOTOR, DRIVER'S, M52 .....	5200.0-06
SEAT HEIGHT MOTOR, PASSENGER'S, M59 .....	5200.0-01
SEAT HEIGHT MOTOR, PASSENGER'S, M59 .....	5200.0-03
SEAT HEIGHT MOTOR, PASSENGER'S, M59 .....	5200.0-05
SEAT HEIGHT MOTOR, PASSENGER'S, M59 .....	5200.0-07
SEAT LENGTH ADJUST CUT-OFF RELAY, DRIVER'S, K921 .....	5200.0-02
SEAT LENGTH ADJUST CUT-OFF RELAY, DRIVER'S, K921 .....	5200.0-06
SEAT LENGTH ADJUST CUT-OFF RELAY, PASSENGER'S, K911 .....	5200.0-03
SEAT LENGTH ADJUST CUT-OFF RELAY, PASSENGER'S, K911 .....	5200.0-07
SEAT LIMIT SWITCH, DRIVER'S, S910 .....	5200.0-02
SEAT LIMIT SWITCH, DRIVER'S, S910 .....	5200.0-06
SEAT LIMIT SWITCH, PASSENGER'S, S911 .....	5200.0-03
SEAT LIMIT SWITCH, PASSENGER'S, S911 .....	5200.0-07
SEAT MAT, I1008 .....	3234.0-02
SEAT MOVEMENT MOTOR, DRIVER'S, M51 .....	5200.0-00
SEAT MOVEMENT MOTOR, DRIVER'S, M51 .....	5200.0-02
SEAT MOVEMENT MOTOR, DRIVER'S, M51 .....	5200.0-04
SEAT MOVEMENT MOTOR, DRIVER'S, M51 .....	5200.0-06
SEAT MOVEMENT MOTOR, PASSENGER'S, M60 .....	5200.0-01
SEAT MOVEMENT MOTOR, PASSENGER'S, M60 .....	5200.0-03

SEAT MOVEMENT MOTOR, PASSENGER'S, M60 .....	5200.0-05
SEAT MOVEMENT MOTOR, PASSENGER'S, M60 .....	5200.0-07
SEAT OCCUPANCY DETECTOR, A113 .....	3234.0-02
SEAT TILT ADJUST CUT-OFF RELAY, DRIVER'S, K920 .....	5200.0-02
SEAT TILT ADJUST CUT-OFF RELAY, DRIVER'S, K920 .....	5200.0-06
SEAT TILT ADJUST CUT-OFF RELAY, PASSENGER'S, K910 .....	5200.0-03
SEAT TILT ADJUST CUT-OFF RELAY, PASSENGER'S, K910 .....	5200.0-07
SEATBACK HEATER, DRIVER'S, E56 .....	5203.0-00
SEATBACK HEATER, PASSENGER'S, E59 .....	5203.0-00
SECONDARY AIR PUMP RELAY, K6304 .....	1210.17-05
SECONDARY AIR PUMP RELAY, K6304 .....	1210.20-09
SECONDARY AIR PUMP VALVE, Y6163 .....	1210.17-05
SECONDARY AIR PUMP VALVE, Y6163 .....	1210.20-09
SHIFT-LOCK,Y19 .....	2460.2-02
SHIFT-LOCK,Y19 .....	2460.2-05
SIDE LIGHT SWITCH, S408 .....	6330.3-00
SLIP CONTROL (ABS) .....	3450.0
SLIP CONTROL (ABS/ASC) .....	3450.1
SLIP CONTROL MODULE (ABS/ASC), A52 .....	3450.1
SOLENOID VALVE ("RUNNING LOSSES"), Y6550 .....	1210.17-05
SPEED SENSOR – ABS, LEFT FRONT, B2 .....	3450.0-01
SPEED SENSOR – ABS, LEFT FRONT, B2 .....	3450.1-03
SPEED SENSOR – ABS, LEFT FRONT, B2 .....	3450.1-08
SPEED SENSOR – ABS, LEFT FRONT, B2 .....	3450.1-12
SPEED SENSOR – ABS, LEFT REAR, B4 .....	3450.0-01
SPEED SENSOR – ABS, LEFT REAR, B4 .....	3450.1-03
SPEED SENSOR – ABS, LEFT REAR, B4 .....	3450.1-08
SPEED SENSOR – ABS, LEFT REAR, B4 .....	3450.1-12
SPEED SENSOR – ABS, LEFT REAR, B4 .....	3450.1-16
SPEED SENSOR – ABS, RIGHT FRONT, B1 .....	3450.0-01
SPEED SENSOR – ABS, RIGHT FRONT, B1 .....	3450.1-03
SPEED SENSOR – ABS, RIGHT FRONT, B1 .....	3450.1-08
SPEED SENSOR – ABS, RIGHT FRONT, B1 .....	3450.1-12
SPEED SENSOR – ABS, RIGHT REAR B3 .....	3450.0-01
SPEED SENSOR – ABS, RIGHT REAR B3 .....	3450.1-03
SPEED SENSOR – ABS, RIGHT REAR B3 .....	3450.1-08

SPEED SENSOR – ABS, RIGHT REAR B3 .....	3450.1-12
SPLICE LOCATION VIEWS .....	8000.0
START .....	1240.0
STARTER IMMOBILIZATION SWITCH, S235 .....	1240.0-00
STARTER, M6510 .....	1240.0-01
SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG) .....	3234.0
SUPPLEMENTAL RESTRAINT SYSTEM CONTROL MODULE, A12 .....	3234.0
SYMBOLS .....	0140.0
TAIL LIGHT, LEFT, H25 .....	6314.0-01
TAIL LIGHT, LEFT, H37 .....	6314.0-01
TAIL LIGHT, RIGHT, H30 .....	6314.0-01
TAIL LIGHT, RIGHT, H39 .....	6314.0-01
TEMPERATURE SWITCH, S36 .....	6450.6-03
TEMPERATURE WHEEL SWITCH, S531 .....	6450.6-01
THROTTLE FLAP HEATER, E104 .....	3450.1-02
THROTTLE POSITION SENSOR, R6252 .....	1210.17-05
THROTTLE POSITION SENSOR, R6252 .....	1210.20-05
TRANSMISSION CONTROL MODULE (EGS), A8500 .....	2460.2
TRANSMISSION POSITION INDICATOR LIGHT, E82 .....	6300.0-02
TRANSMISSION VALVE UNIT, Y8505y .....	2460.2-05
TRANSMISSION VALVE UNIT, Y8521 .....	2460.2-01
TRANSMITTER MODULE (EWS II), A835 .....	6135.0-00
TRUNK COMPARTMENT LIGHT, E32 .....	6320.0-00
TRUNK LOCK MOTOR, M17 .....	5126.0-03
TURN LIGHT, LEFT FRONT, H7 .....	6313.0-02
TURN LIGHT, LEFT REAR, H6 .....	6313.0-03
TURN LIGHT, RIGHT FRONT, H4 .....	6313.0-02
TURN LIGHT, RIGHT REAR H5 .....	6313.0-03
TURN/HAZARD LIGHTS .....	6313.0
UNLOADER RELAY, TERMINAL 15, K6326 .....	1210.17-02
UNLOADER RELAY, TERMINAL 15, K6326 .....	1210.20-02
UNLOADER RELAY, TERMINAL 15, K9 .....	5203.0-00
VARIABLE CAMSHAFT CONTROL VALVE 1, Y6275 .....	1210.17-01
VEHICLE SPEED SENSOR, B10 .....	6211.0-04

WASHER JET HEATER, LEFT, E51 .....	6169.0-00
WASHER JET HEATER, RIGHT, E52 .....	6169.0-00
WASHER PUMP, M4 .....	6160.1-01
WASHER PUMP, M4 .....	6160.1-02
WATER VALVE, Y4z .....	6450.6-01
WINDOW MOTOR, DRIVER'S, M21 .....	5133.0-02
WINDOW MOTOR, PASSENGER'S, M23 .....	5133.0-02
WINDSHIELD WASHER JET HEATERS .....	6169.0-00
WIPER MOTOR, M3 .....	6160.1-00
WIPER MOTOR, M3 .....	6160.1-02
WIPER/WASHER MODULE (LOW II), A64 .....	6160.1-02
WIPER/WASHER MODULE (WWM) .....	6160.1
WIPER/WASHER MODULE, A51 .....	6160.1
WIPER/WASHER MODULE, A51 .....	6167.1-00
WIPER/WASHER SWITCH, S5 .....	6160.1-01
WIPER/WASHER SWITCH, S5 .....	6160.1-02
ZKE CENTRAL LOCKING (ZV) .....	5126.0
ZKE POWER WINDOWS (FH) .....	5133.0

## Schematics

The schematics divide the entire vehicle electrical system into individual circuits. Interacting electrical components are shown on one common schematic.

Switches and other components are represented in such a way that their general layout and function are self-explicit. They are arranged on the sheet such that the current path can be followed from positive (top) to negative (bottom).

**Important:** The components and wires are not drawn to scale. For instance, a lead with a length of over 1m can be shown as a lead that is only a few cm long. To ensure clear arrangement, all connectors, lines branches and connected components from the fuses to the component and from the component to ground connection are not shown within the individual cells. If required, reference can be made to cells **0670.3 Fuse Details** and **0670.4 Ground Distribution** where all lines are illustrated with all plug connections, line branches and connected components.


All circuit symbols used are listed and explained in cell **0140.0 Symbols**.

In cell **7000.0 Component Location Chart** all important connectors, ground points and components are listed in tabular form. It provides a precise description of the component locations in the vehicle.

In cell **7100.0 Component Location Views** the location of connectors and components which are difficult to locate are shown in line arts or illustrations. In cell **8000.0 Splice Location Views** all splices are listed in numerical order and illustrations are provided to assist in locating splices on larger harnesses. In cell **8500.0 Connector Views** diagrams of connectors with more than 2 pins are illustrated.

## Example


General conventions can be explained based on the following schematic example.

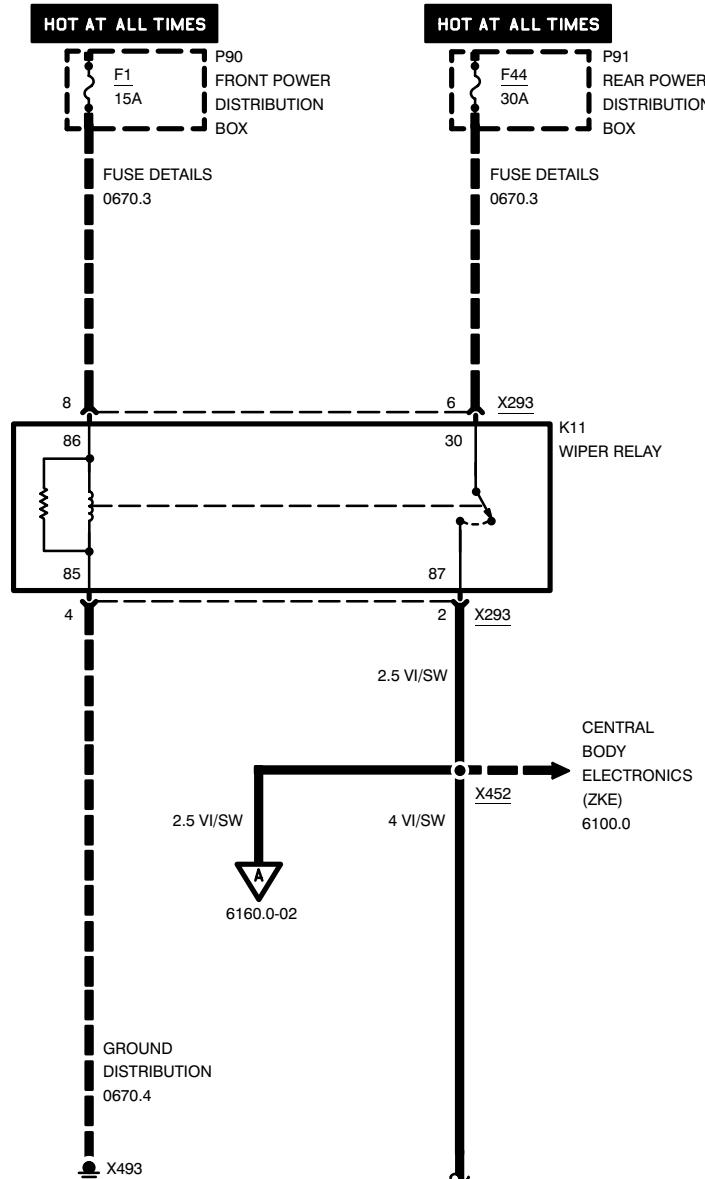


**General Conventions**

1. Switches and relays are always shown in rest position (e.g. K11).
2. A component shown in a dashed frame signifies that the component is illustrated only in part (e.g. P90 and P91).
3. A component shown in a completely drawn frame signifies that the component is illustrated in full (e.g. K11).
4. The dashed line between pin 8 and pin 6 of connector X293 indicates that both pins belong to connector X293.
5. The dashed line from fuse F1 to pin 8 of connector X293 shows the positive supply of relay K11. If required, refer to cell **0670.3 Fuse Details** at fuse F1 for the complete line progressing with plug connections, line branches, wire colors and cross sections.
6. The dashed line with an arrow at splice X452 indicates that several wires lead to splice X452. All lines leading to the connection are illustrated in cell **6100.0 Central Body Electronics (ZKE)**. An interrupted line with an arrow indicates that only this one wire leads to another circuit.
7. The dashed line from pin 4 of connector X293 to ground X493 shows the ground supply for relay K11. If required, refer to cell **0670.4 Ground Distribution** at ground X493 for the complete line progression with all plug connections, line branches, wire colors, and cross sections.
8. The interrupted line from splice X452 with an **A** in the open arrow is continued on page 6160.0–02.  
Termination of wire 4 VI/SW from splice X452 with a wavy line indicates that the wire is continued on the opposite page.


# SYMBOLS

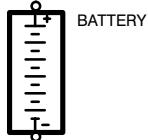


BATTERY

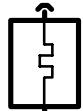

HEATING ELEMENT

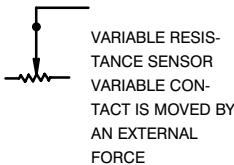VARIABLE RESISTANCE SENSOR  
VARIABLE CONTACT IS MOVED BY  
AN EXTERNAL FORCE



ANTENNA

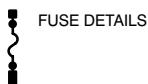

FUSE DETAILS





LOUDSPEAKER OR HORN

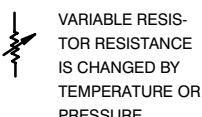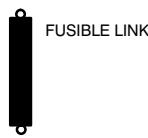VARIABLE RESISTOR  
RESISTANCE IS CHANGED BY  
TEMPERATURE OR  
PRESSURECONTROL/POWER  
ELECTRONICS


FUSIBLE LINK





LIGHT

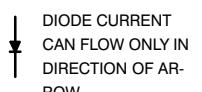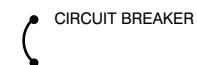DIODE CURRENT  
CAN FLOW ONLY IN  
DIRECTION OF ARROWHALL EFFECT  
SENSOR

CIRCUIT BREAKER

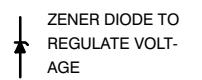PERMANENT MAGNET MOTOR ONE  
SPEEDZENER DIODE TO  
REGULATE VOLTAGETRANSISTORIZED  
SWITCH


THERMO SWITCH

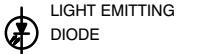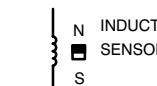PERMANENT MAGNET MOTOR TWO  
SPEEDSLIGHT EMITTING  
DIODEINDUCTIVE  
SENSOR

SOLENOID

SOLENOID CON-  
TROLLED VALVE  
OR CLUTCH  
SOLENOID


KNOCK SENSOR

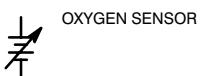


OXYGEN SENSOR

VEHICLE SPEED  
SENSOR

# SYMBOLS

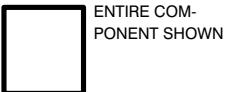


ENTIRE COMPONENT SHOWN

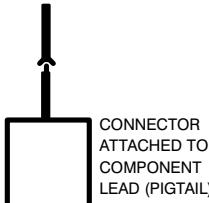

CONNECTOR ATTACHED TO COMPONENT LEAD (PIGTAIL)





PART OF COMPONENT SHOWN

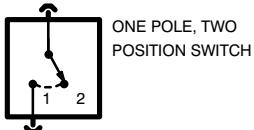


ONE POLE, TWO POSITION SWITCH



COMPONENT WITH SCREW TERMINALS


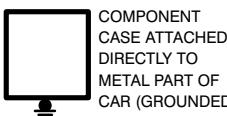
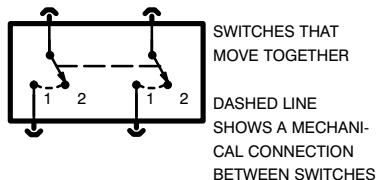


COMPONENT CASE ATTACHED DIRECTLY TO METAL PART OF CAR (GROUNDED)

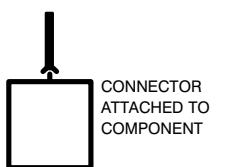

CONNECTOR ATTACHED TO COMPONENT

WIRE COLOR	
BL	BLUE
BR	BROWN
GE	YELLOW
GN	GREEN
GR	GRAY
OR	ORANGE
RS	PINK
RT	RED
SW	BLACK
VI	VIOLET
WS	WHITE
TR	TRANSPARENT

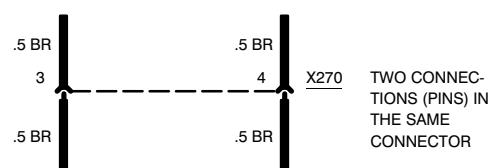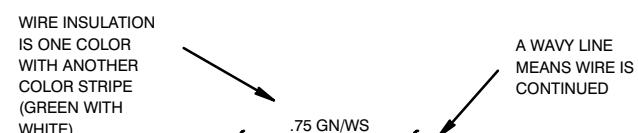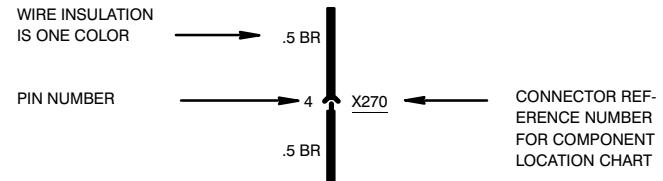


DASHED LINE INDICATES TERMINALS OF THE SAME CONNECTOR

WIRE SIZE IN MM SQUARED




WIRE ATTACHED TO METAL PART OF CAR (GROUNDED)


GROUND NUMBERED FOR REFERENCE ON COMPONENT LOCATION CHART

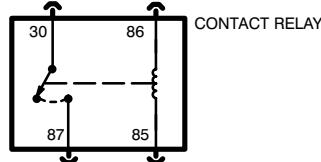


#### CONTACT RELAY

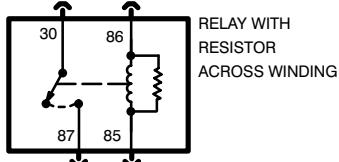

RELAY WITH  
RESISTOR  
ACROSS WINDING

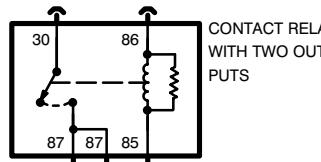


**CONTACT RELAY  
WITH TWO OUT-  
PUTS**

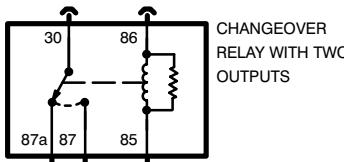


**CHANGEOVER  
RELAY WITH TWO  
OUTPUTS**

TERMINAL NUMBER	DESCRIPTION
30	RELAY INPUT
85	RELAY OUTPUT (WINDING)
86	RELAY INPUT (WINDING)
87	RELAY OUTPUT (ENERGIZED)
87a	RELAY OUTPUT (AT REST)

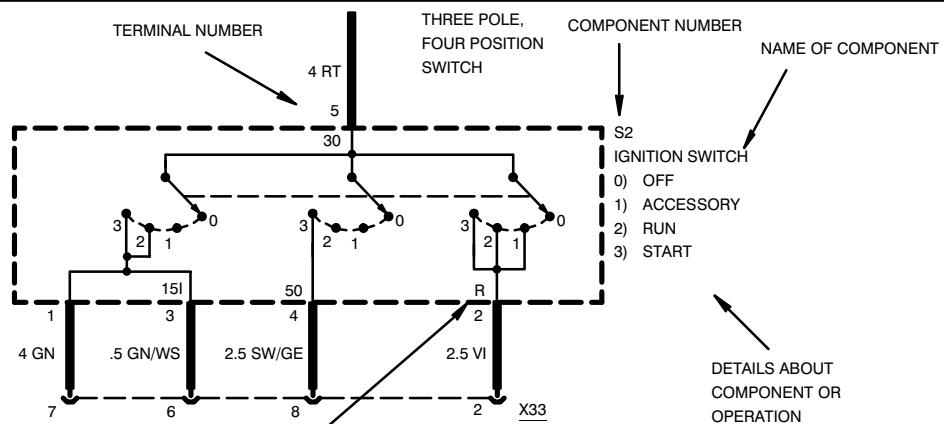

"R" IS ENERGIZED  
IN ACCY, RUN, OR  
START


TERMINAL NUMBER	DESCRIPTION	TERMINAL NUMBER	DESCRIPTION
50	VOLTAGE: IGNITION SWITCH IN START	15I	VOLTAGE: IGNITION SWITCH IN RUN
30	VOLTAGE: SUPPLIED AT ALL TIMES	R	VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN OR START
15	VOLTAGE: IGNITION SWITCH IN RUN OR START	31	GROUND

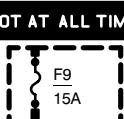


**INDICATES THAT  
FUSE 9 IS SUPPLIED  
WITH POWER AT ALL  
TIMES**

POWER STATUS	DESCRIPTION
<b>HOT AT ALL TIMES</b>	VOLTAGE: SUPPLIED AT ALL TIMES
<b>HOT IN RUN AND START</b>	VOLTAGE: IGNITION SWITCH IN RUN OR START
<b>HOT IN ACCY, RUN AND START</b>	VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN OR START


## HOT IN ACCY, RUN AND START

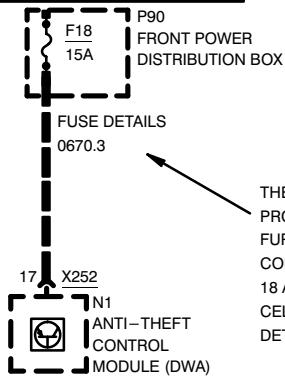



THE COMPLETE WIRE PROGRESSION AND FURTHER CIRCUITS CONNECTED TO FUSE 18 ARE SHOWN IN CELL "0670.3 FUSE DETAILS" AT FUSE 18

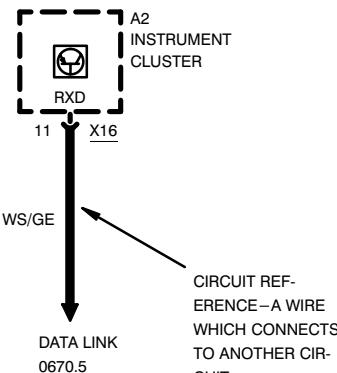

CIRCUIT REFERENCE—A WIRE WHICH CONNECTS TO ANOTHER CIRCUIT

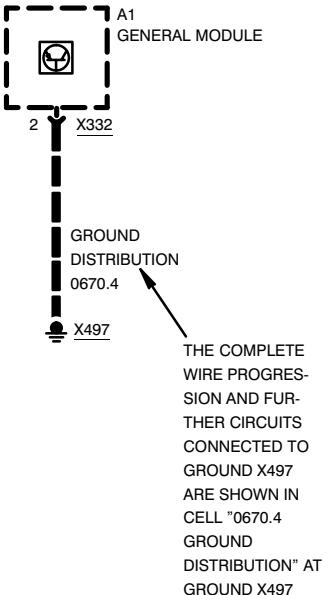

THE COMPLETE WIRE PROGRESSION AND FURTHER CIRCUITS CONNECTED TO GROUND X497 ARE SHOWN IN CELL "0670.4 GROUND DISTRIBUTION" AT GROUND X497

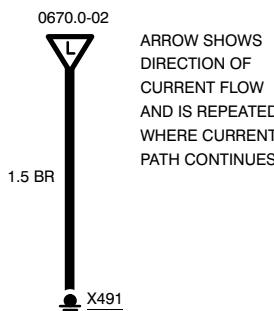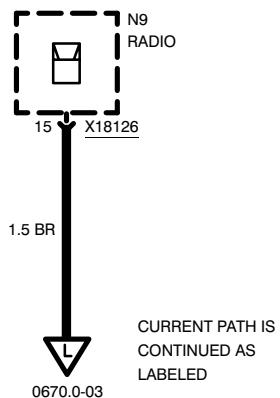

ARROW SHOWS DIRECTION OF CURRENT FLOW AND IS REPEATED WHERE CURRENT PATH CONTINUES


**POWER DISTRIBUTION CHART****FRONT POWER DISTRIBUTION BOX**

Z3

03/98


0670.0-00

1997

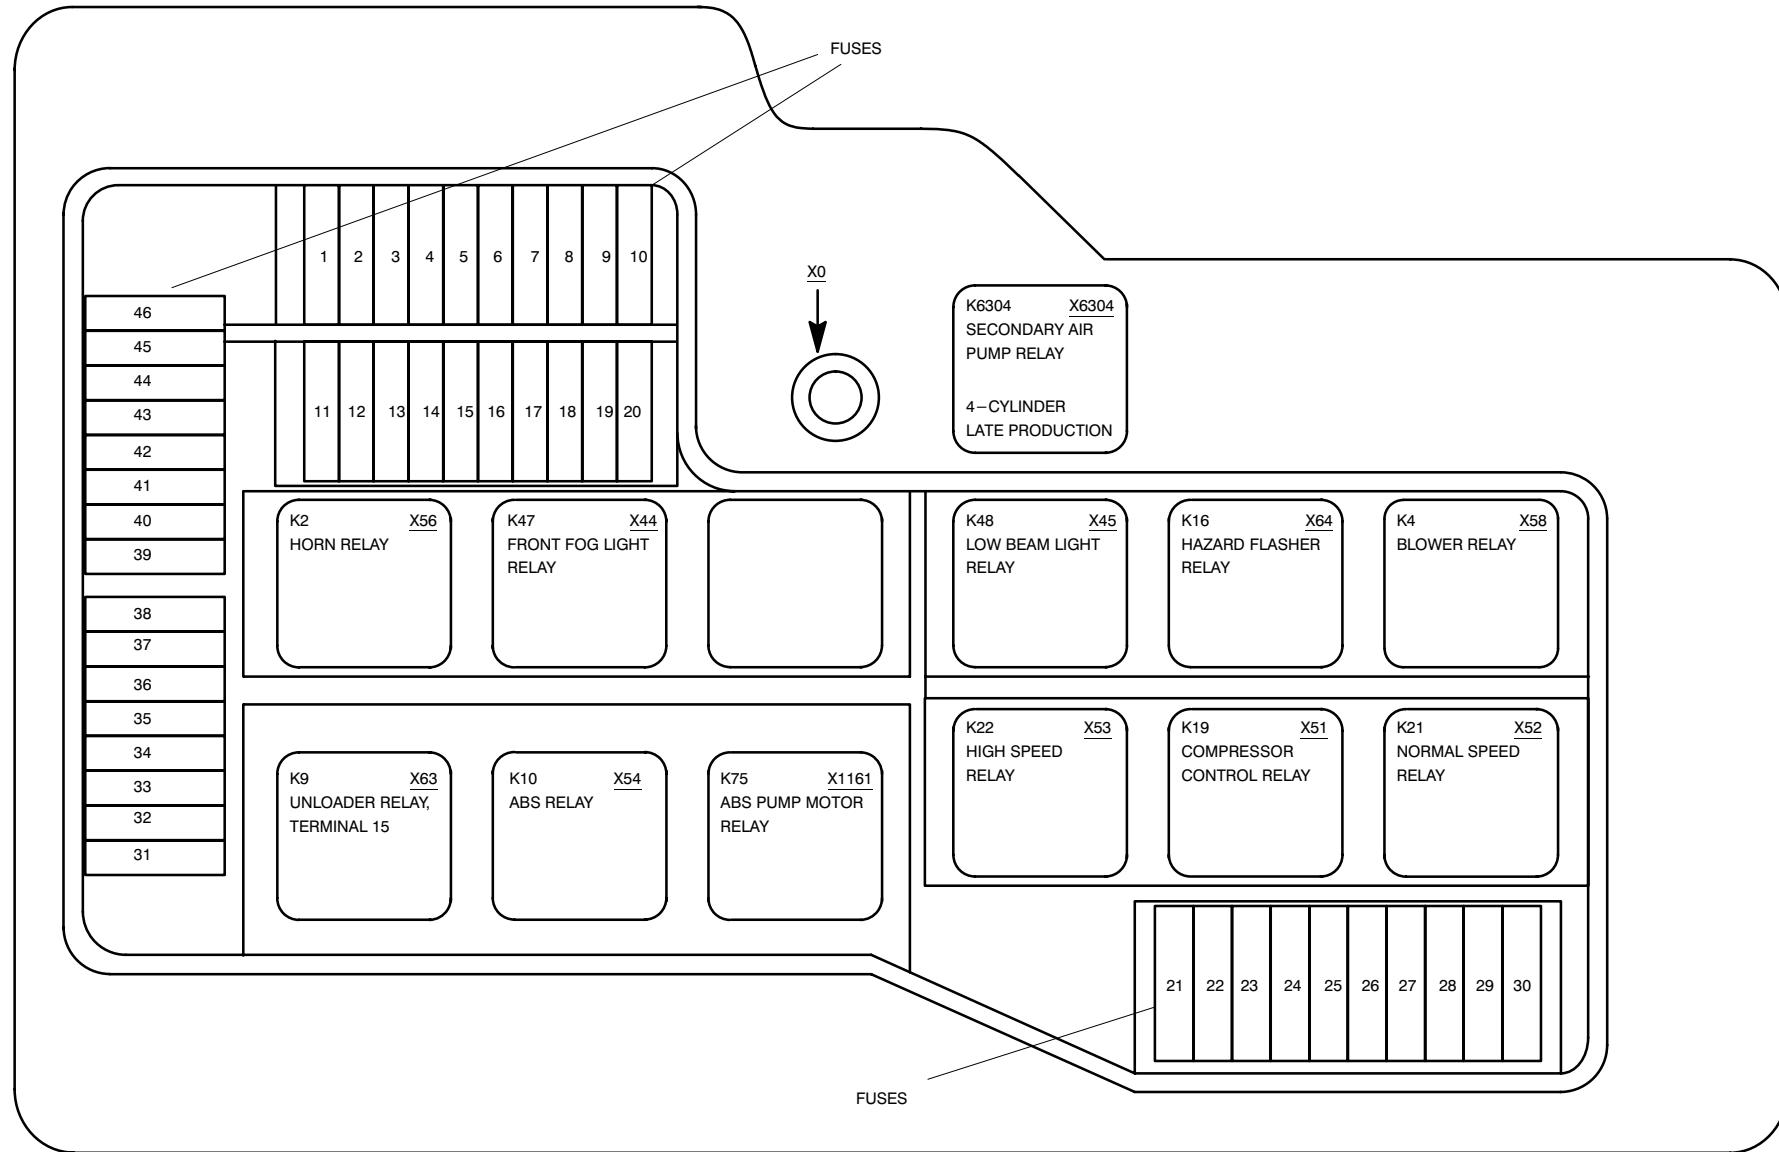


## POWER DISTRIBUTION CHART

IN E-BOX

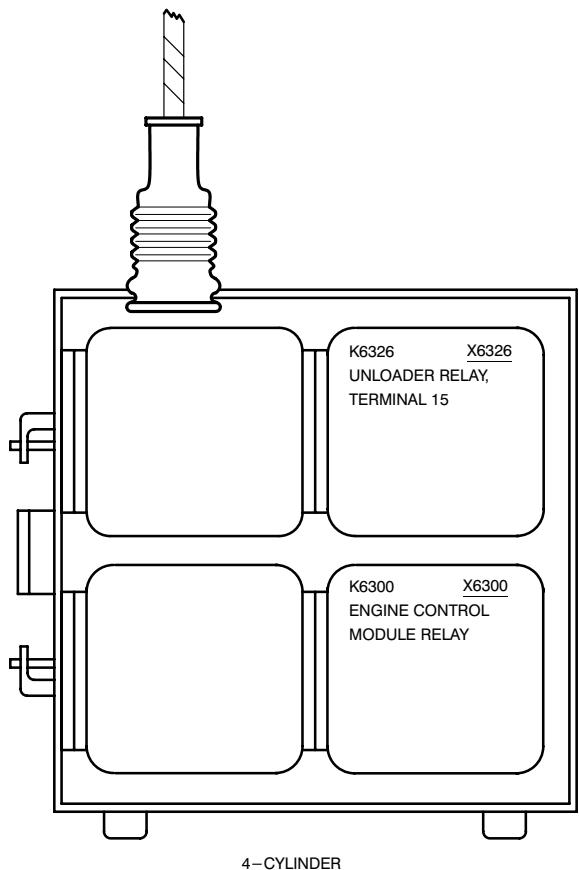

4-CYLINDER

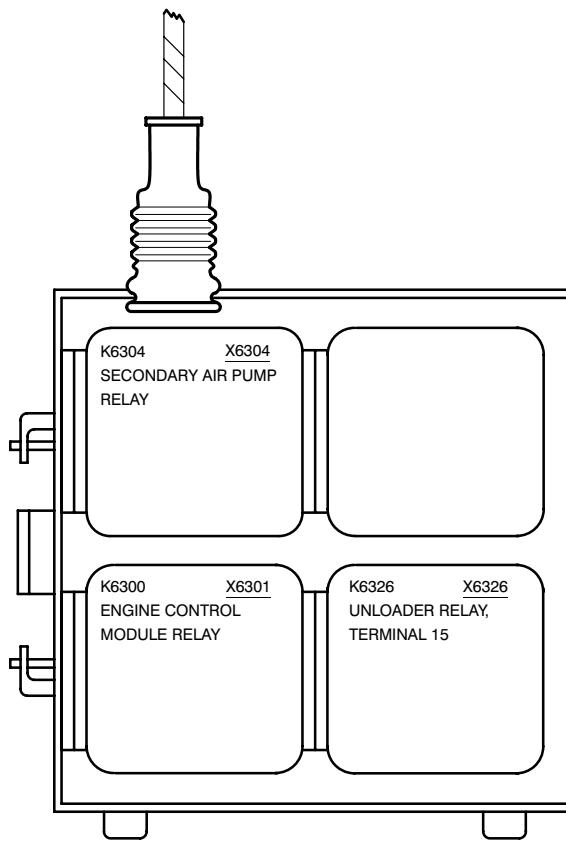

6-CYLINDER


## POWER DISTRIBUTION CHART

### RELAY PANEL UNDER LH SIDE OF DASHBOARD

03/98

0670.0-02

1997

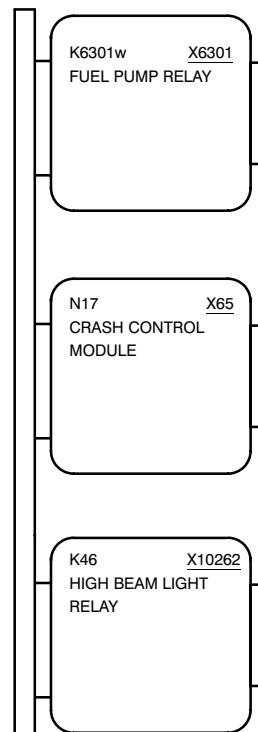



# FUSE CHART

## FUSES 1 TO 29

Z3

- 1210.17 ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)
- 1210.20 ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M44)
- 1230.0 CHARGING SYSTEM
- 1240.0 START
- 1290.0 E-BOX FAN
- 2460.2 ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310R)
- 3234.0 SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)
- 3450.0 SLIP CONTROL (ABS)
- 3450.1 SLIP CONTROL (ABS/ASC)
- 5116.0 POWER MIRRORS
- 5126.0 ZKE CENTRAL LOCKING (ZV)
- 5133.0 ZKE POWER WINDOWS (FH)
- 5200.0 POWER SEATS
- 5203.0 HEATED SEATS
- 5430.0 ELECTRO-MECHANICAL CONVERTIBLE TOP
- 6100.0 CENTRAL BODY ELECTRONICS (ZKE IV)
- 6133.0 HORN
- 6135.0 DRIVE-AWAY PROTECTION (EWS II)
- 6160.1 WIPER/WASHER MODULE (WWM)
- 6167.1 HEADLIGHT WASHER (SRA)
- 6169.0 WINDSHIELD WASHER JET HEATERS

		FUSE NUMBER																														
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29		
		30A	15A	30A	15A	30A	20A	5A	15A	20A	30A	7.5A	7.5A	5A	30A	15A	5A	15A	30A	30A	30A	5A	5A	5A	10A	5A	10A	5A	5A	7.5A		
1210.17	ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)																●		●	●												
1210.20	ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M44)																●		●	●												
1230.0	CHARGING SYSTEM																											●				
1240.0	START																													●		
1290.0	E-BOX FAN																															
2460.2	ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310R)																											●	●			
3234.0	SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)																												●			
3450.0	SLIP CONTROL (ABS)															●									●				●			
3450.1	SLIP CONTROL (ABS/ASC)														●									●			●	●				
5116.0	POWER MIRRORS																								●							
5126.0	ZKE CENTRAL LOCKING (ZV)													●																		
5133.0	ZKE POWER WINDOWS (FH)																		●													
5200.0	POWER SEATS													●										●								
5203.0	HEATED SEATS													●											●							
5430.0	ELECTRO-MECHANICAL CONVERTIBLE TOP					●																										
6100.0	CENTRAL BODY ELECTRONICS (ZKE IV)																			●												
6133.0	HORN																	●														
6135.0	DRIVE-AWAY PROTECTION (EWS II)																													●		
6160.1	WIPER/WASHER MODULE (WWM)													●																		
6167.1	HEADLIGHT WASHER (SRA)													●																		
6169.0	WINDSHIELD WASHER JET HEATERS																												●			

03/98

0670.1-00

1997



## FUSE CHART

### FUSES 1 TO 29

Z3

06/98

0670.1-01

1997

6211.0 INSTRUMENT CLUSTER

6213.3 DIGITAL CLOCK

6300.0 LIGHT SWITCH DETAILS

6312.0 HEADLIGHTS/FOG LIGHTS

6313.0 TURN/HAZARD LIGHTS

6314.0 PARK/TAIL/UNDERHOOD LIGHTS

6320.0 LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS

6322.0 BACK UP LIGHTS

6325.0 BRAKE LIGHTS

6330.3 INTERIOR LIGHTS

6332.0 INTERIOR ACCESSORIES

6350.0 CRASH CONTROL MODULE

6424.0 REAR WINDOW DEFOGGER

6450.6 INTEGRATED HEATING- AND CLIMATE CONTROL

6510.1 RADIO/HIFI

6561.0 CELLULAR TELEPHONE (PROVISIONS)

6571.0 CRUISE CONTROL (TEMPOMAT)

6575.2 ANTI-THEFT SYSTEM (ALPINE)

6581.3 BOARD COMPUTER (BC-LOW)

FUSE NUMBER																												
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29
30A	15A	30A	15A	30A	20A	5A	15A	20A	30A	7.5A	7.5A	5A	30A	15A	5A	15A	30A	30A	5A	5A	5A	10A	5A	10A	5A	5A	7.5A	



## FUSE CHART

---

## FUSES 30 TO 48

z3

- 1210.17** ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)
- 1210.20** ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M)
- 1230.0** CHARGING SYSTEM
- 1240.0** START
- 1290.0** E-BOX FAN
- 2460.2** ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310P)
- 3234.0** SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)
- 3450.0** SLIP CONTROL (ABS)
- 3450.1** SLIP CONTROL (ABS/ASC)
- 5116.0** POWER MIRRORS
- 5126.0** ZKE CENTRAL LOCKING (ZV)
- 5133.0** ZKE POWER WINDOWS (FH)
- 5200.0** POWER SEATS
- 5203.0** HEATED SEATS
- 5430.0** ELECTRO-MECHANICAL CONVERTIBLE TOP
- 6100.0** CENTRAL BODY ELECTRONICS (ZKE IV)
- 6133.0** HORN
- 6135.0** DRIVE-AWAY PROTECTION (EWS II)
- 6160.1** WIPER/WASHER MODULE (WWM)
- 6167.1** HEADLIGHT WASHER (SRA)
- 6169.0** WINDSHIELD WASHER JET HEATERS

03/98

0670.1-02

1997



## FUSE CHART

## **FUSES 30 TO 48**

Z3

03/08

06/01-03

1661

	FUSE NUMBER																		
	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
	7.5A	5A	30A	10A	15A	25A	30A	10A	30A	7.5A	30A	15A	5A	5A	15A	7.5A	15A	40A	
6211.0 INSTRUMENT CLUSTER		●														●			
6213.3 DIGITAL CLOCK			●													●			
6300.0 LIGHT SWITCH DETAILS				●			●												
6312.0 HEADLIGHTS/FOG LIGHTS	●																		
6313.0 TURN/HAZARD LIGHTS					●														
6314.0 PARK/TAIL/UNDERHOOD LIGHTS					●			●											
6320.0 LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS					●			●											
6322.0 BACK UP LIGHTS																			
6325.0 BRAKE LIGHTS															●				
6330.3 INTERIOR LIGHTS				●									●						
6332.0 INTERIOR ACCESSORIES				●				●											
6350.0 CRASH CONTROL MODULE					●														
6424.0 REAR WINDOW DEFOGGER																			
6450.6 INTEGRATED HEATING – AND CLIMATE CONTROL										●	●					●			
6510.1 RADIO/HIFI														●					
6561.0 CELLULAR TELEPHONE (PROVISIONS)					●								●						
6571.0 CRUISE CONTROL (TEMPOMAT)															●				
6575.2 ANTI-THEFT SYSTEM (ALPINE)		●											●						
6581.3 BOARD COMPUTER (BC-LOW)		●													●				


## POWER DISTRIBUTION

4-CYLINDER

03/98

0670.2-00

1997

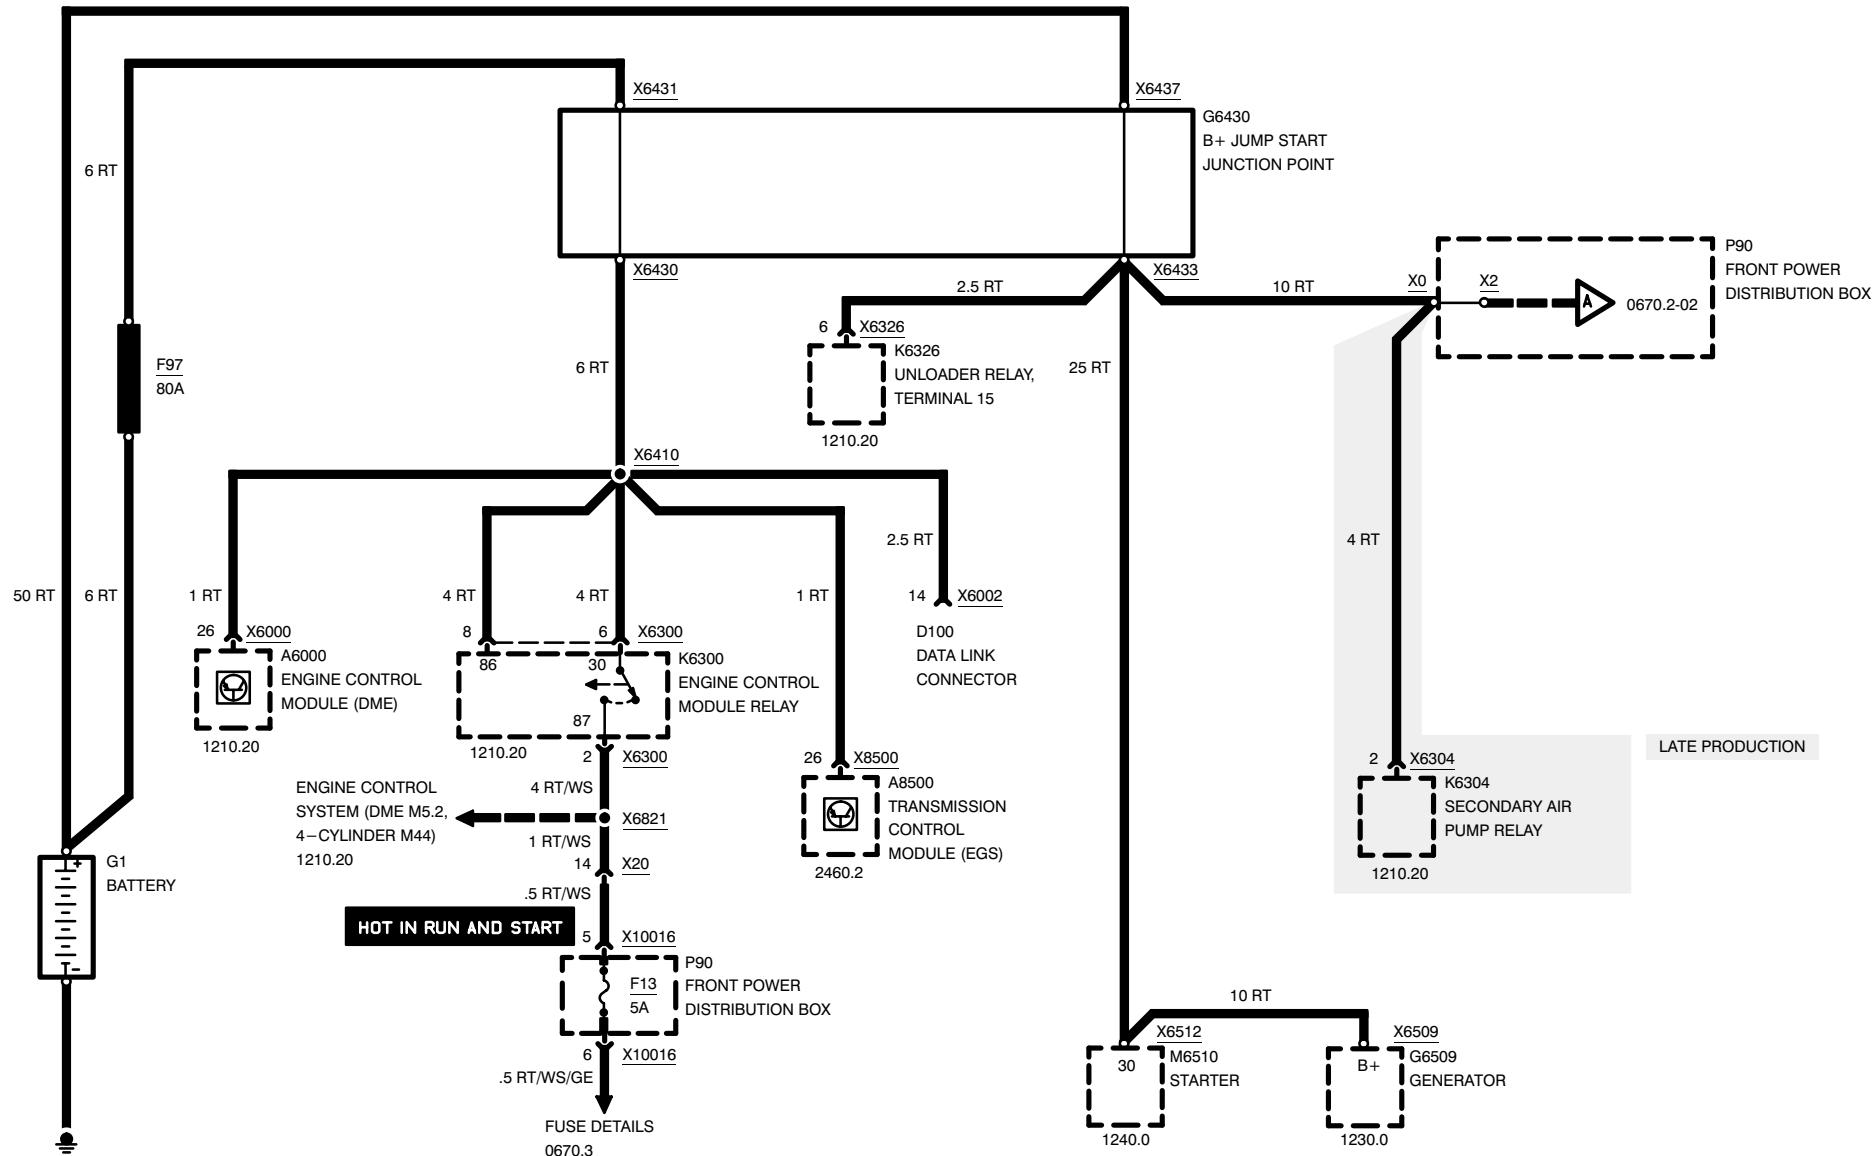


## POWER DISTRIBUTION


6-CYLINDER

03/98

0670.2-01

1997

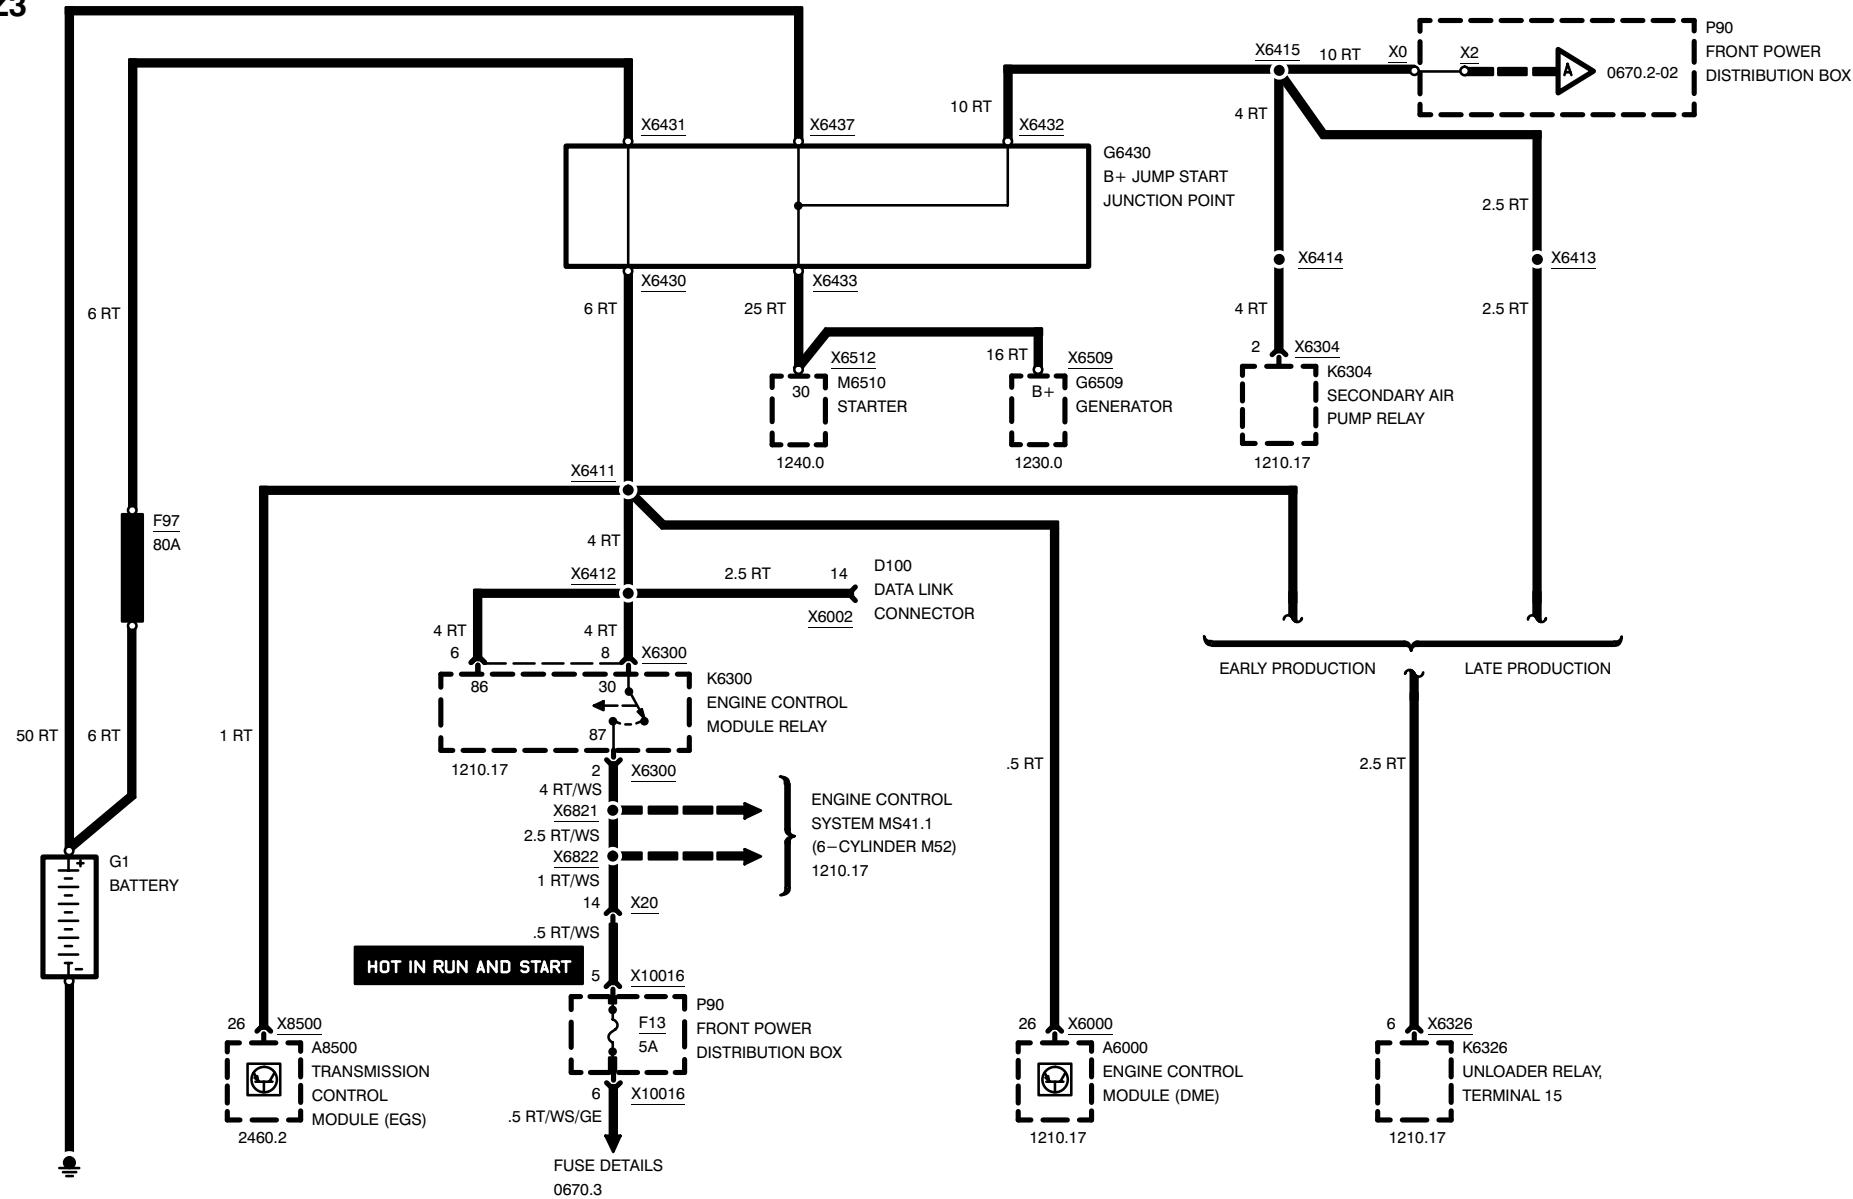

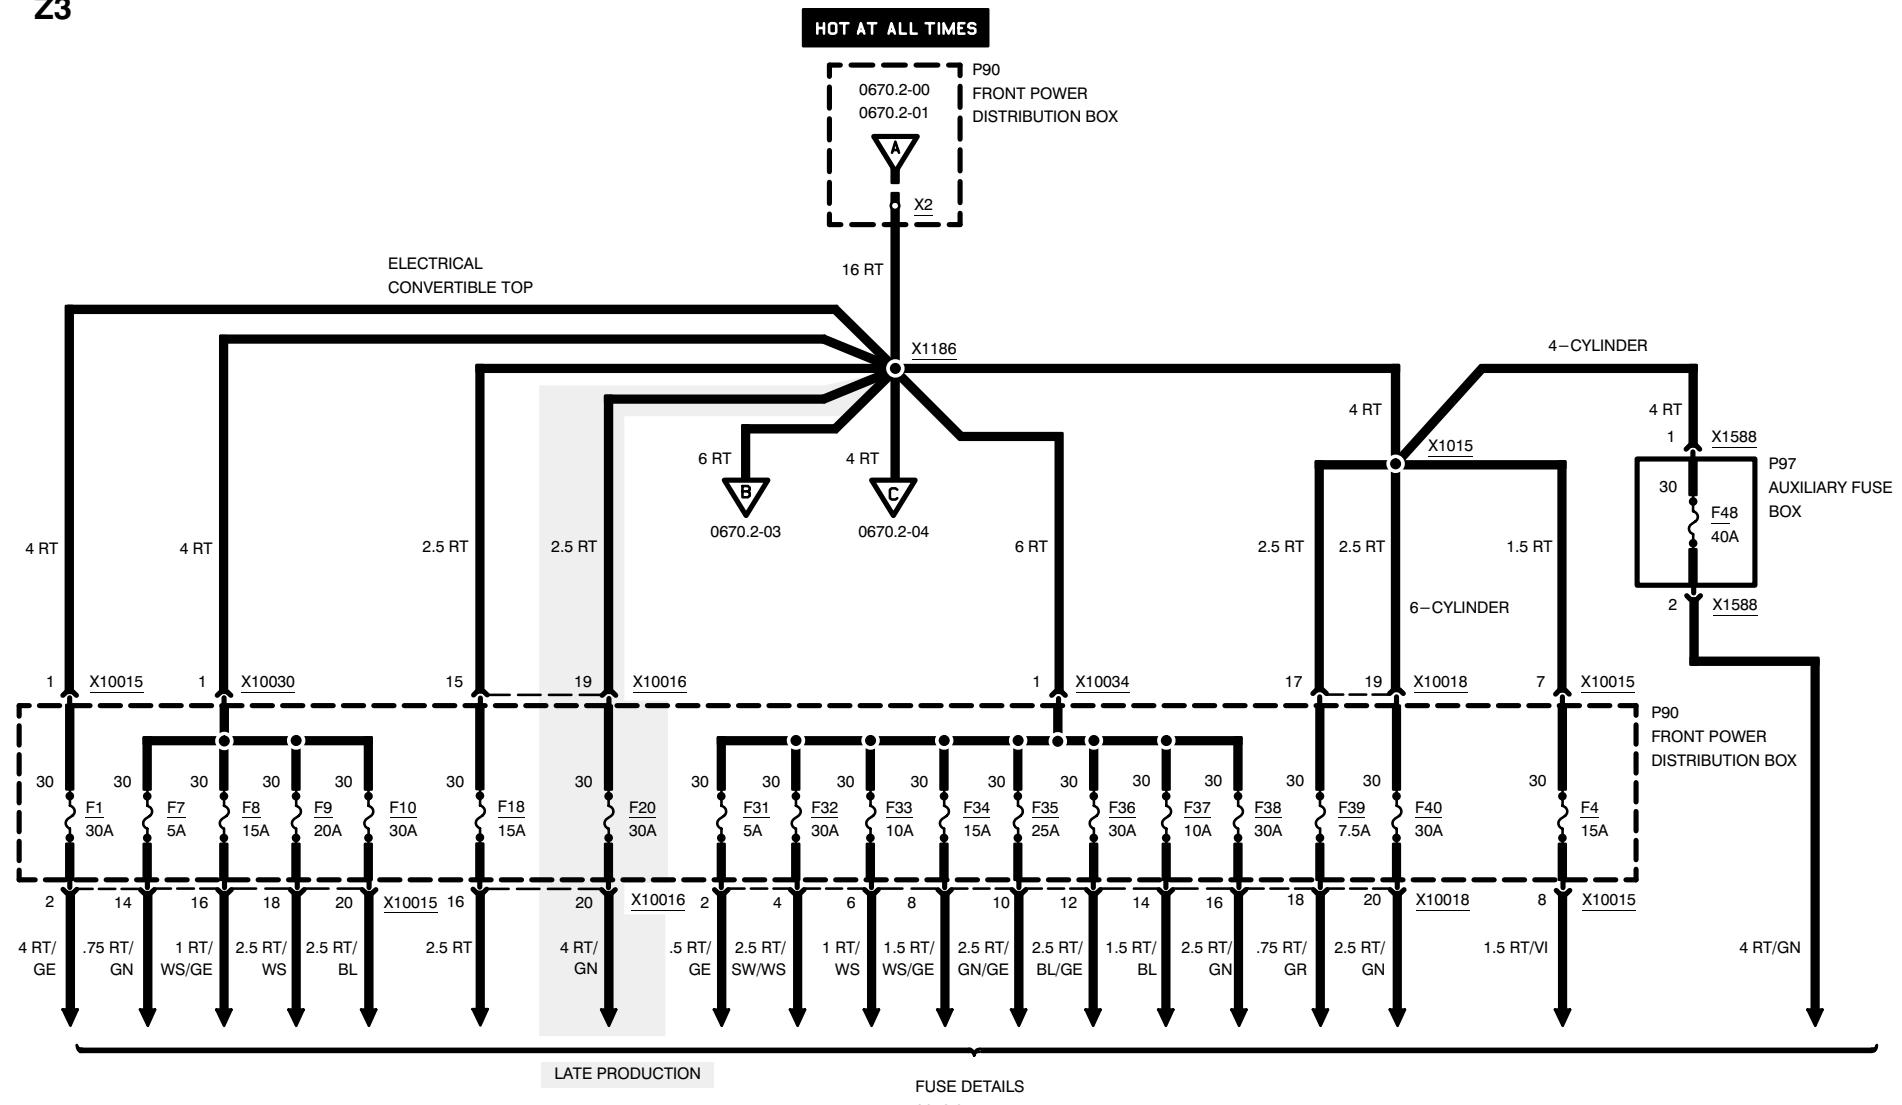



## POWER DISTRIBUTION

03/98

0670.2-03

1997

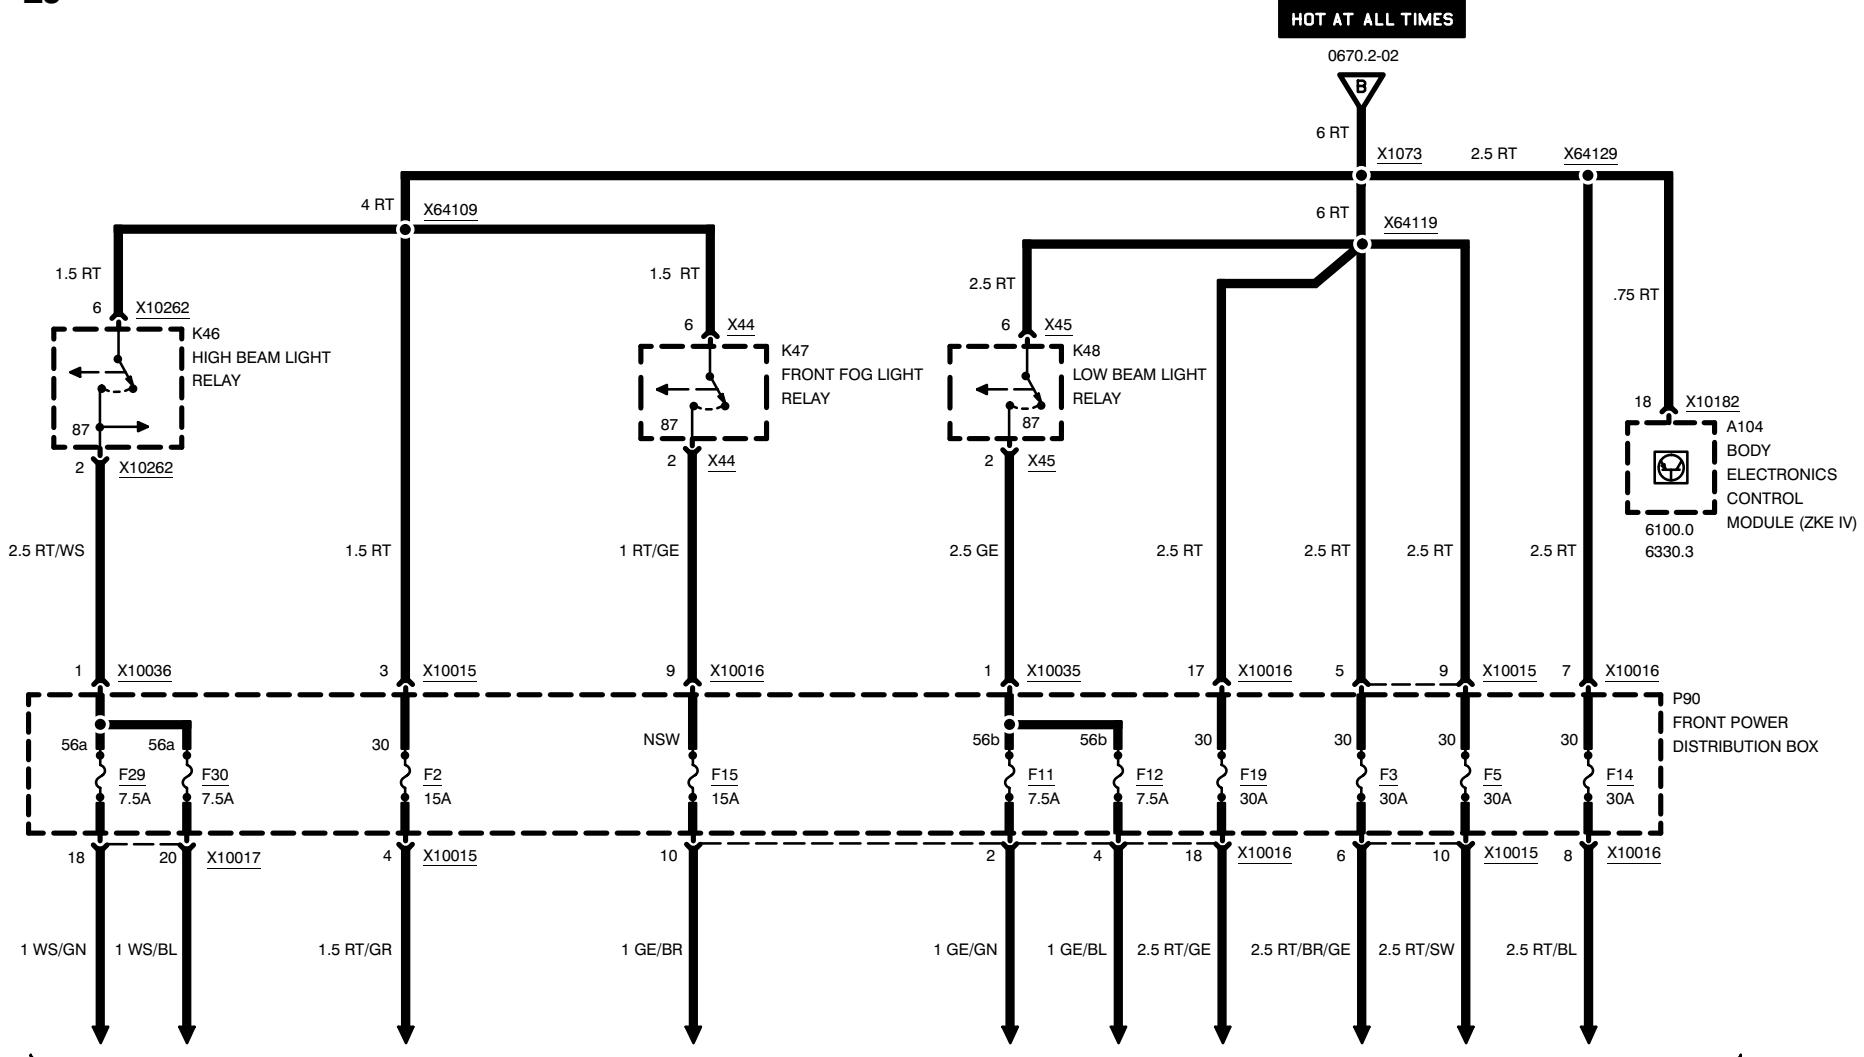


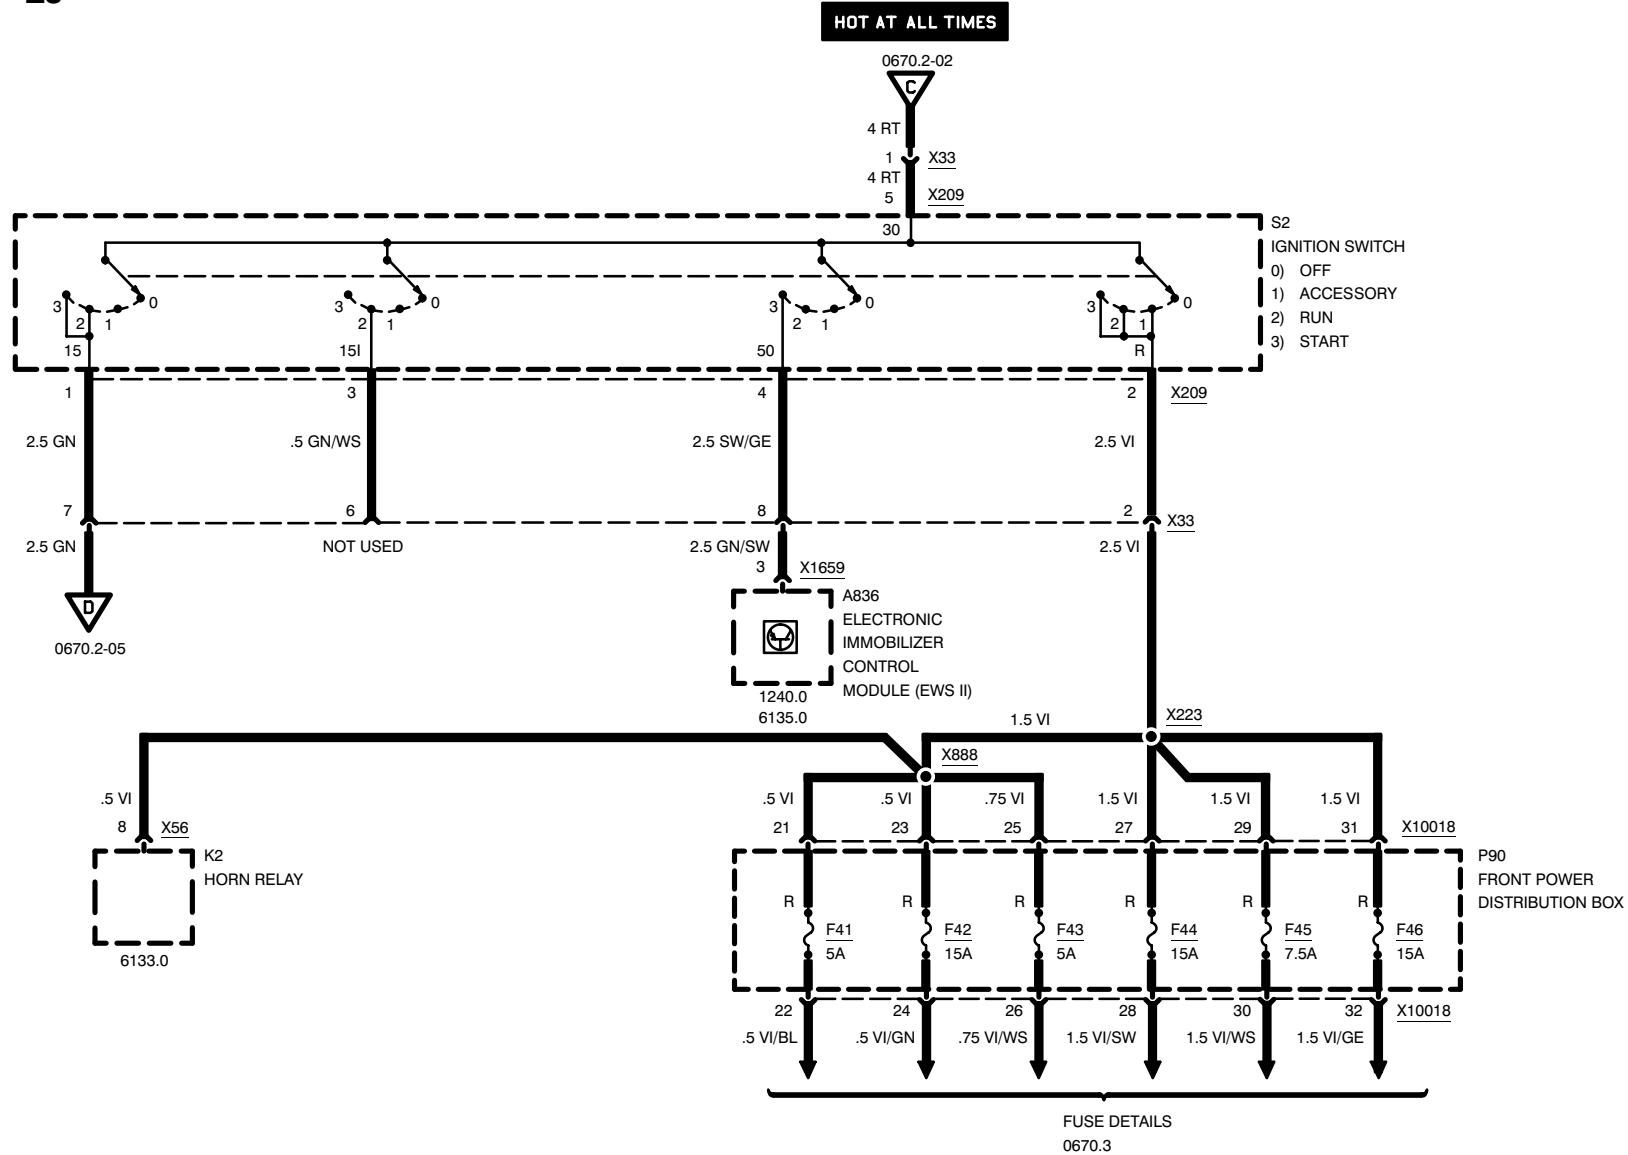

## POWER DISTRIBUTION

03/98

0670.2-05

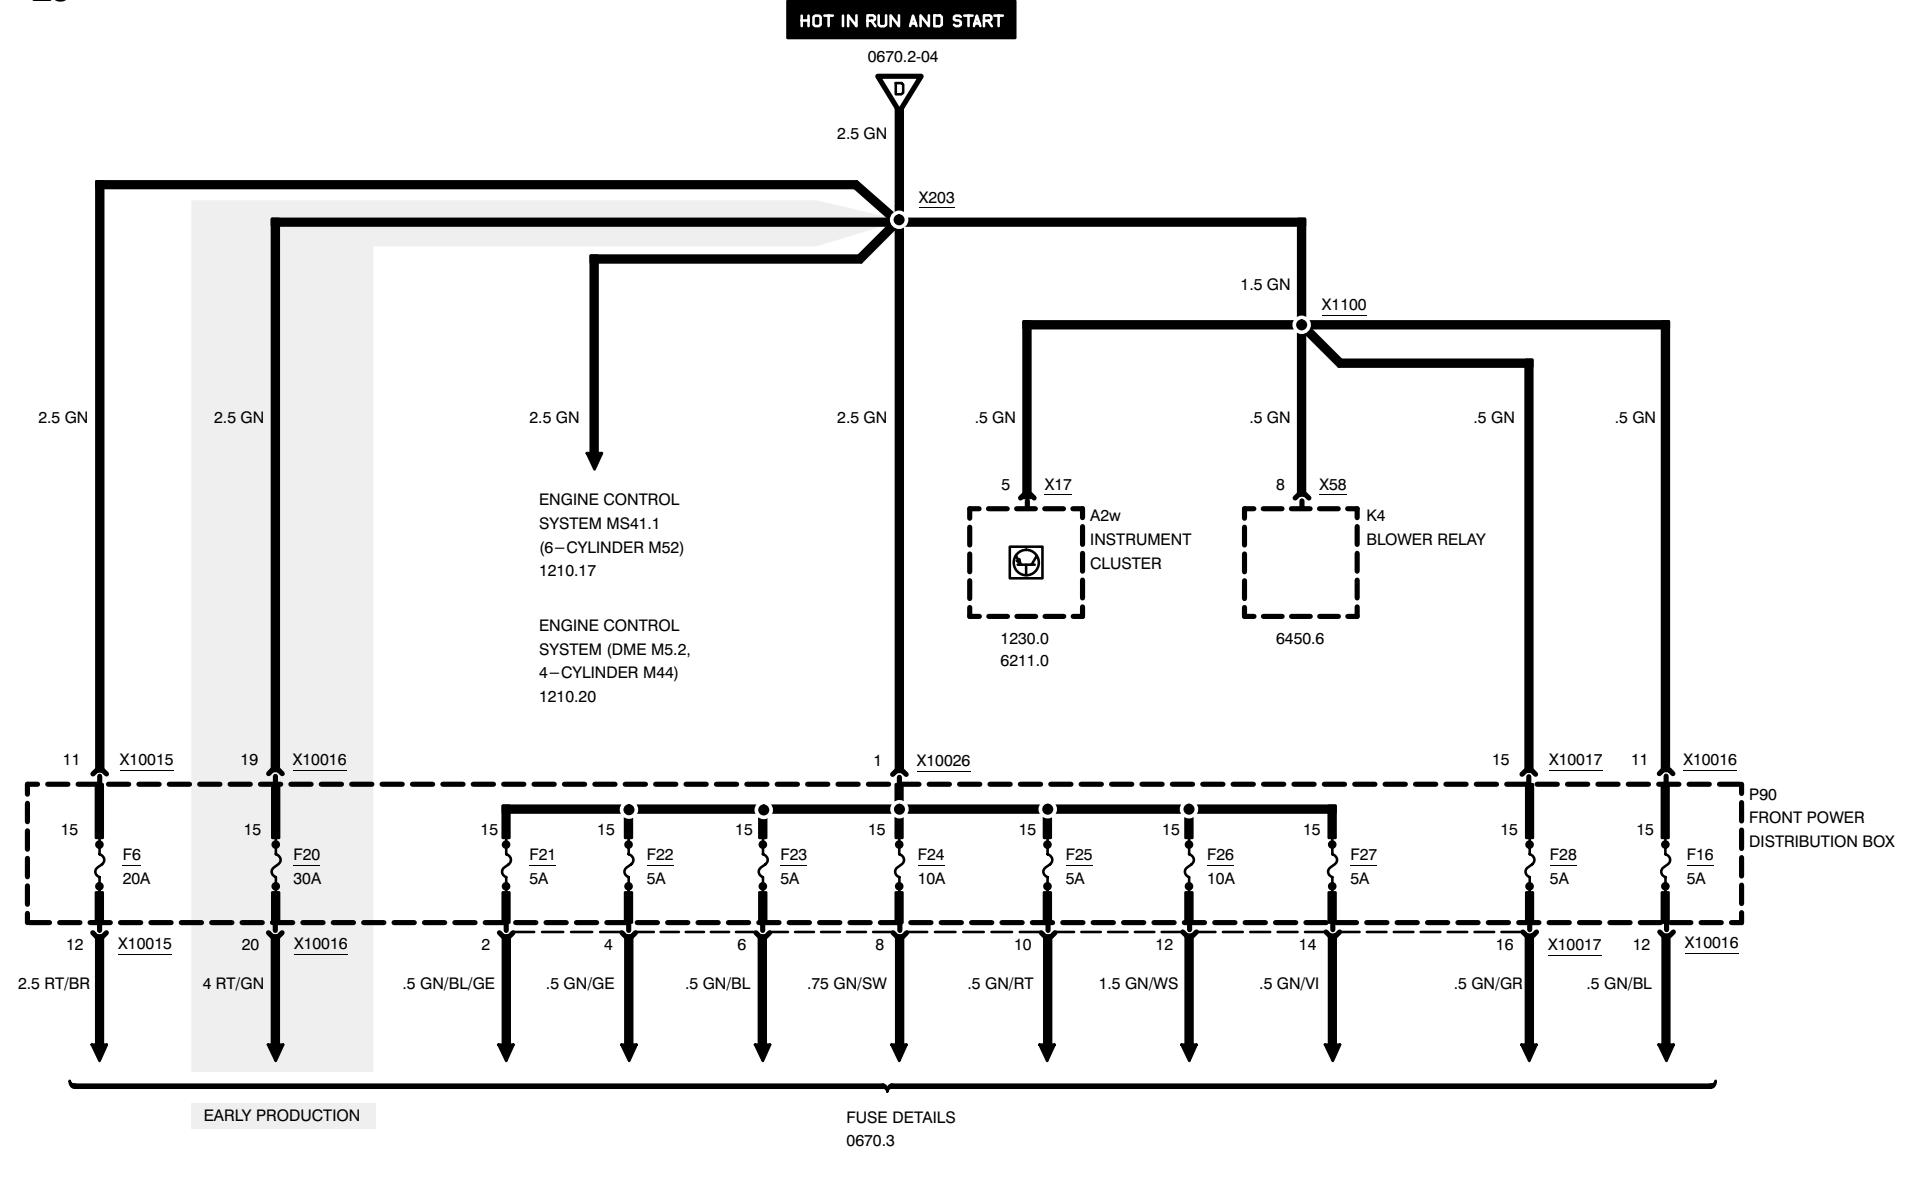

1997



## FUSE DETAILS


### FUSES 1, 2, 3, 4, 5, AND 6

Z3

08/98

0670.3-00

1997

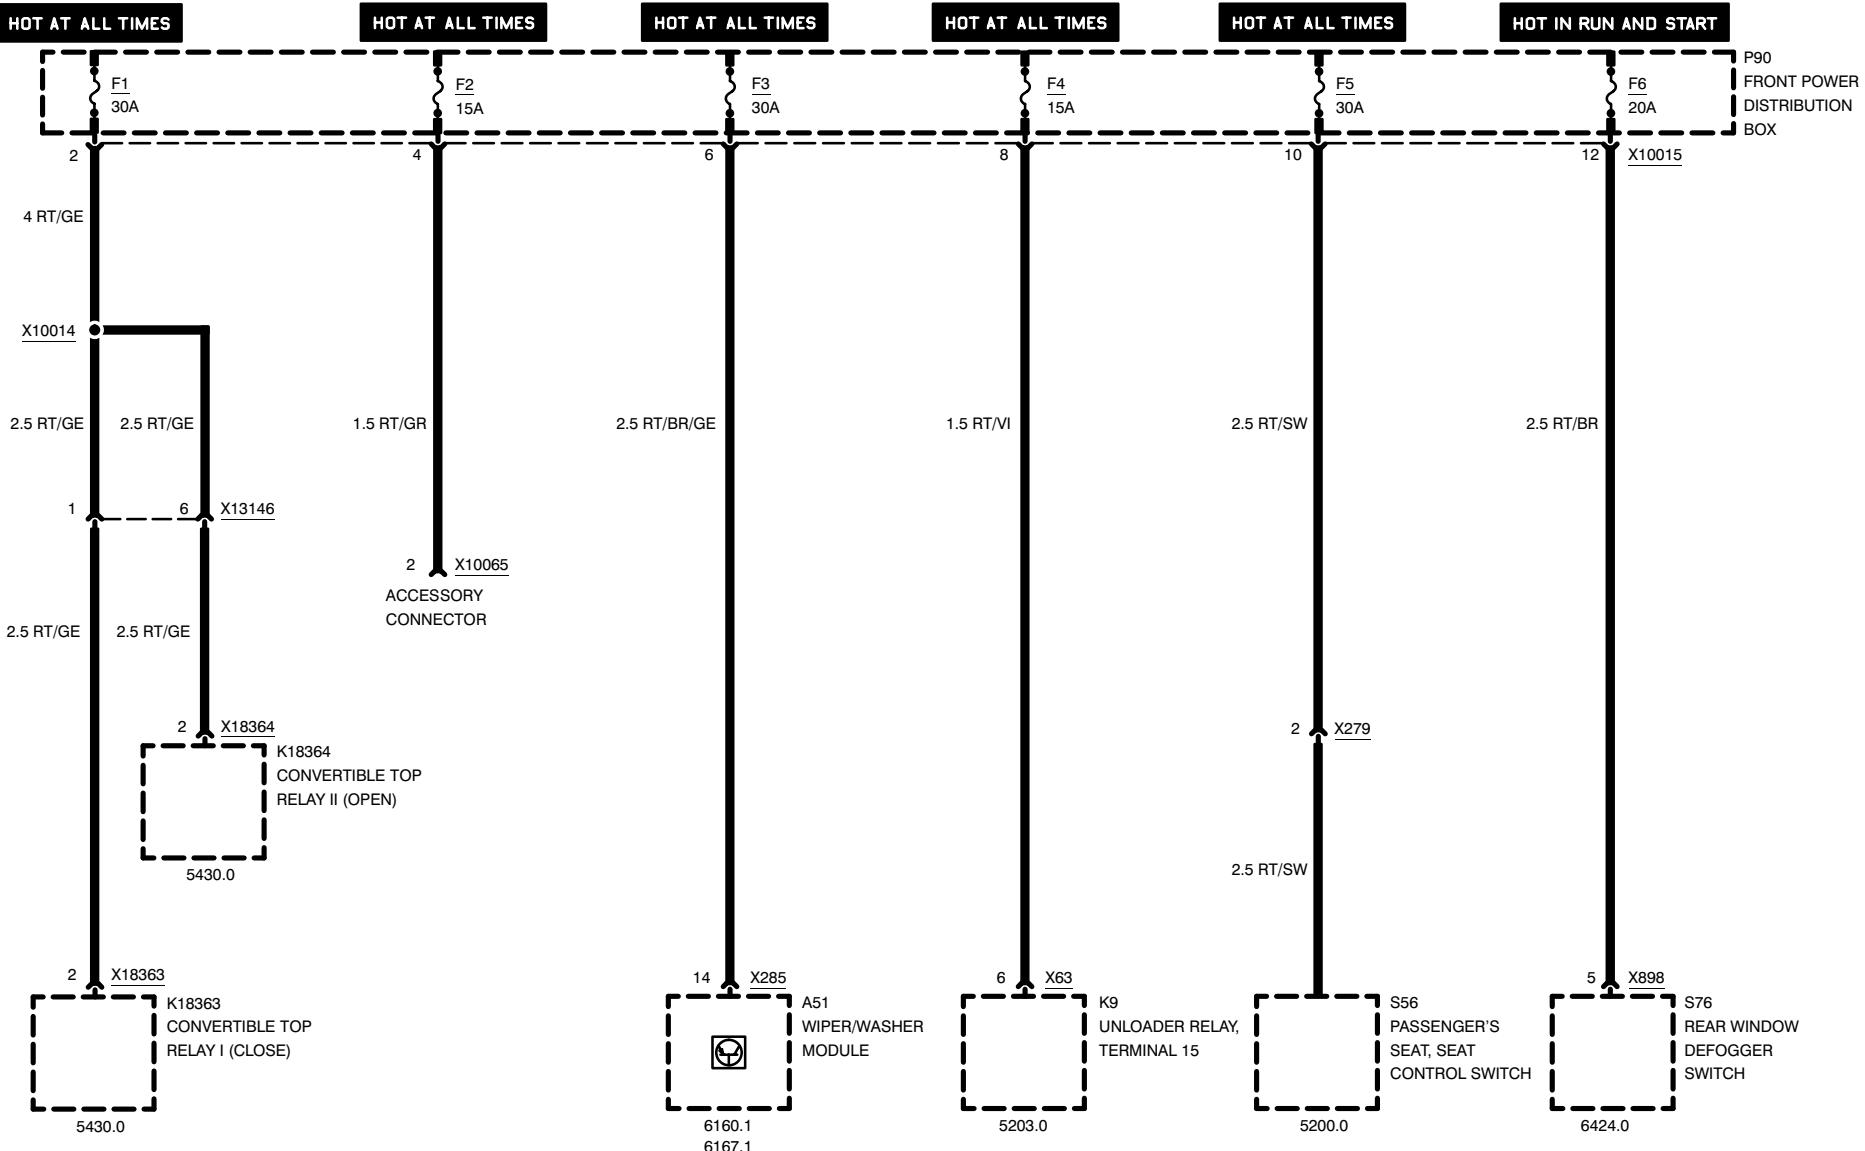


**FUSE DETAILS****FUSES 7, 8, AND 9**

Z3

03/98

0670.3-01

1997

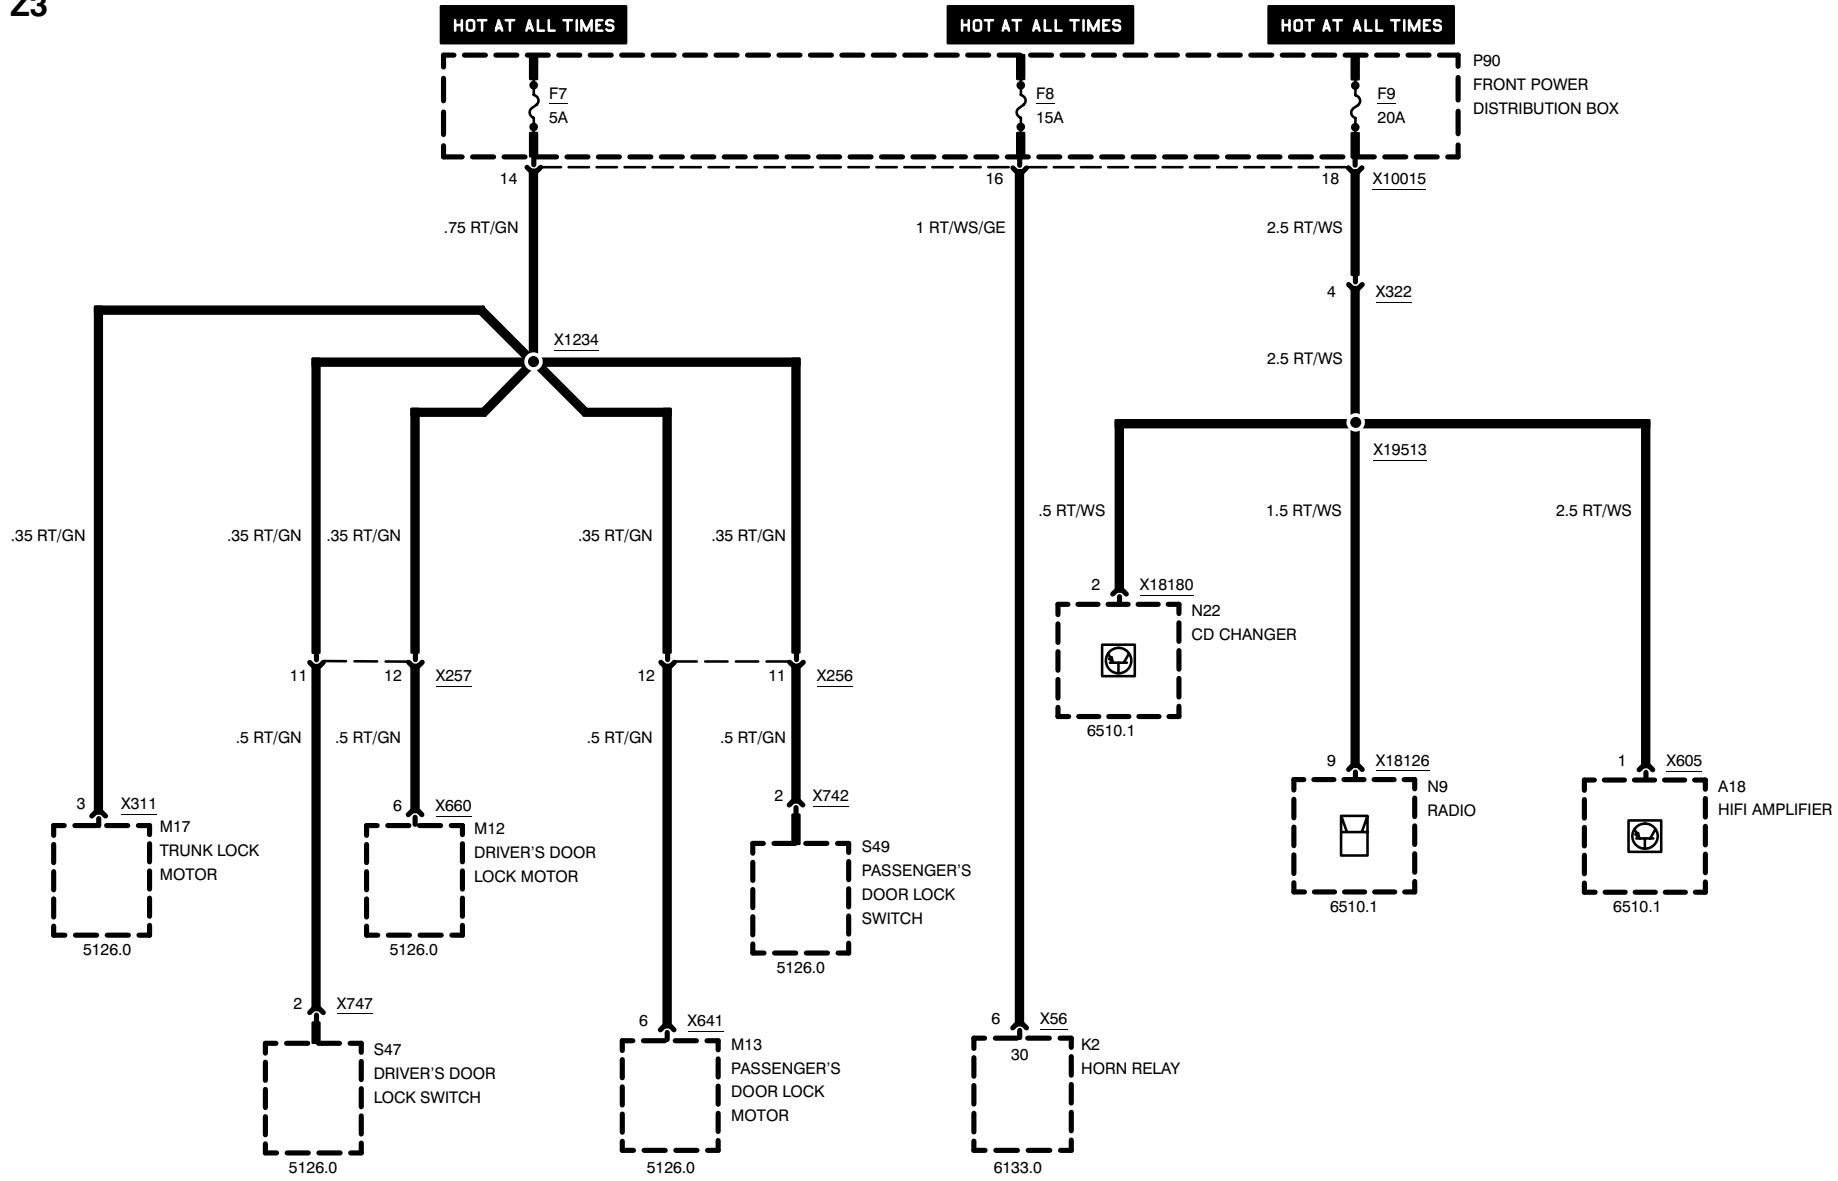


**FUSE DETAILS****FUSES 10, 11, AND 12**

03/98

0670.3-02

1997

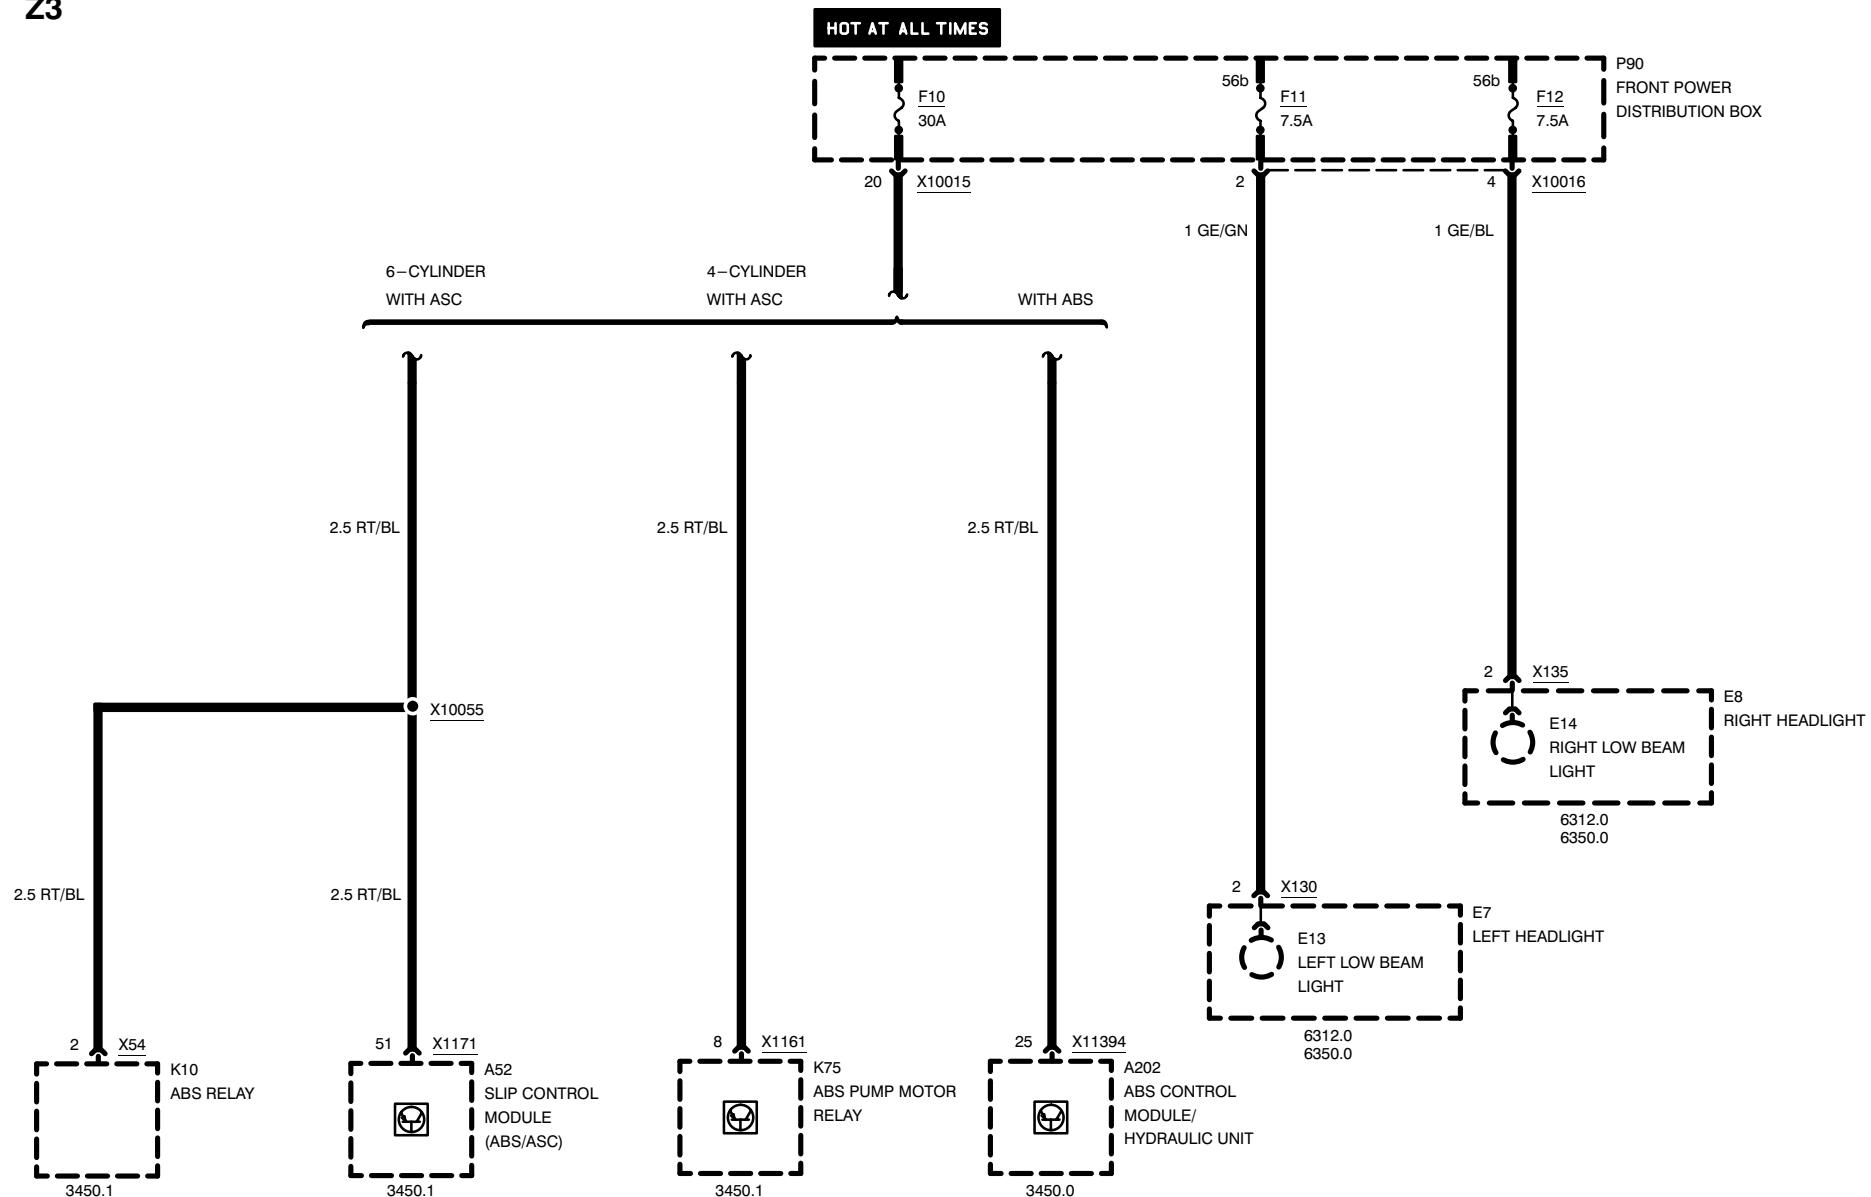


# FUSE DETAILS

## FUSES 13, 14, AND 15

03/98

0670.3-03

1997

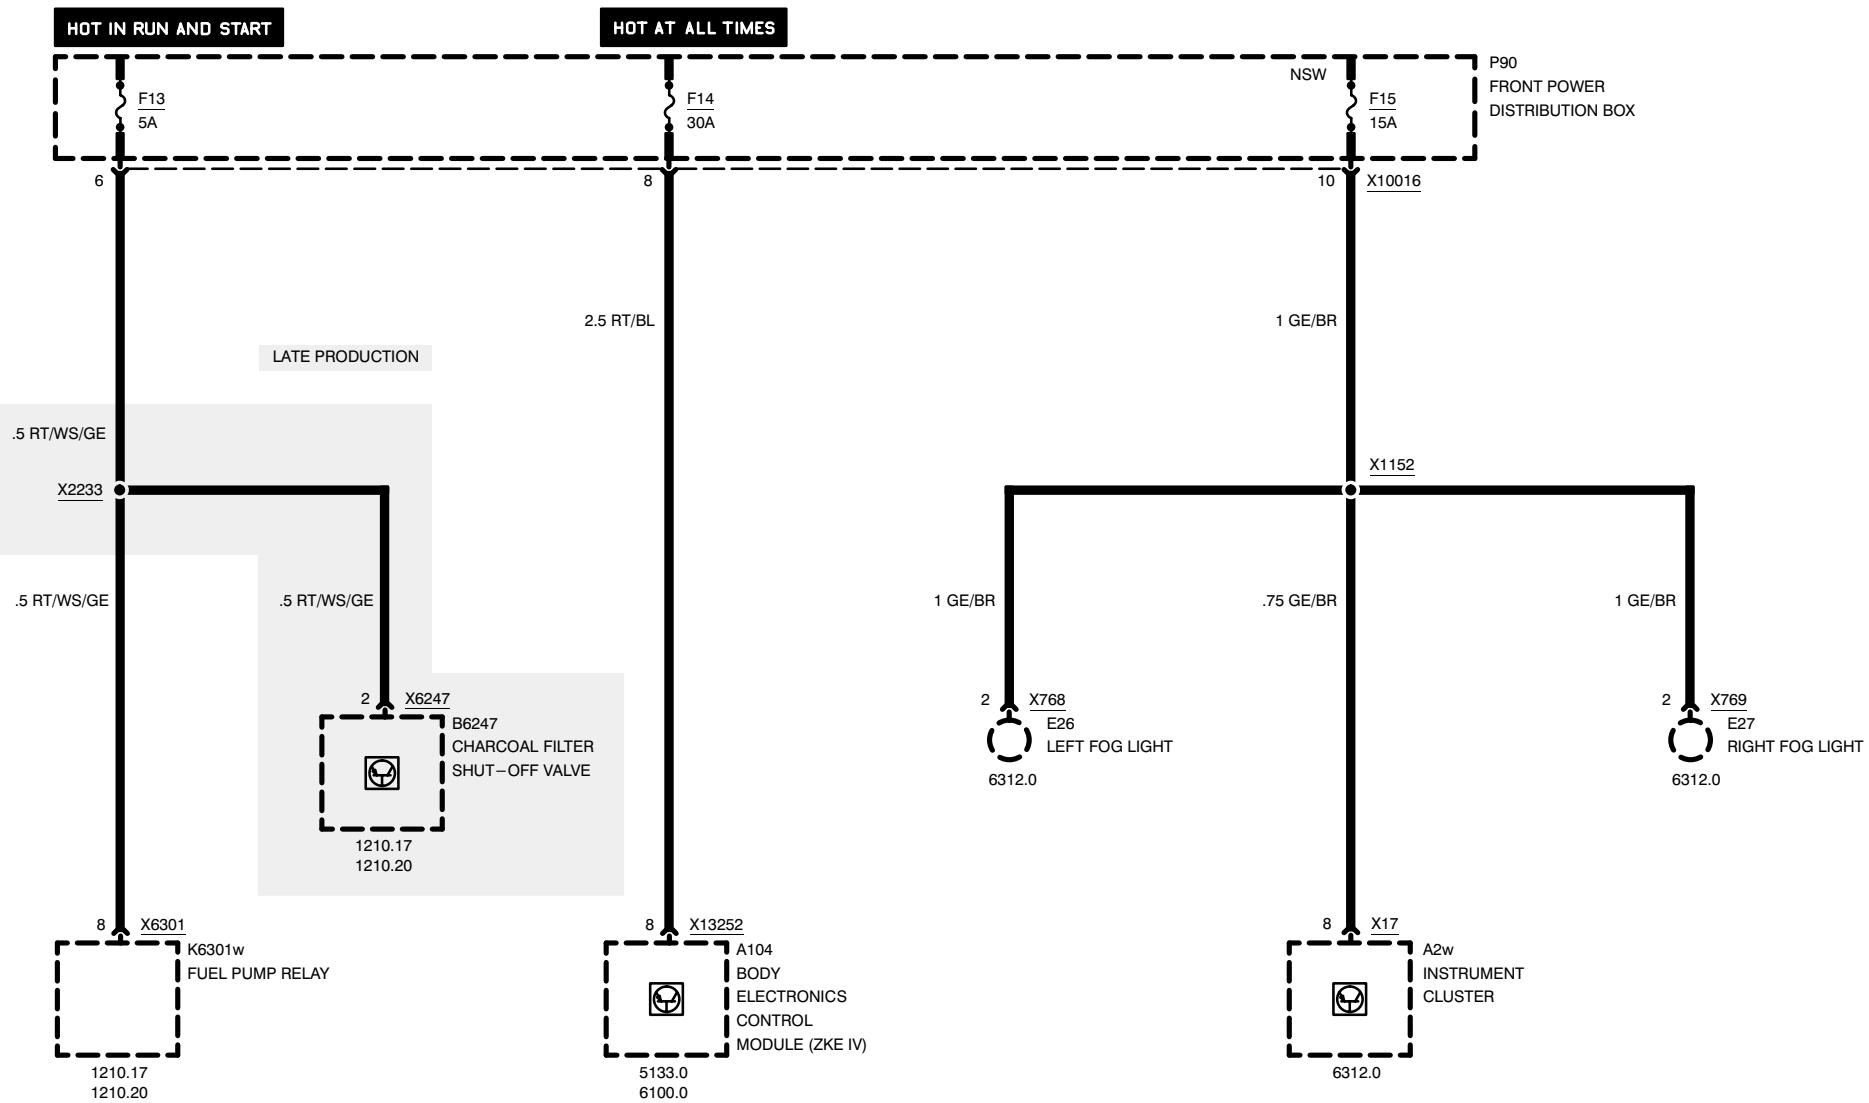


# FUSE DETAILS

## FUSES 16, 18, 19, AND 20

03/98

0670.3-04

1997

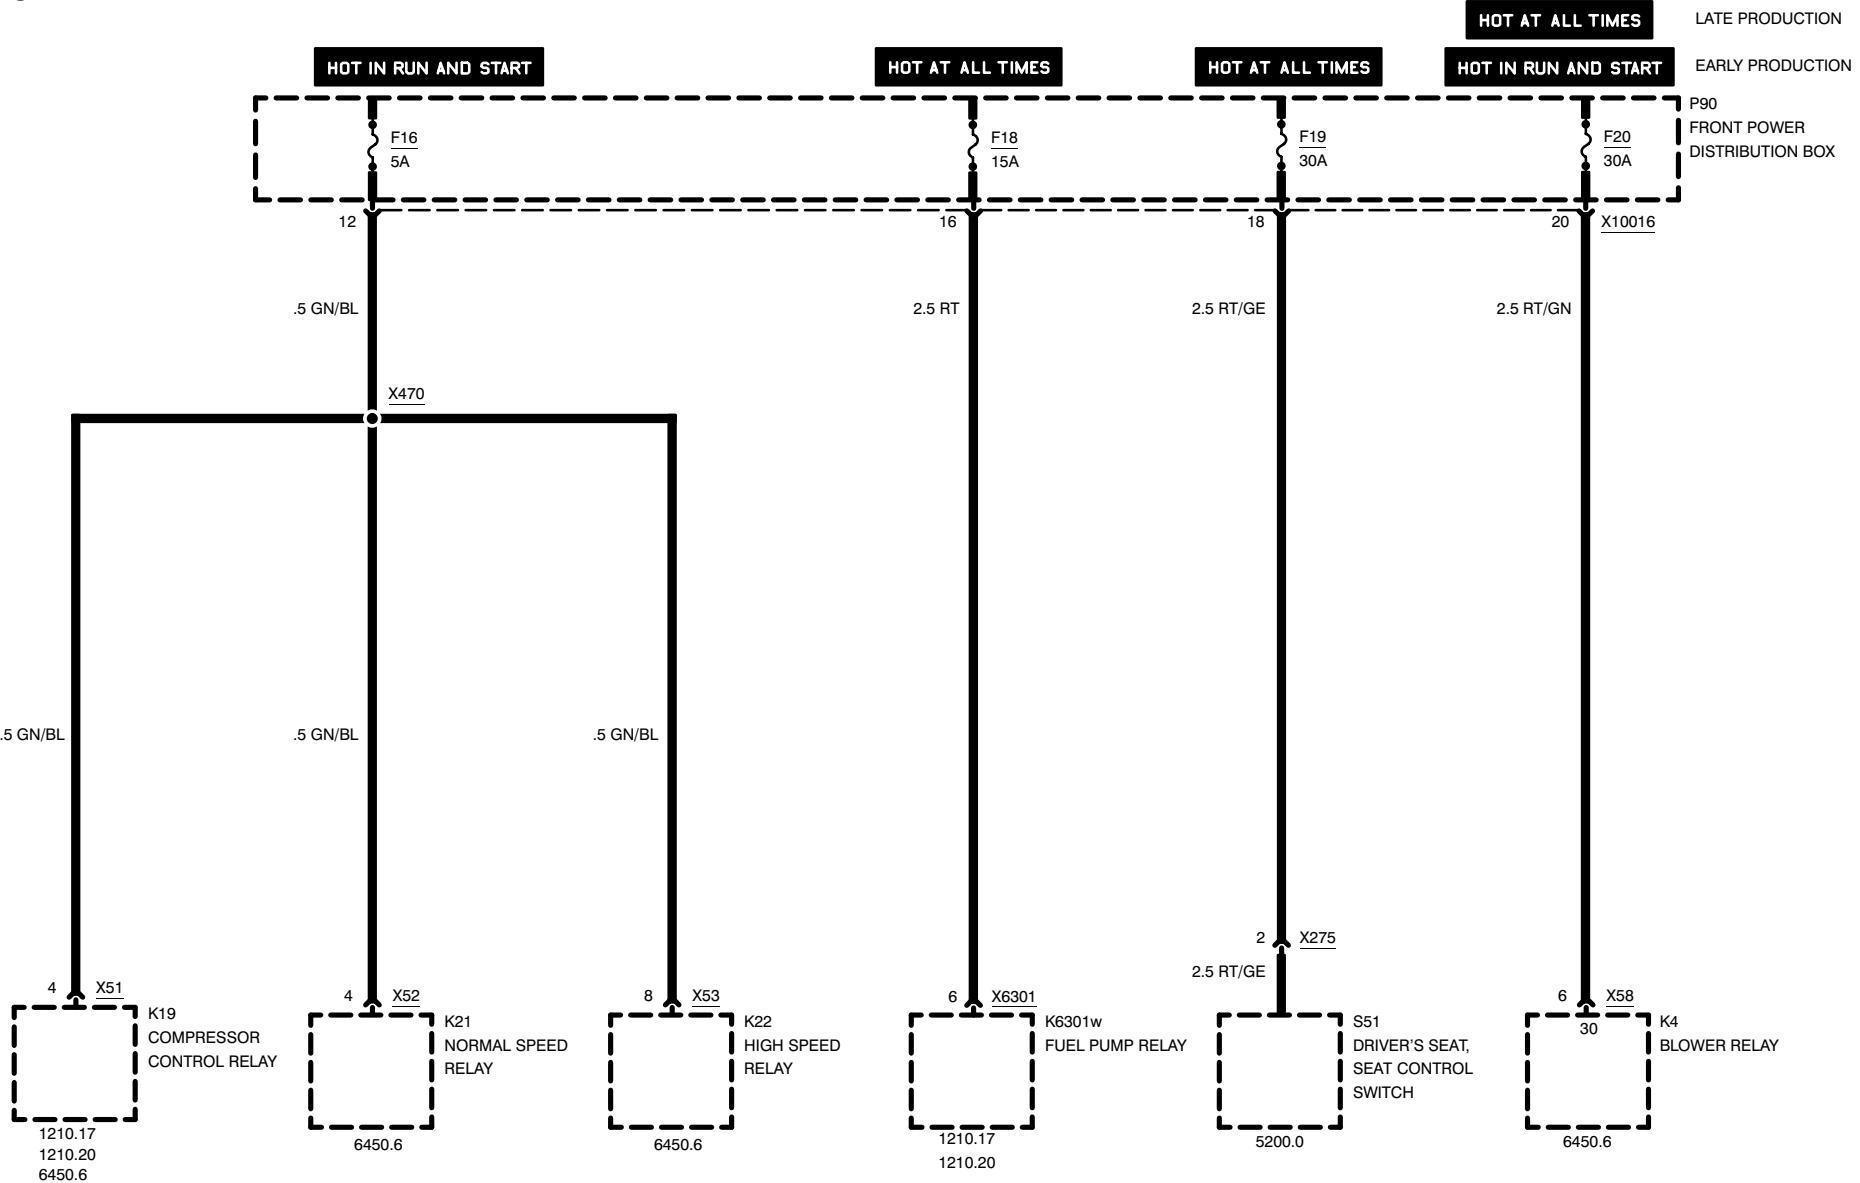


**FUSE DETAILS****FUSES 21, 22, AND 23**

Z3

03/98

0670.3-05

1997

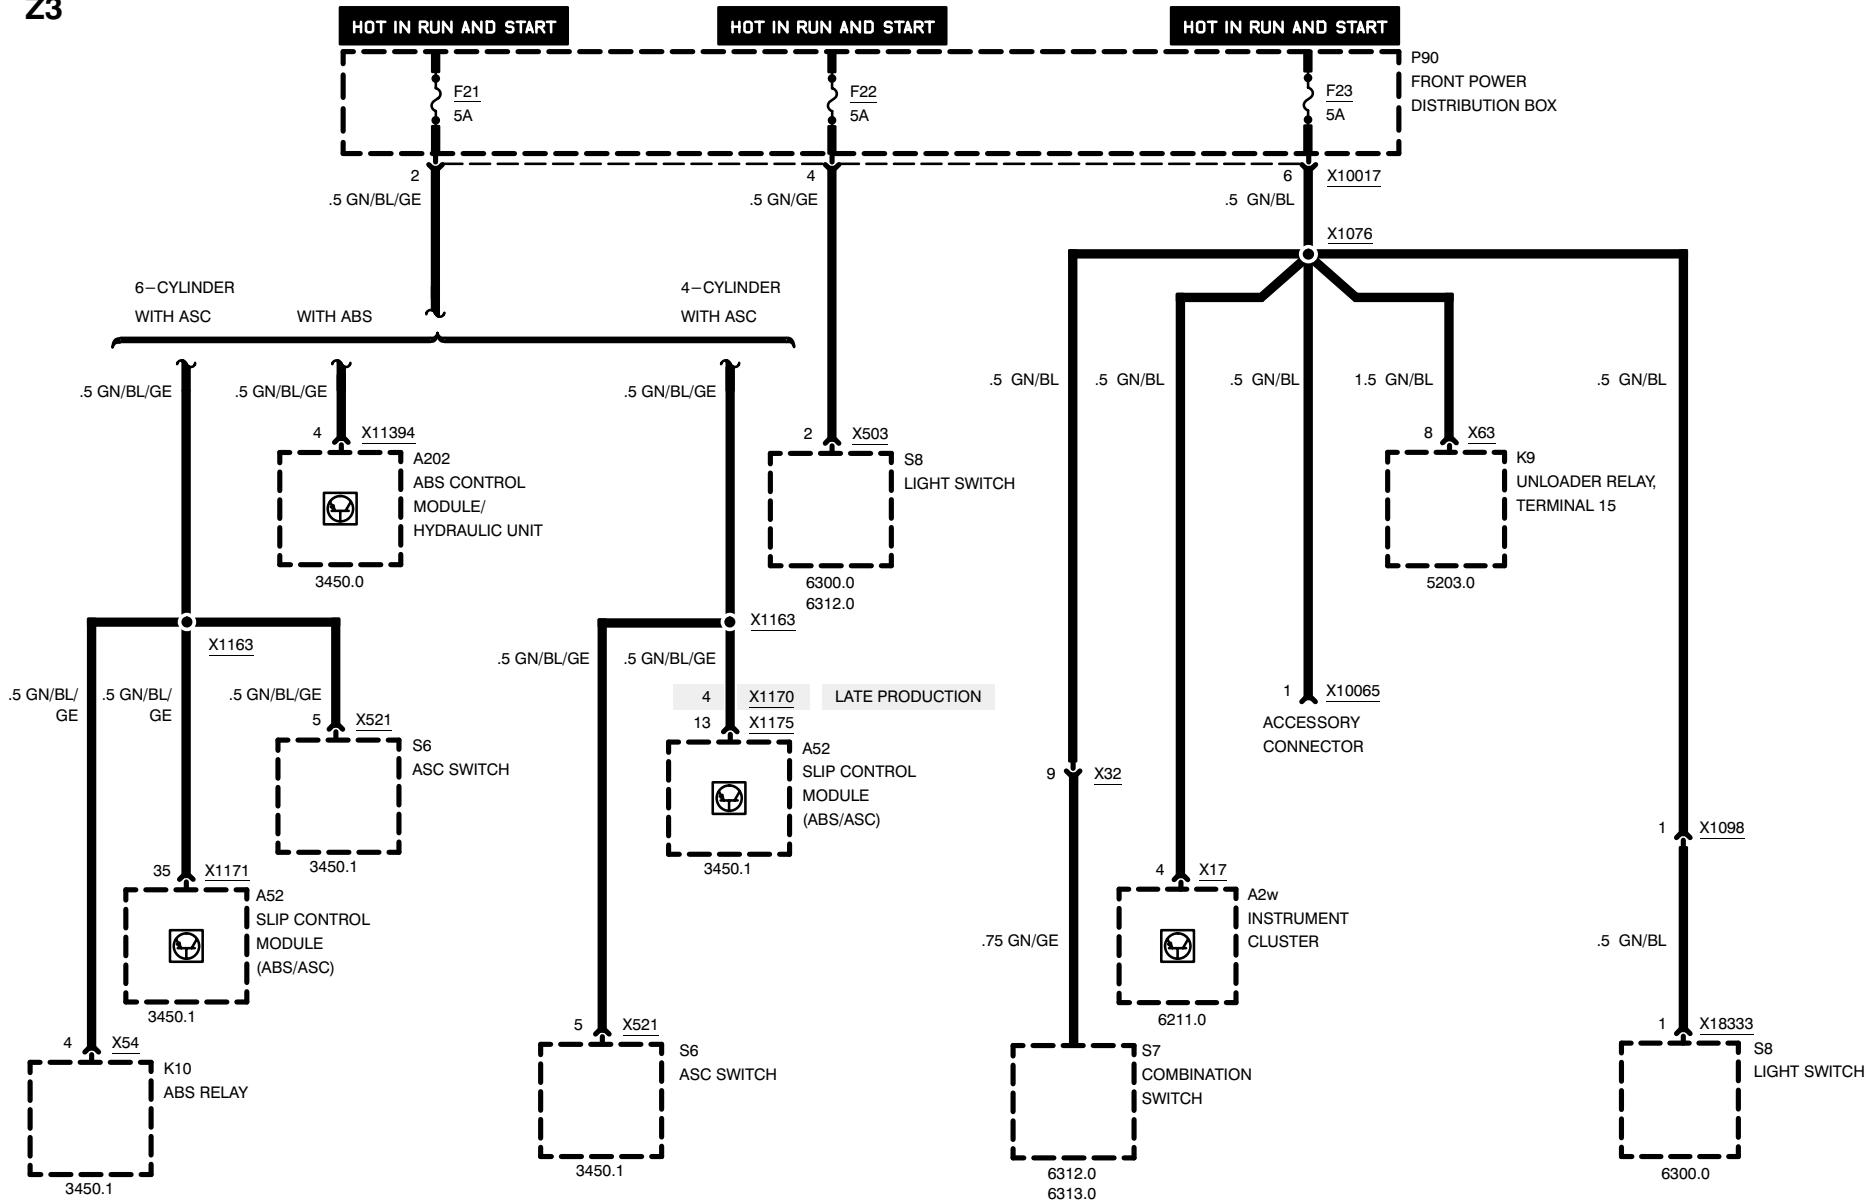


**FUSE DETAILS****FUSES 24 AND 25**

03/98

0670.3-06

1997

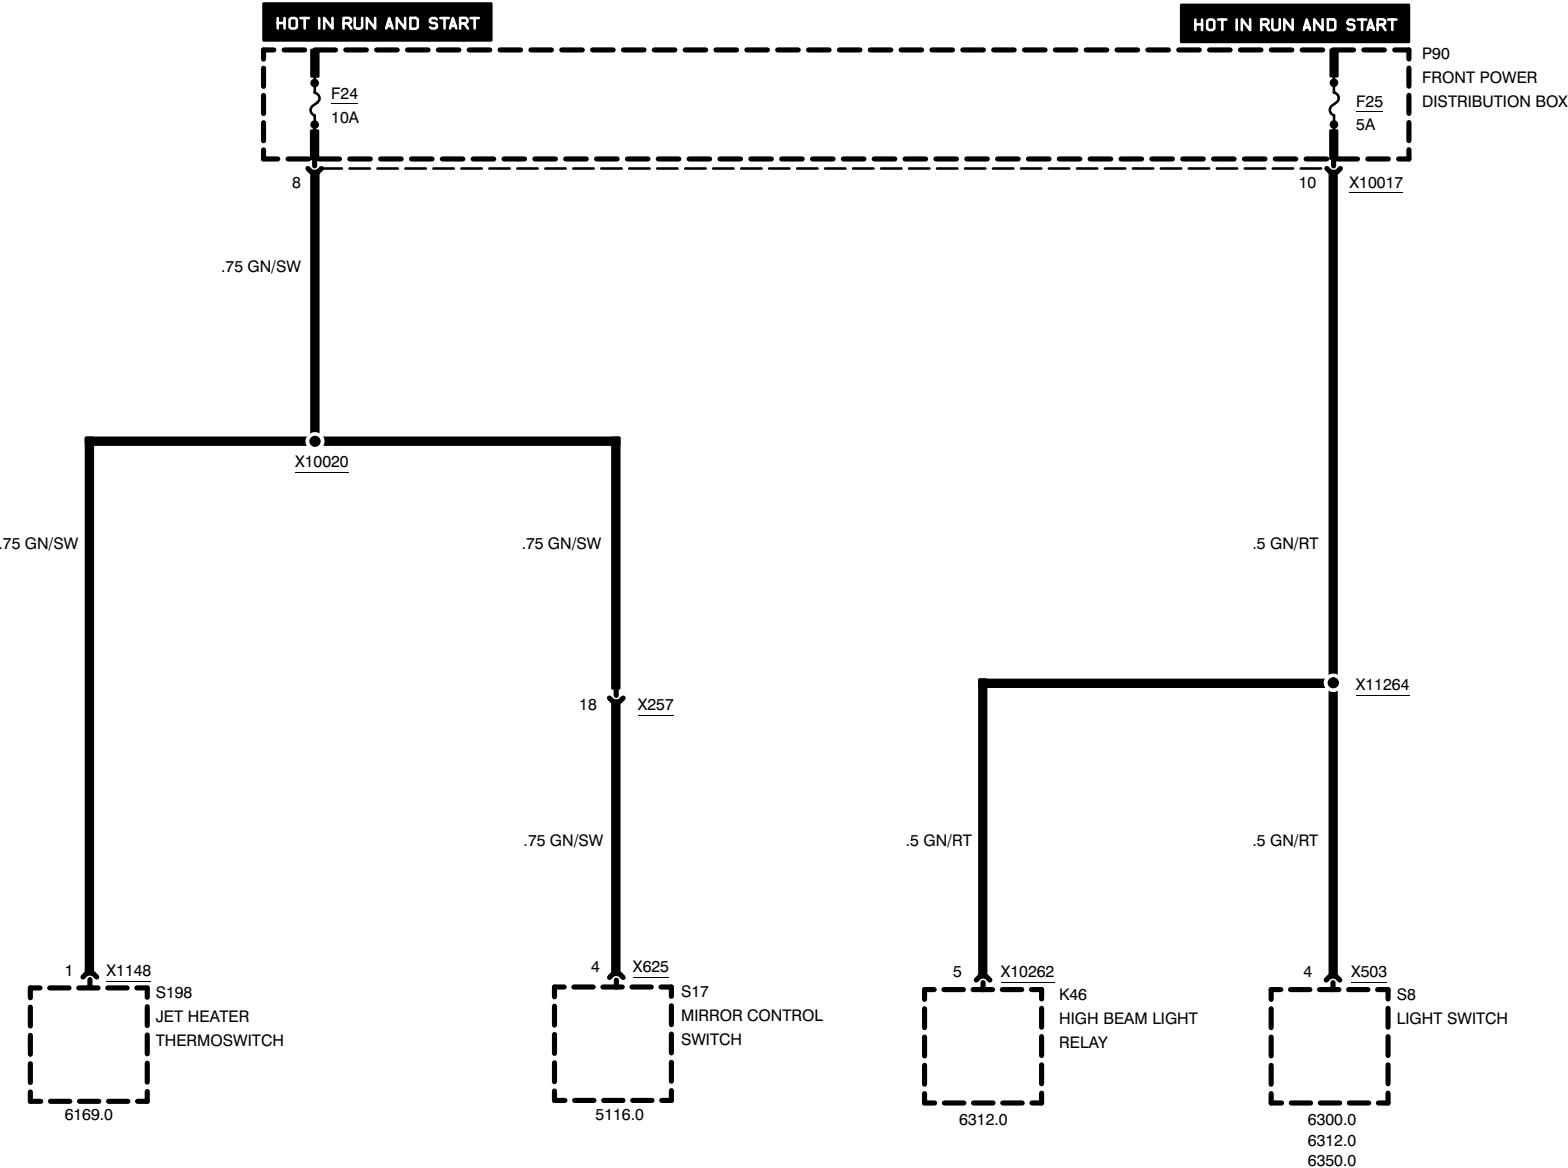


**FUSE DETAILS****FUSES 26, 27, 28, 29, AND 30**

Z3

03/98

0670.3-07

1997

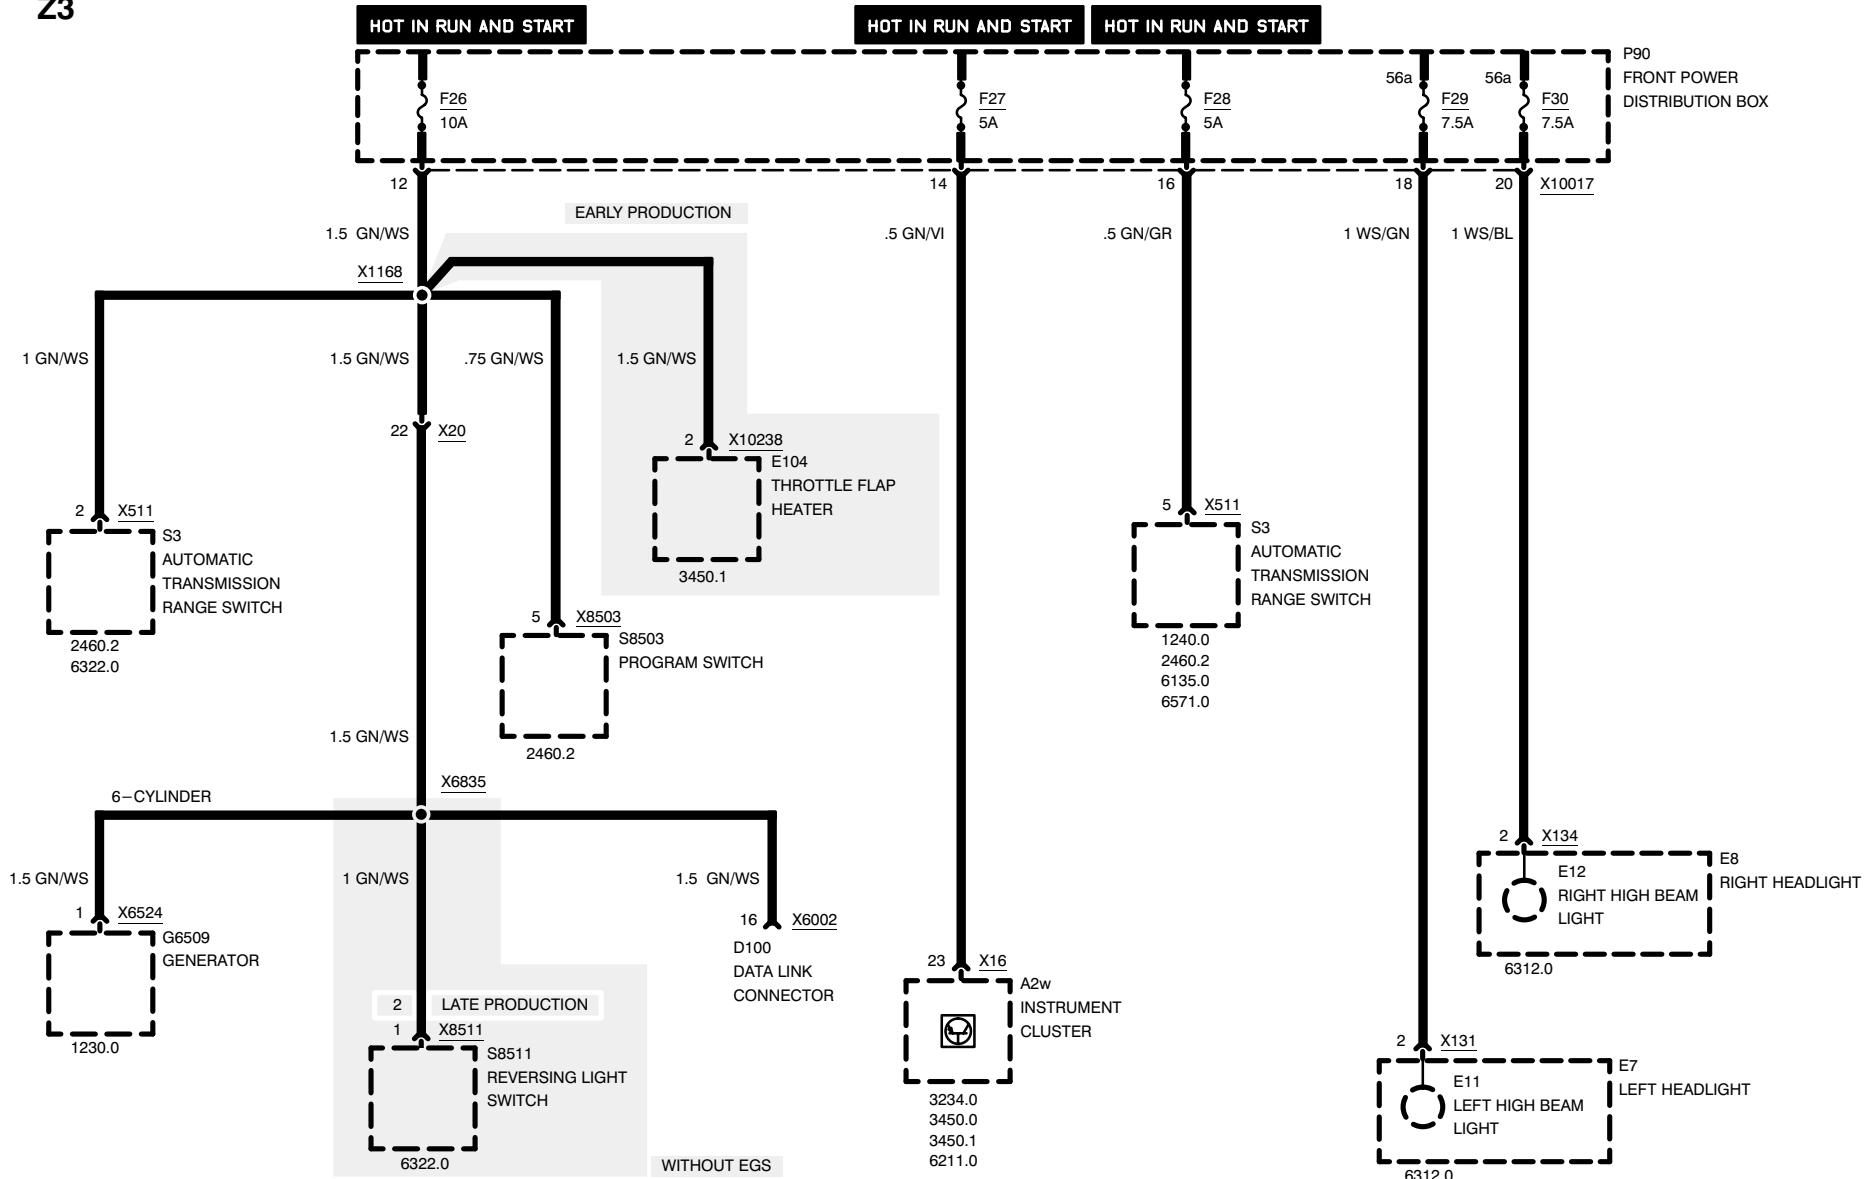


**FUSE DETAILS****FUSE 31**

Z3

03/98

**0670.3-08**

1997

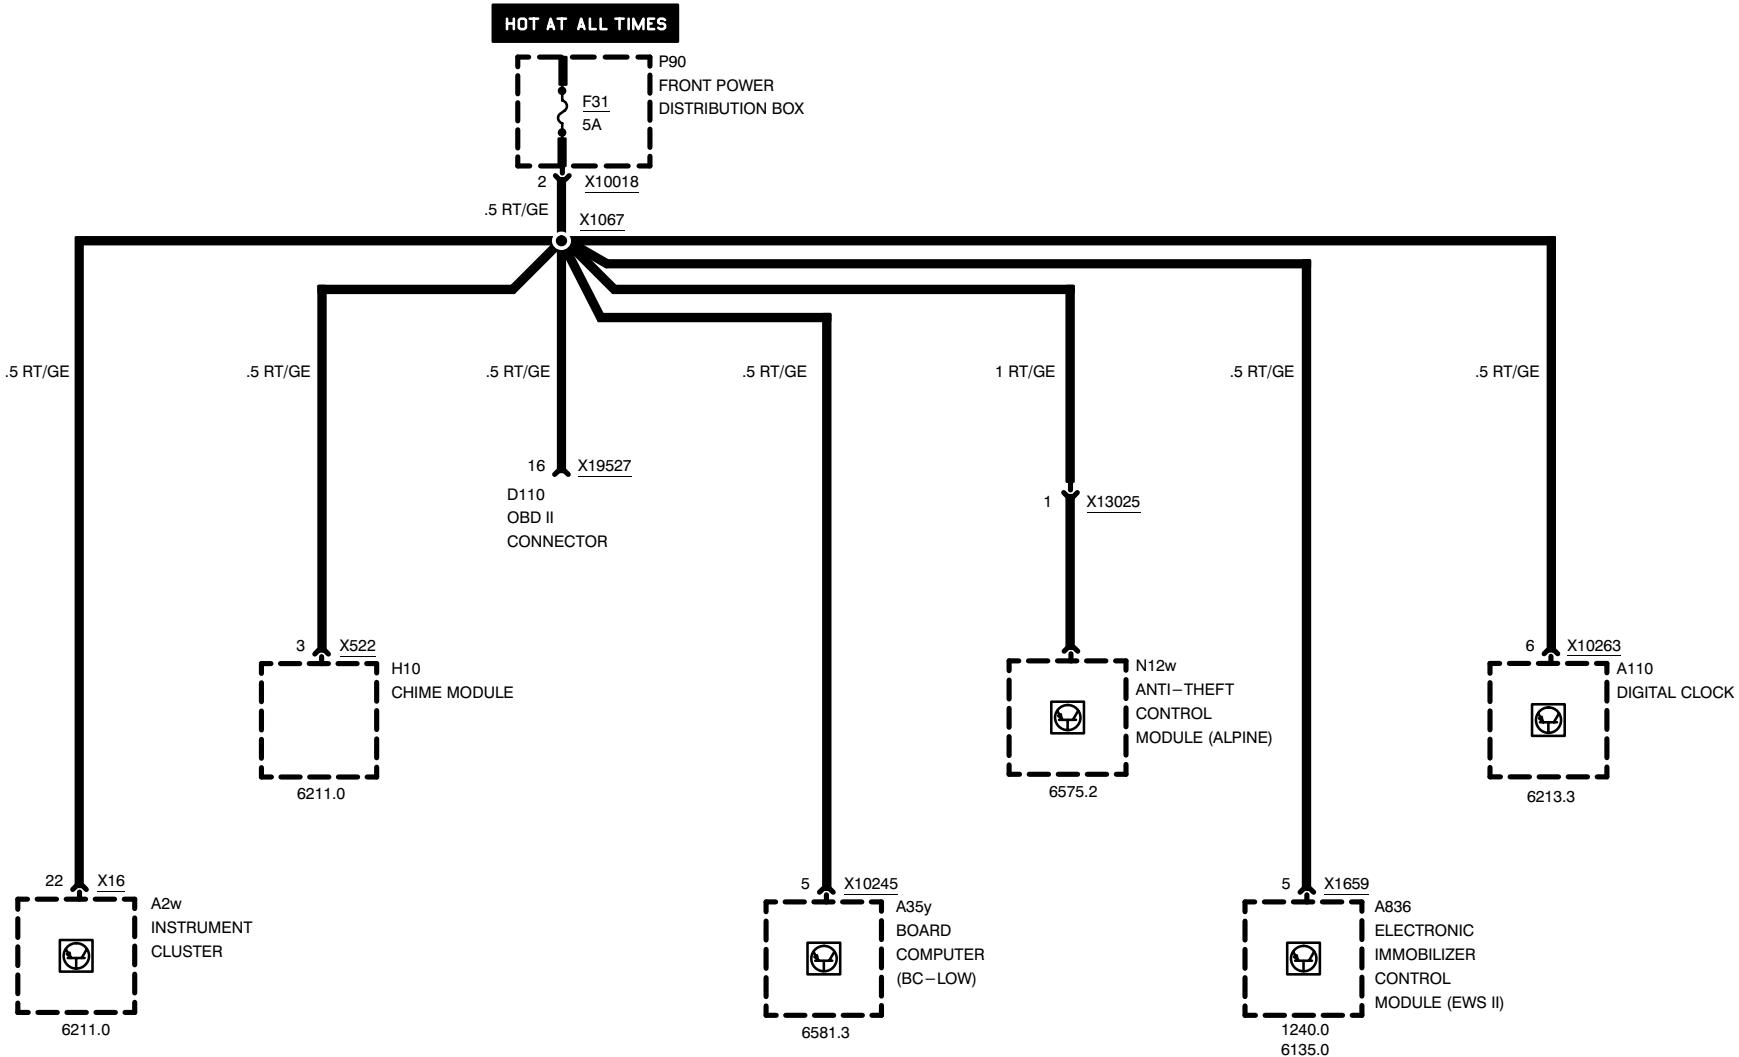


## FUSE DETAILS

### FUSES 32, 33, 34, AND 35

06/98


06703-09

1997

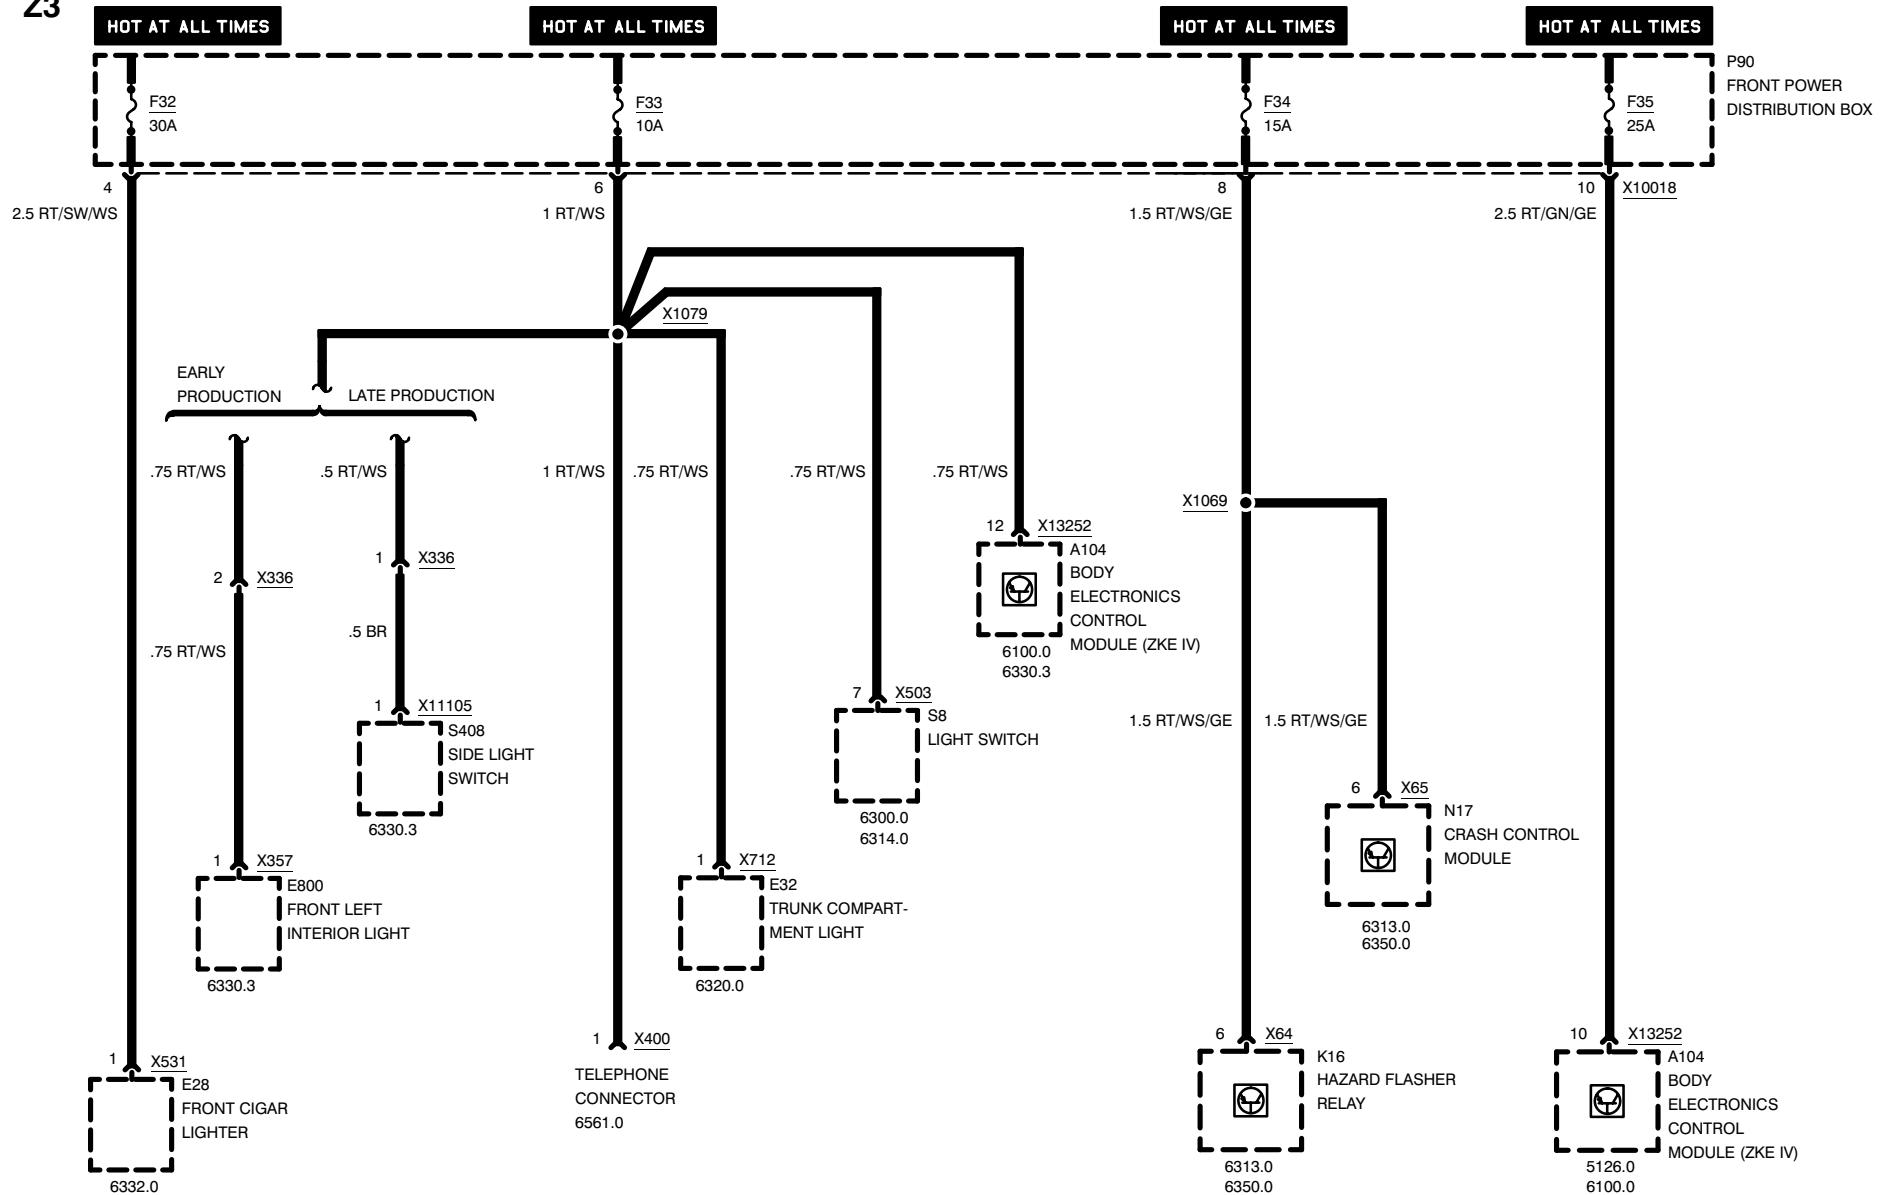

# FUSE DETAILS

## FUSES 36, 37, 38, AND 39

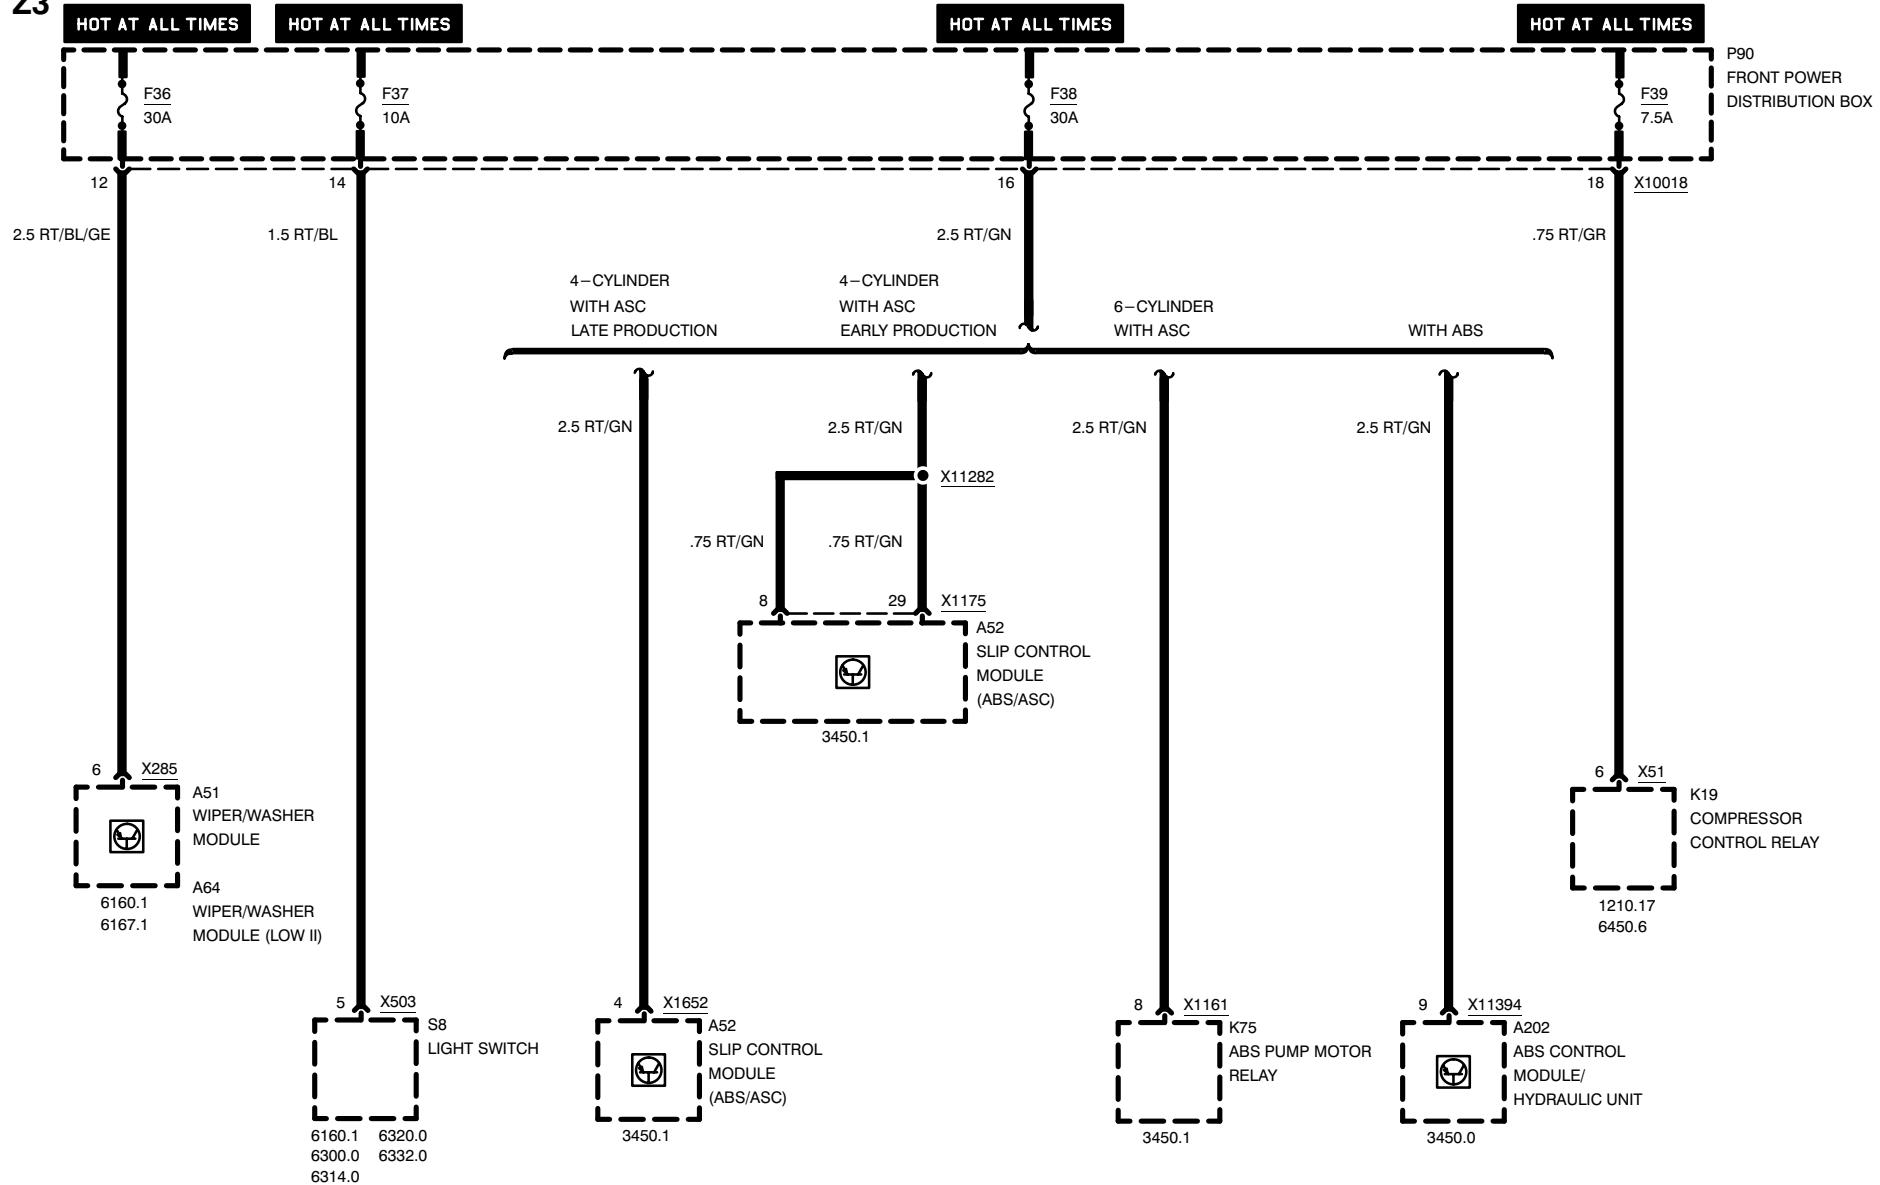


## FUSE DETAILS

### FUSES 40, 41, AND 42

03/98

0670.3-11

1997

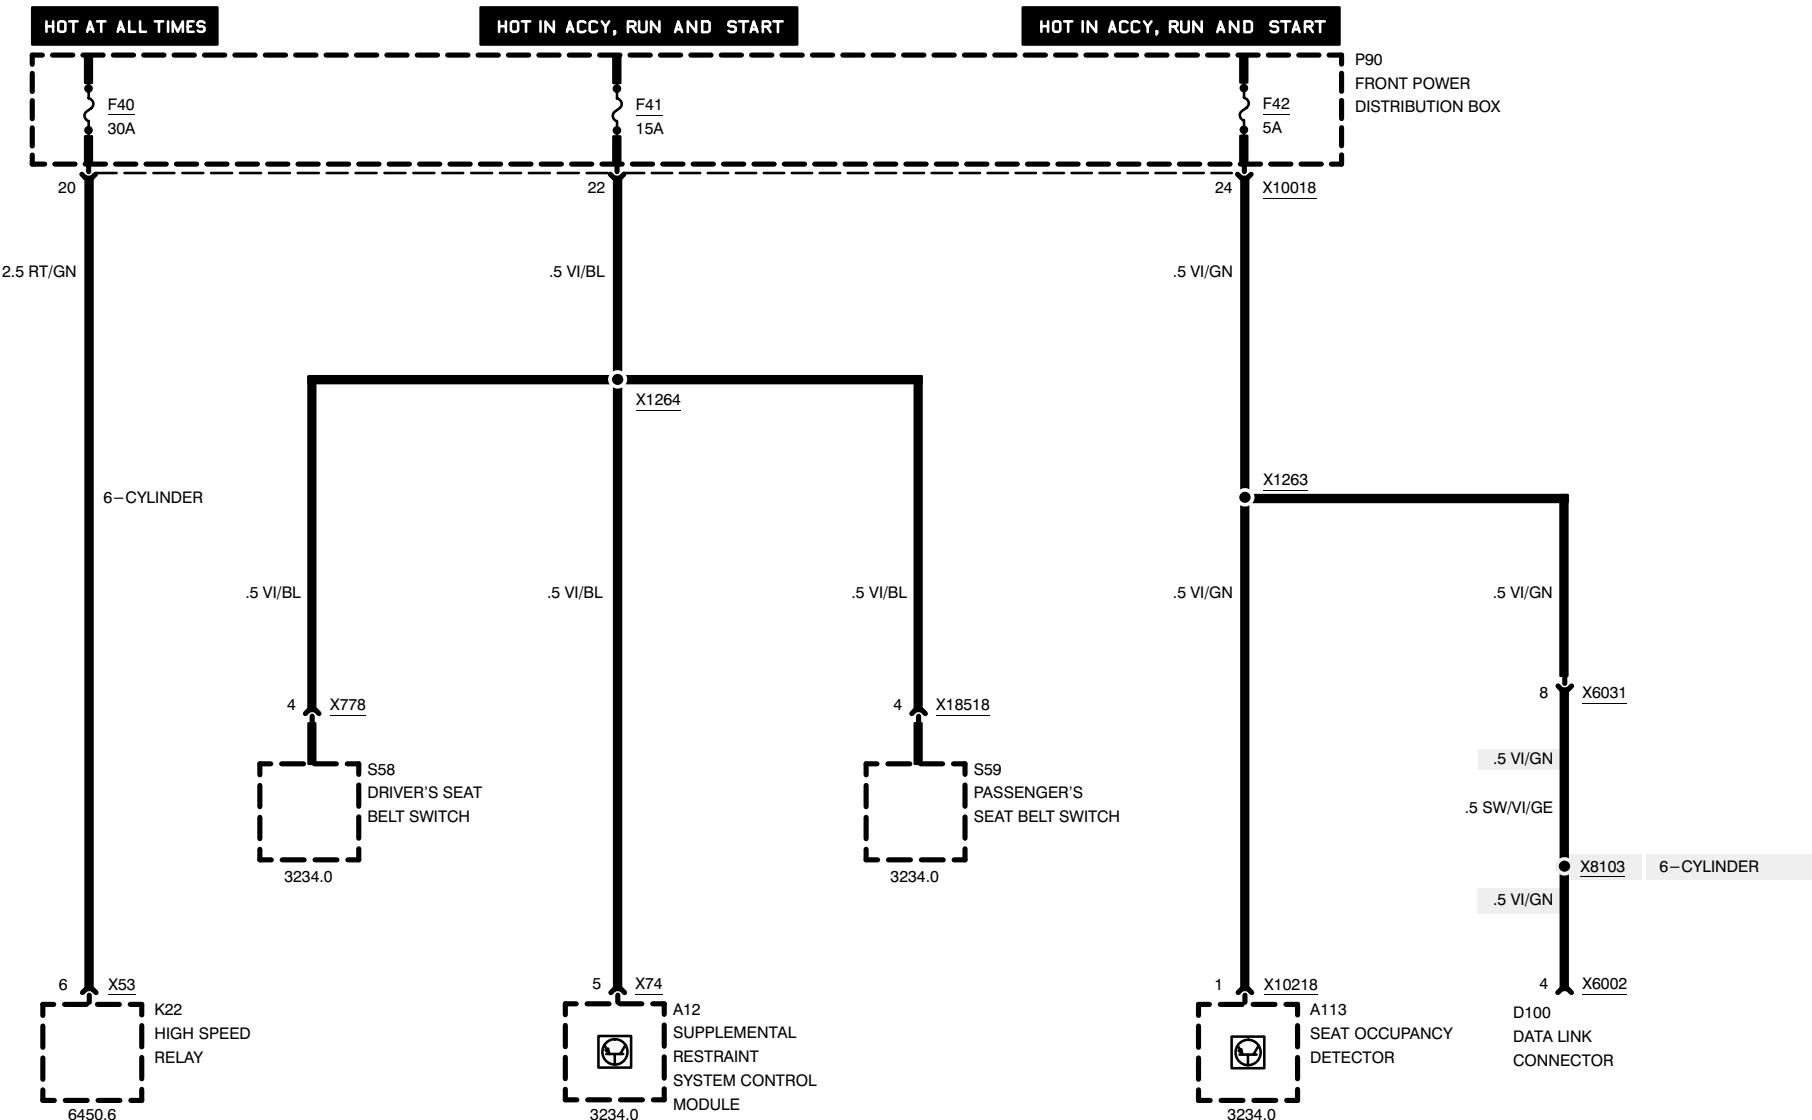


# FUSE DETAILS

## FUSES 43, 44, AND 45

03/98

0670.3-12

1997

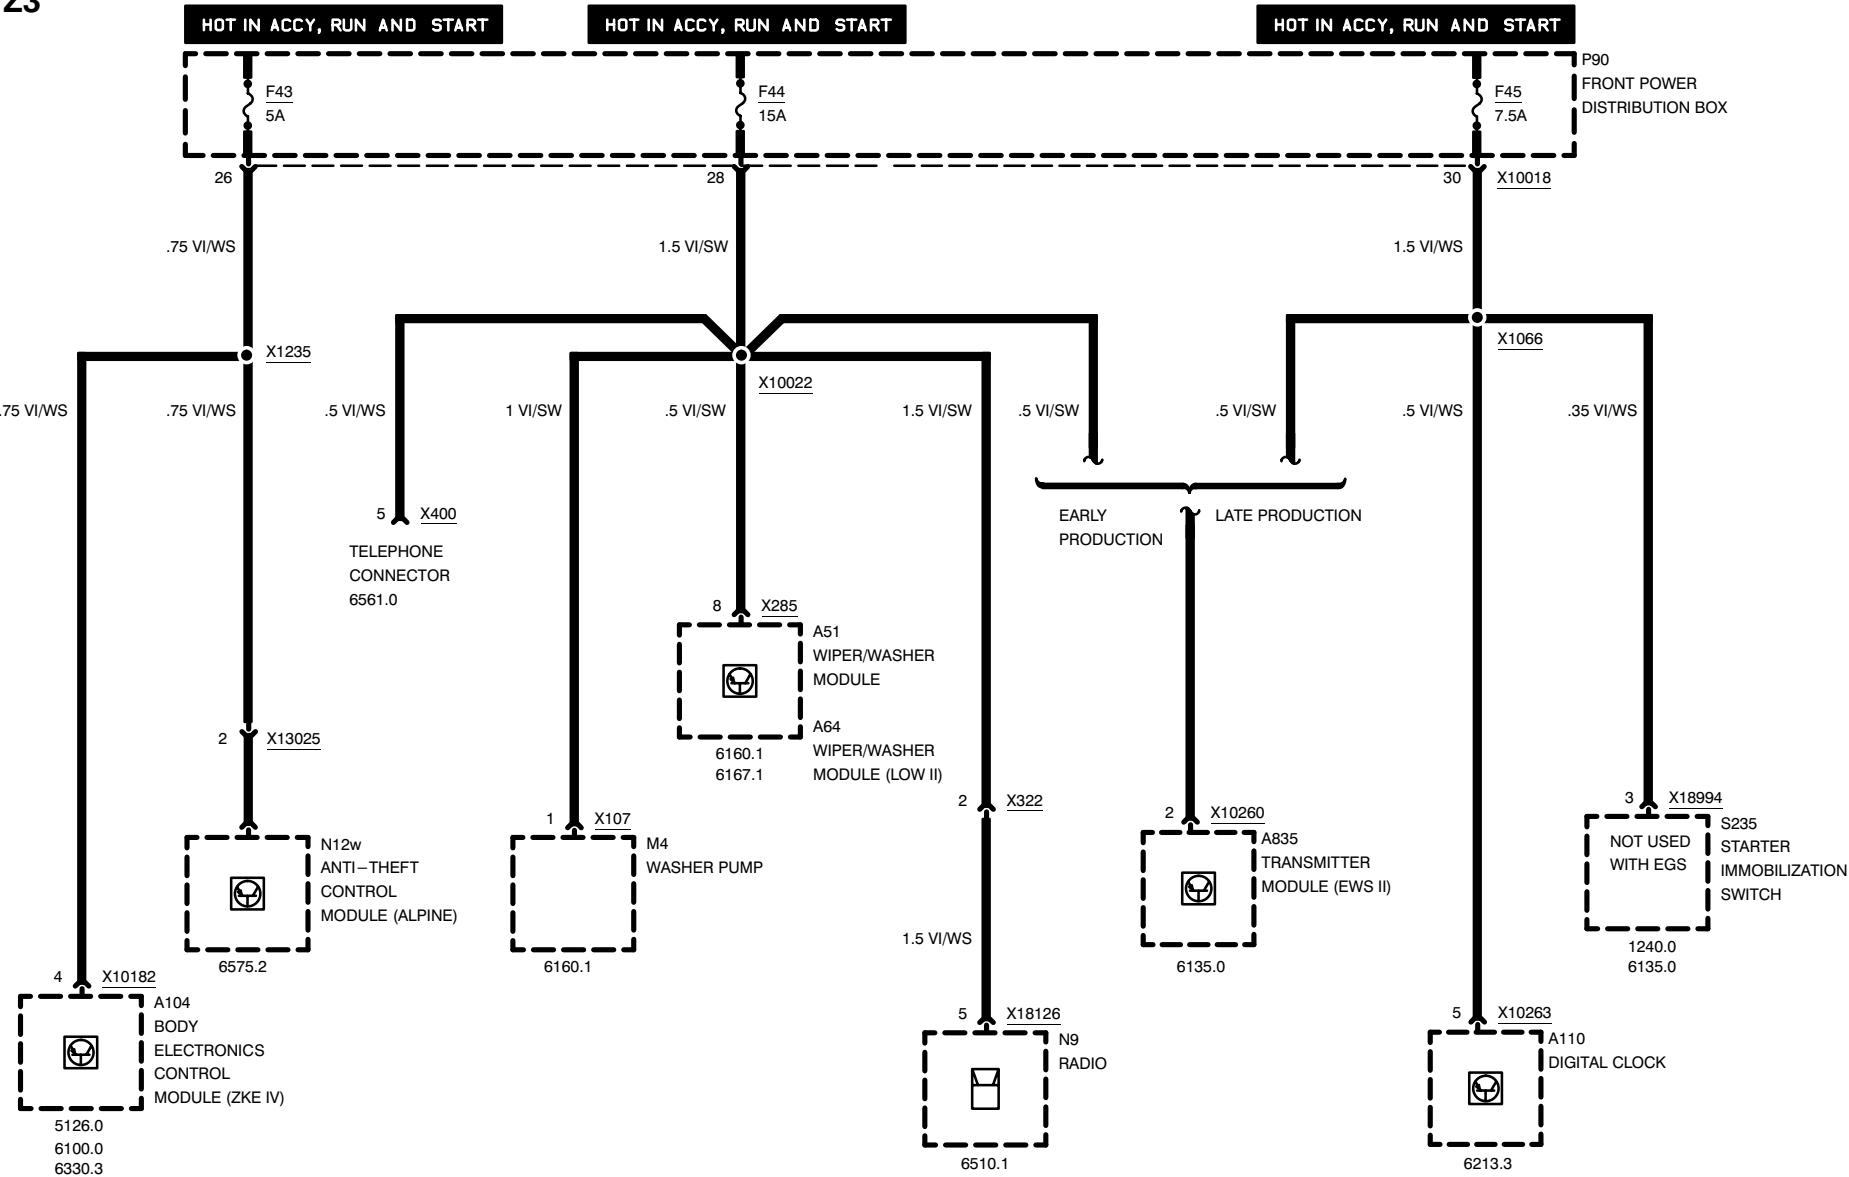


**FUSE DETAILS****FUSES 46 AND 48**

03/98

0670.3-13

1997

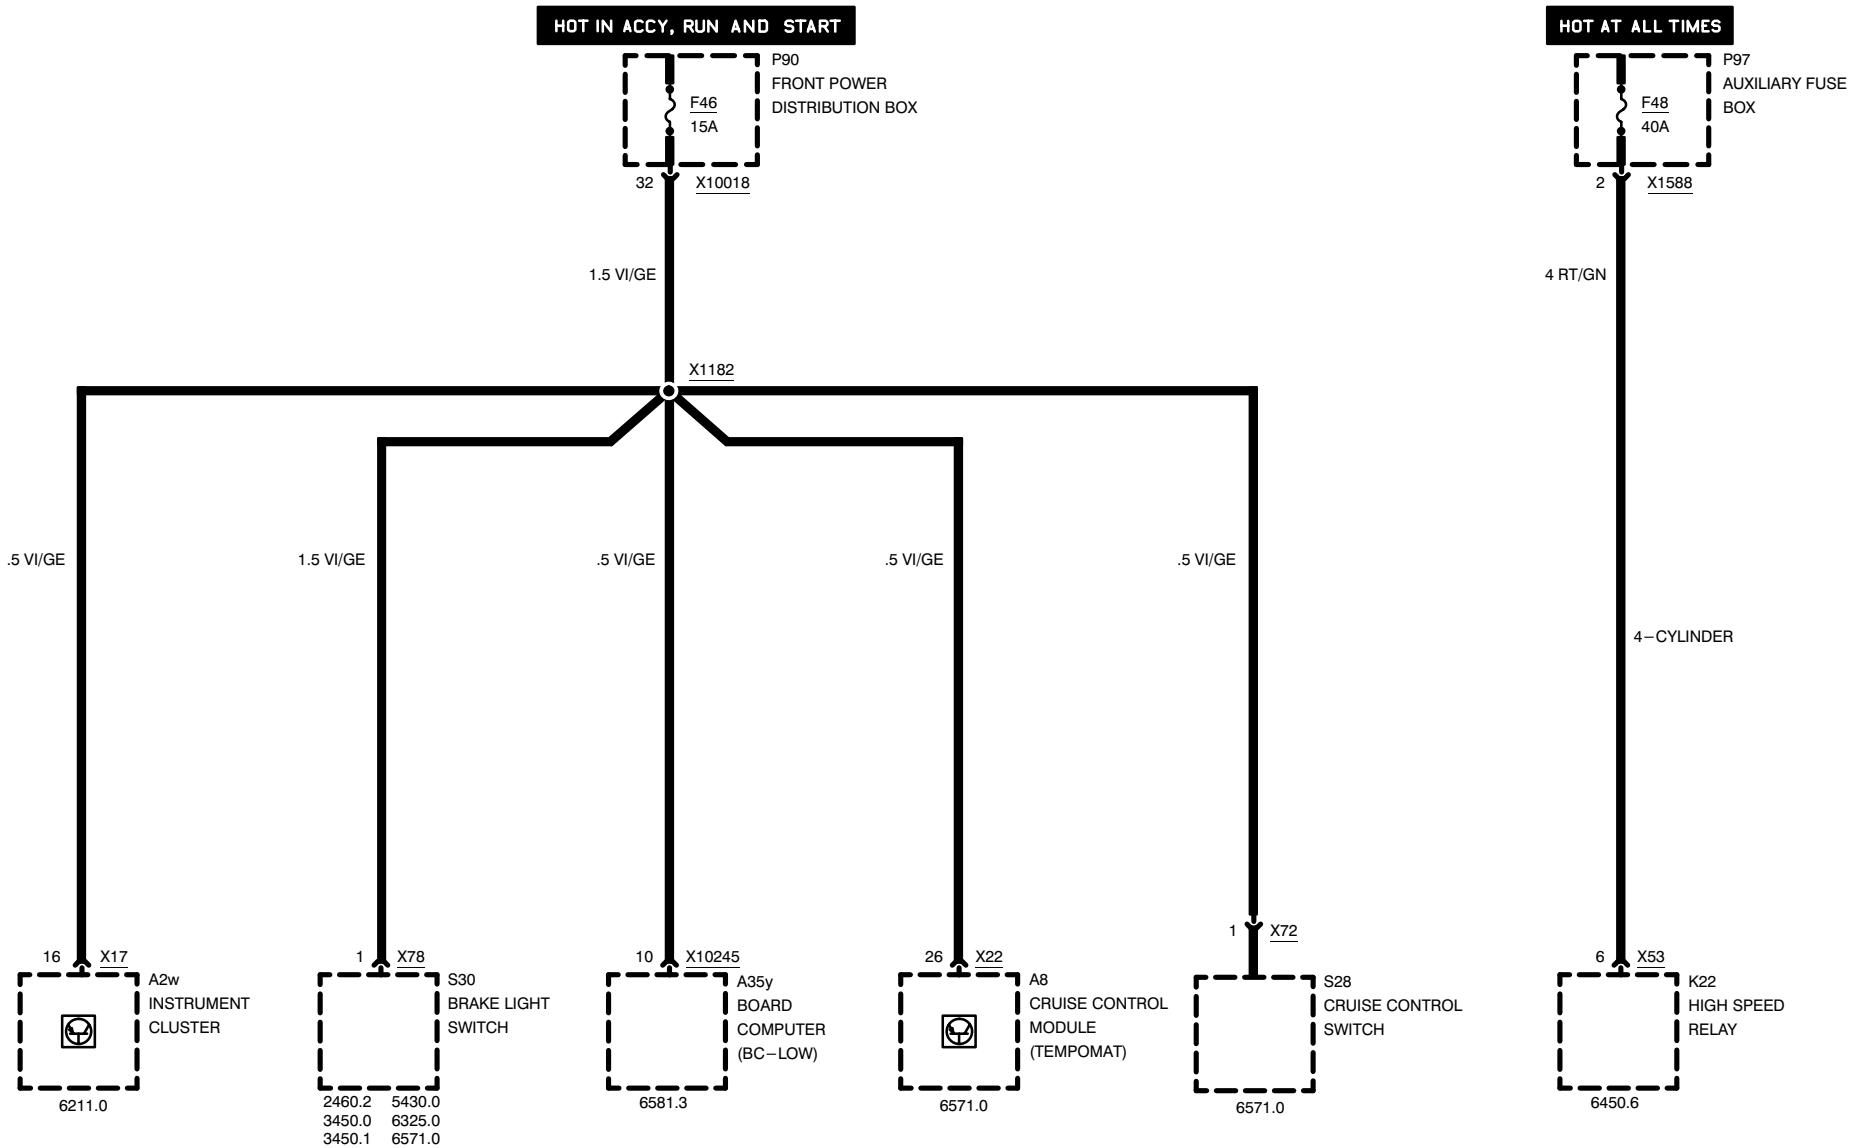




## GROUND DISTRIBUTION

### GROUND X165

Z3

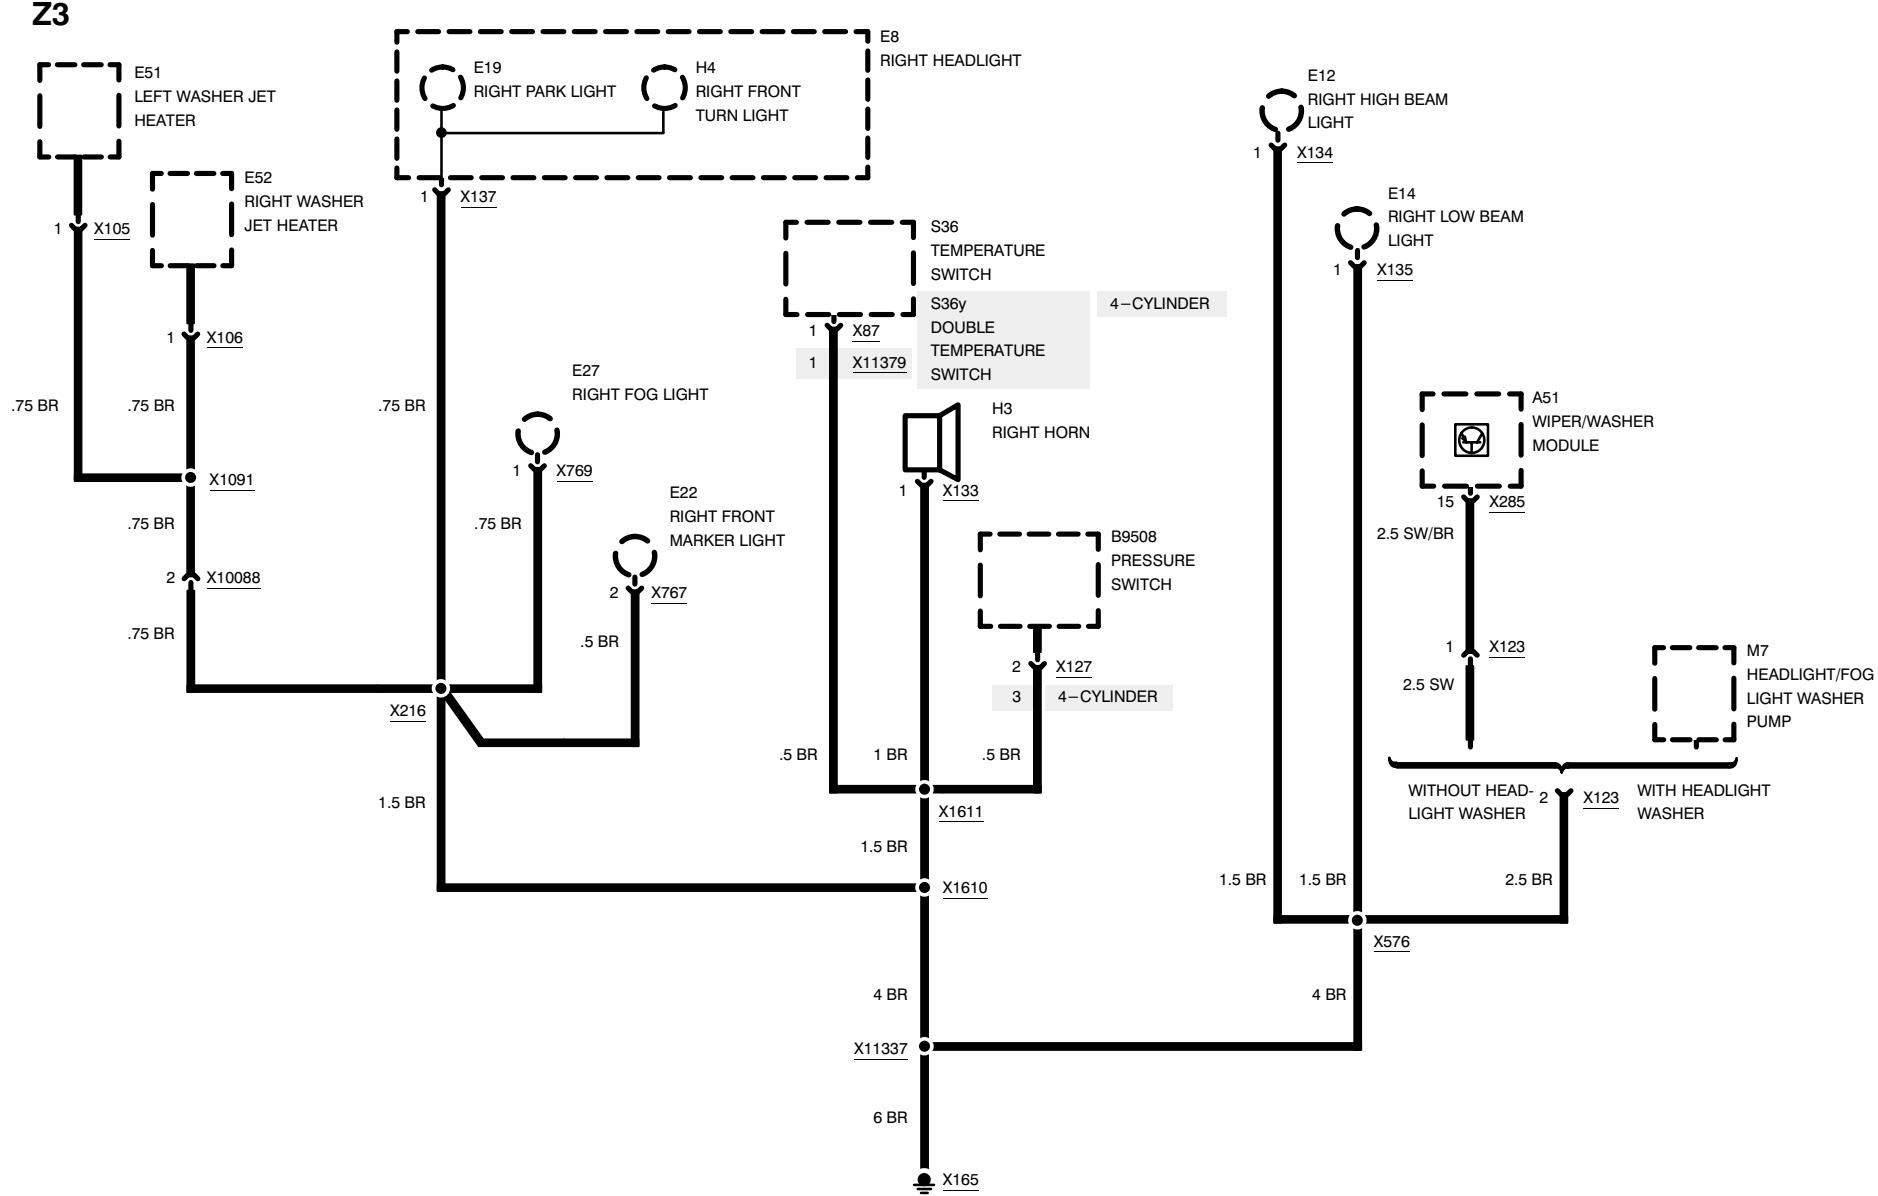

03/98

0670-4-00


1997

## GROUND DISTRIBUTION

## GROUND X166

03/98

06704-01

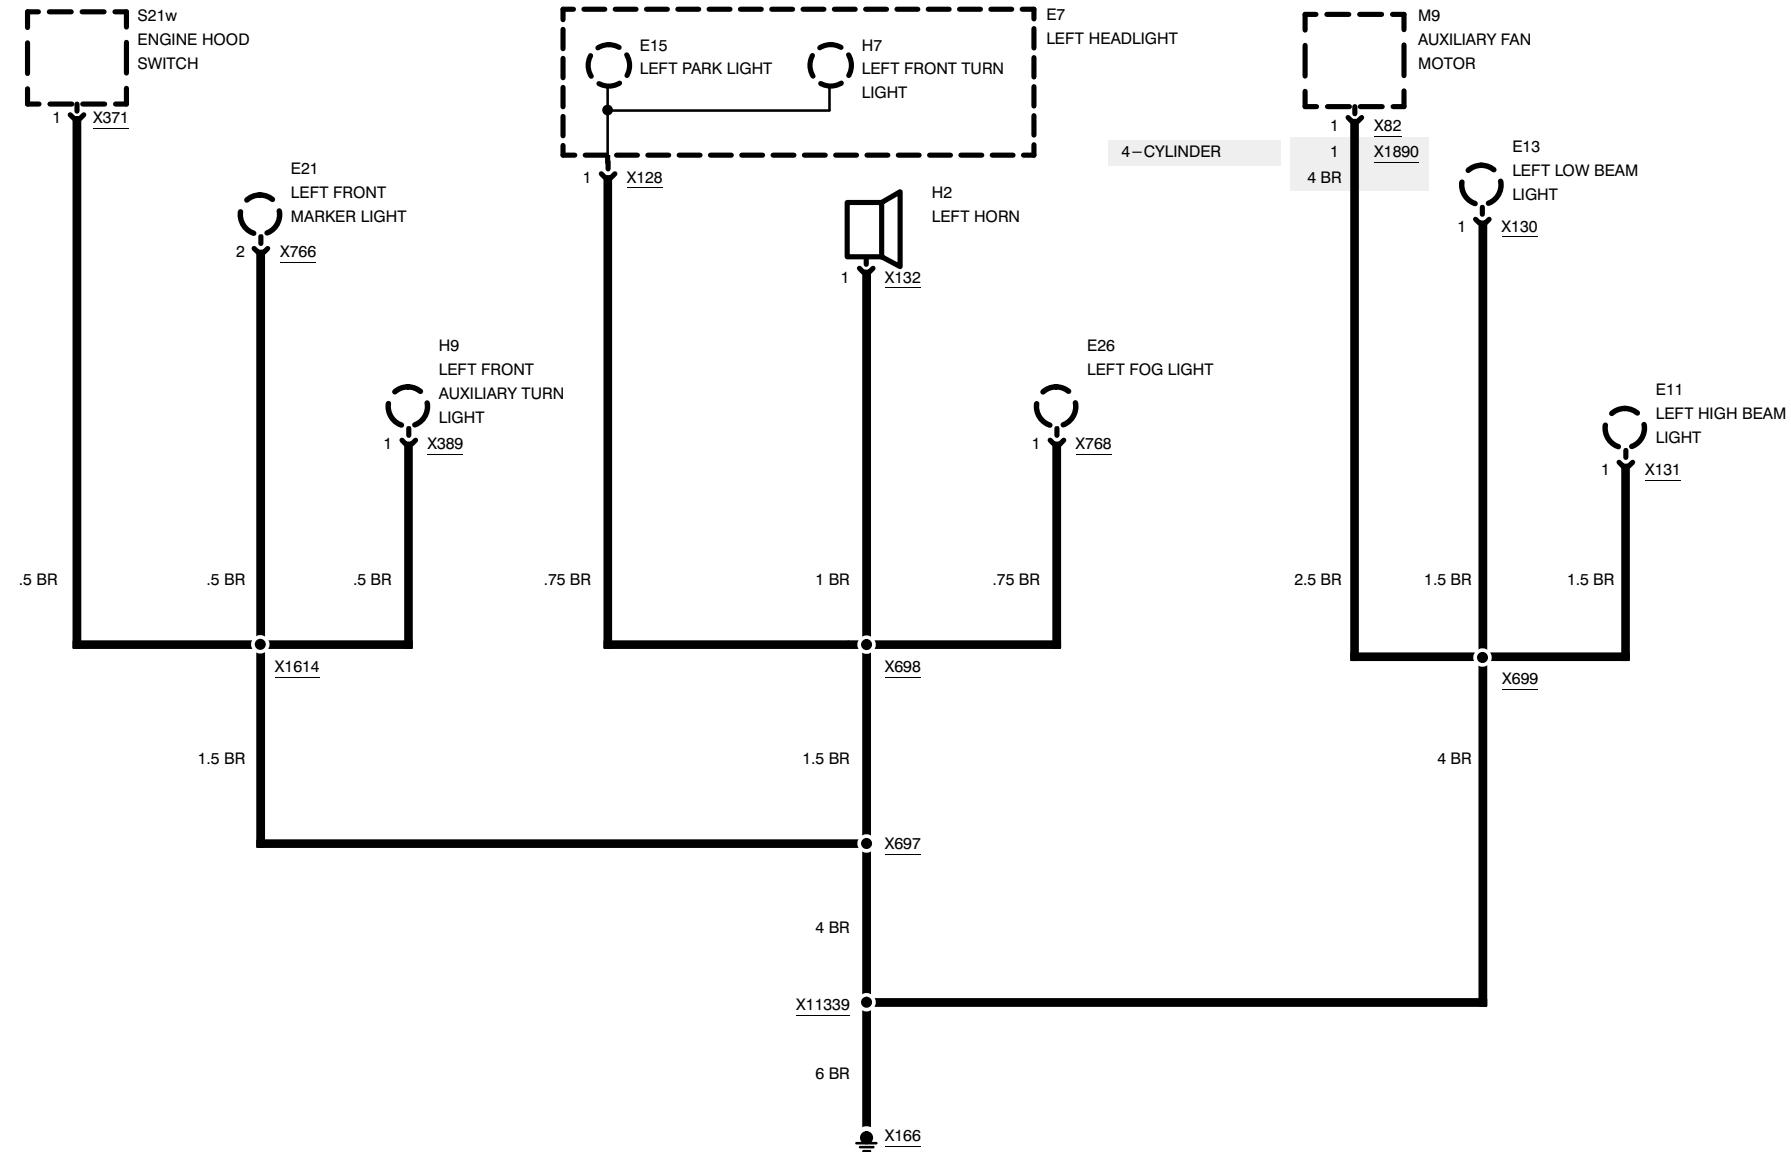



# GROUND DISTRIBUTION


## GROUND X170

Z3

03/98

0670.4-02

1997

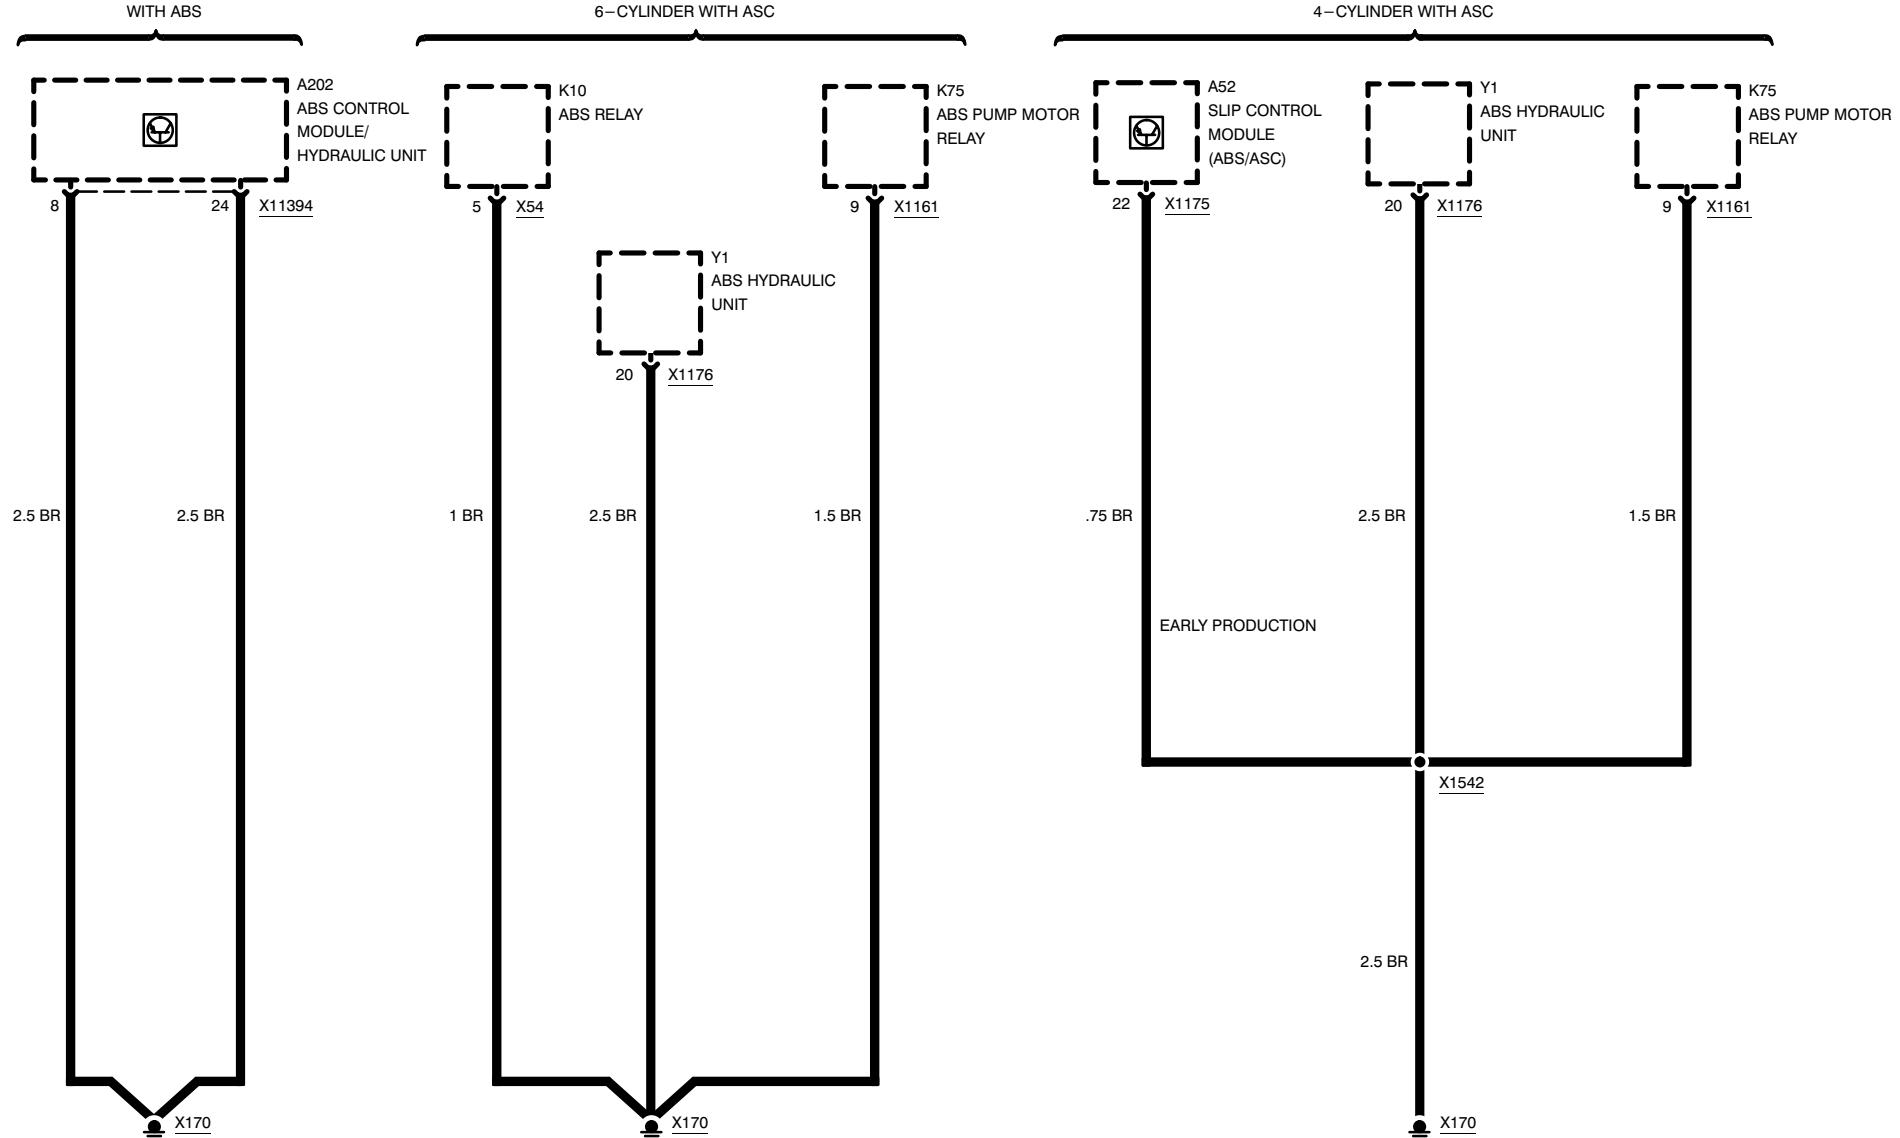


# GROUND DISTRIBUTION

## GROUNDS X494, X861, X1116, X1166, AND X1441

03/98

0670.4-03

1997

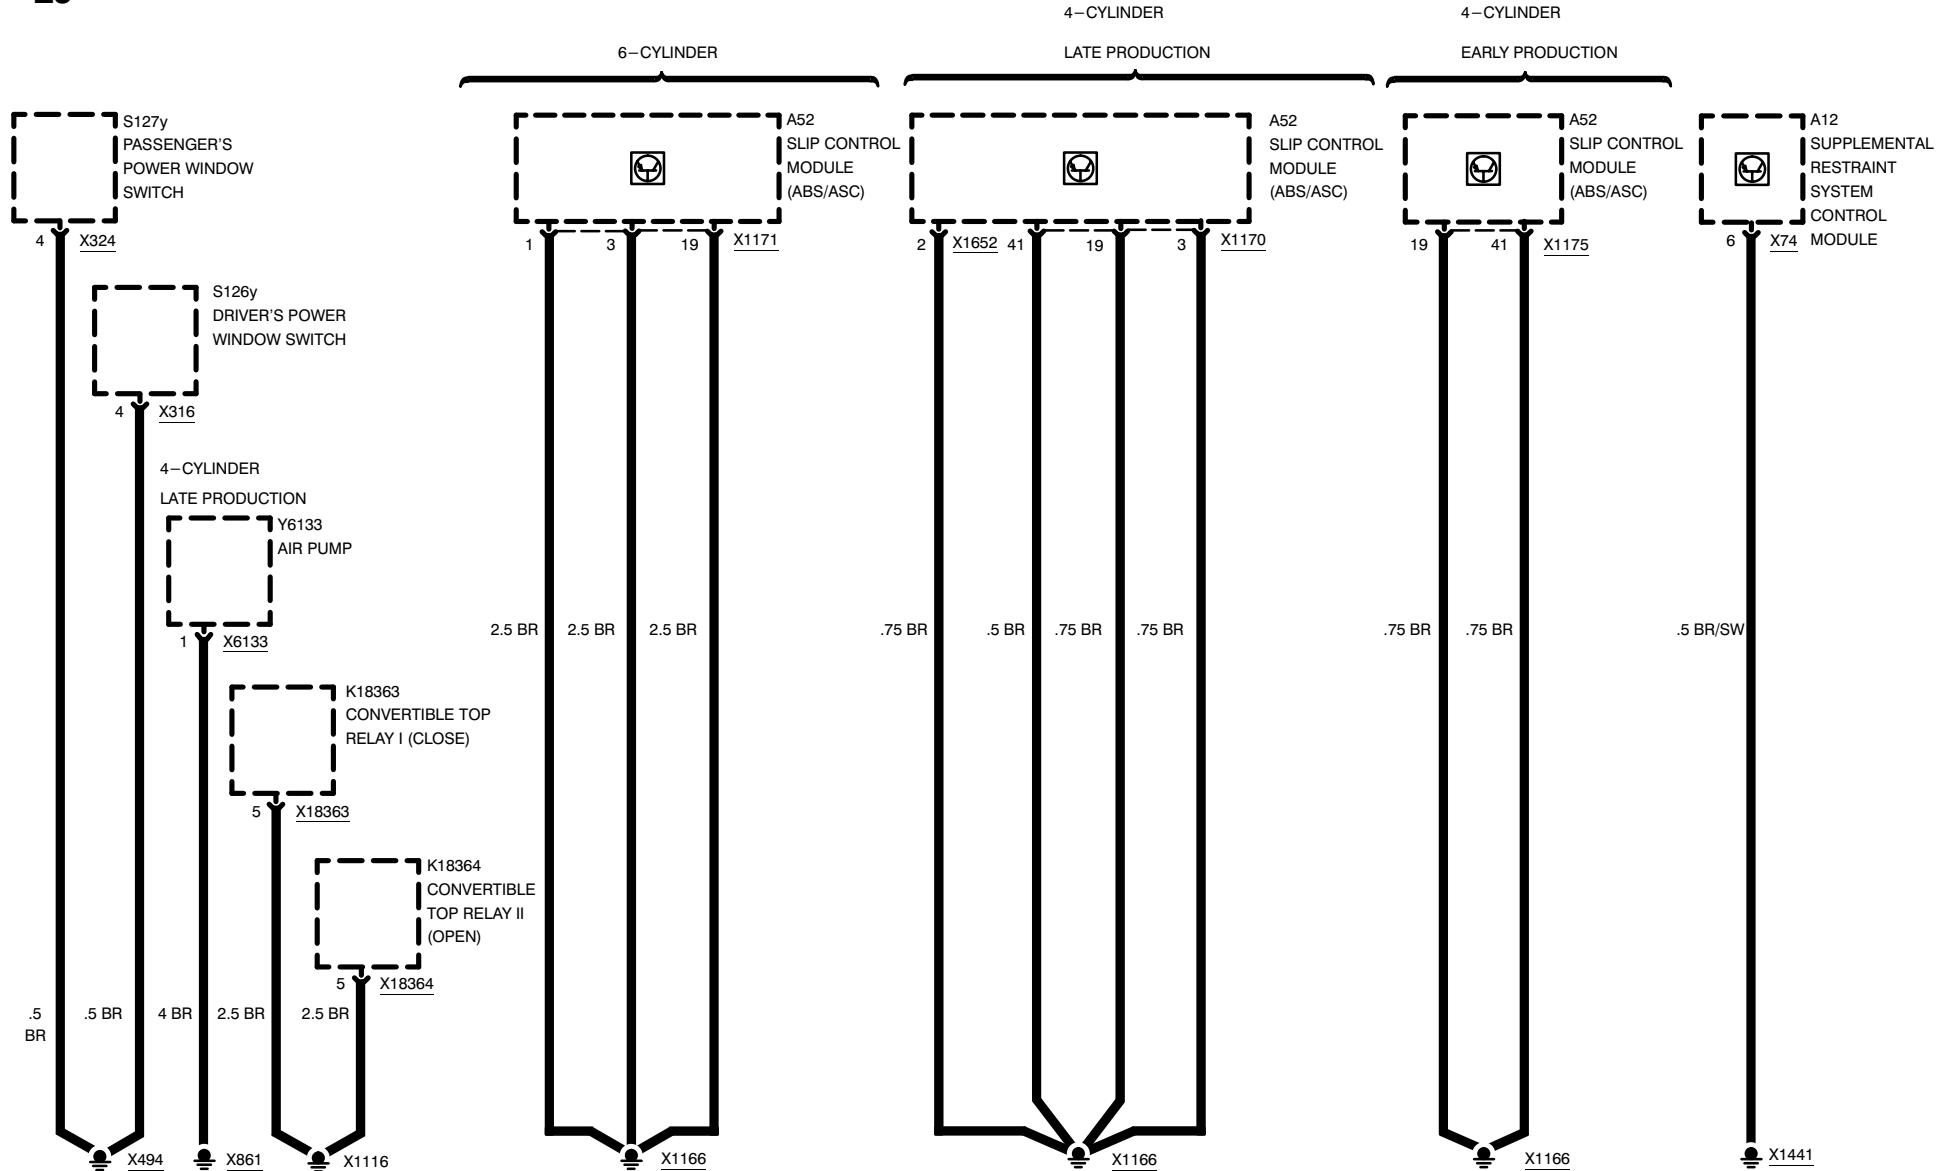



# GROUND DISTRIBUTION

## GROUND X6454


Z3

4-CYLINDER

06/98

06704-04

1997

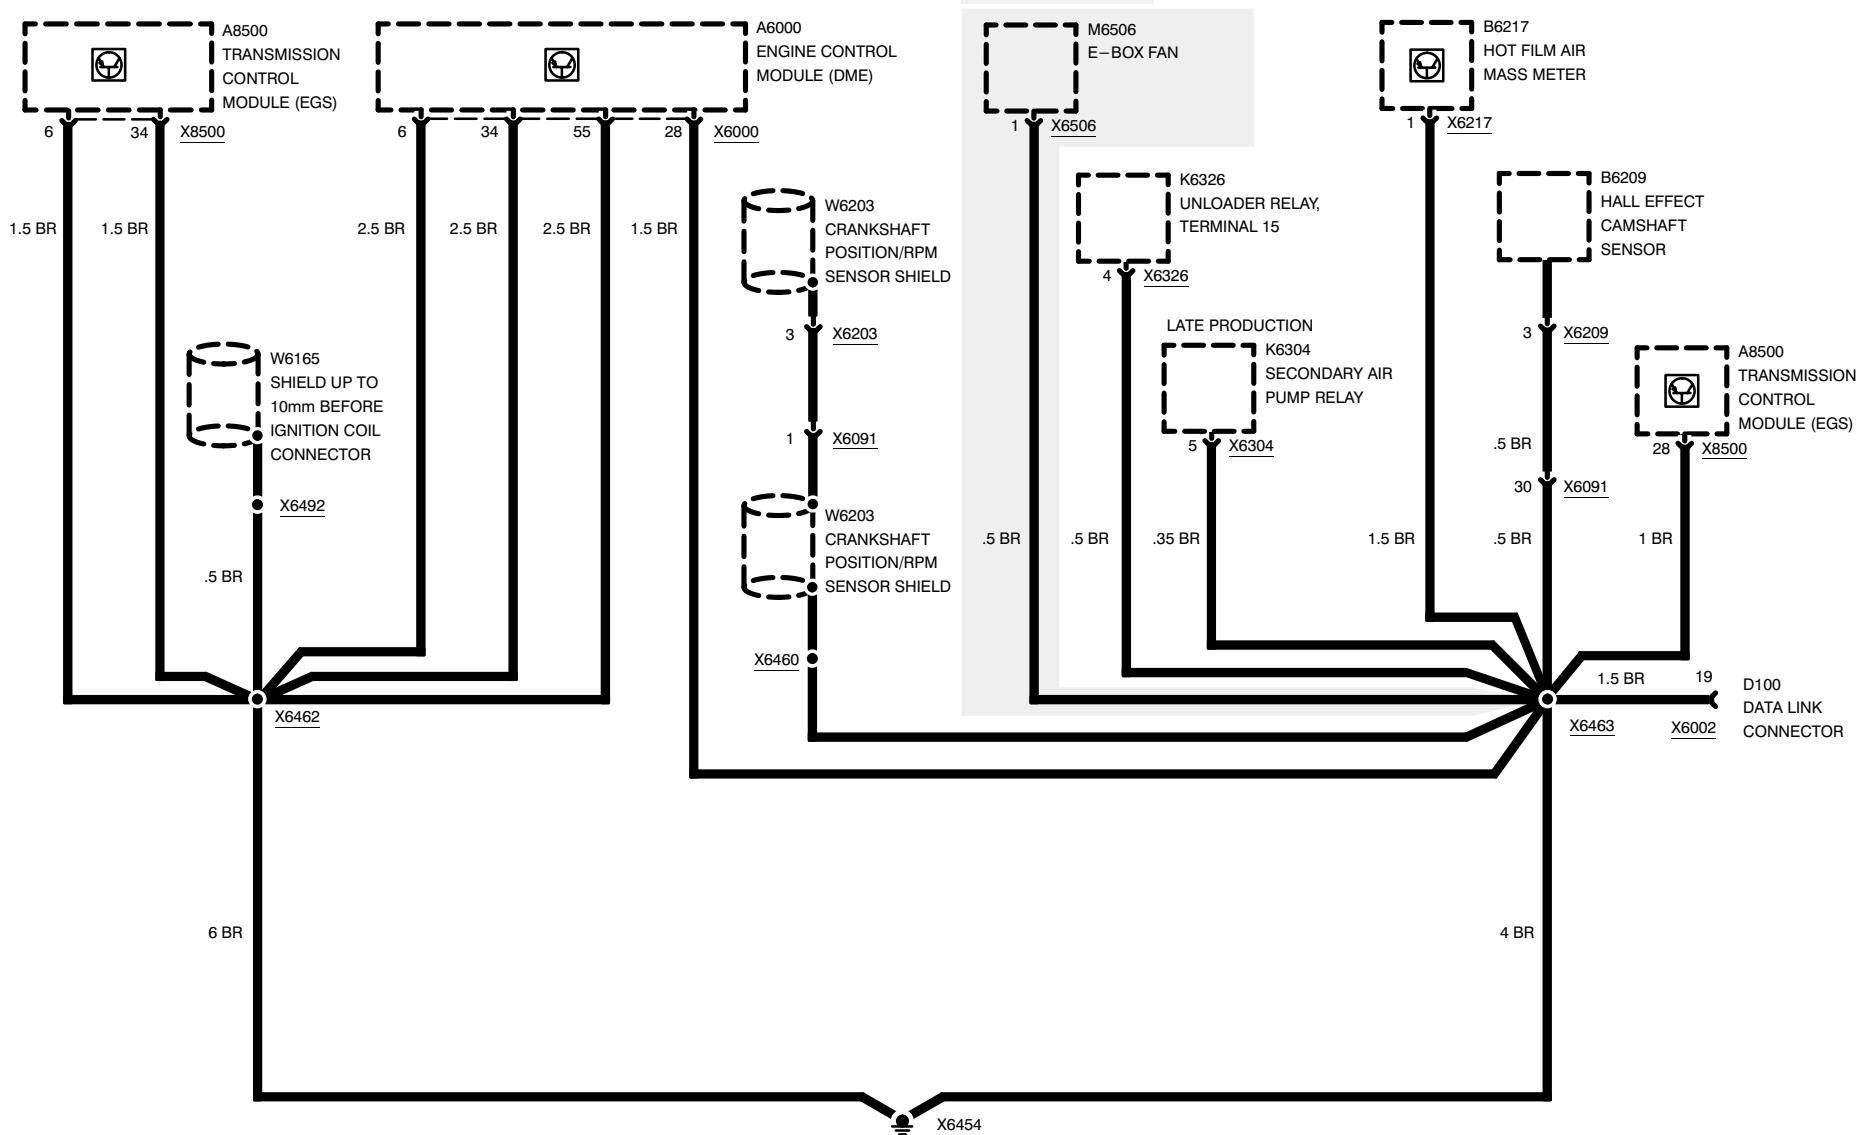



# GROUND DISTRIBUTION

## GROUND X6454


Z3

6-CYLINDER

03/98

0670.4-05


1997

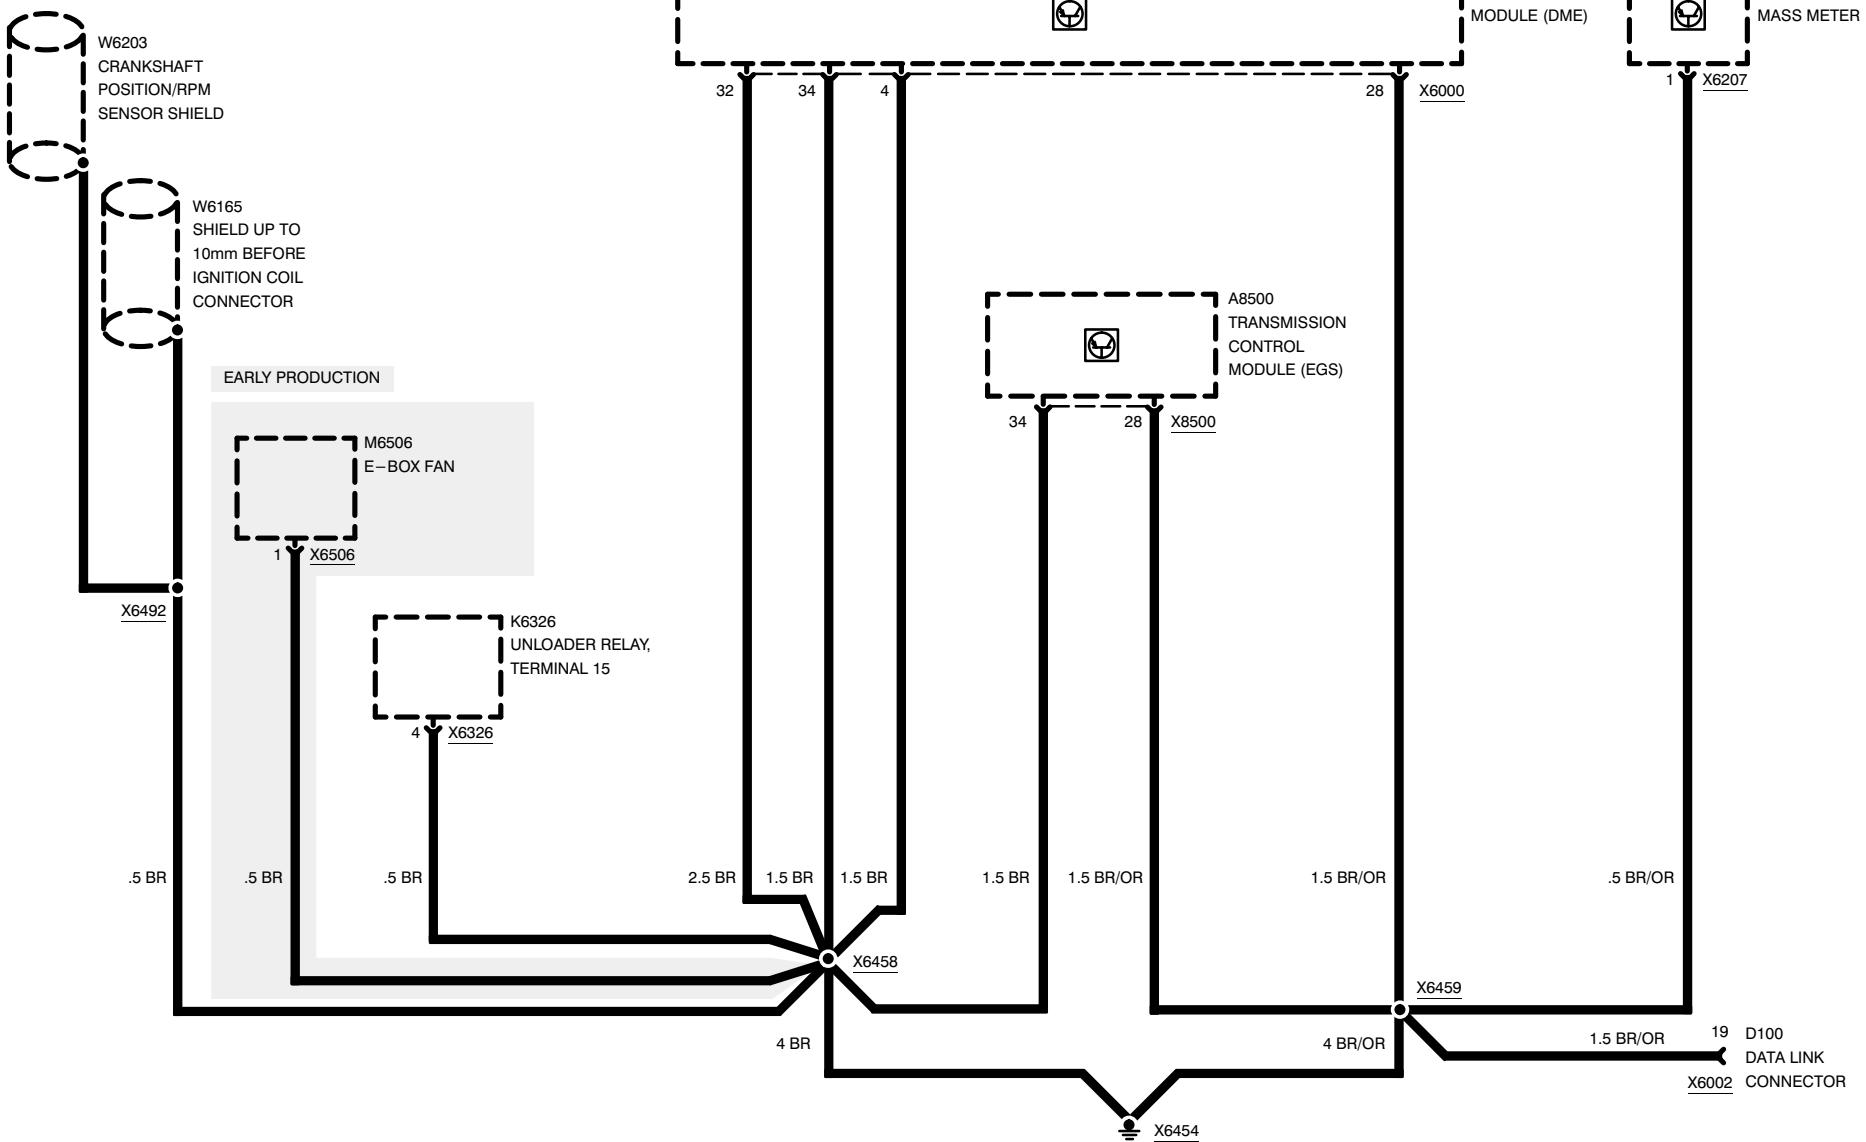

## GROUND DISTRIBUTION

### GROUND X6456

4-CYLINDER

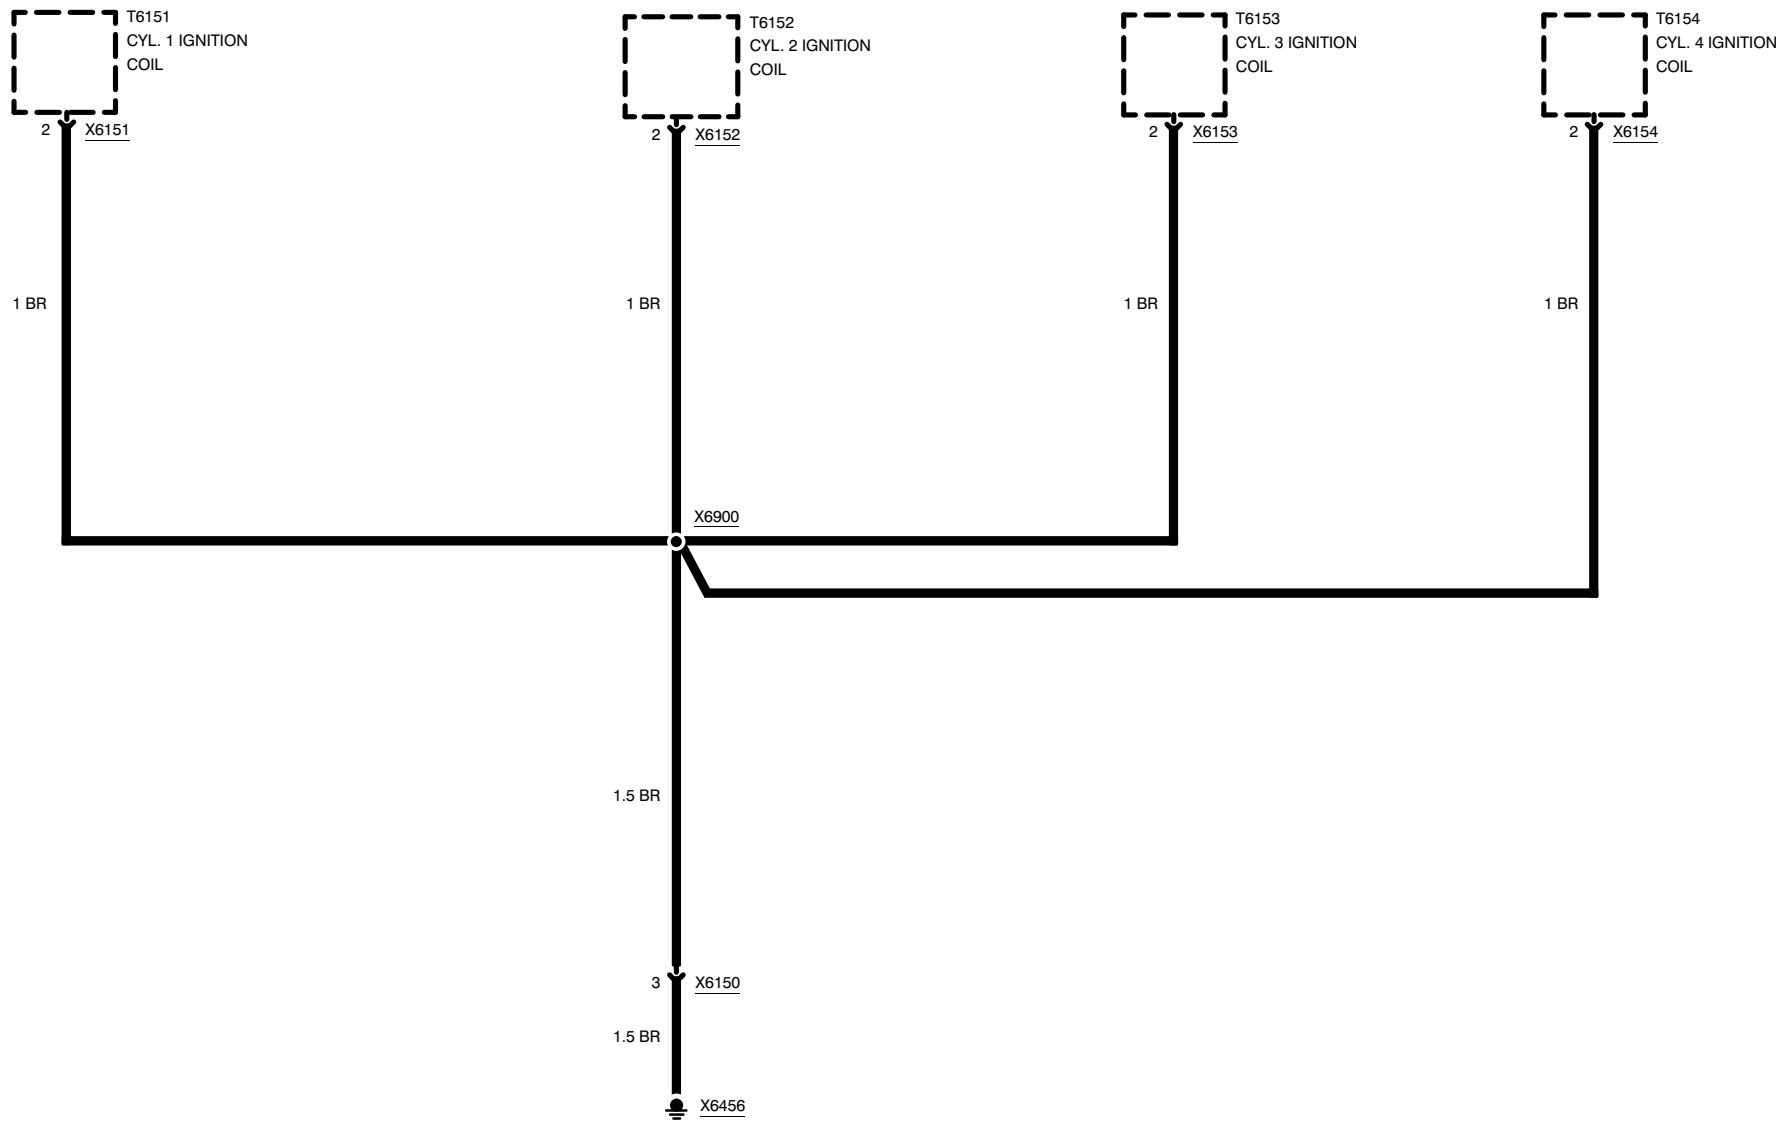



# GROUND DISTRIBUTION

## GROUNDS X6455 AND X6456



Z3

6-CYLINDER

03/98

06704-07

1997

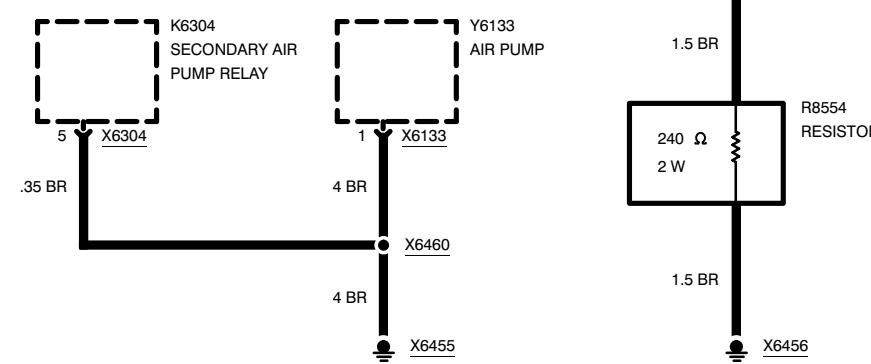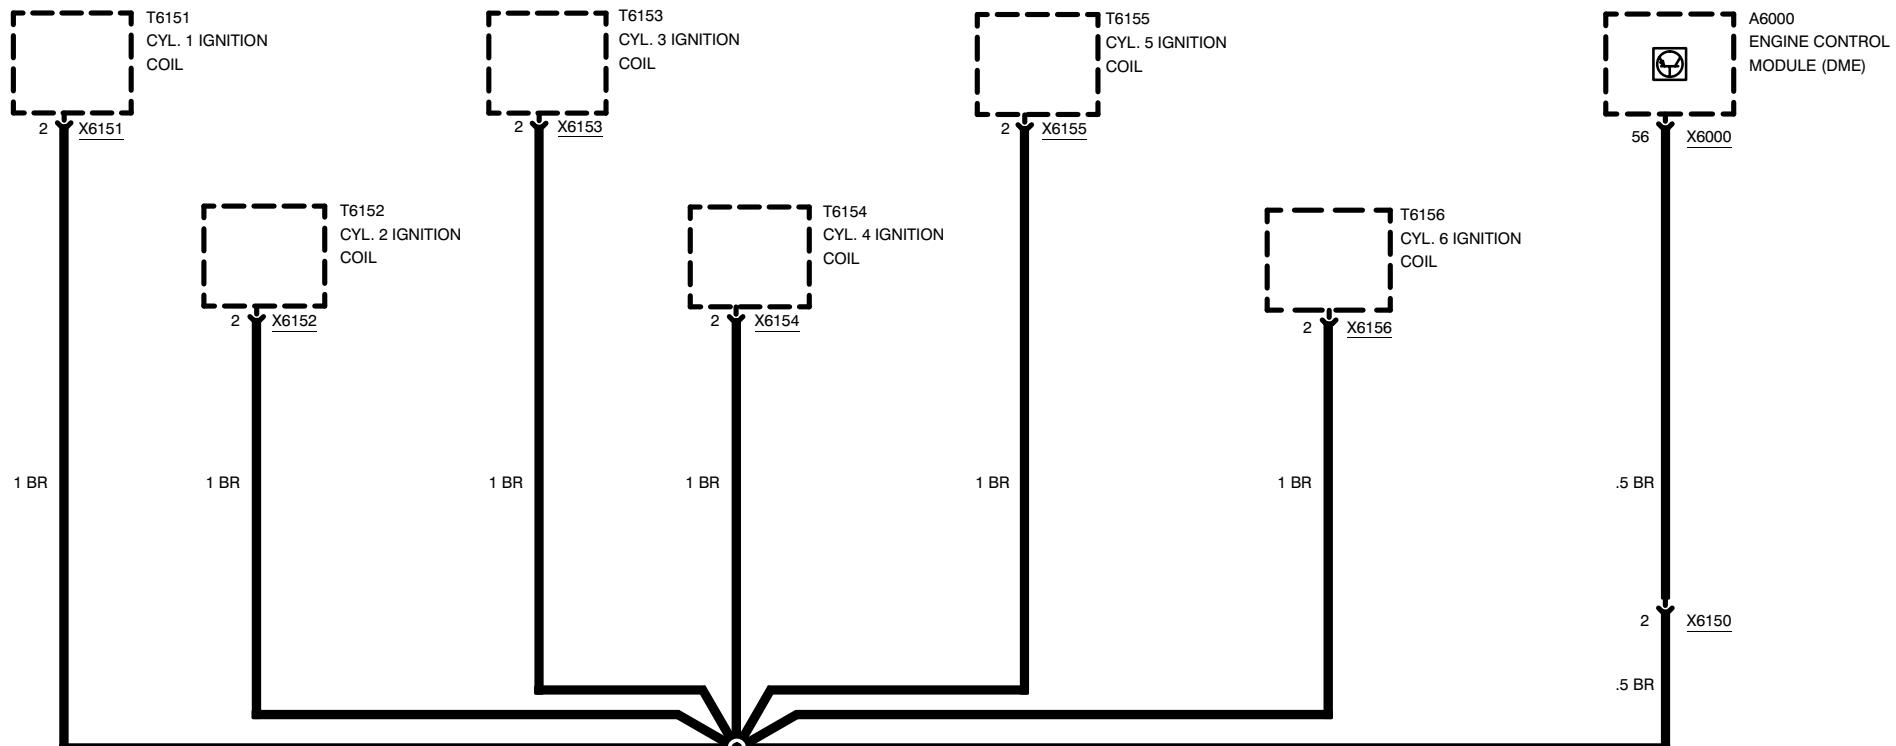




# GROUND DISTRIBUTION

## GROUND X9633


Z3

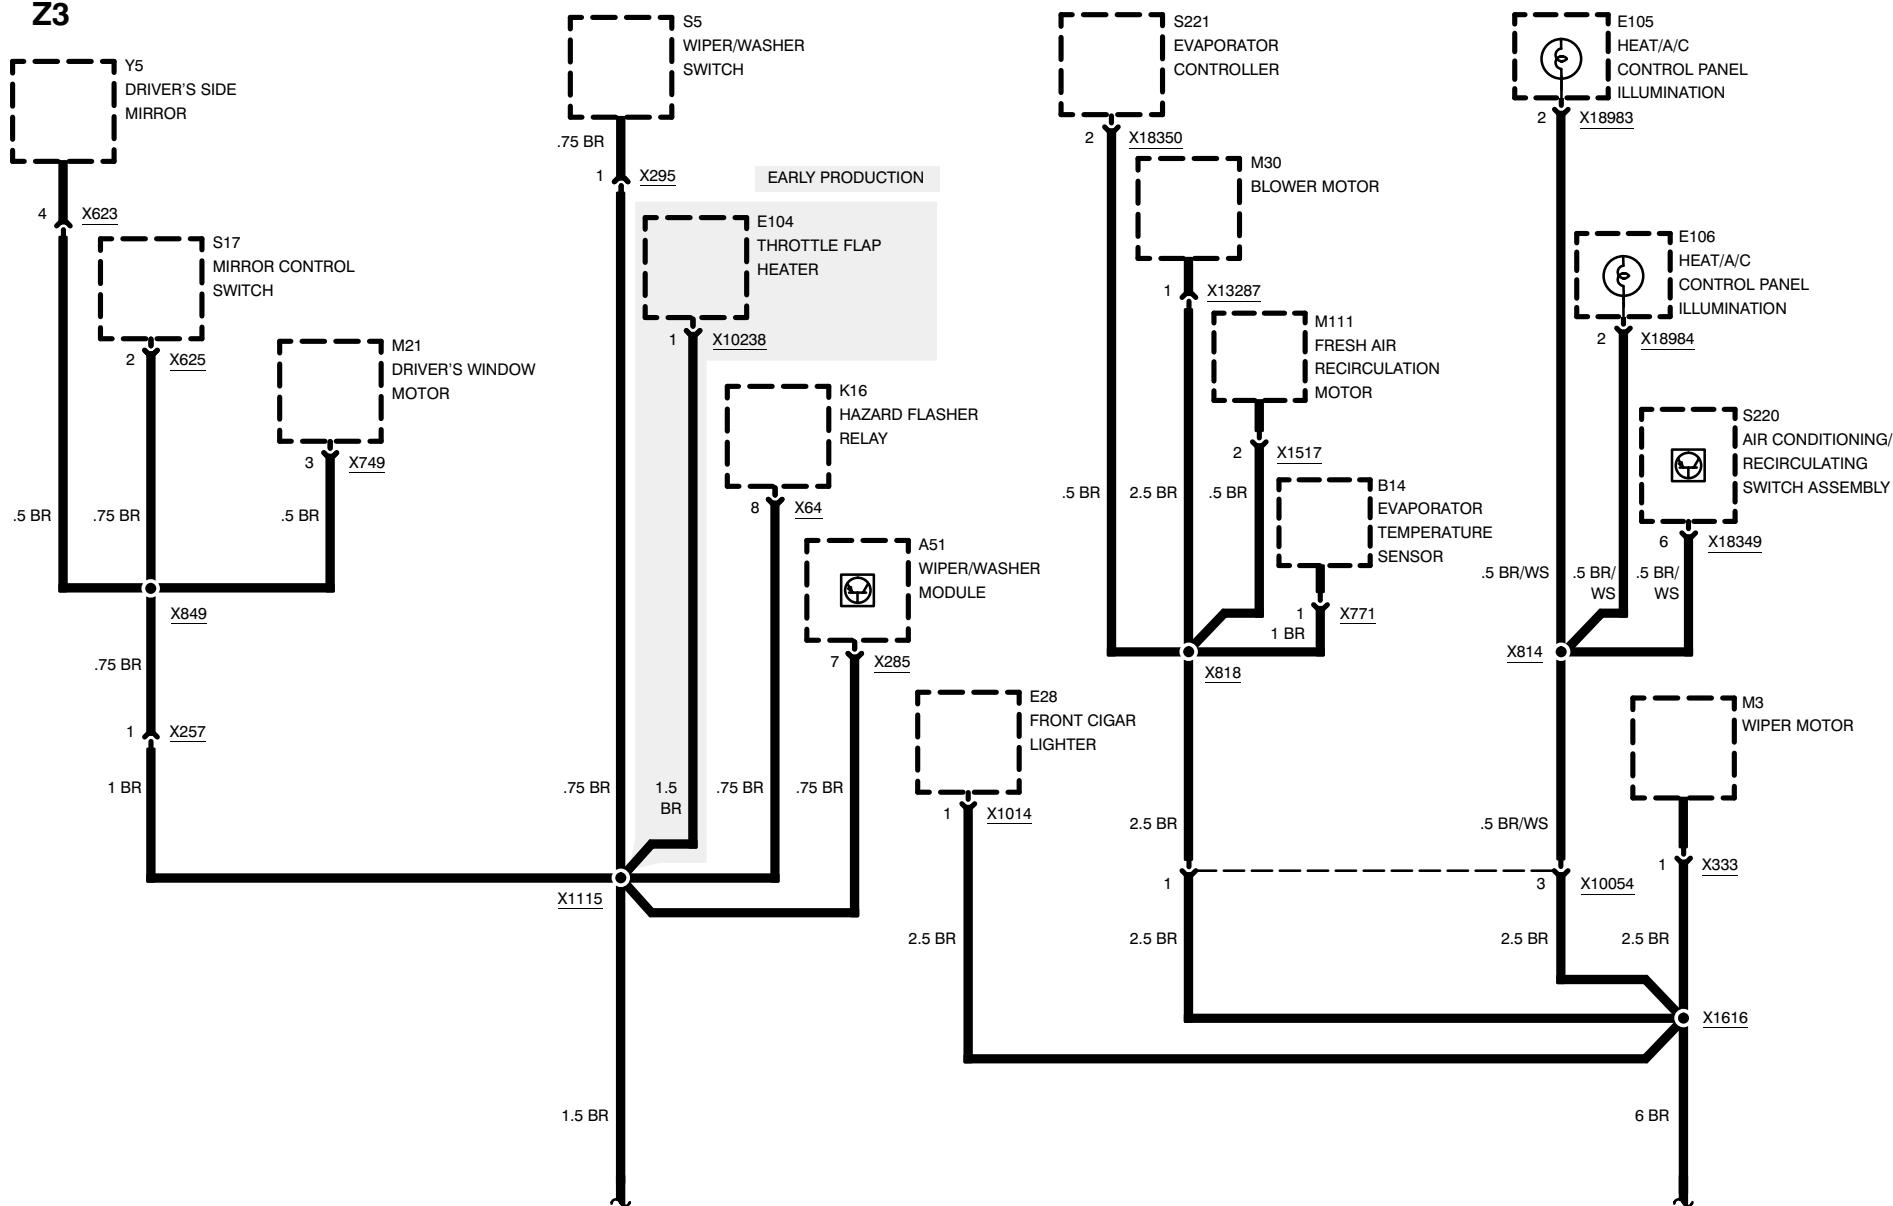

03/98

06704-08

1997

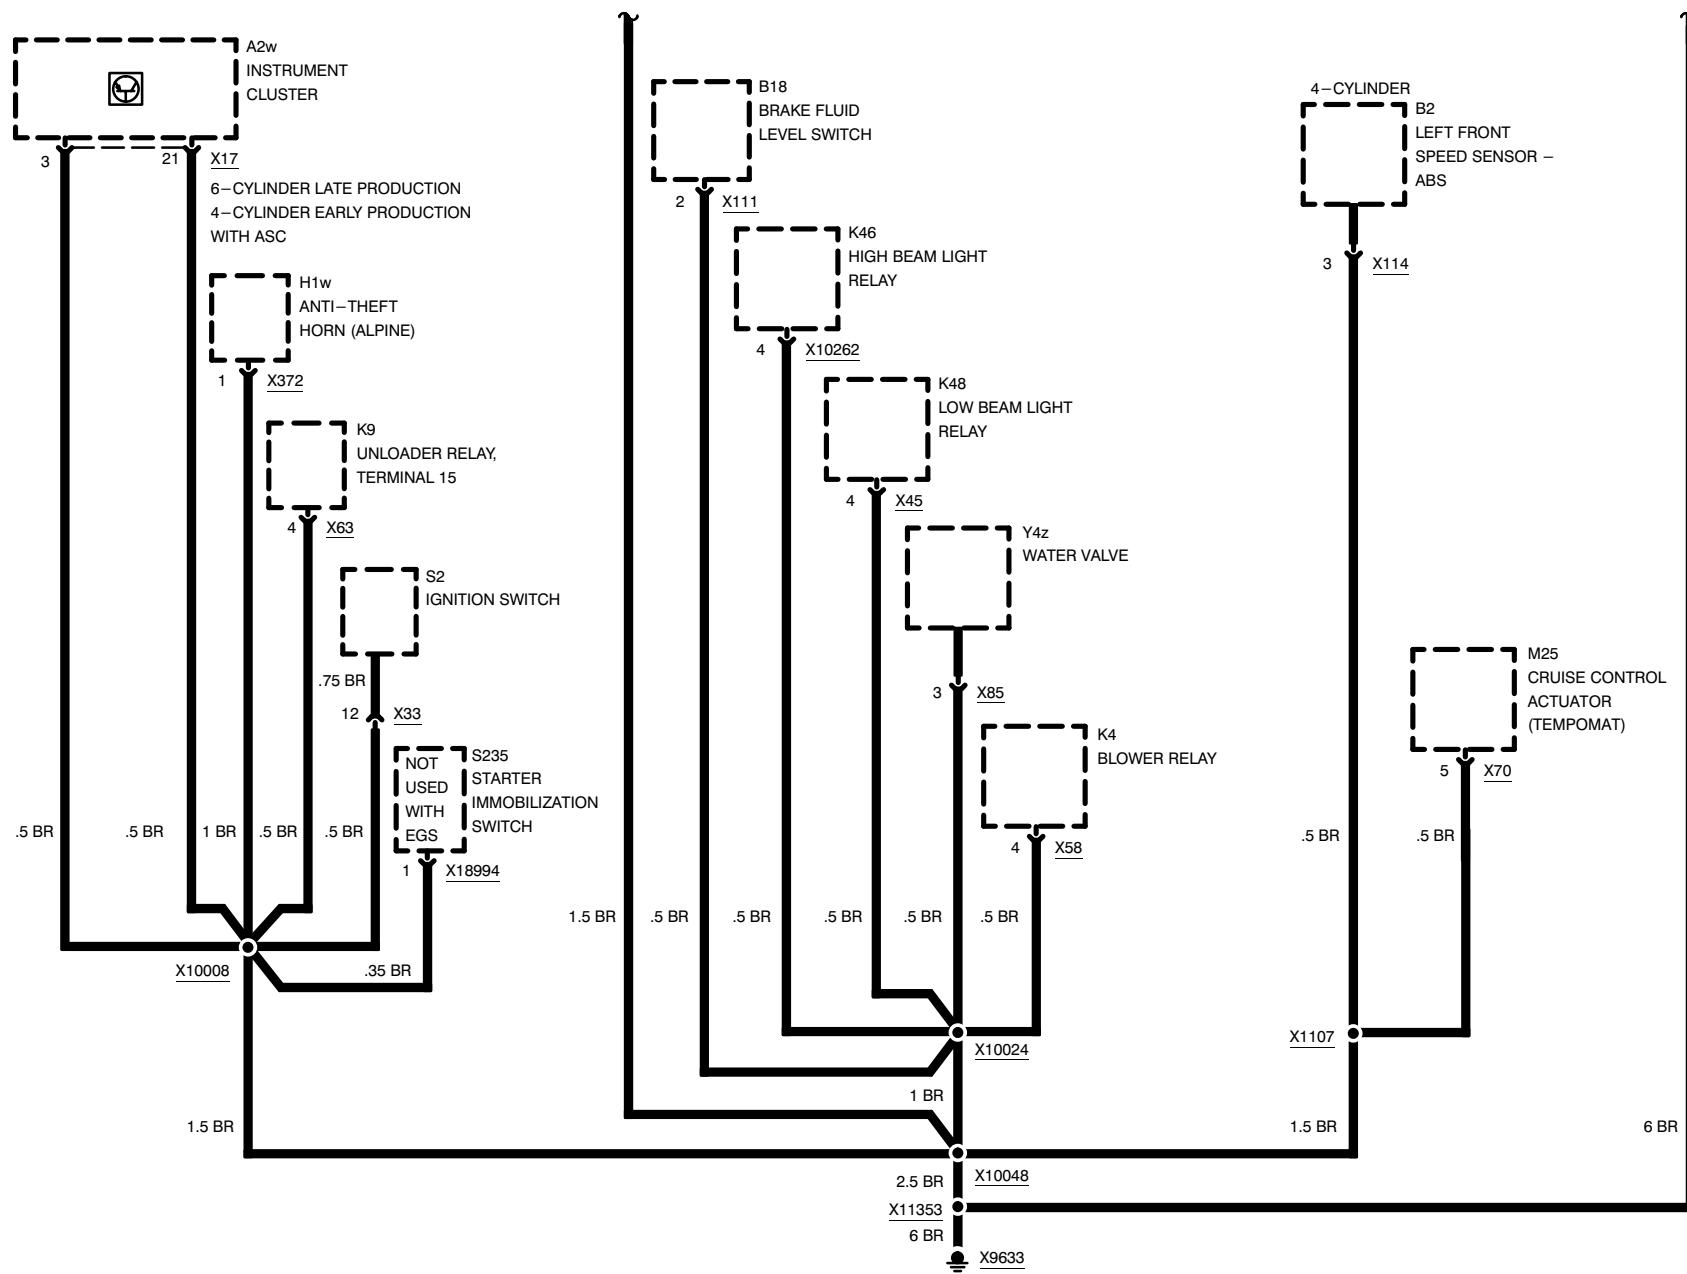

03/98


0670.4-09

1997

## GROUND DISTRIBUTION

## GROUND X10010


Z3

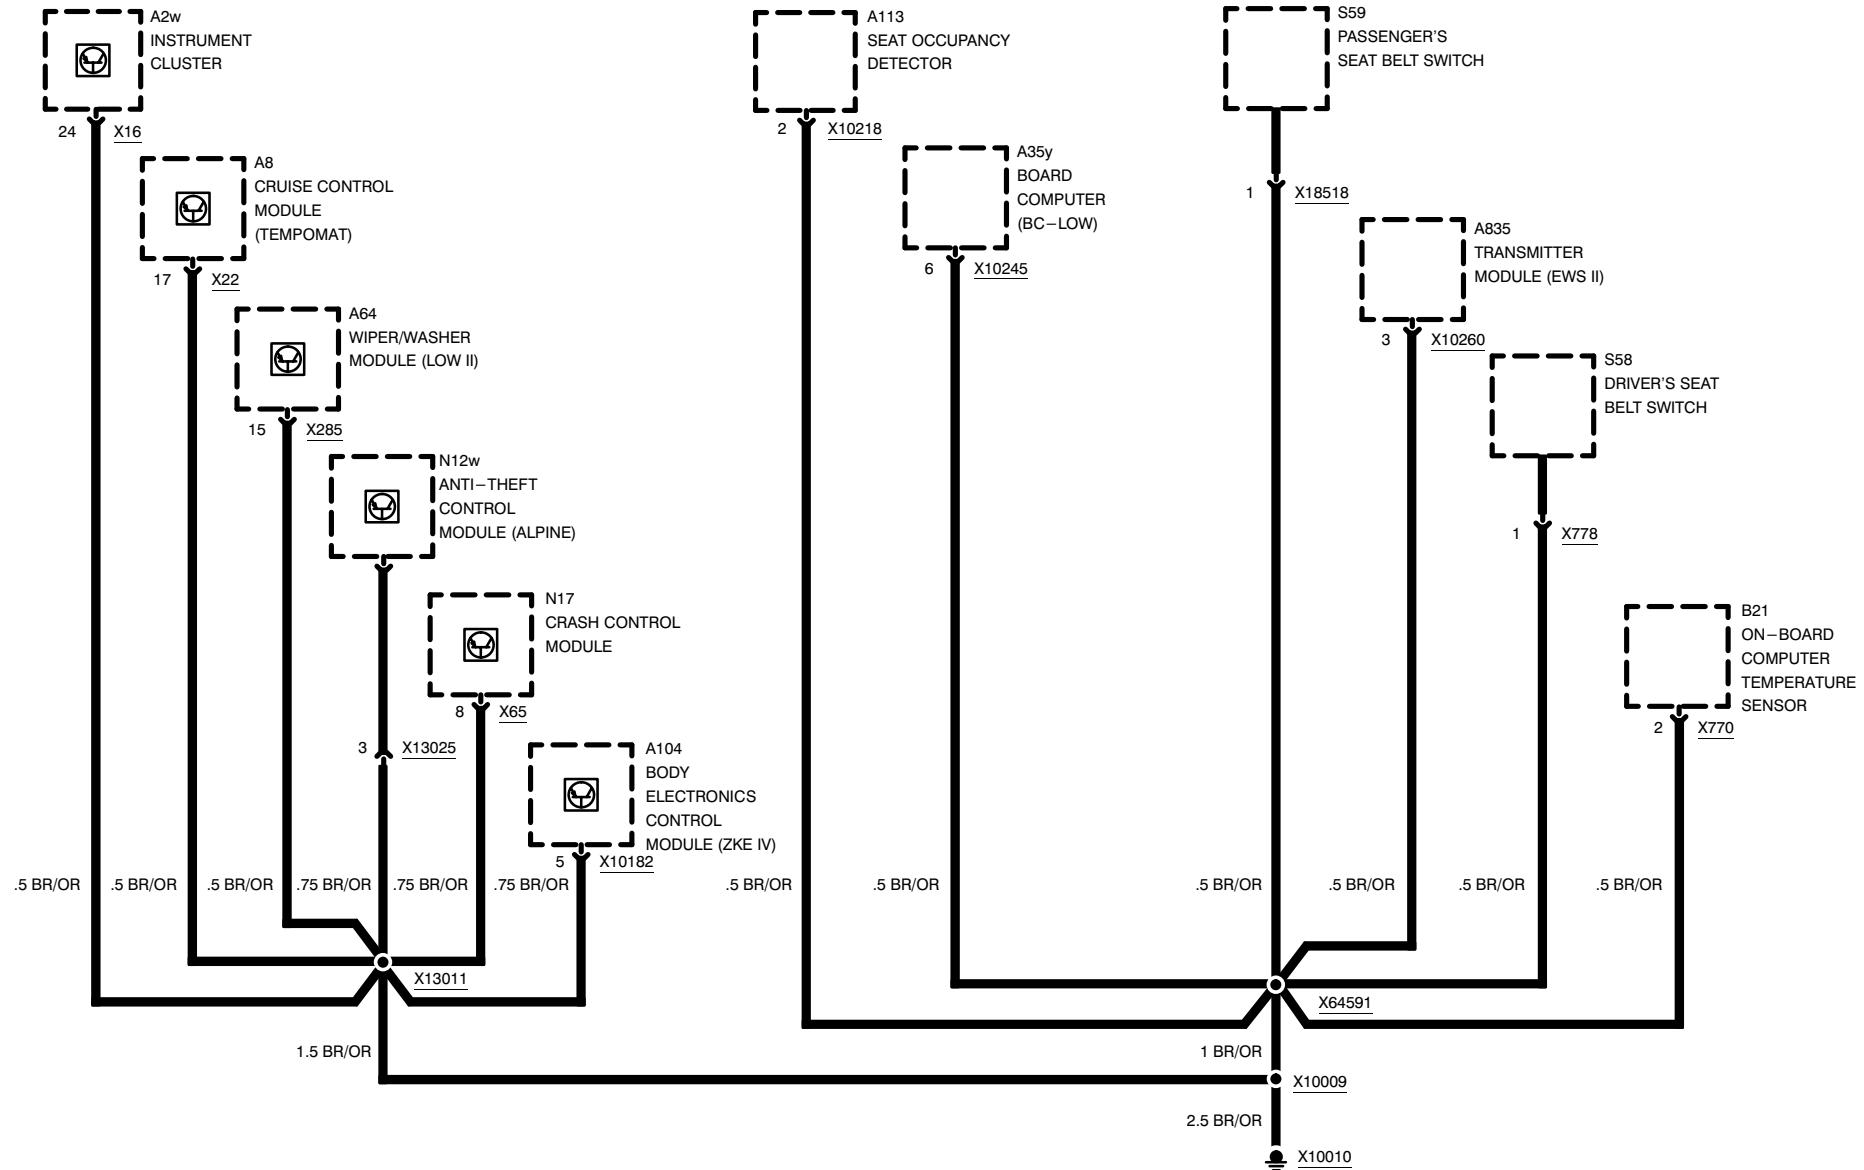

# GROUND DISTRIBUTION

## GROUND X13004

Z3

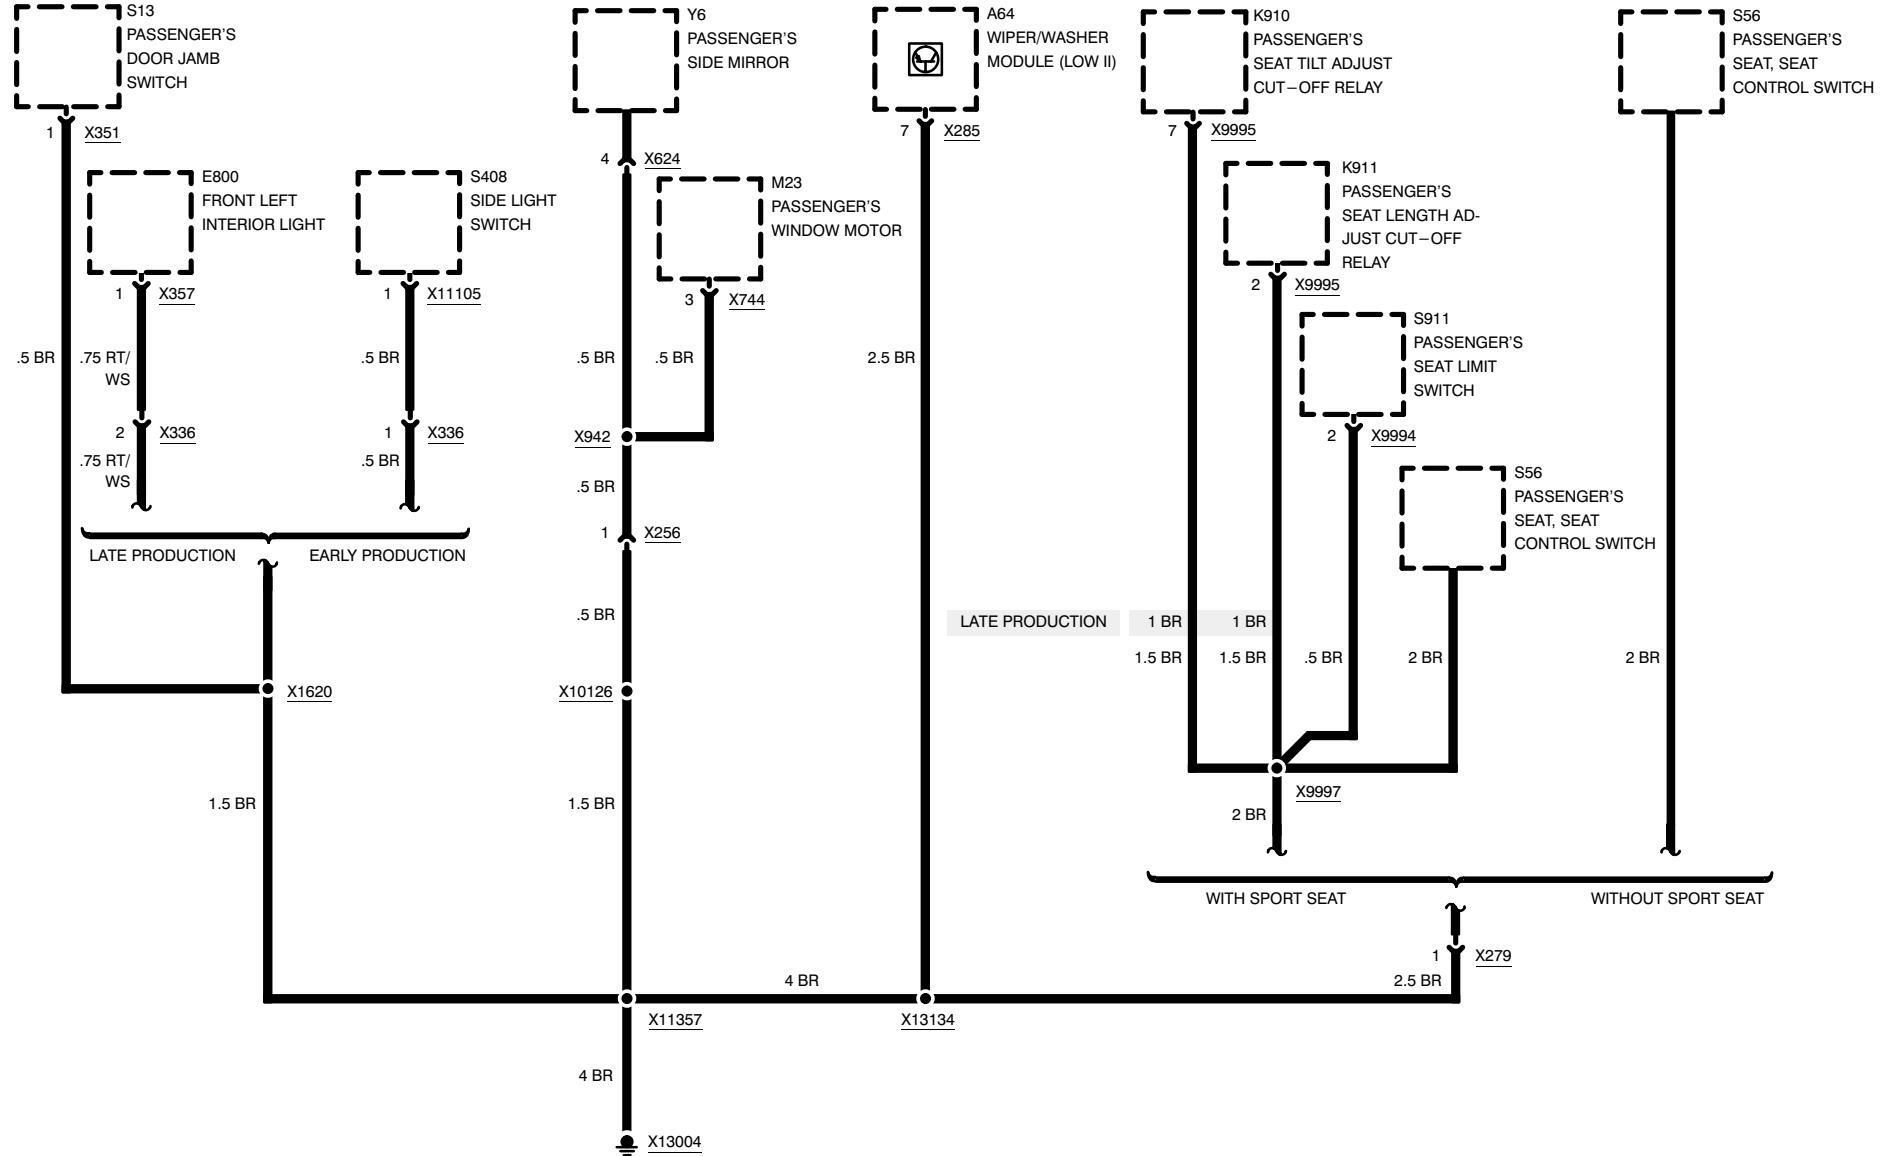


## GROUND DISTRIBUTION

### GROUND X13006

03/98

0670.4-12

1997

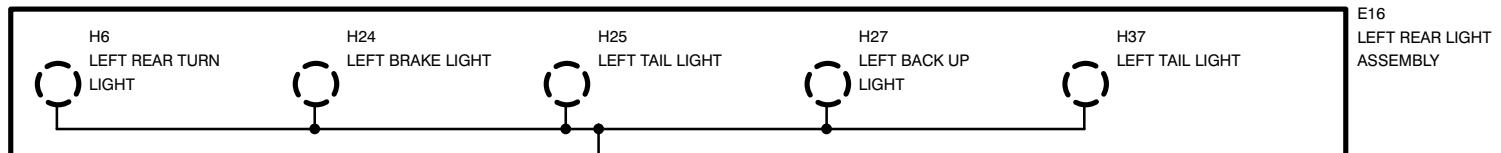




# GROUND DISTRIBUTION

## GROUND X13006

Z3

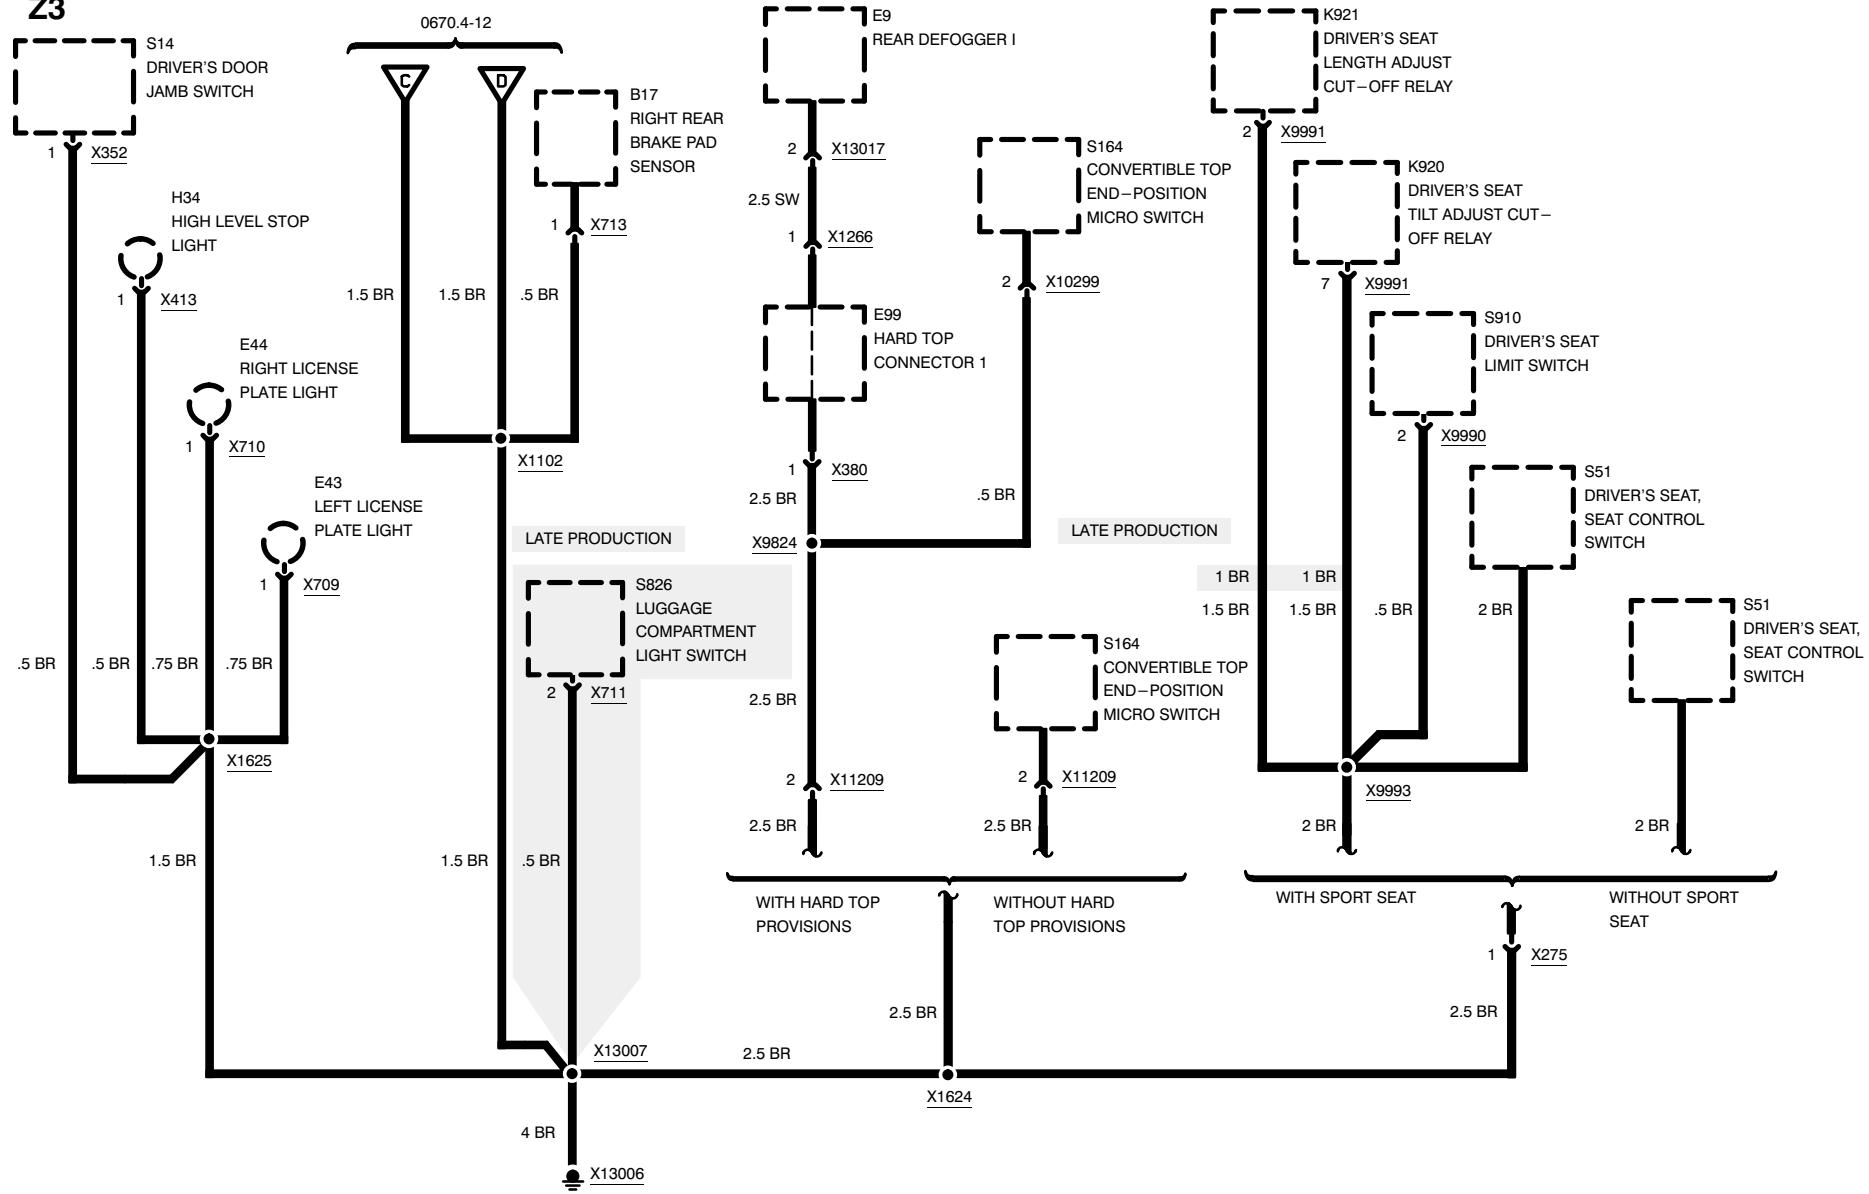

03/98

0670.4-13

1997



# GROUND DISTRIBUTION


## GROUNDS X13016 AND X13032

Z3

03/98

06704-14

1997

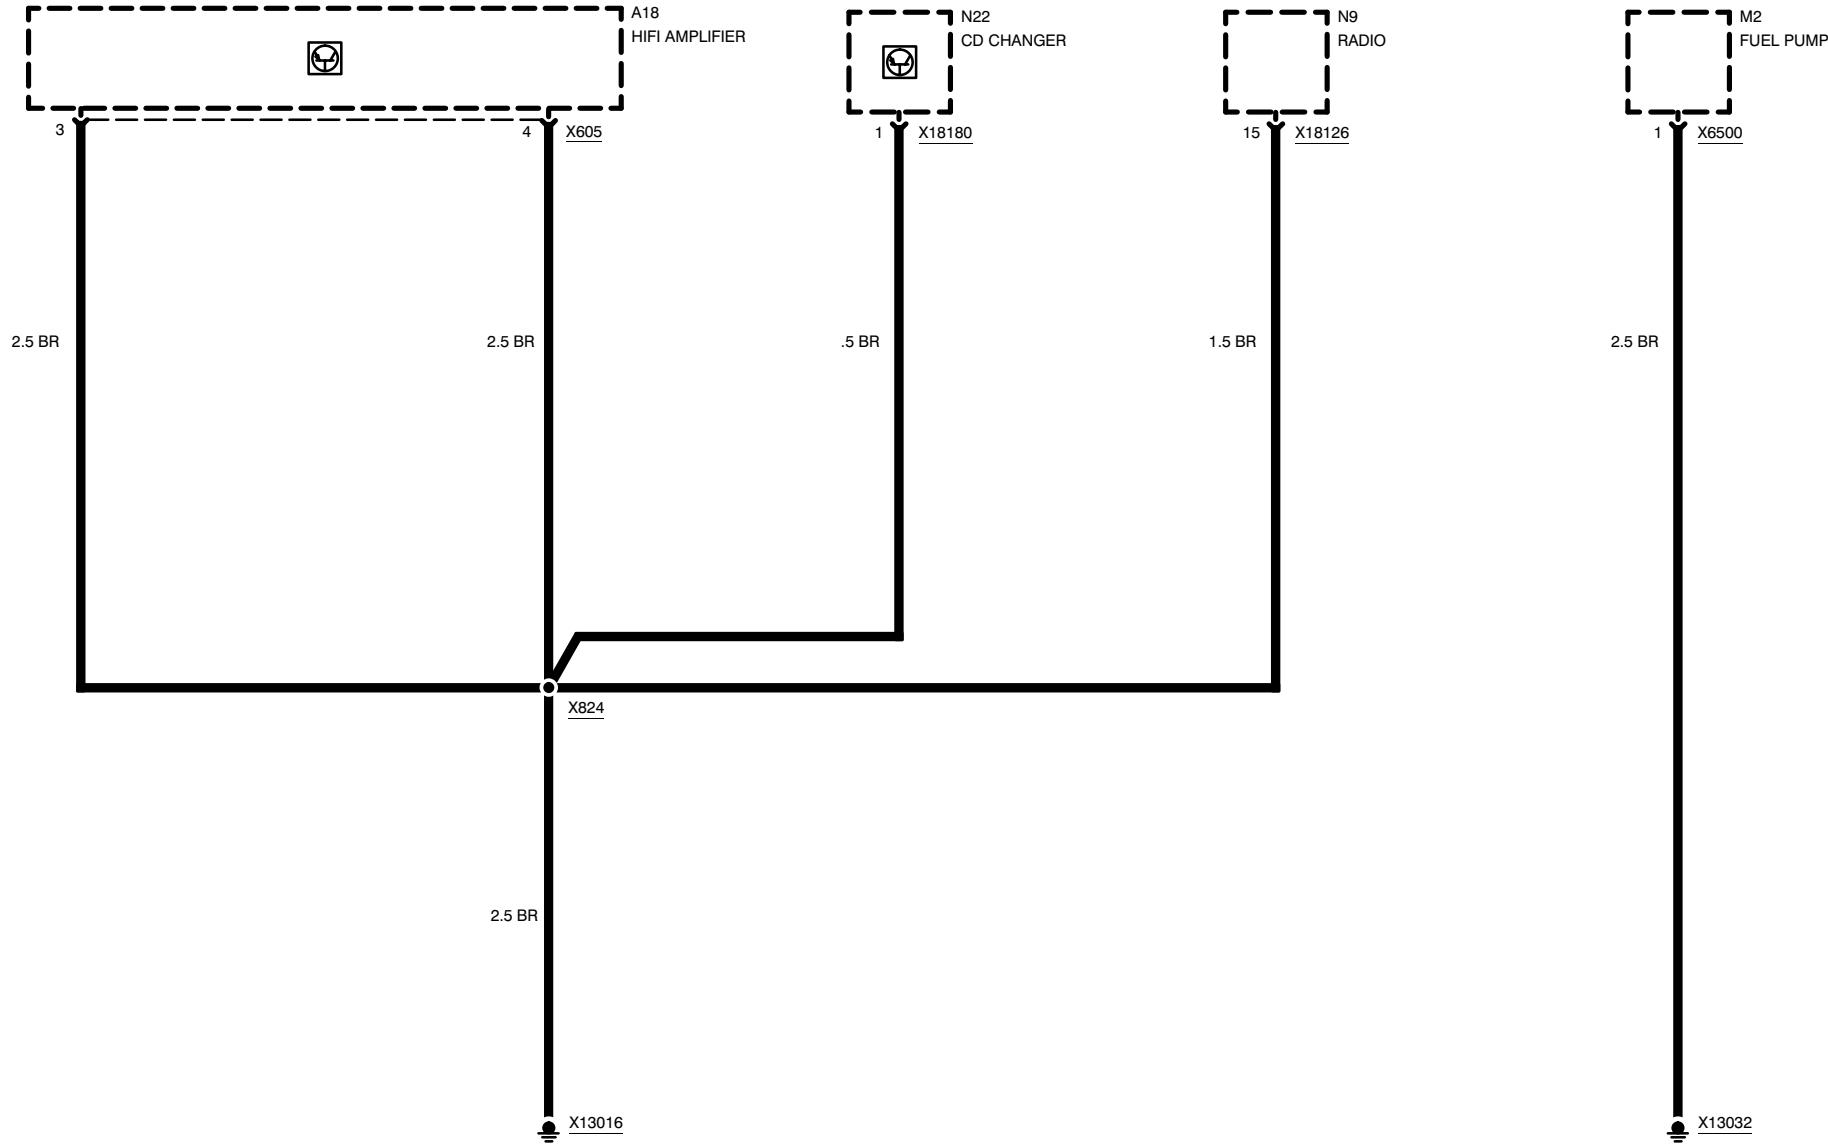





# GROUND DISTRIBUTION


## GROUND X18170

TELEPHONE  
CONNECTOR

2 X400

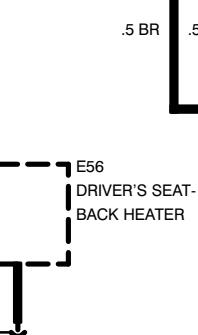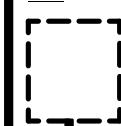

A836  
ELECTRONIC  
IMMOBILIZER  
CONTROL  
MODULE (EWS II)

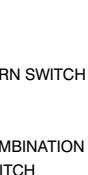

S6  
ASC SWITCH



E58

PASSENGER'S

SEAT

HEATER



E59

PASSENGER'S

SEATBACK

HEATER



A110

DIGITAL

CLOCK

X10263



S8

LIGHT

SWITCH

X18333

.5 BR



B1

RIGHT FRONT

SPEED

SENSOR

-

ABS

H10

CHIME

MODULE

X113

.5 BR



X13047

.5 BR

G

Z3

03/98

0670.4-15

1997


0670.4-16





# GROUND DISTRIBUTION


## GROUND X18170


86/30

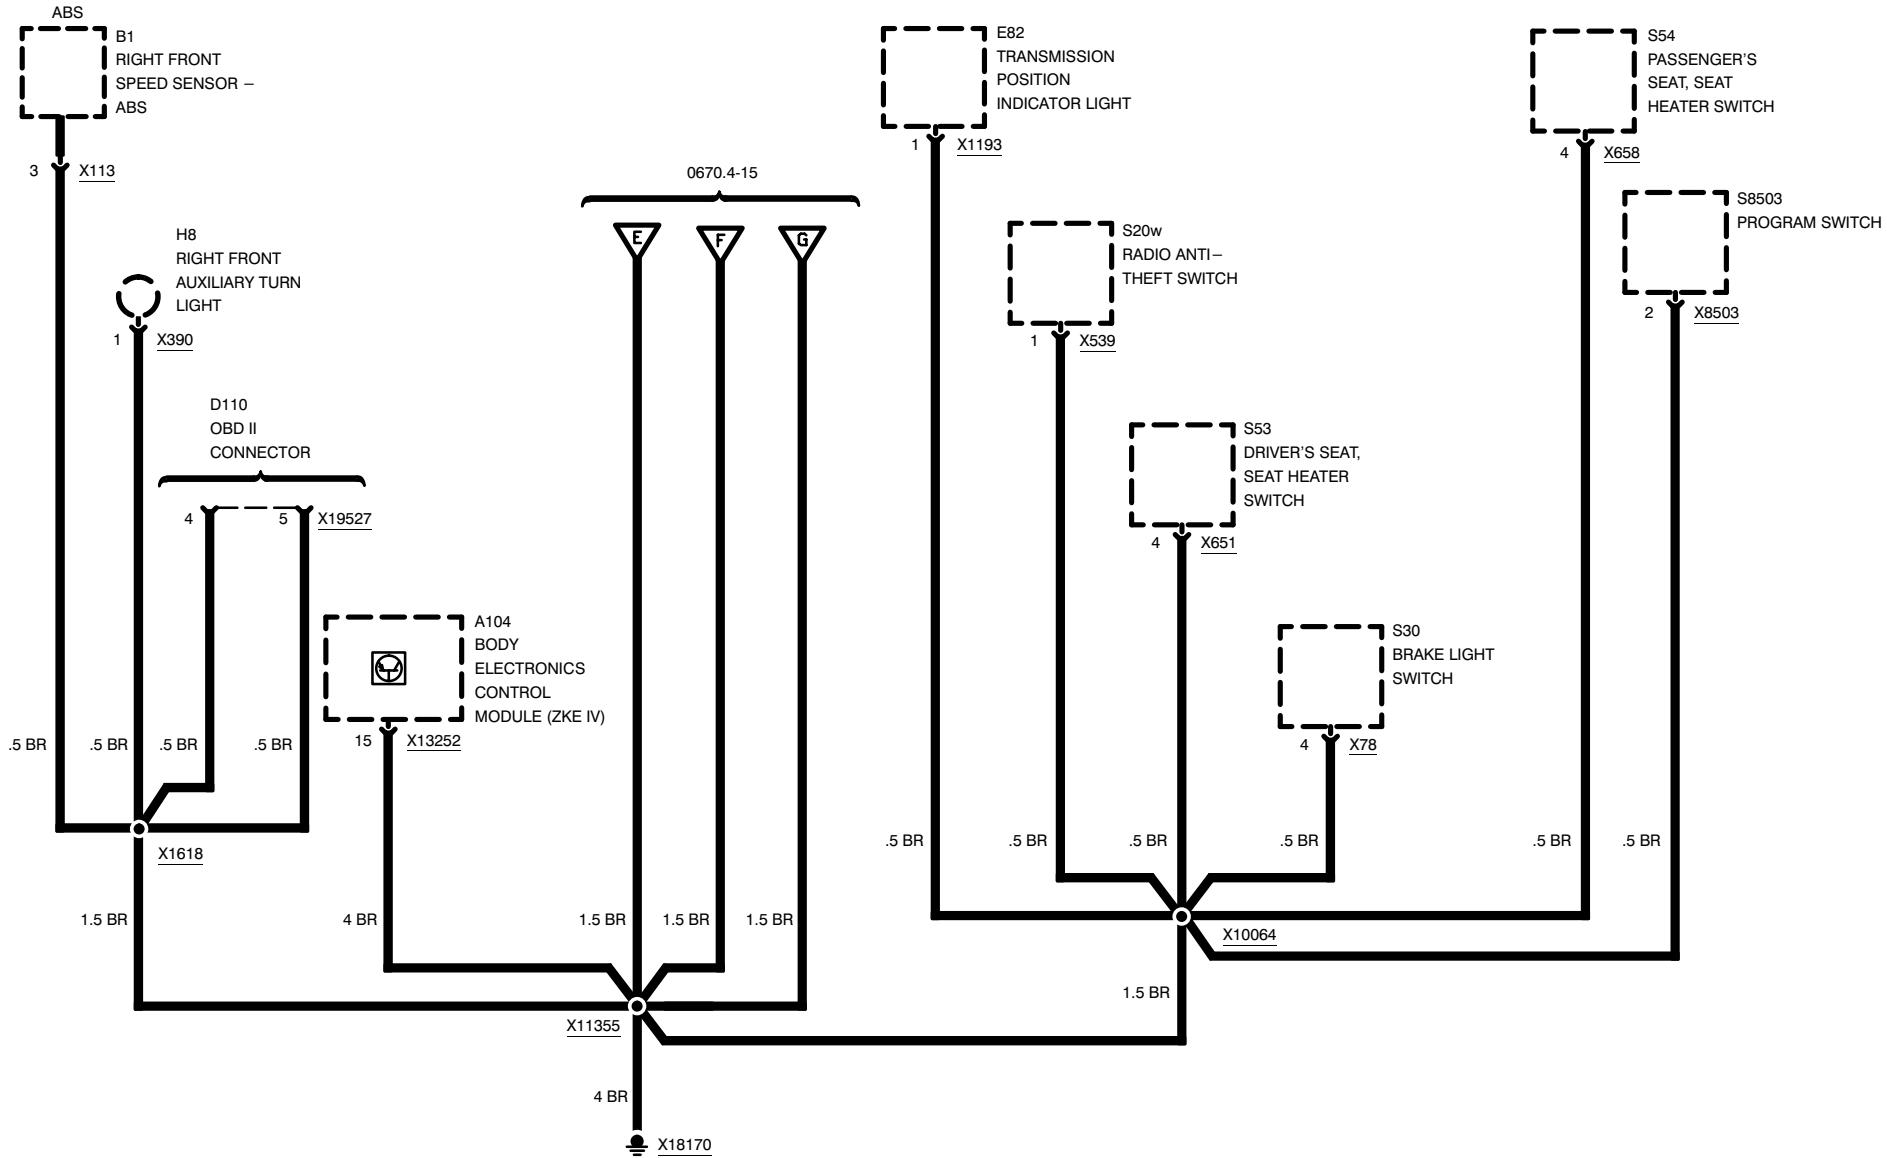

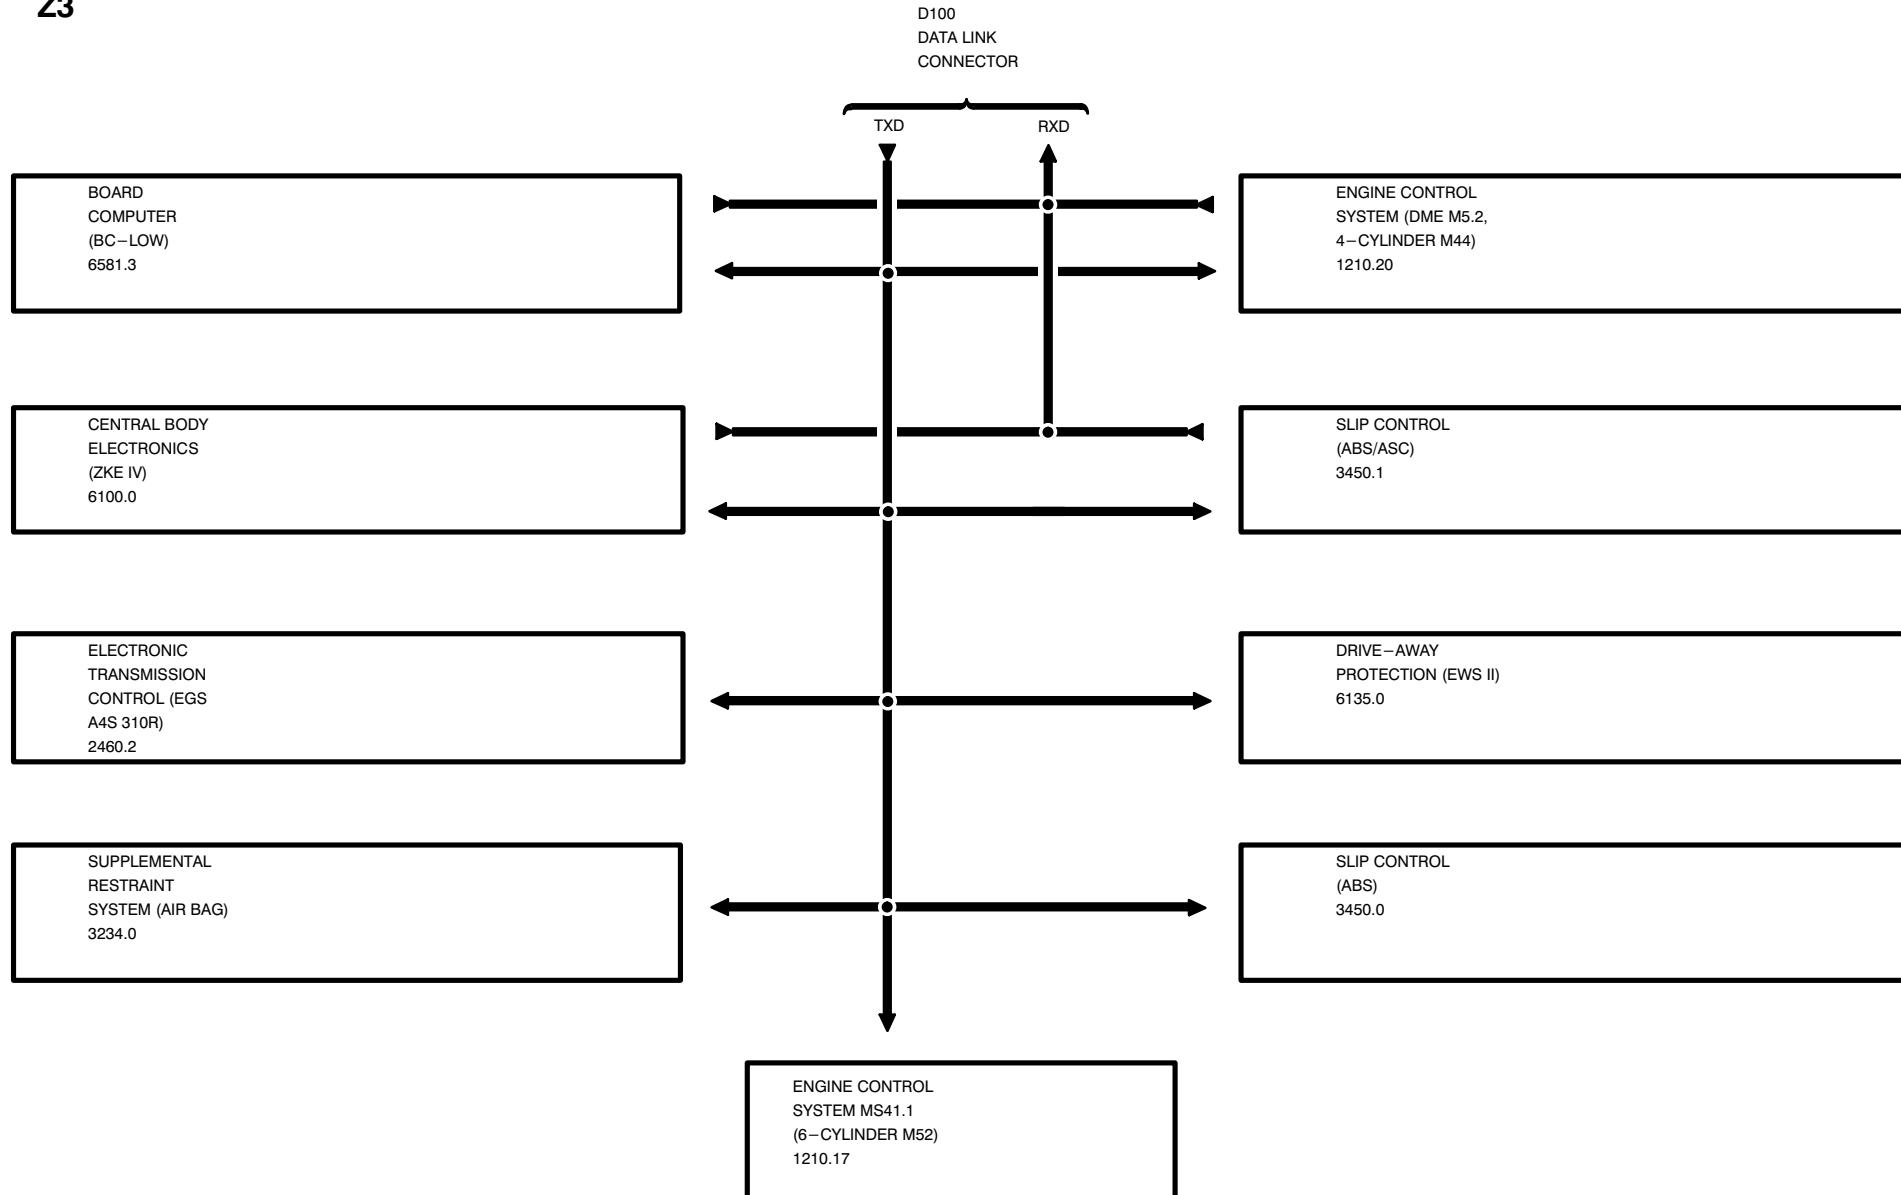

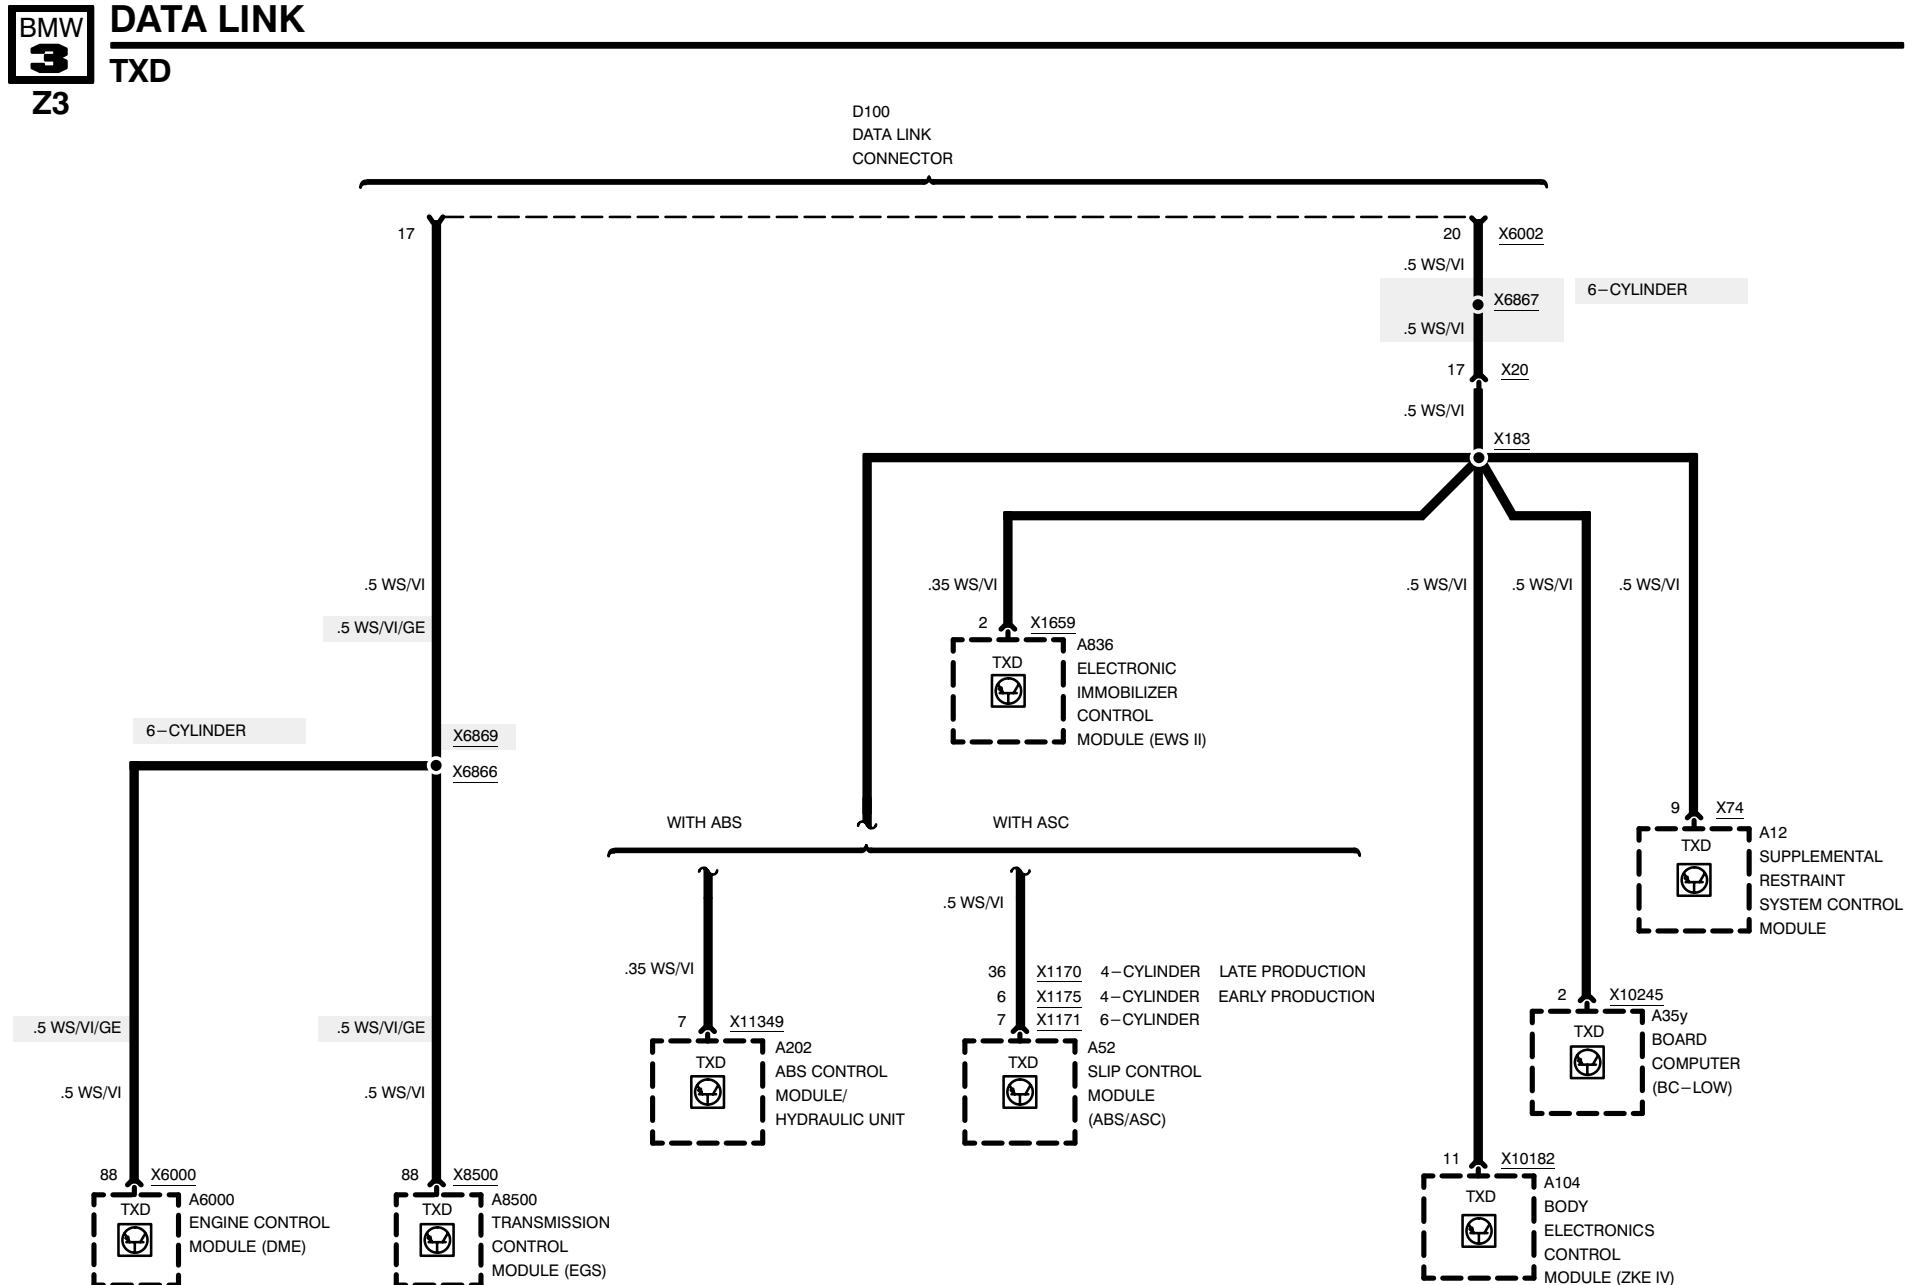

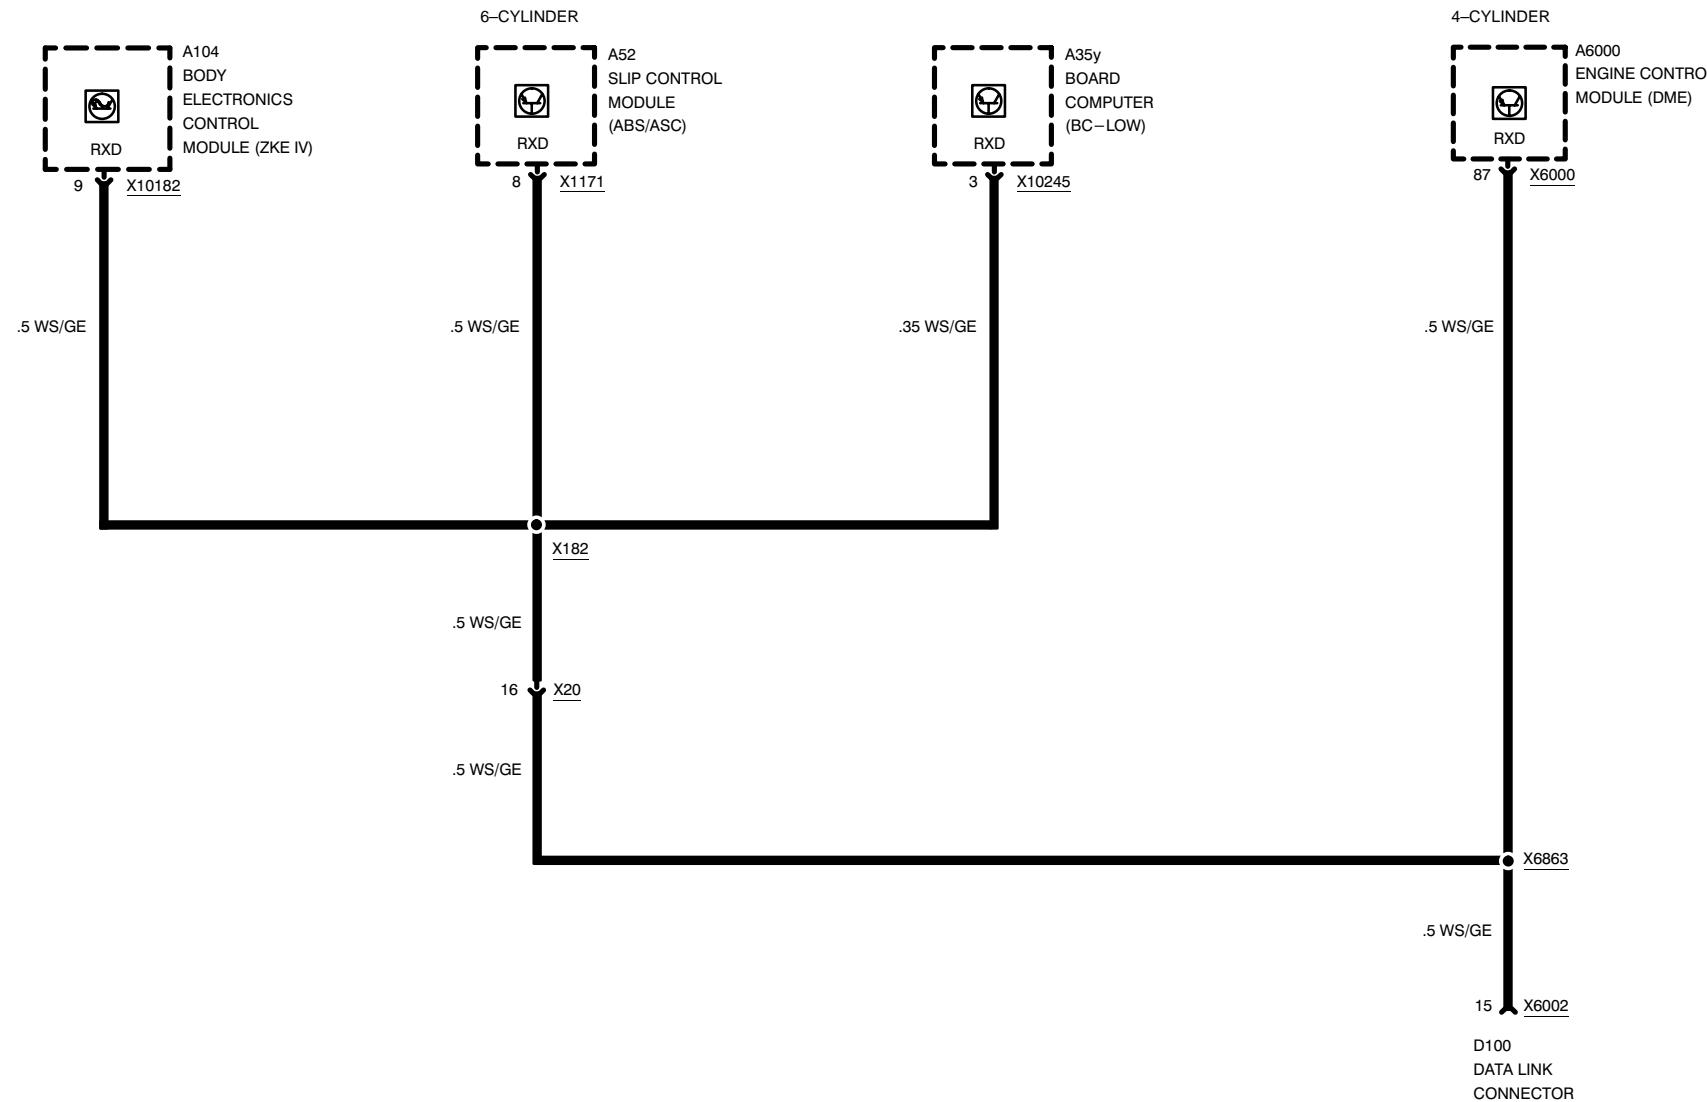

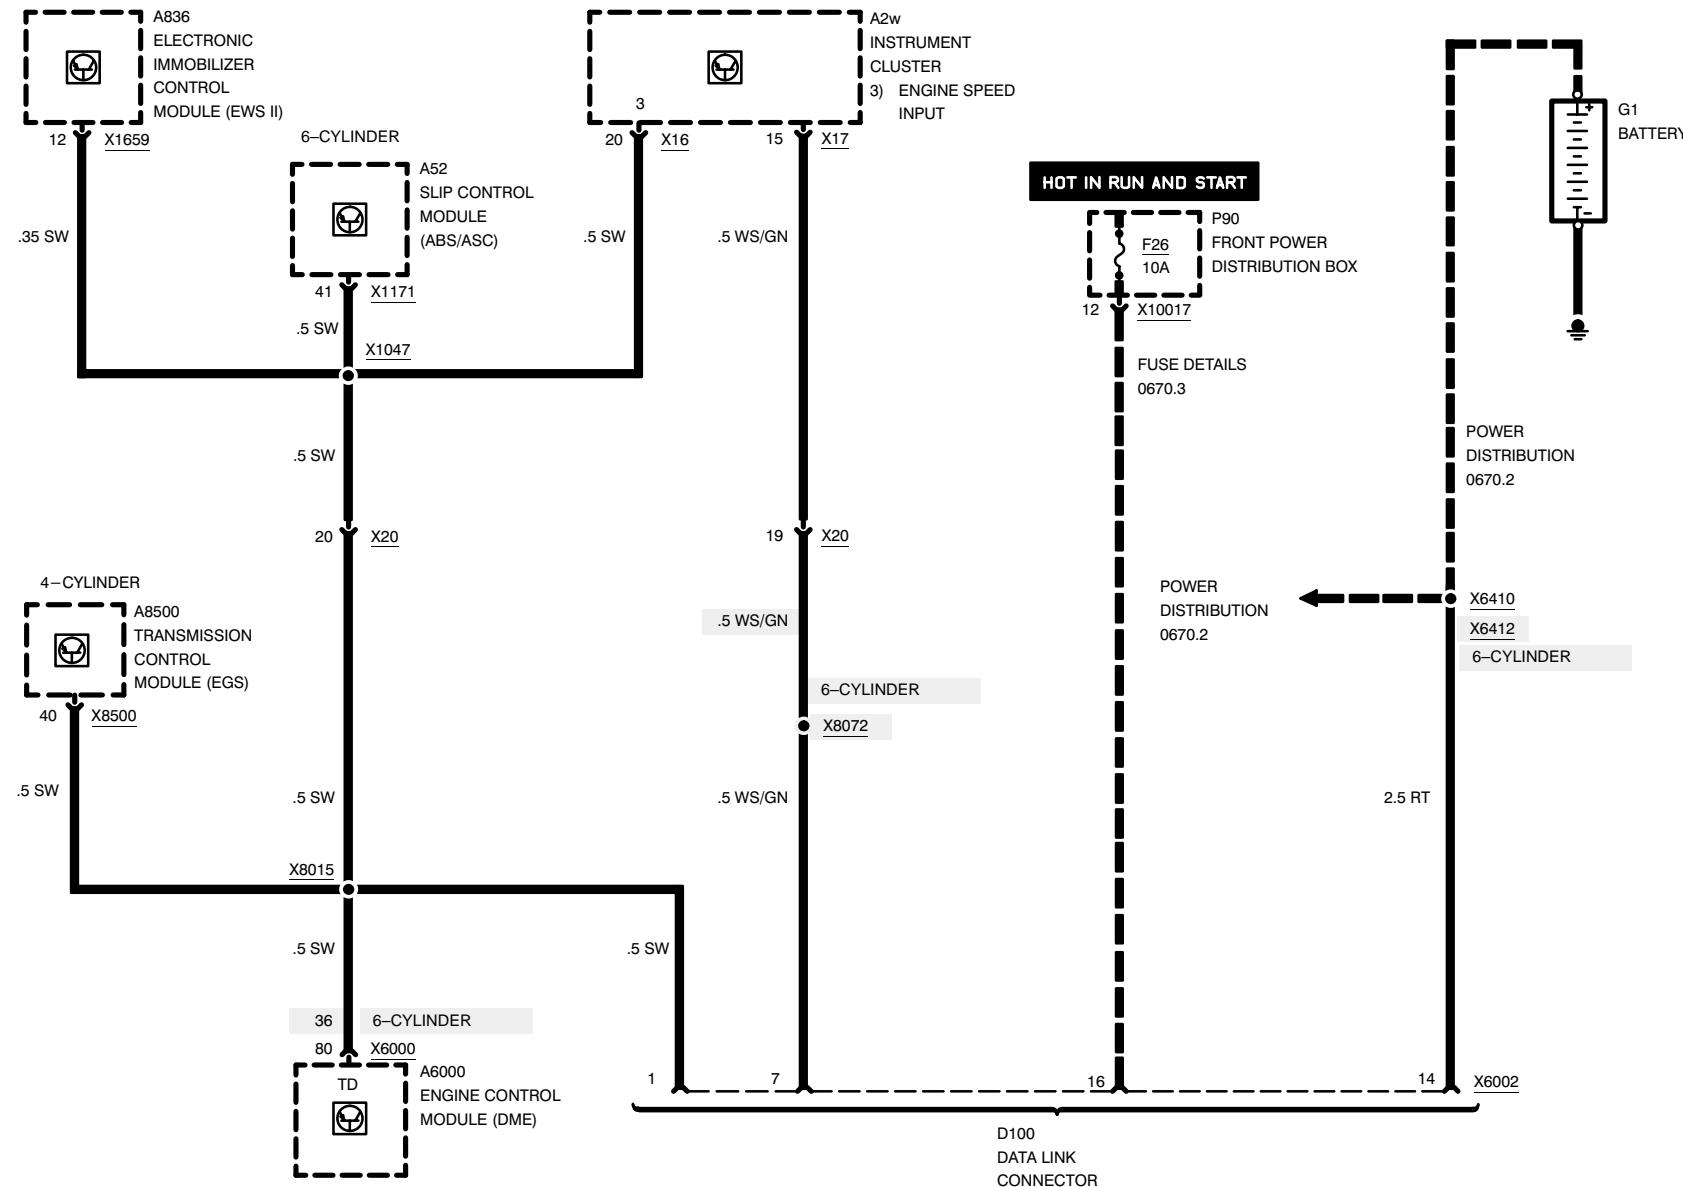**DATA LINK****DATA LINK CONNECTOR, PINS 1, 7, 14, AND 16**

# DATA LINK







## DATA LINK CONNECTOR, PINS 4, 12, 18, AND 19

03/98

0670.5-04

1997

### HOT IN ACCY, RUN AND START

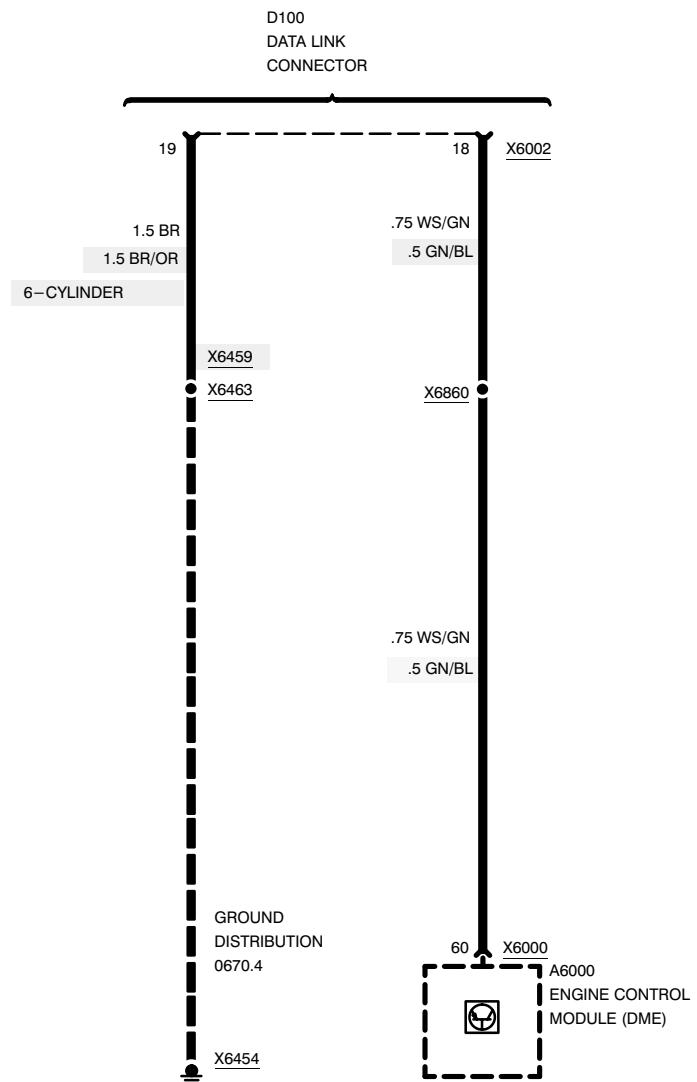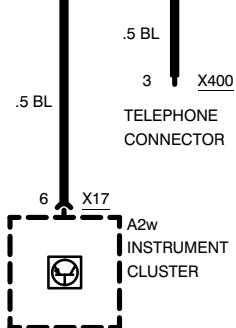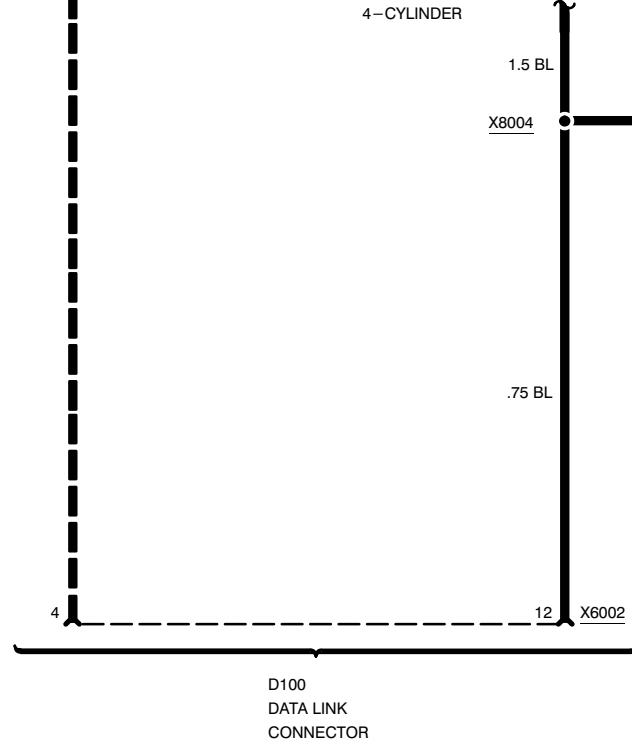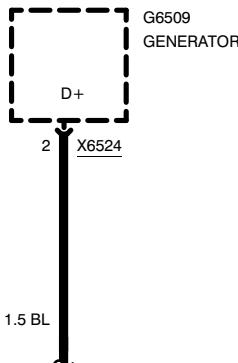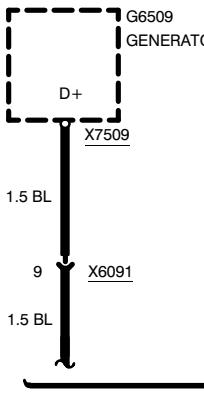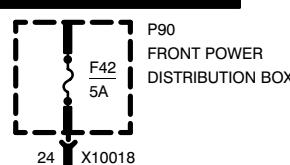


**DATA LINK****DATA LINK CONNECTOR, PIN 2 AND OBD II CONNECTOR**

03/98

0670.5-05



1997

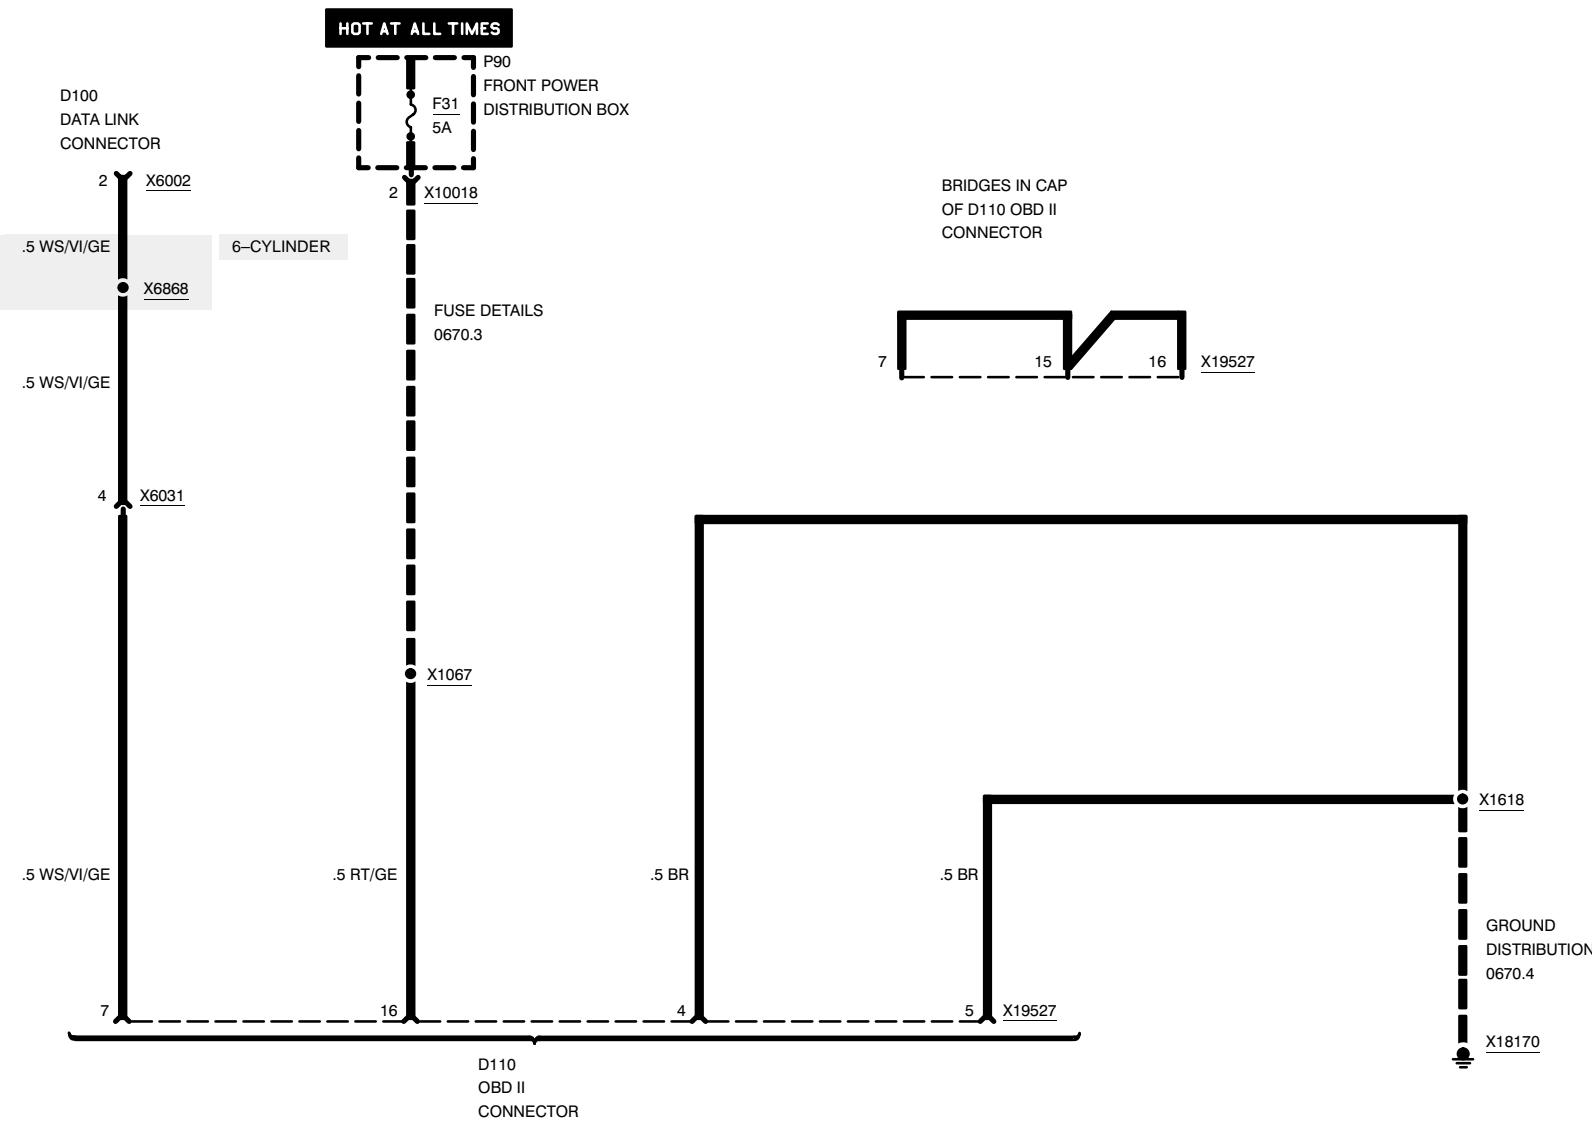

**DATA LINK****DATA LINK CONNECTOR (X6002)**

03/98

06705-06

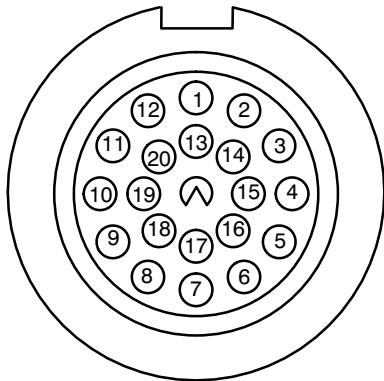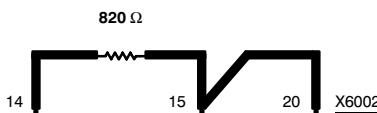BRIDGES IN CAP OF D100 DATA  
LINK CONNECTOR

PIN NUMBER	TERMINAL NUMBER	TERMINAL DESCRIPTION	WIRE COLOR
1	TD	ENGINE	SW
2	TXD2	DIAGNOSTIC DATA LINK	WS/VI/GE
3	-	NOT OCCUPIED	
4	R	VOLTAGE: HOT IN ACCY, RUN AND START	SW/VI/GE (*VI/GN)
5	-	NOT OCCUPIED	
6	-	NOT OCCUPIED	
7	SI	SERVICE INTERVAL RESET	WS/GN
8	-	NOT OCCUPIED	
9	-	NOT OCCUPIED	
10	-	NOT OCCUPIED	
11	-	NOT OCCUPIED	
12	61(D+)	GENERATOR CHARGE INDICATOR	BL
13	-	NOT OCCUPIED	
14	30	VOLTAGE: HOT AT ALL TIMES	RT
15	RXD	DIAGNOSTIC DATA LINK	WS/GE
16	15S	VOLTAGE: IGNITION SWITCH IN RUN AND START	GN/WS
17	TXD	DIAGNOSTIC DATA LINK	WS/VI (*WS/VI/GE)
18	PGSP	PROGRAM SELECT FOR ENGINE CONTROL MODULE (DME)	WS/GN (*GN/BL)
19	31	GROUND	BR (*BR/OR)
20	TXD	DIAGNOSTIC DATA LINK	WS/VI


\* 6-CYLINDER

1997

03/98


1210.17

1997

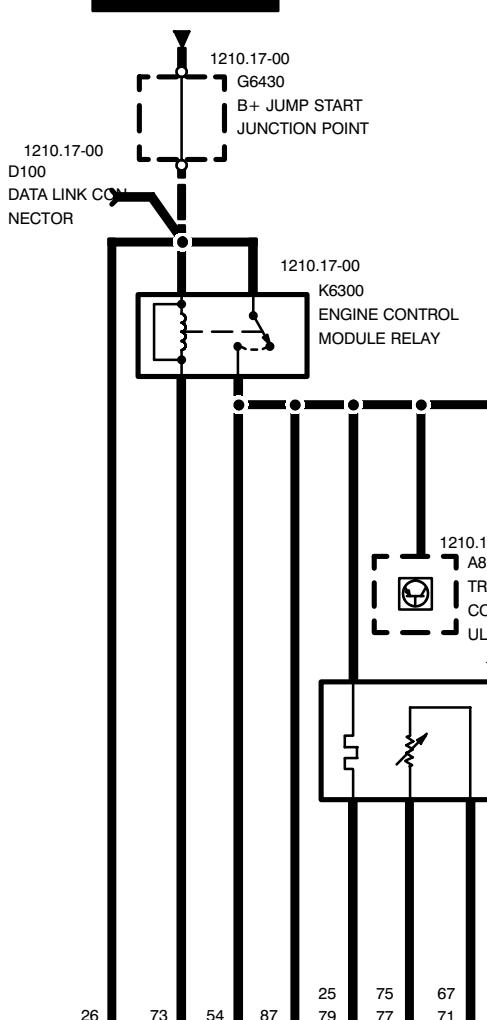

X6000


88 TXD

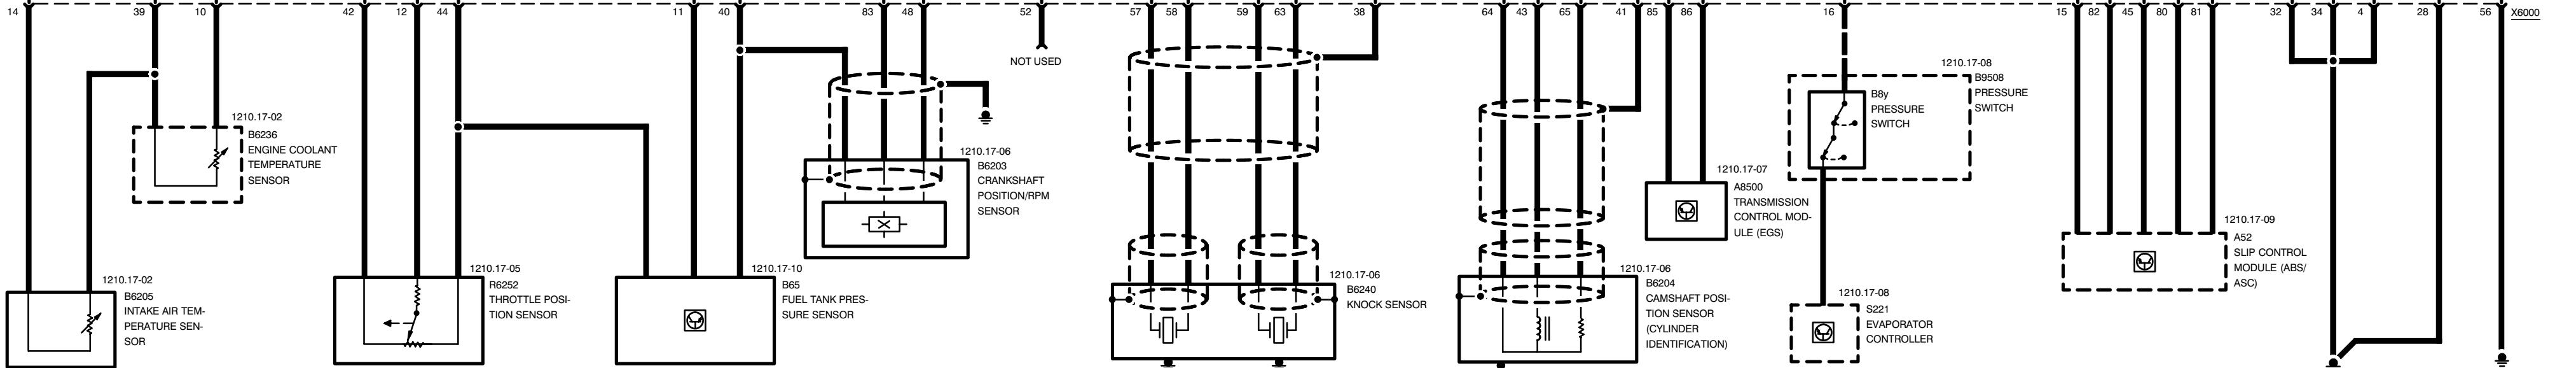

03/98


1210.17

1997

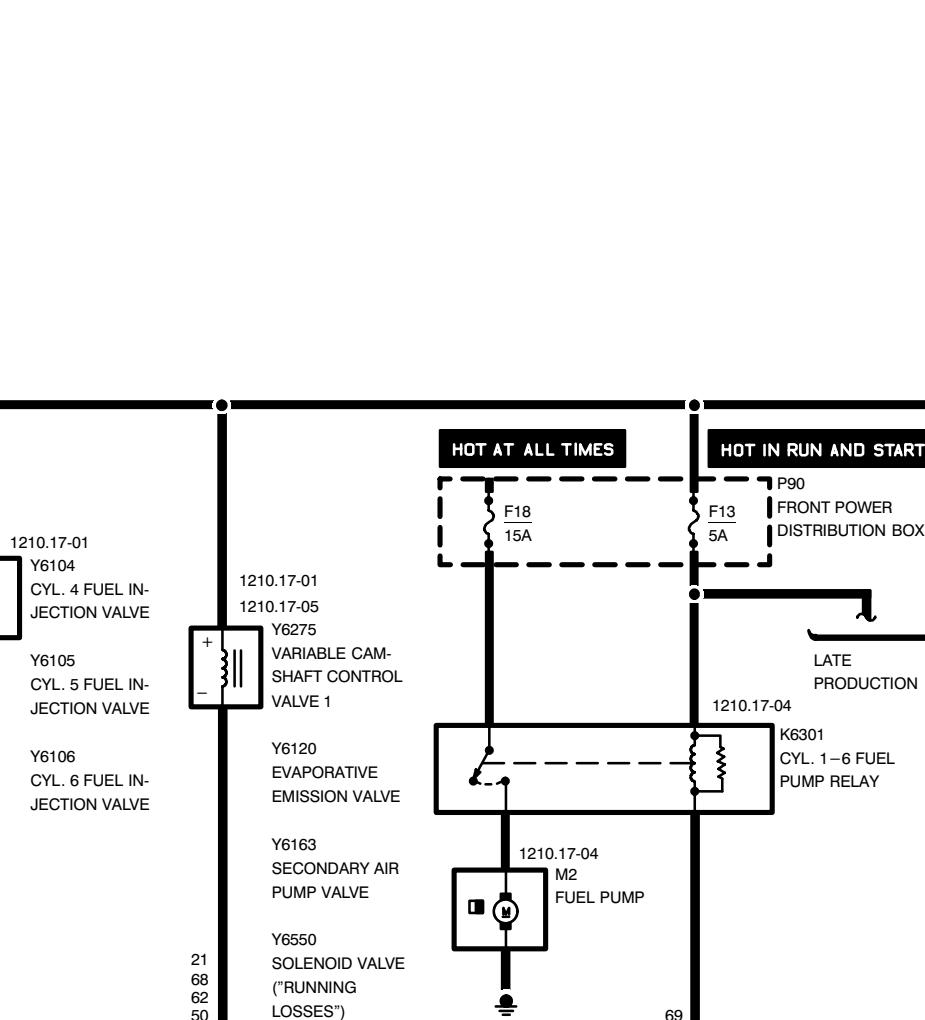


X6000

88 TXD

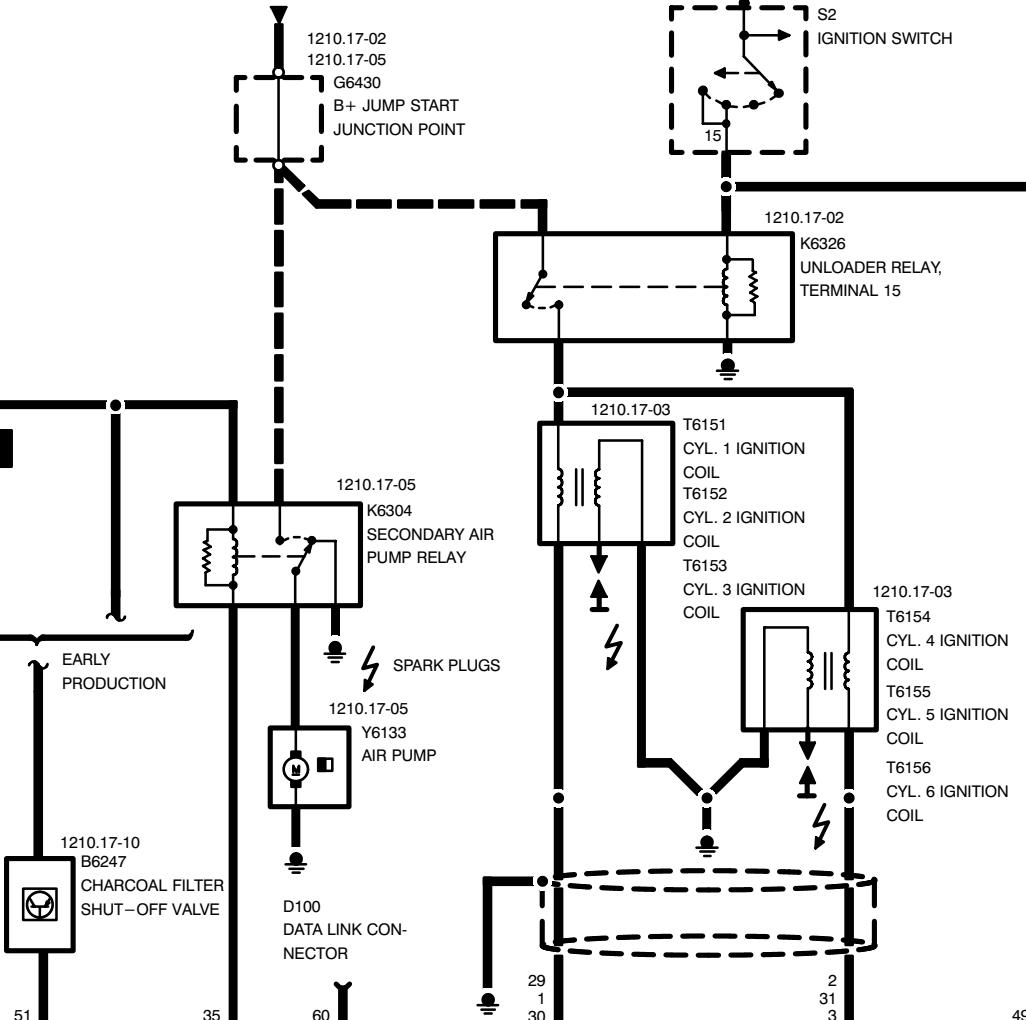

X6000

88 TXD

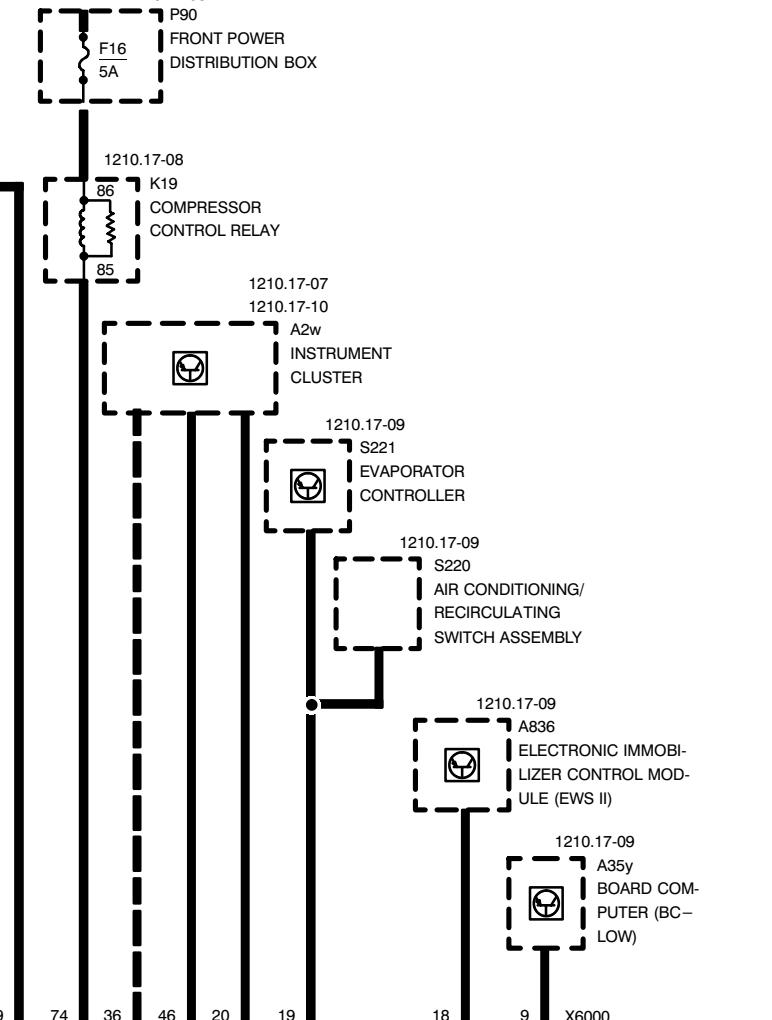


X6000

88 TXD

1997

Z3

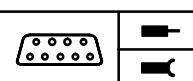

## Pin Assignments


### X6000

Pin	Type	Description/Function	Connection
1	A	Cyl. 2 ignition coil control	Cyl. 2 ignition coil
2	A	Cyl. 4 ignition coil control	Cyl. 4 ignition coil
3	A	Cyl. 6 ignition coil control	Cyl. 6 ignition coil
4	M	Ground	Ground point
5	A	Cyl. 2 fuel injection valve control	Cyl. 2 fuel injection valve
6	A	Cyl. 1 fuel injection valve control	Cyl. 1 fuel injection valve
7	M	Ground	Hot wire air mass meter
8	E	Hot wire air mass meter	Hot wire air mass meter
9	E	TI measurement signal (fuel consumption)	Board computer
10	E	Engine coolant temperature	Engine coolant temperature sensor
11	E	Fuel tank pressure	Fuel tank pressure sensor
12	E	Throttle position signal	Throttle position sensor
13		Not used	
14	E	Intake air temperature	Intake air temperature sensor
15	E	Speed signal right rear	ABS/ASC control module
16	E	Activate A/C	Pressure switch
17		Not used	
18	E	Drive away protection signal (code)	Electronic immobilizer control module (EWS II)
19	E	A/C-ON-signal	Air conditioning operating unit
20	A	"Check engine" indicator control	Instrument cluster
21	A	Camshaft control	Variable camshaft control valve
22	A	Cyl. 3 fuel injection valve control	Cyl. 3 fuel injection valve
23	A	Cyl. 6 fuel injection valve control	Cyl. 6 fuel injection valve
24	A	Cyl. 4 fuel injection valve control	Cyl. 4 fuel injection valve
25	M	Oxygen sensor heating ground	Oxygen sensor (in front of catalytic converter)
26	E	Battery voltage	B+ jump start junction point
27	A	Activate valve	Idle speed control valve
28	M	Ground	Ground point
29	A	Cyl. 1 ignition coil control	Cyl. 1 ignition coil

E = Input, A = Output, M = Ground



Z3

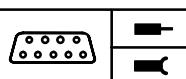


## Pin Assignments

Pin	Type	Description/Function	Connection
30	A	Cyl. 3 ignition coil control	Cyl. 3 ignition coil
31	A	Cyl. 5 ignition coil control	Cyl. 5 ignition coil
32	M	Ground	Ground point
33	A	Cyl. 5 fuel injection valve control	Cyl. 5 fuel injection valve
34	M	Ground	Ground point
35	A	Activate relay	Secondary air pump relay
36	A	Crankshaft RPM speed signal TD	Instrument cluster
37		Not used	
38	M	Ground	Shield knock sensor
39	M	Ground	Temperature sensors
40	M	Ground	Crankshaft position/RPM sensor Fuel tank pressure sensor
41	M	Ground	Shield camshaft position sensor
42	M	Ground	Throttle position sensor
43	M	Ground	Camshaft position sensor
44	A	Voltage supply	Throttle position sensor Fuel tank pressure sensor
45	A	Throttle position signal	ABS/ASC control module
46	E	TI measurement signal (fuel consumption)	Instrument cluster
47		Not used	
48	A	Voltage supply	Crankshaft position/RPM sensor
49	E	Terminal 15	Ignition switch
50	A	Running losses	Solenoid valve
51	A	Activate valve	Charcoal filter shut off valve
52	A	Signal exhaust flap	Not used
53	A	Activate valve	Idle speed controle valve
54	E	Battery voltage, terminal 87	Engine control module relay
55		Not used	
56	M	Ground	Ground point
57	E	Cyl. 1-3 knock sensor	Knock sensor
58	E	Cyl. 1-3 knock sensor	Knock sensor
59	E	Cyl. 4-6 knock sensor	Knock sensor
60	E	Programming voltage	Data link connector

E = Input, A = Output, M = Ground



Z3

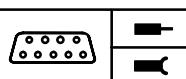

## Pin Assignments

Pin	Type	Description/Function	Connection
61		Not used	
62	E	Activate valve	Secondary air pump value
63	E	Cyl. 4-6 knock sensor	Knock sensor
64	E	Camshaft position	Camshaft position sensor
65	E	Camshaft position	Camshaft position sensor
66		Not used	
67	M	Oxygen sensor signal ground	Oxygen sensor (in front of catalytic converter)
68	E	Activate valve	Evaporative emission valve
69	E	Activate relay	Fuel pump relay
70		Not used	
71	M	Oxygen sensor signal ground	Oxygen sensor (behind catalytic converter)
72		Not used	
73	E	Activate relay	Engine control module relay
74	A	Activate A/C compressor	Compressor control relay
75	E	Sensor signal	Oxygen sensor (in front of catalytic converter)
76		Not used	
77	E	Sensor signal	Oxygen sensor (behind catalytic converter)
78		Not used	
79	M	Oxygen sensor heating ground	Oxygen sensor (behind catalytic converter)
80	A	ASC signal ZA	Slip control module ABS/ASC
81	A	ASC signal ZWV	Slip control module ABS/ASC
82	A	ASC signal MSR	Slip control module ABS/ASC
83	E	Sensor signal	Crankshaft position/RPM sensor
84		Not used	
85	E/A	CAN LOW	Transmission control module EGS
86	E/A	CAN HIGH	Transmission control module EGS
87	E	Battery voltage, terminal 87	Engine control module relay
88	E/A	TxD diagnosis data link	Data link connector

E = Input, A = Output, M = Ground


## ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

POWER


03/98

1210.17.00

1997

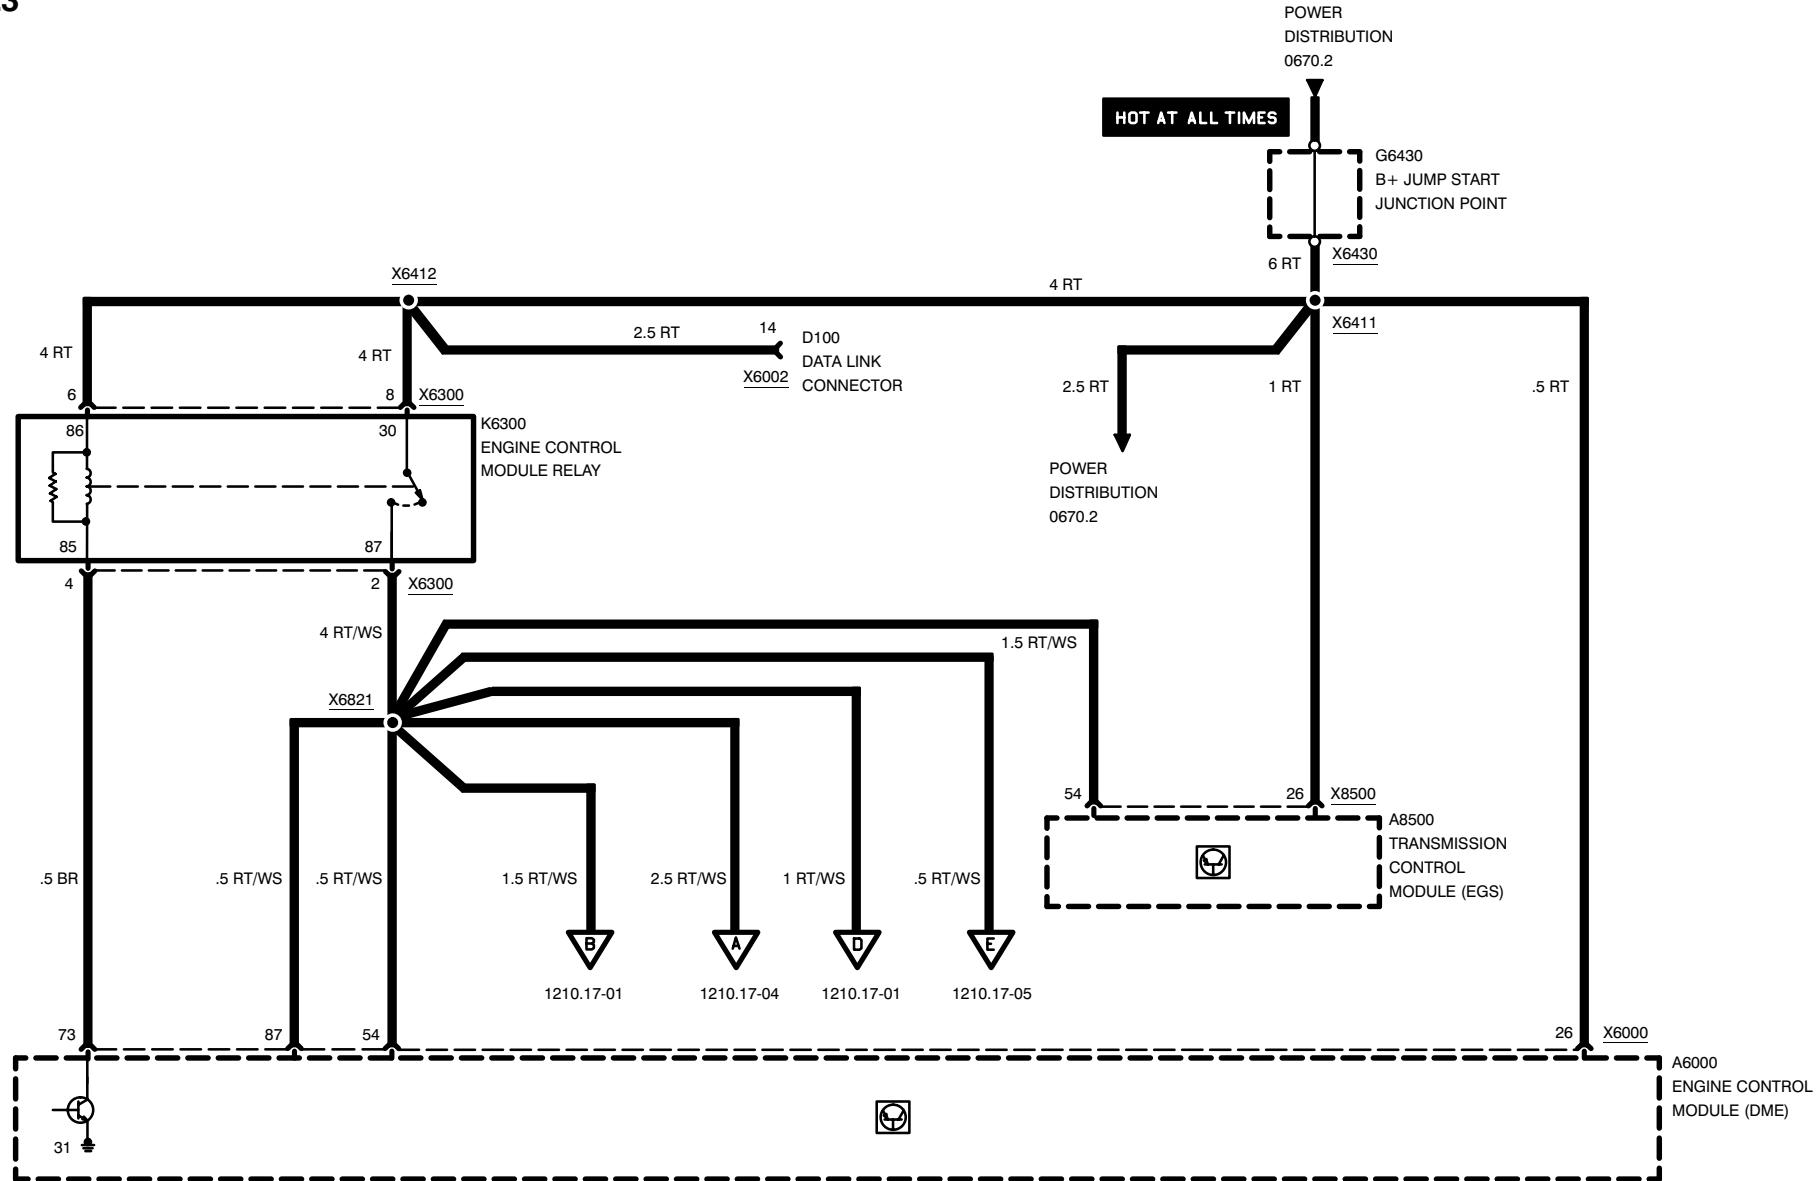

## ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

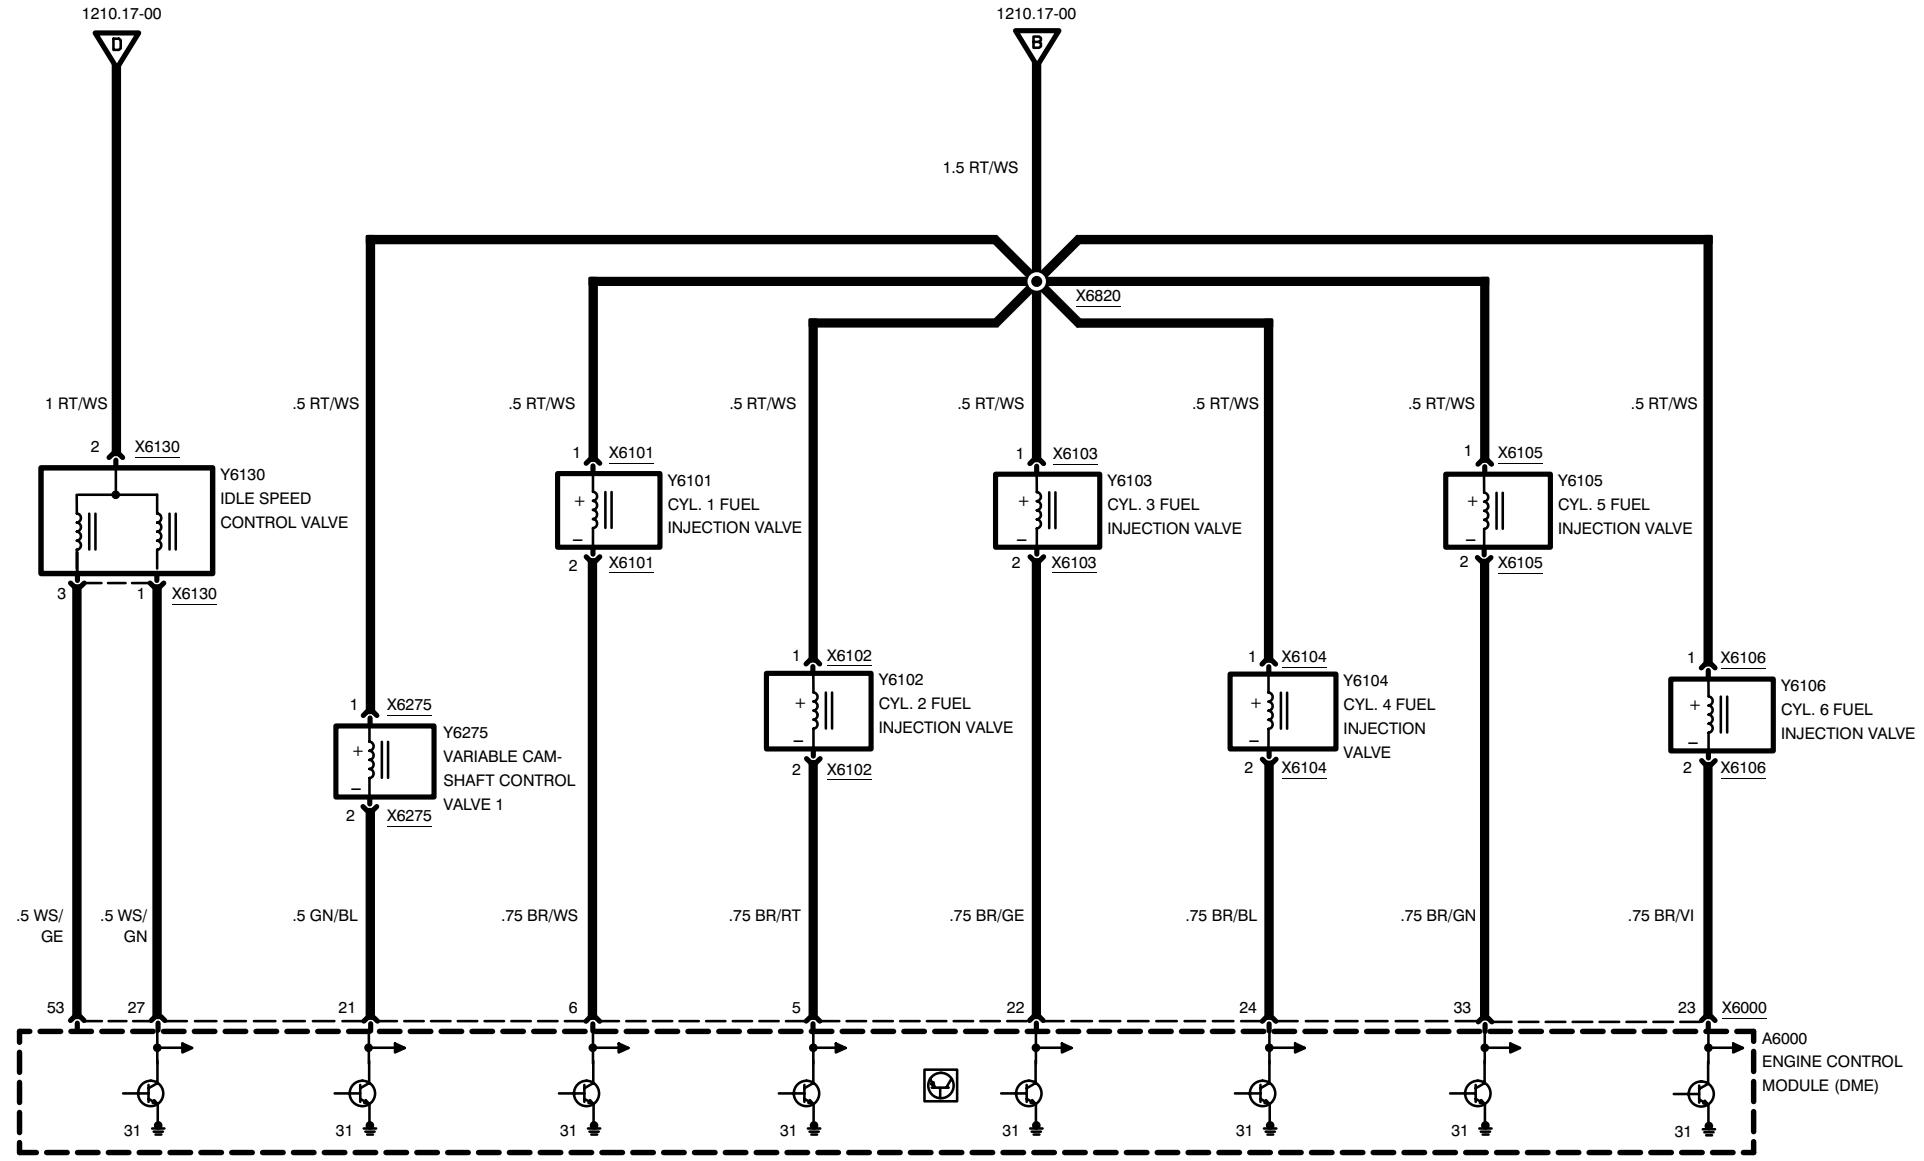


## ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

Z3

03/98

1210.17-02


1997

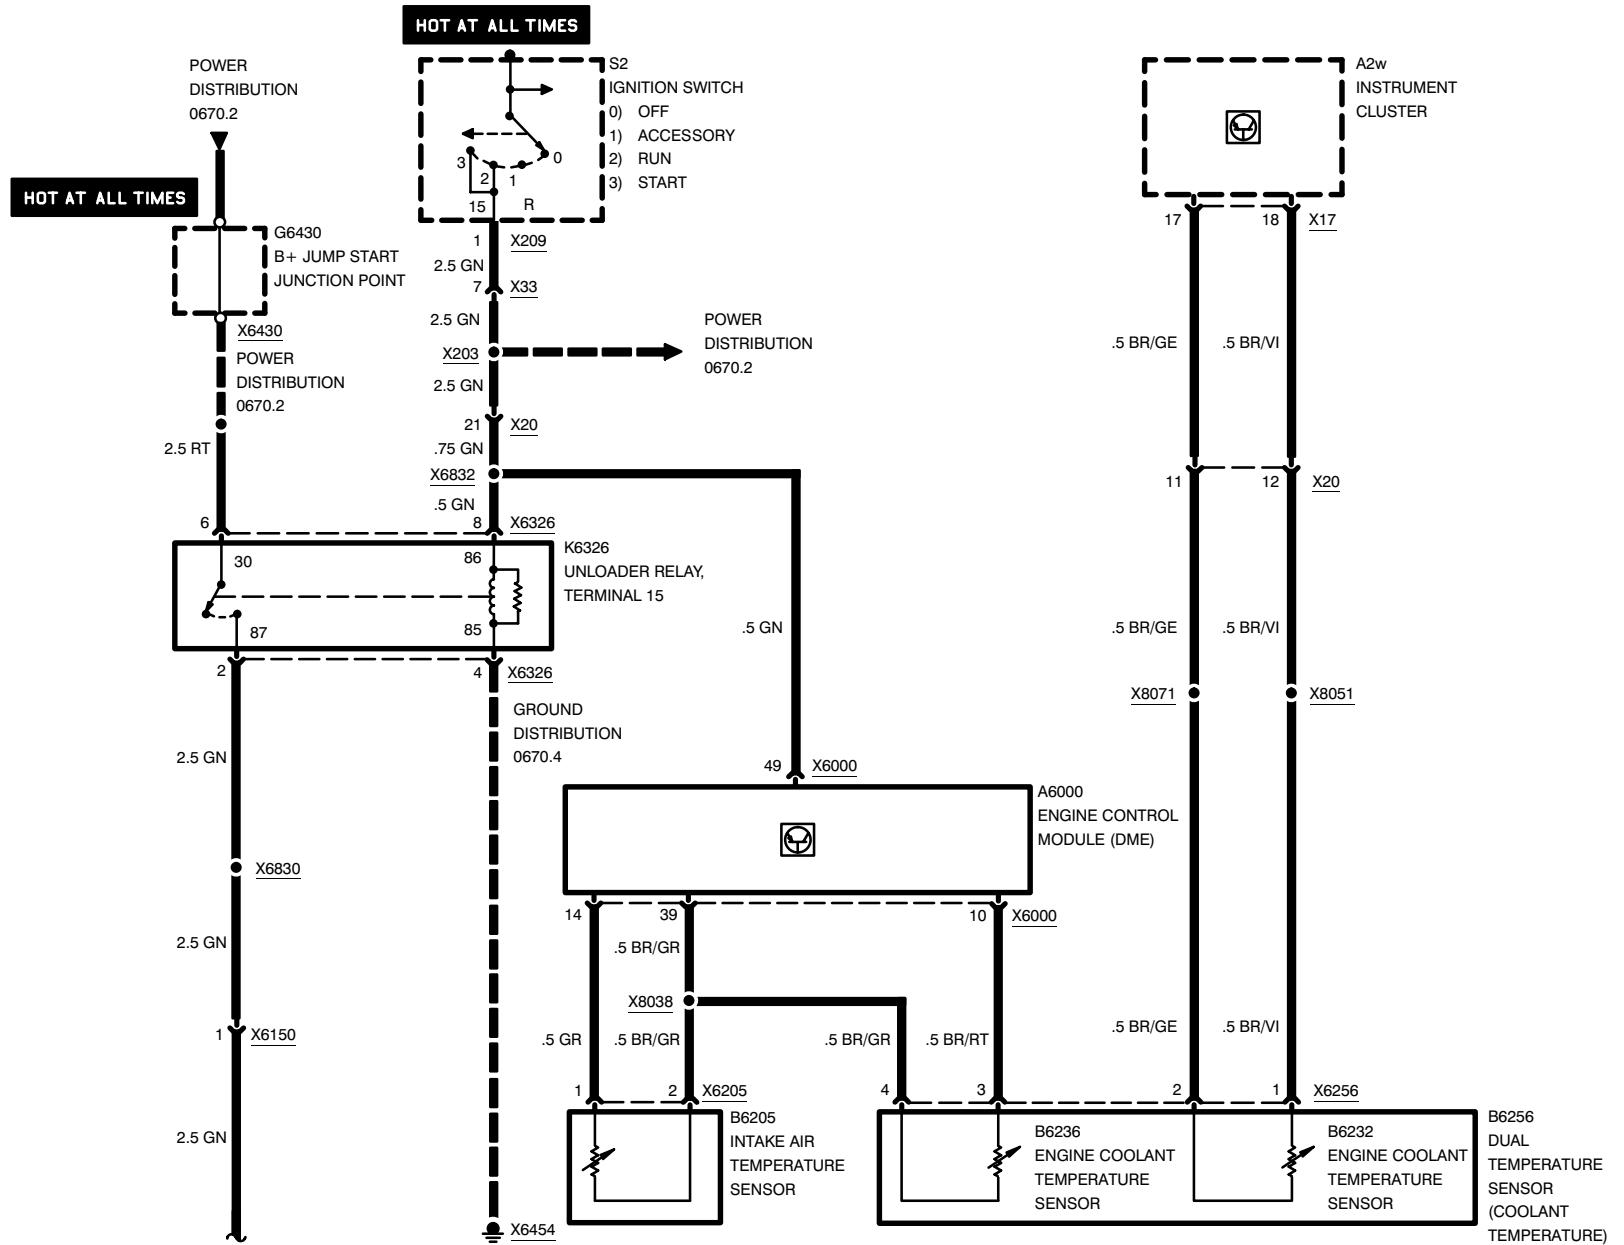


03/98

1210.17-03

1997

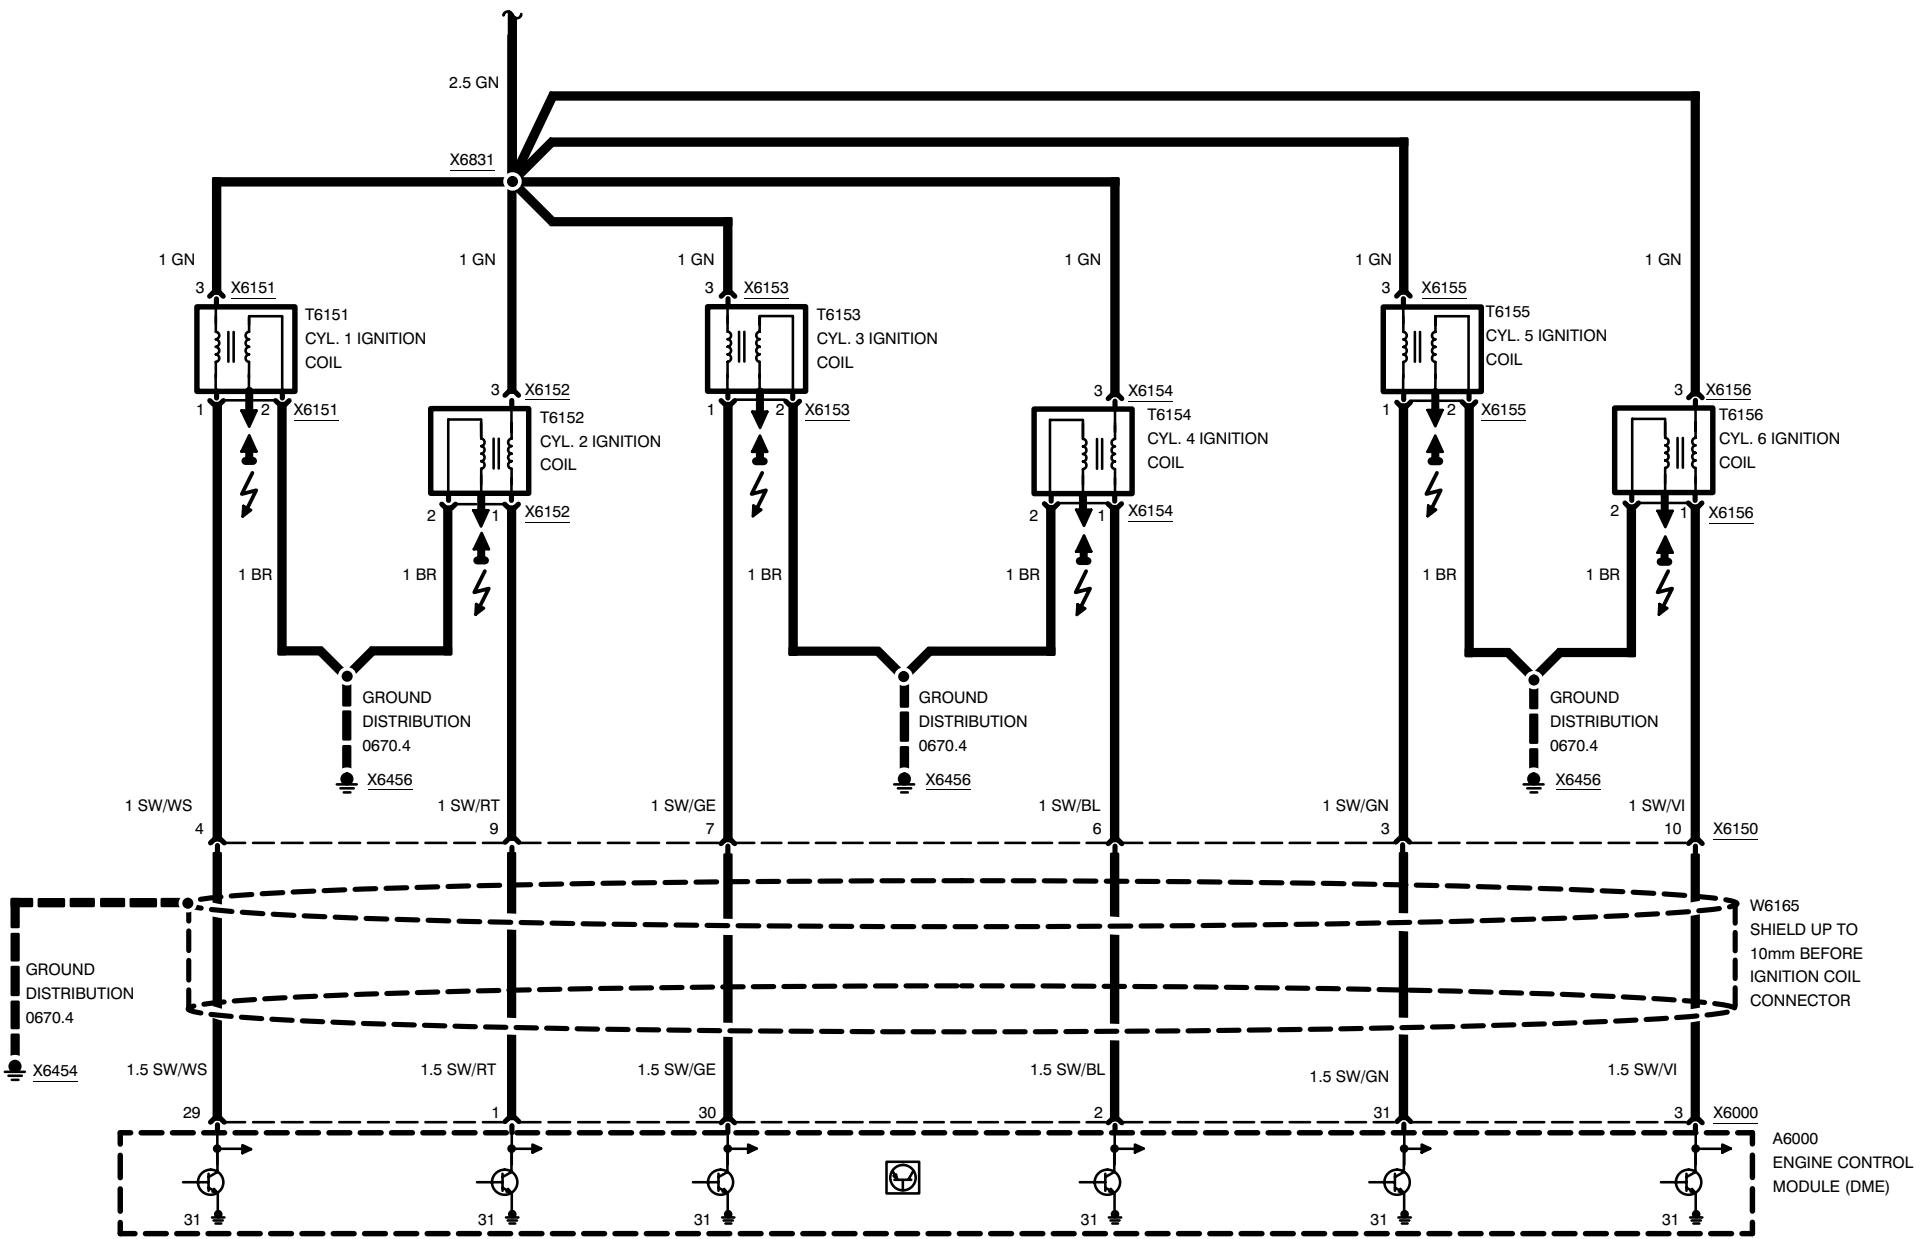

## ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

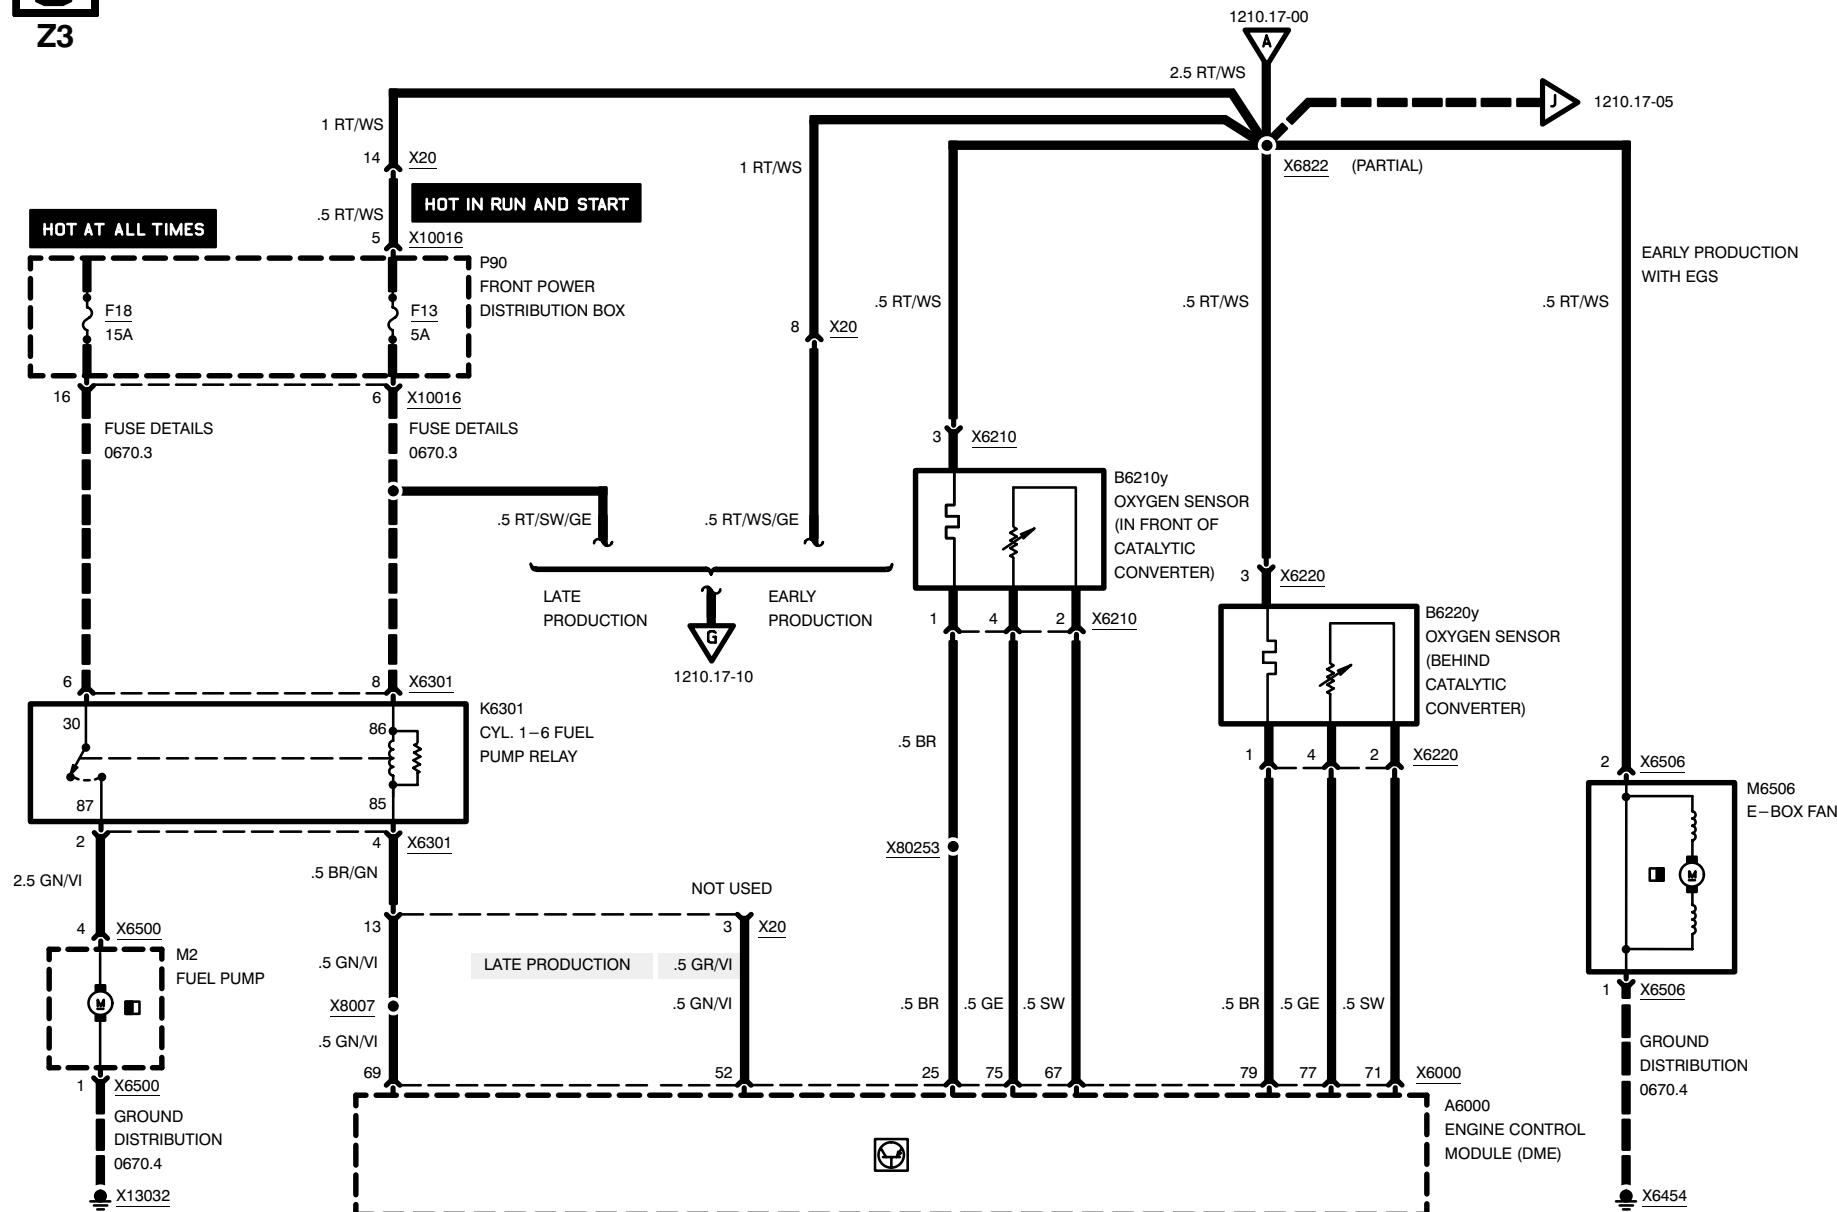


## ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)


03/98

1210.17-05

1997

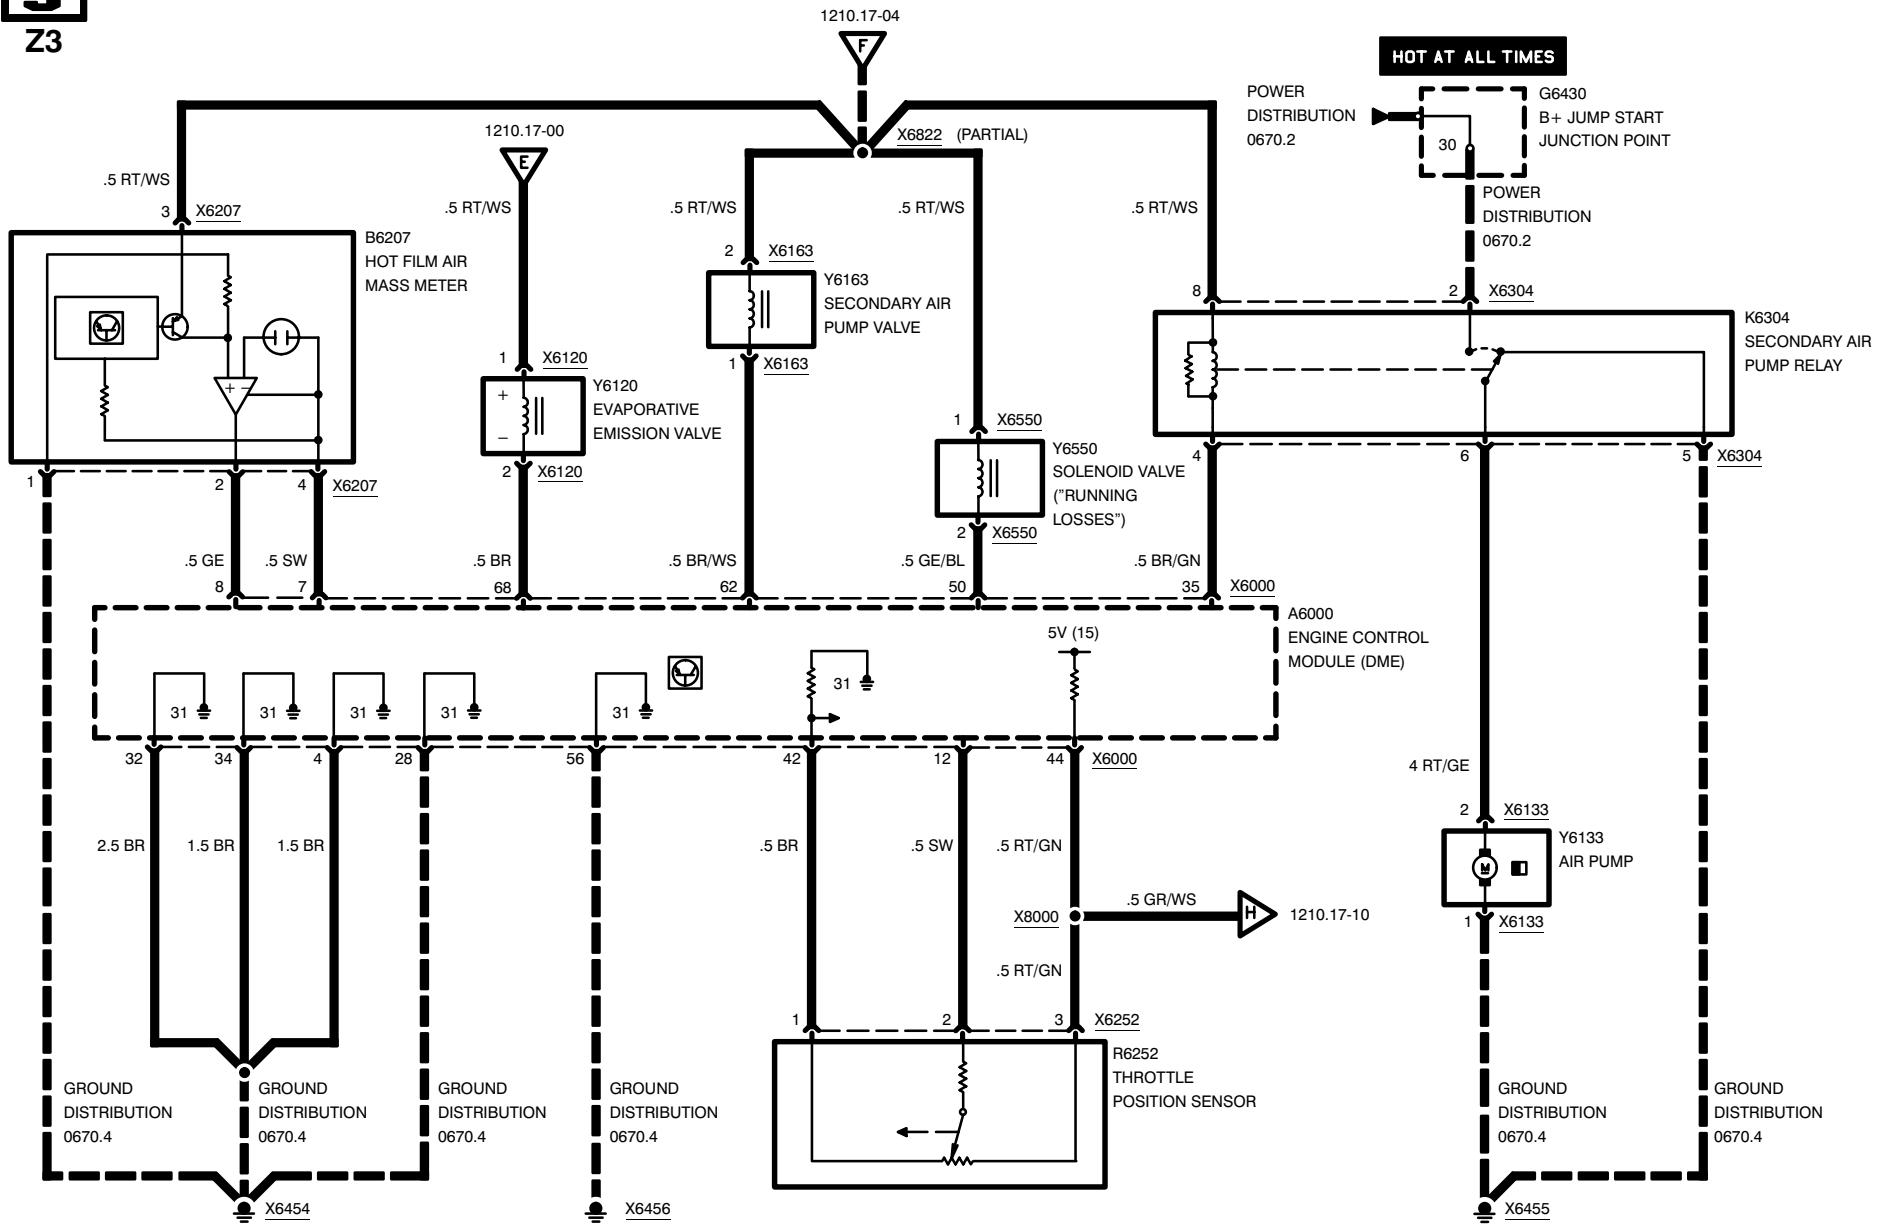


## ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

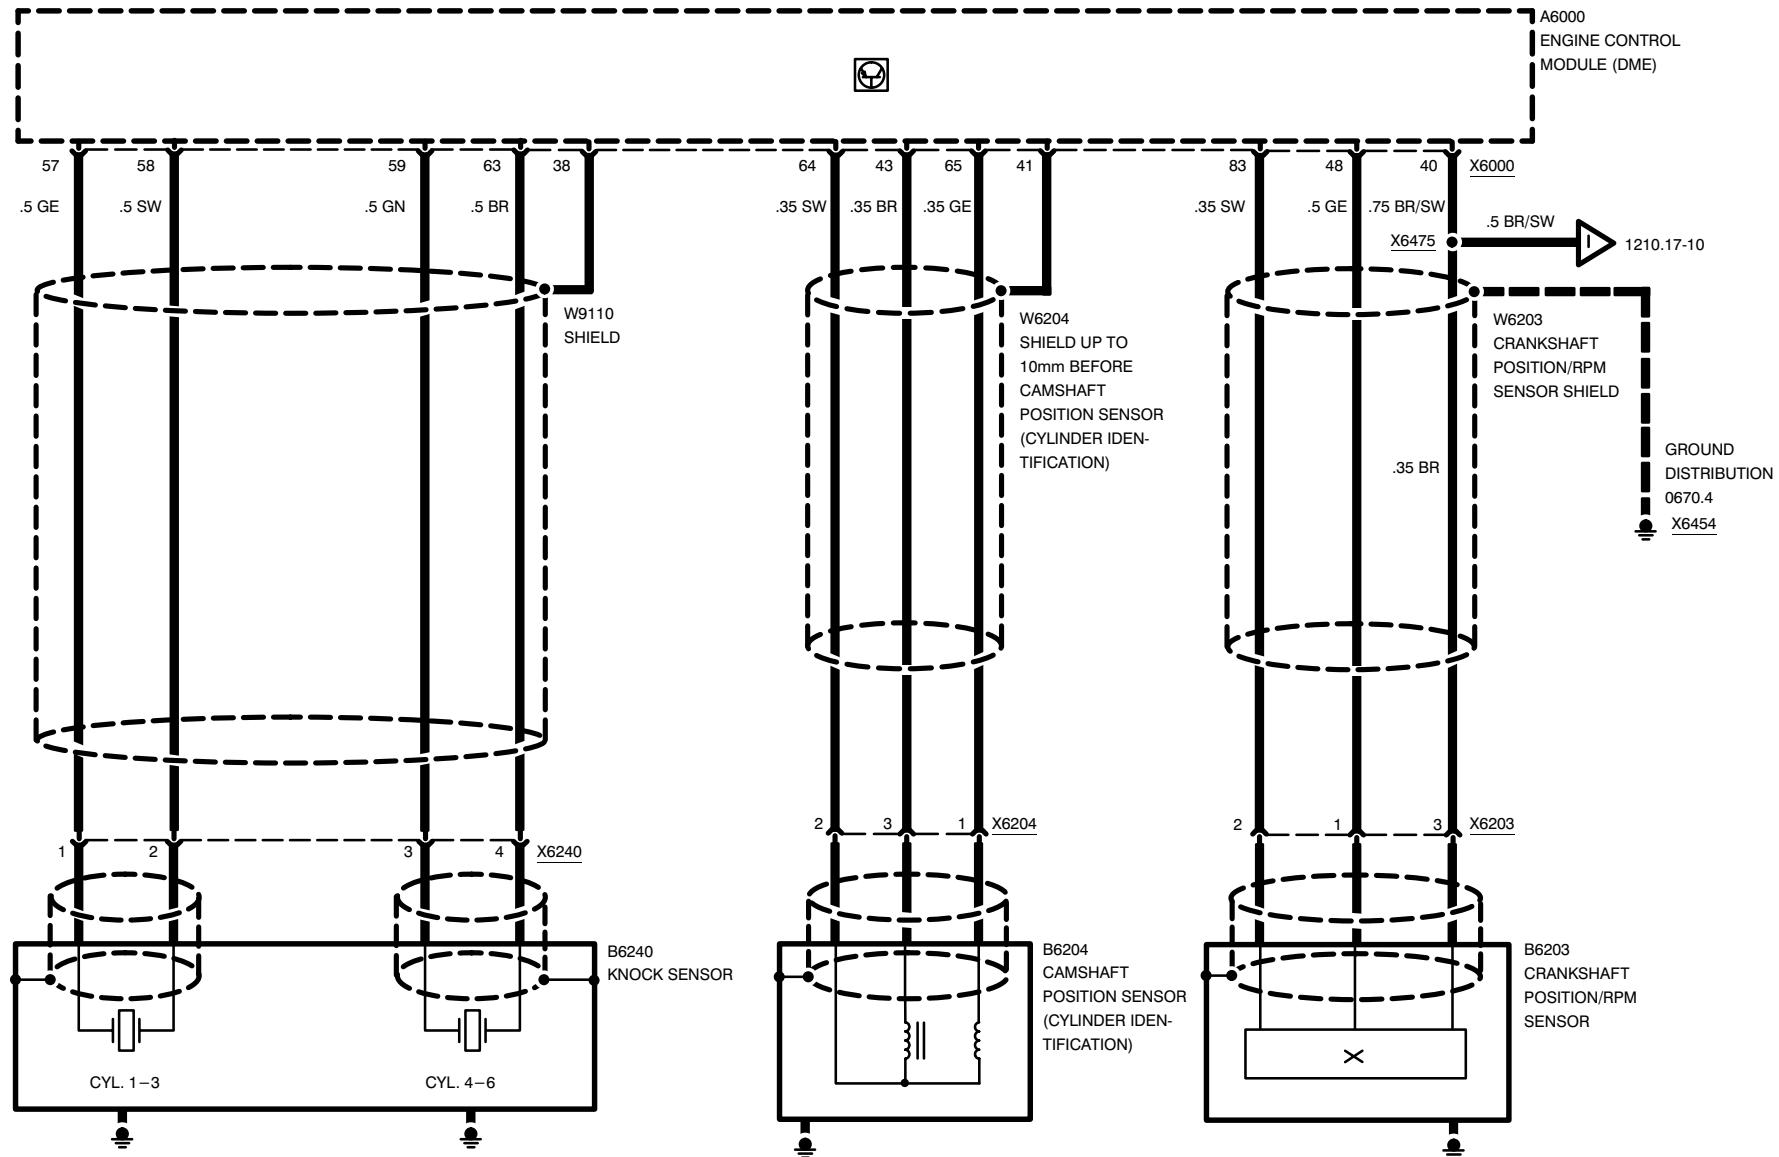



**ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)**

Z3

03/98

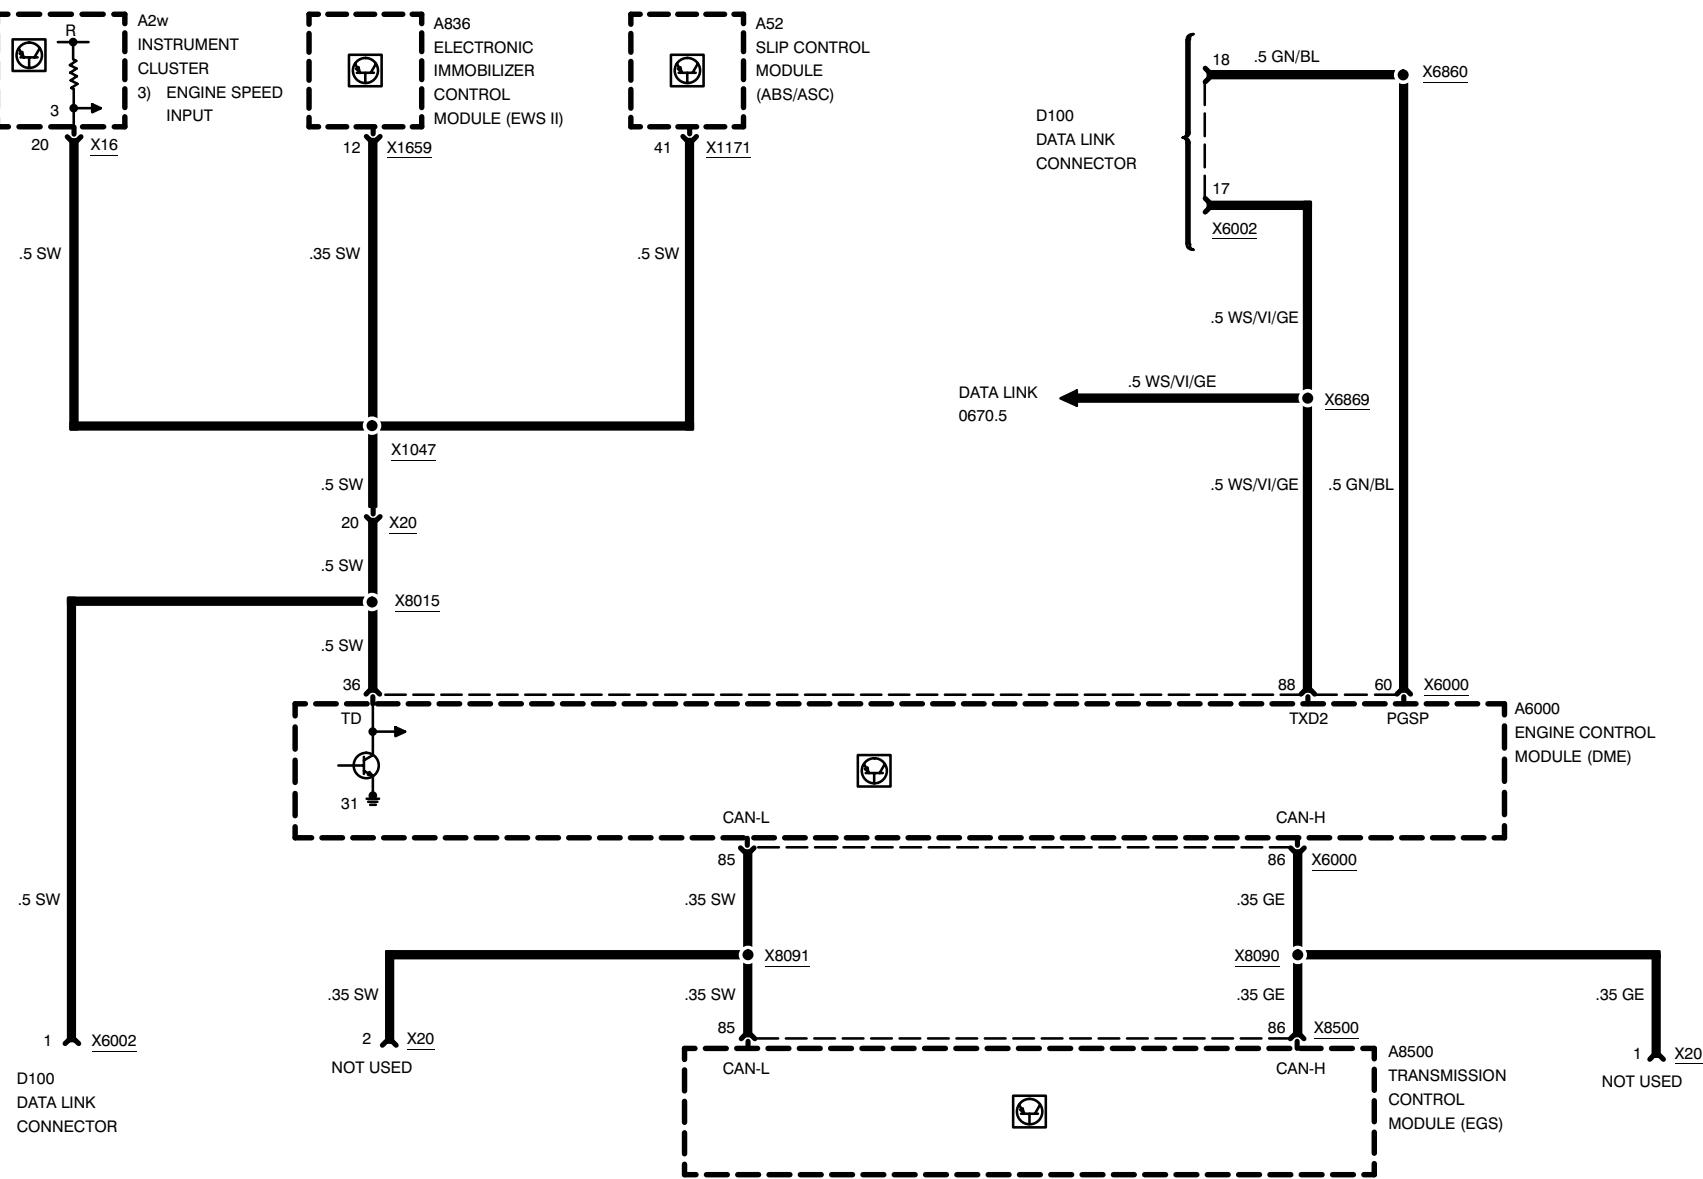
1210.17-07  
1997

# ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

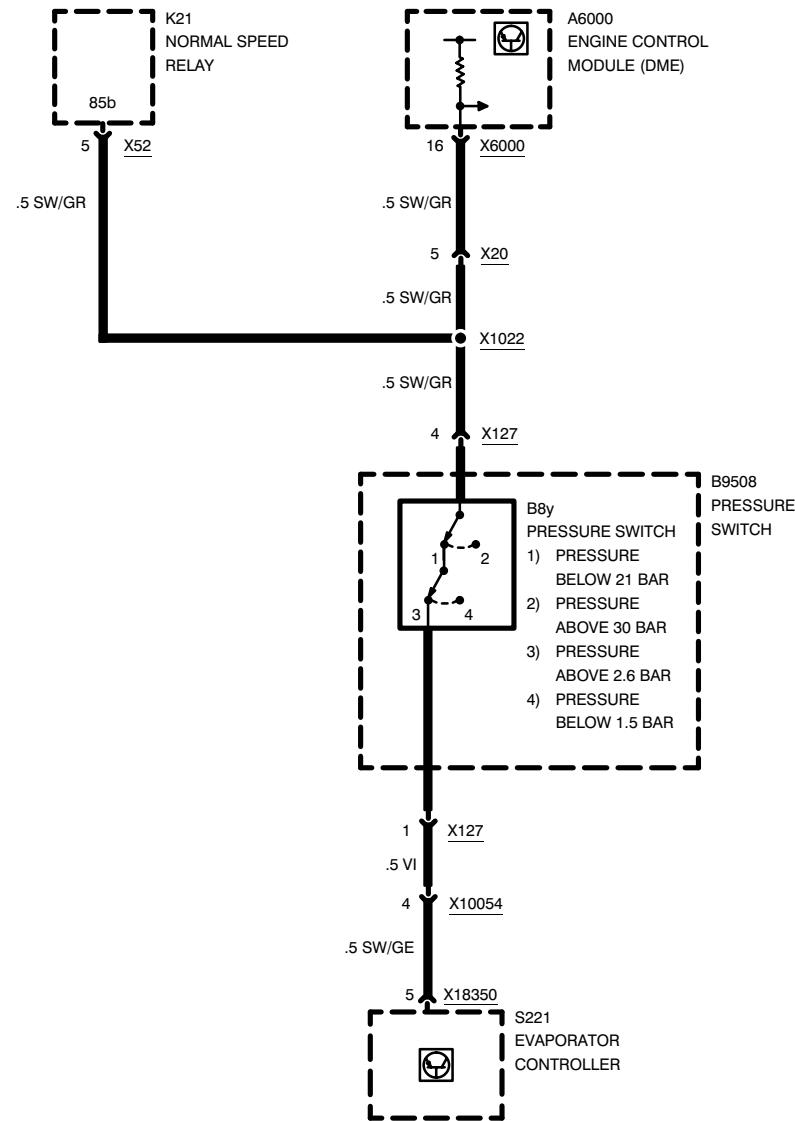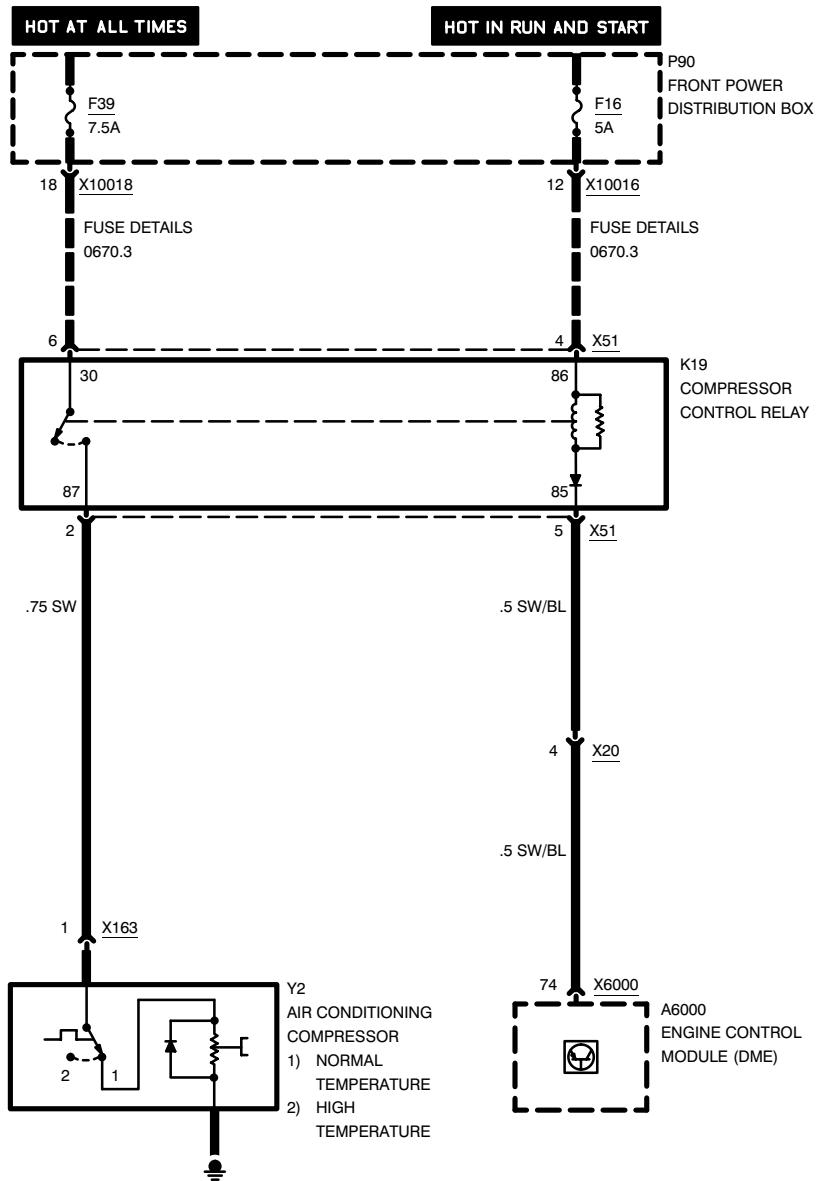

**ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)**

Z3

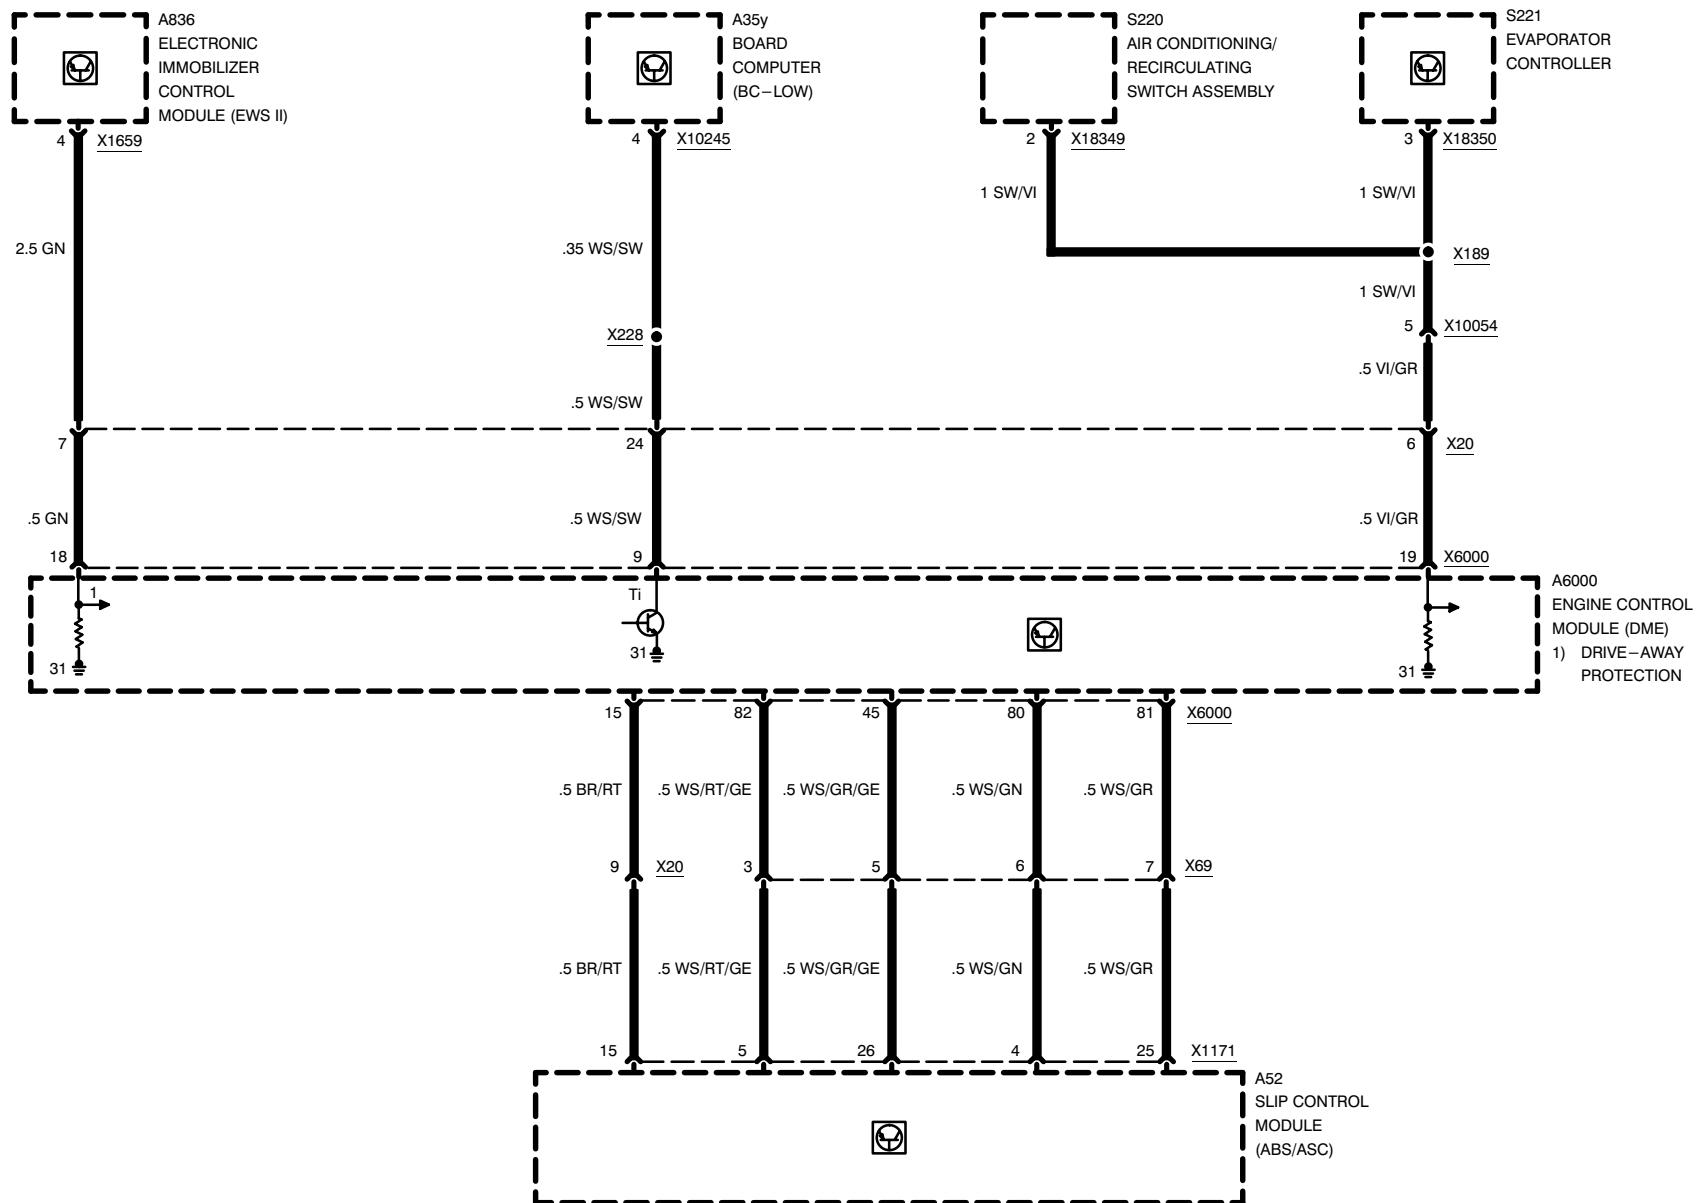

03/98


1210.17-09

1997

# ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

## OBD II DIAGNOSIS

### HOT IN ACCY RUN AND START

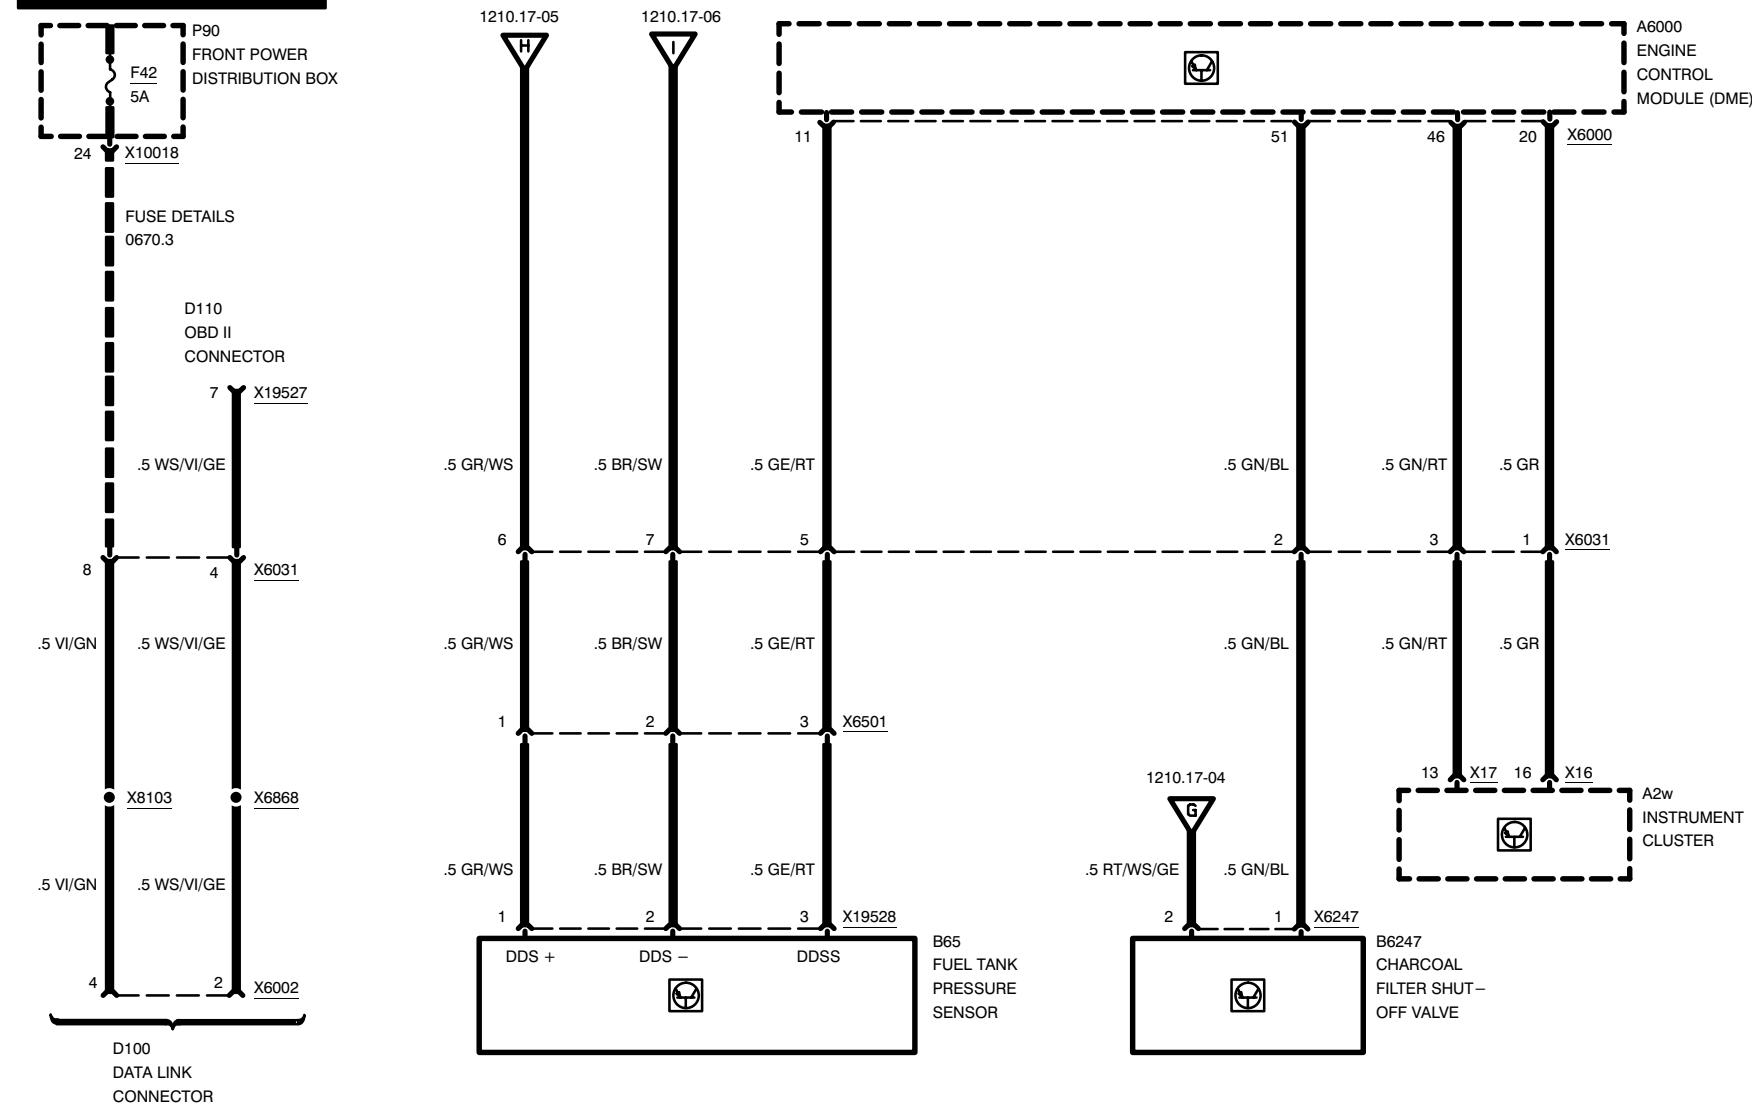


03/98


1210.17-10

1997


03/98 1210.20 1997

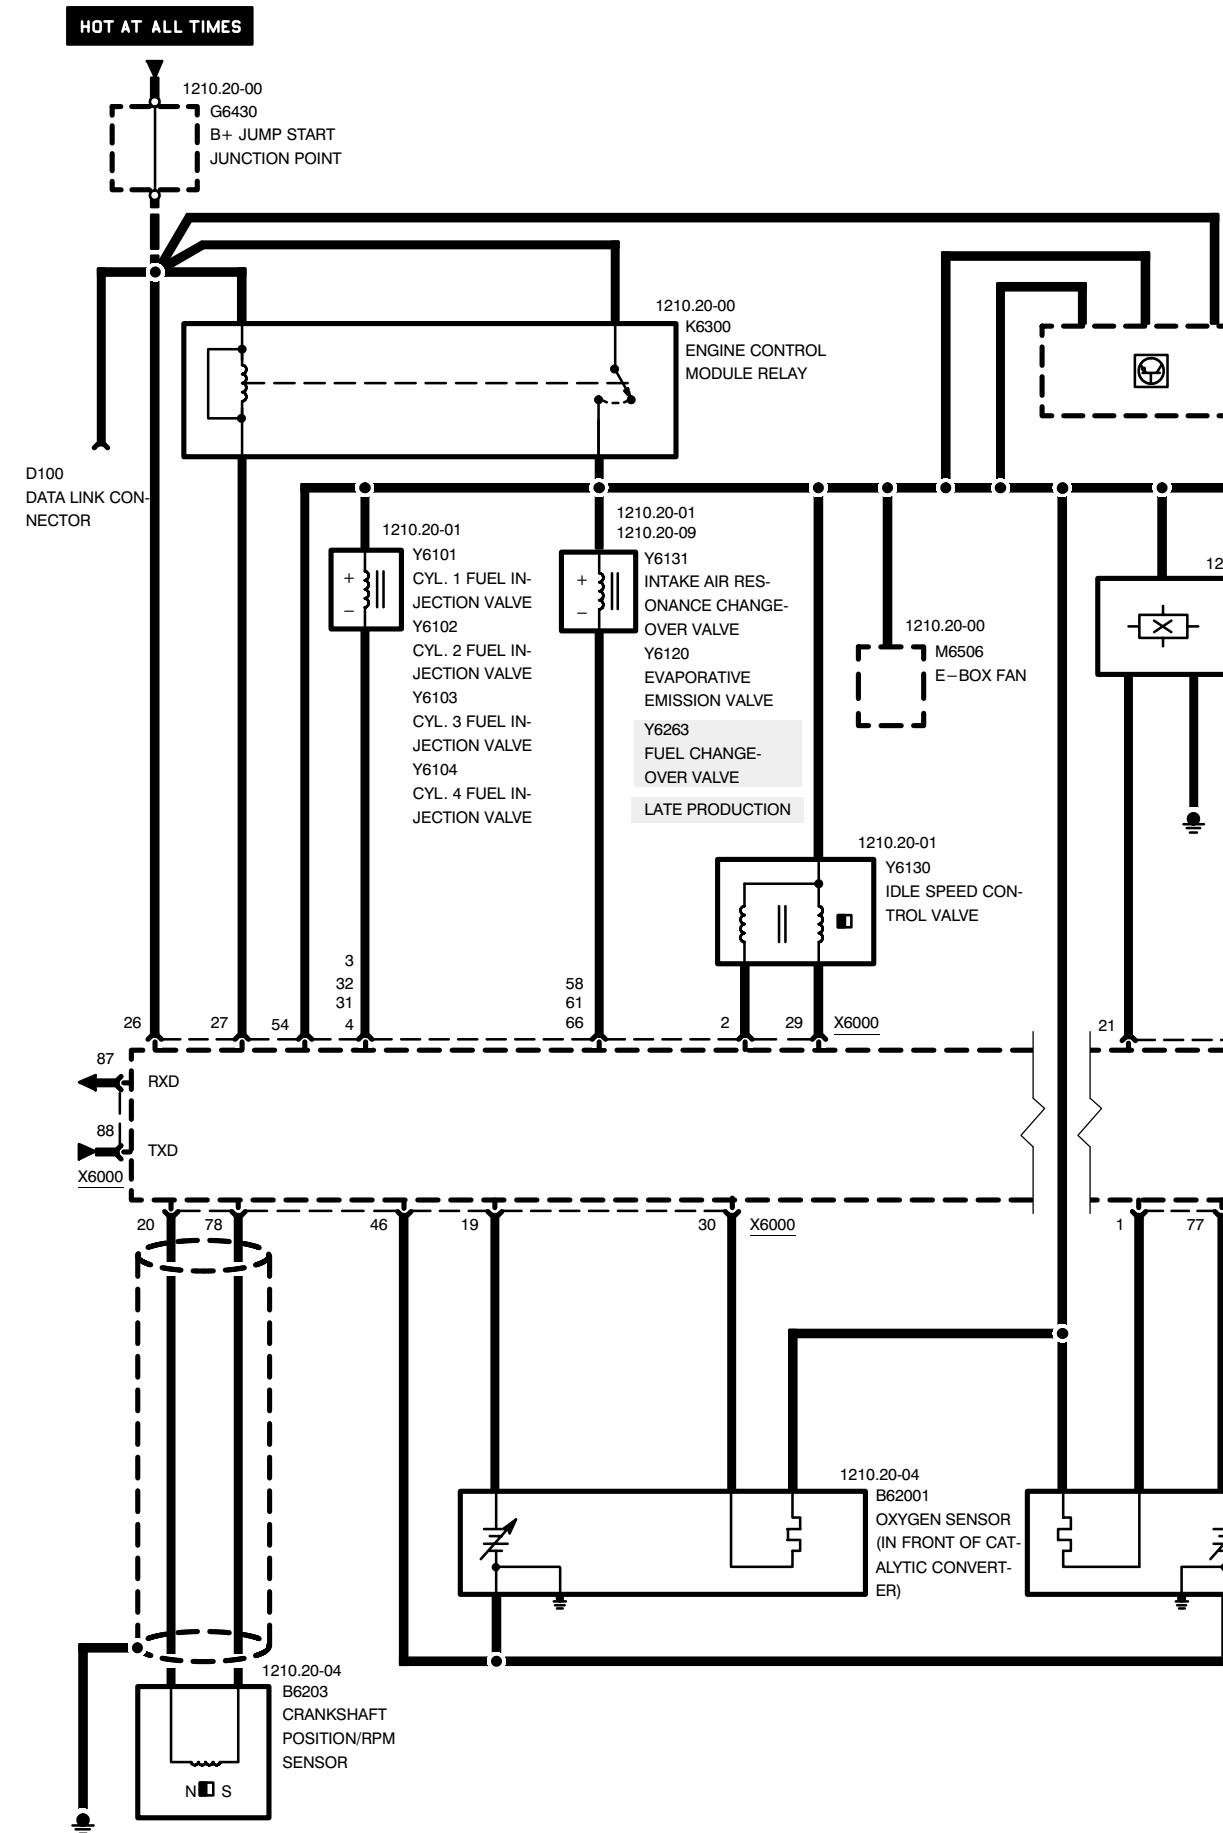


03/98 1210.20 1997

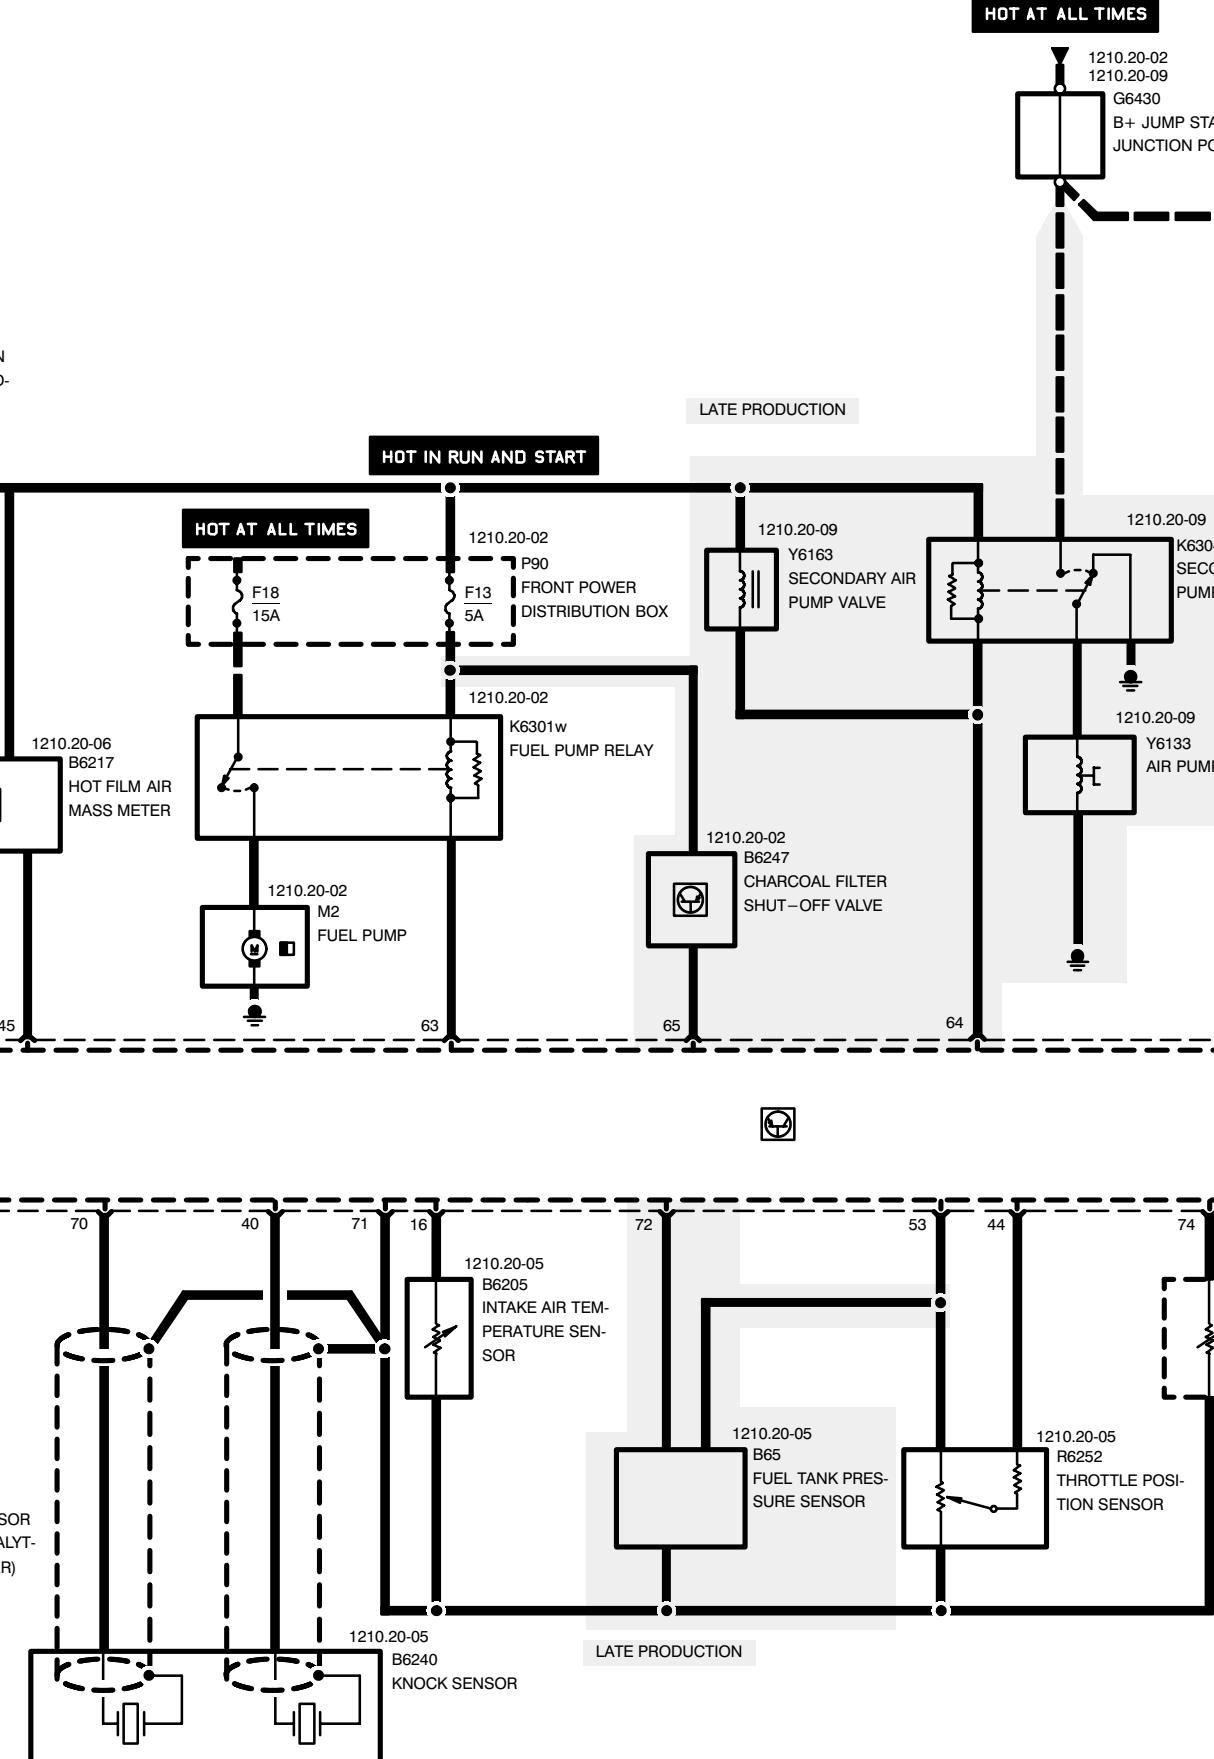

03/98 1210.20 1997

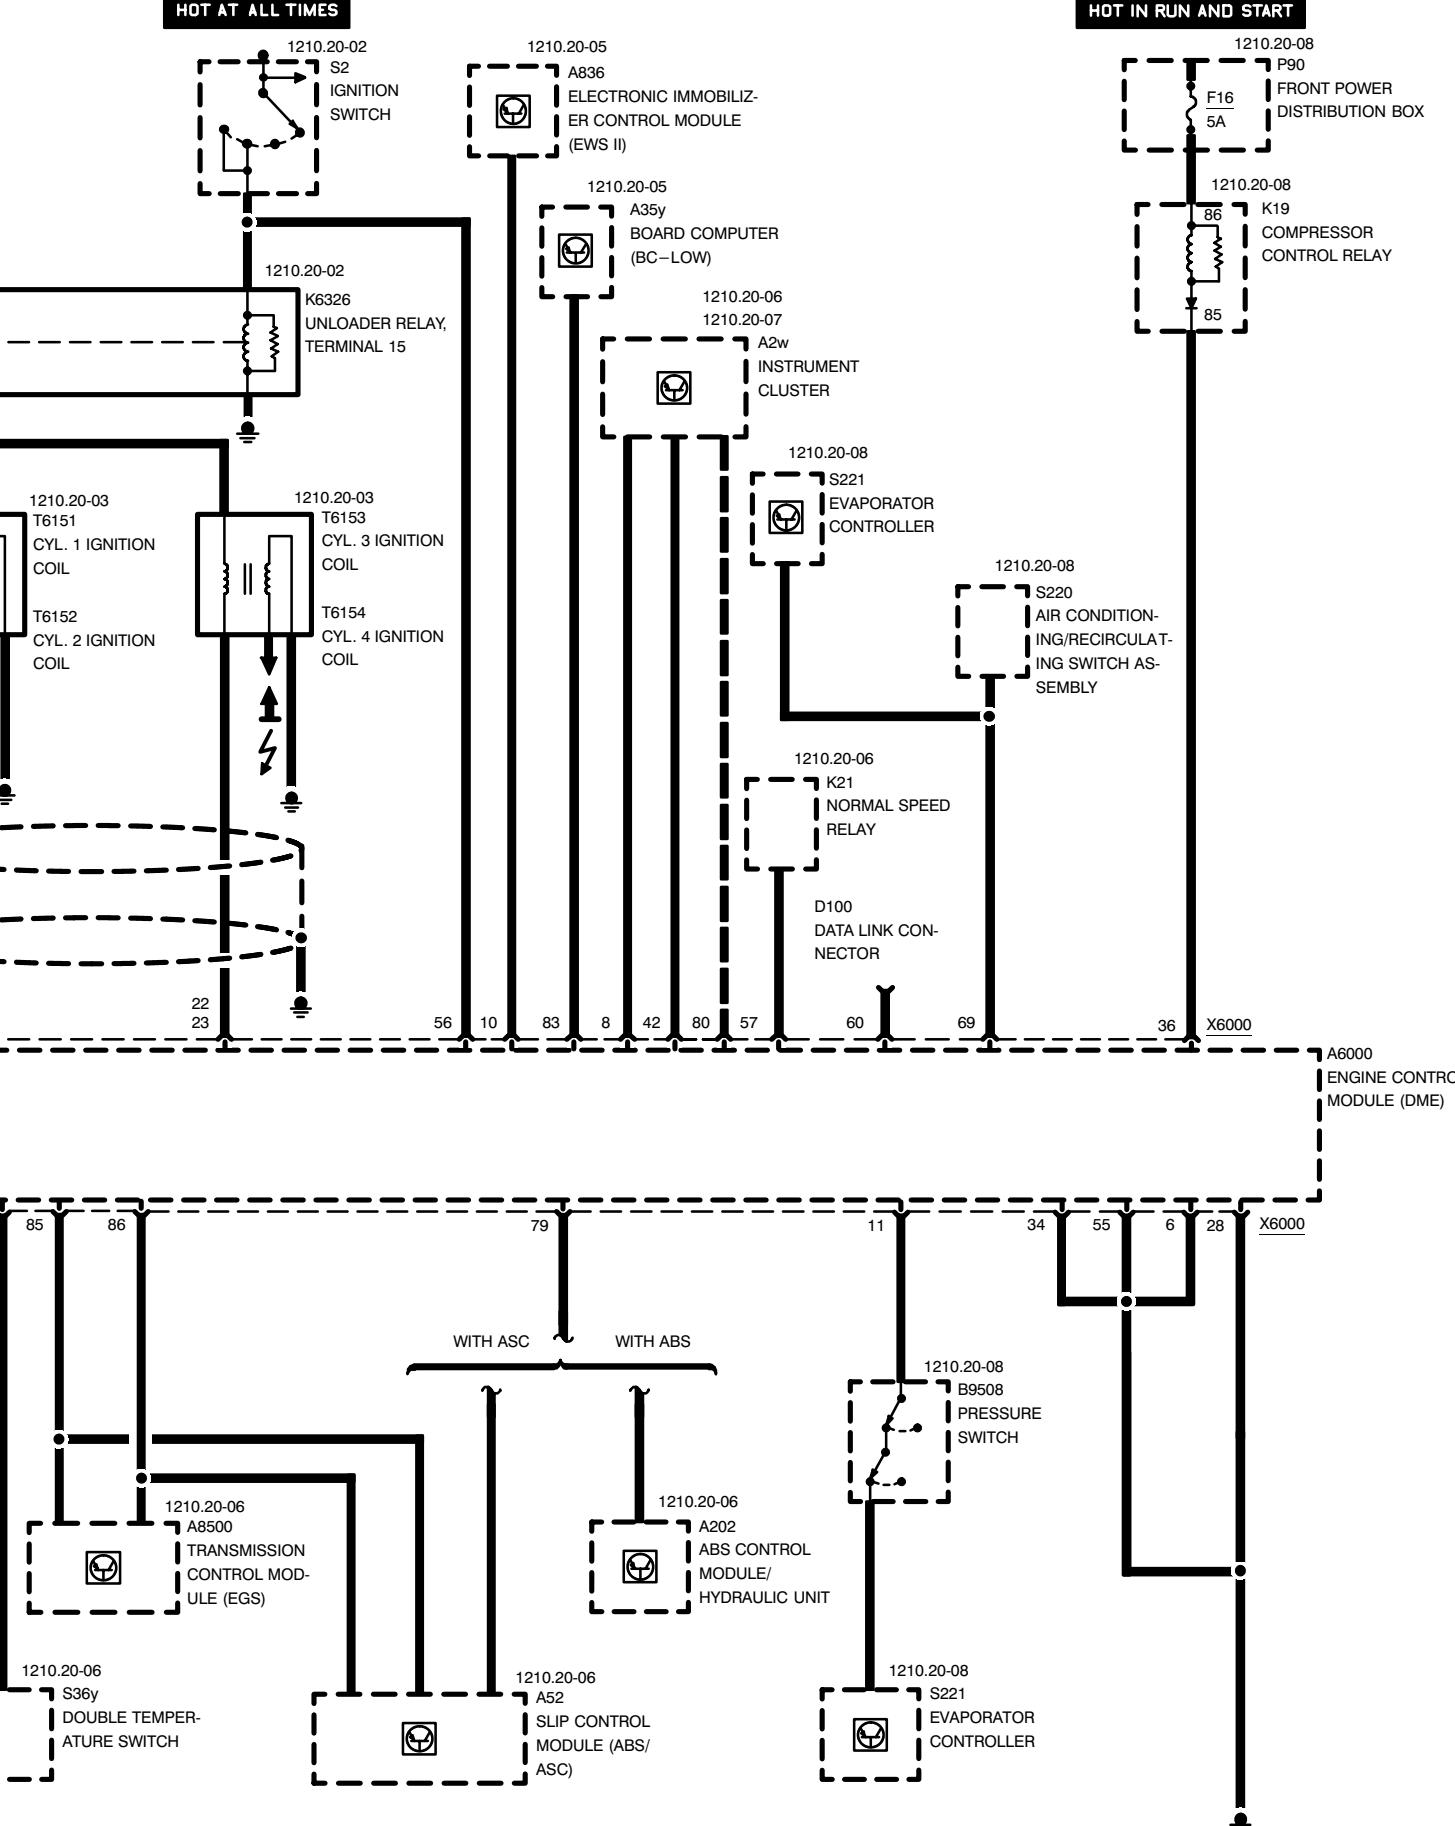

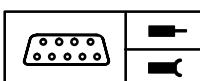**Z3****Pin Assignments****X6000**

Pin	Type	Description/Function	Connection
89	A	Oxygen sensor heating (-)	Oxygen sensor (behind catalytic converter)
90	A	Activate valve	Idle speed control valve
91	A	Activate valve	Cyl. 1 fuel injection valve
92	A	Activate valve	Cyl. 4 fuel injection valve
93		Not used	
94	M	Ground, fuel injection valve output stages	Ground point
95		Not used	
96	A	"Check engine" indicator control	Instrument cluster
97		Not used	
98	E	Drive away protection signal	Electronic immobilizer control module (EWS II)
99	E	Activate A/C	Pressure switch
100		Not used	
101		Not used	
102		Not used	
103		Not used	
104	E	Intake air temperature	Intake air temperature sensor
105	M	Ground	Hot film air mass meter
106		Not used	
107	E	Oxygen sensor signal	Oxygen sensor (in front of catalytic converter)
108	E	Crankshaft position/RPM	Crankshaft position/RPM sensor
109	E	Camshaft position	Hall effect camshaft sensor
110	A	Cyl. 3 ignition coil control	Cyl. 3 ignition coil
111	A	Cyl. 4 ignition coil control	Cyl. 4 ignition coil
112		Not used	
113		Not used	
114	E	Battery voltage	B+ jump start junction point
115	A	Engine control module relay control	Engine control module relay, terminal 85
116	M	Ground for electronics and shielding of sensors	Ground point

E = Input, A = Output, M = Ground



Z3


**Pin Assignments**

Pin	Type	Description/Function	Connection
117	A	Idle speed control valve control	Idle speed control valve
118	A	Oxygen sensor heating	Oxygen sensor (in front of catalytic converter)
119	A	Activate valve	Cyl. 3 fuel injection valve
120	A	Activate valve	Cyl. 2 fuel injection valve
121		Not used	
122	M	Ground, remaning output stages (except for ignition and fuel injection valves)	Ground point
123		Not used	
124	A	A/C compressor cut-out	Compressor control relay
125		Not used	
126		Not used	
127		Not used	
128	E	Cyl. 3-4 knock sensor	Knock sensor
129		Not used	
130	E	TI-measurement signal (fuel consumption)	Instrument cluster
131		Not used	
132	E	Throttle position	Throttle position sensor
133	E	Signal input	Hot film air mass meter
134	M	Sensor ground	Oxygen sensors
135		Not used	
136		Not used	
137	A	Cyl. 1 ignition coil control	Cyl. 1 ignition coil
138	A	Cyl. 2 ignition coil control	Cyl. 2 ignition coil
139		Not used	
140		Not used	
141	A	Component supply (+)	Throttle position sensor/ Fuel tank pressure-sensor (Late Production)
142	E	Battery voltage from engine control module relay	Engine control module relay, terminal 87
143	M	Ground, ignition	Ground point
144	E	Ignition switch, terminal 15	Ignition switch, terminal 15
145	A	Activate auxiliary fan	Normal speed relay

E = Input, A = Output, M = Ground



Z3

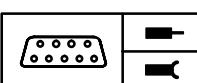


## Pin Assignments

Pin	Type	Description/Function	Connection
146	A	Activate valve	Intake air resonance change over valve
147		Not used	
148	E	Programming voltage	Data link connector
149	A	Activate valve	Evaporation emission valve
150		Not used	
151	A	Activate relay	Fuel pump relay
152	A	Activate air pump (Late Production)	Secondary air pump valve/relay
153	A	Activate valve (Late Production)	Charcoal filter shut-off valve
154	A	Activate valve (Late Production)	Fuel changeover valve
155		Not used	
156	E	Signal above 80 °C	Double temperature switch
157	E	A/C-ON-signal	Air conditioning operating unit
158	E	Cyl 1-2 knock sensor	Knock sensor
159	M	Ground for sensors	Temperature-/ knock-/ throttle position-/ fuel tank pressure sensor
160	E	Fuel tank pressure	Fuel tank pressure sensor
161		Not used	
162	E	Temperature signal	Engine coolant temperature sensor
163		Not used	
164		Not used	
165	E	Oxygen sensor signal	Oxygen sensor (behind catalytic converter)
166	E	Crankshaft position/RPM	Crankshaft position/RPM sensor
167	E	Speed signal right rear	ABS/ASC control module
168	E	Crankshaft RPM speed signal TD	Instrument cluster
169		Not used	
170		Not used	
171	E	Vehicle speed signal	Board computer
172		Not used	
173	E/A	CAN-LOW	EGS/ASC control module
174	E/A	CAN-HIGH	EGS/ASC control module
175	A	RxD diagnosis data line	Data link connector
176	E/A	TxD diagnosis data line	Data link connector

E = Input, A = Output, M = Ground

## ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M44)


## POWER, FUEL INJECTION VALVES

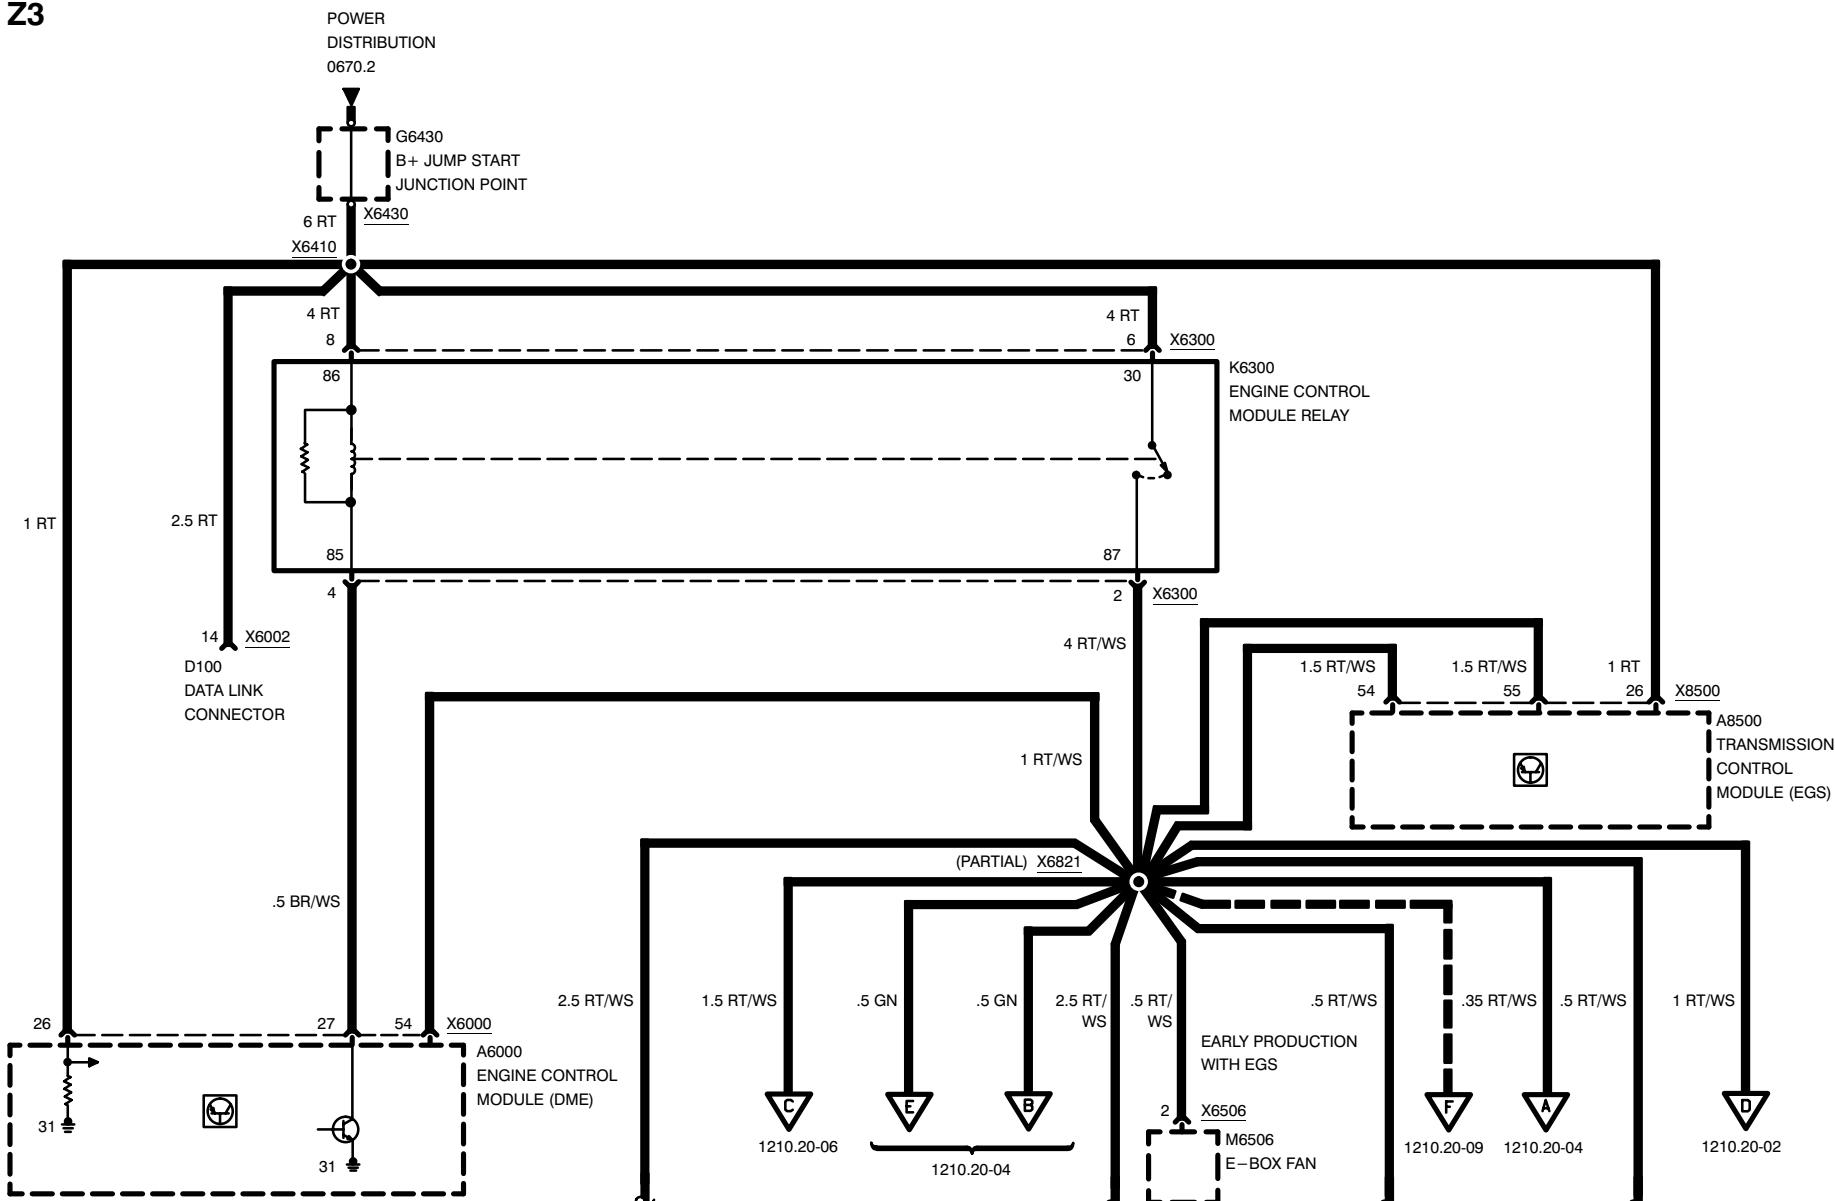

03/98


1210.20-01

1997

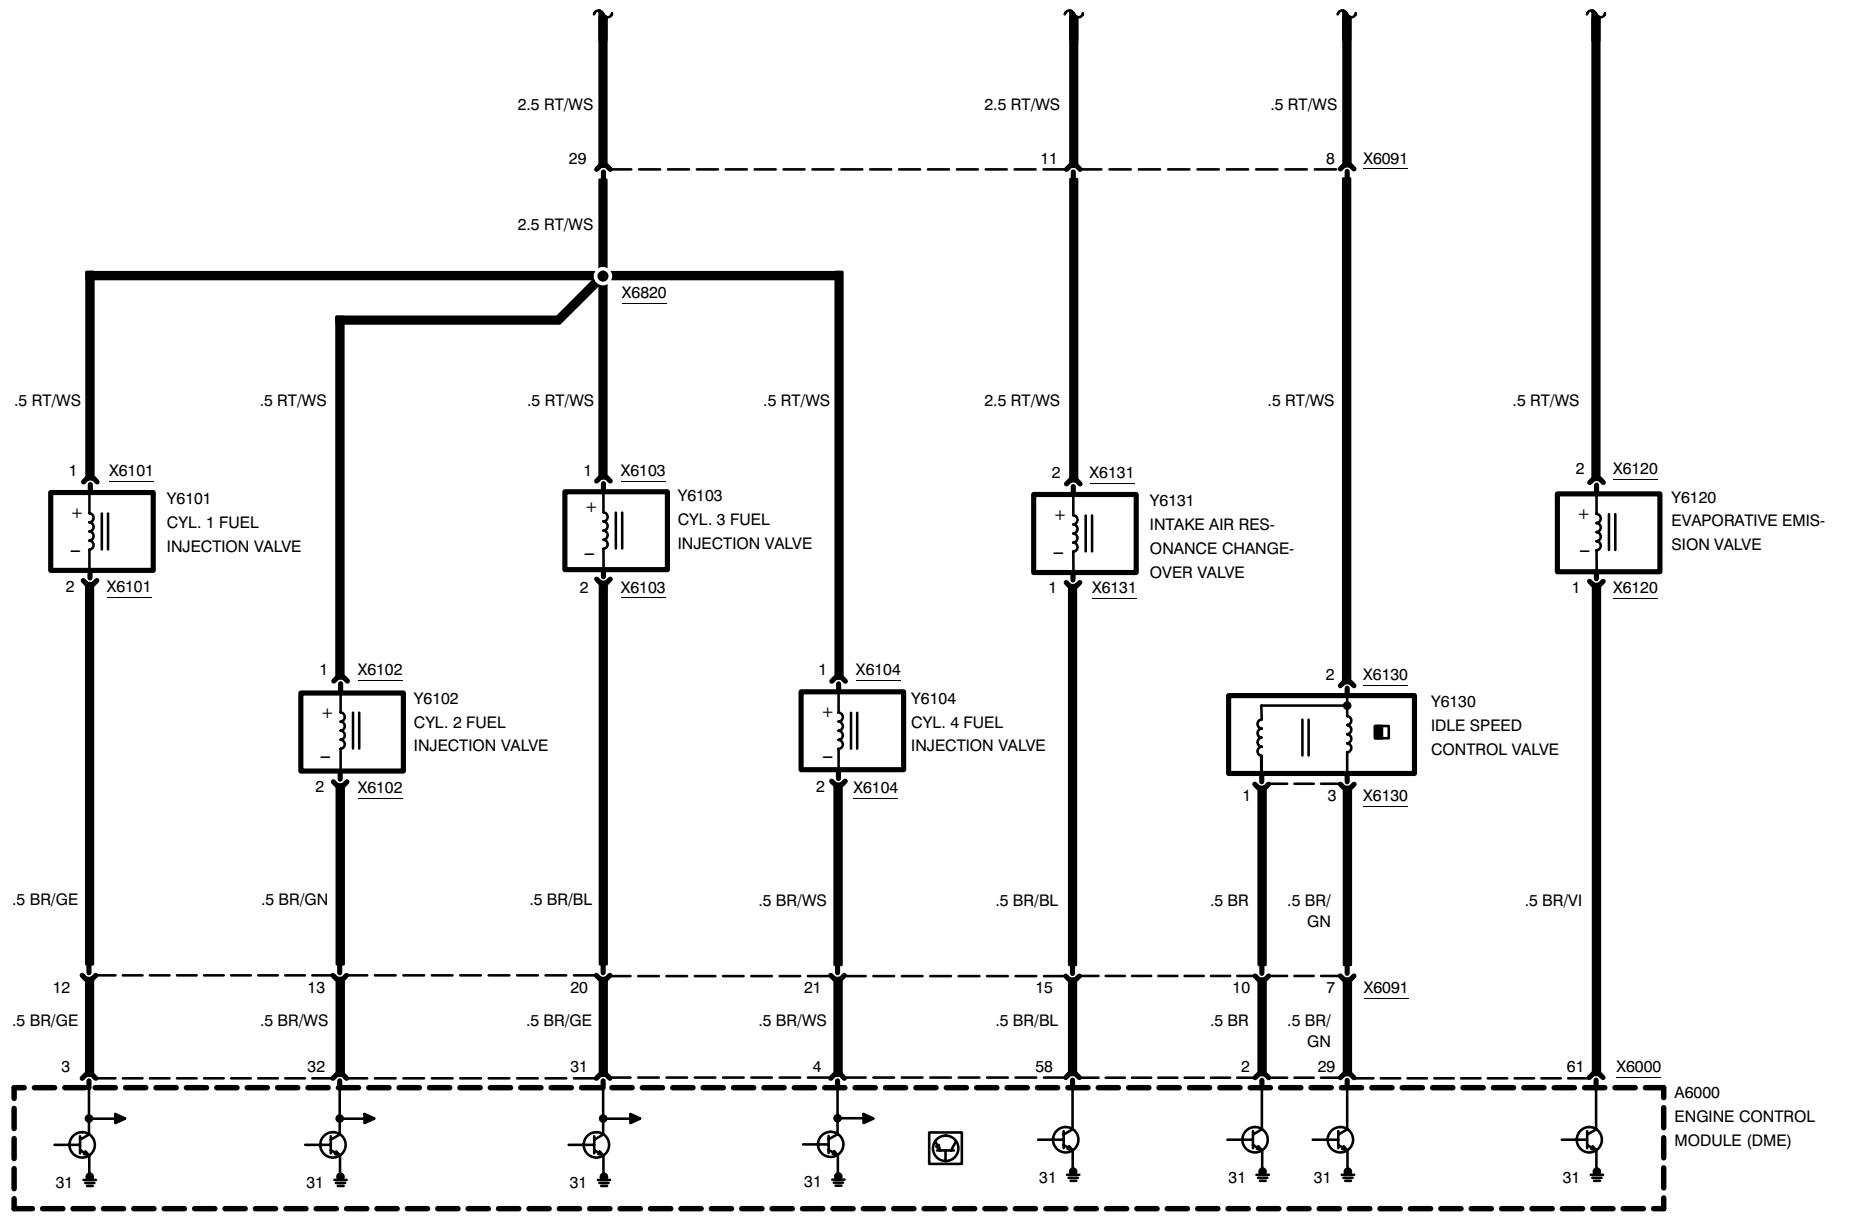


## ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M44)

## IGNITION COILS AND FUEL PUMP

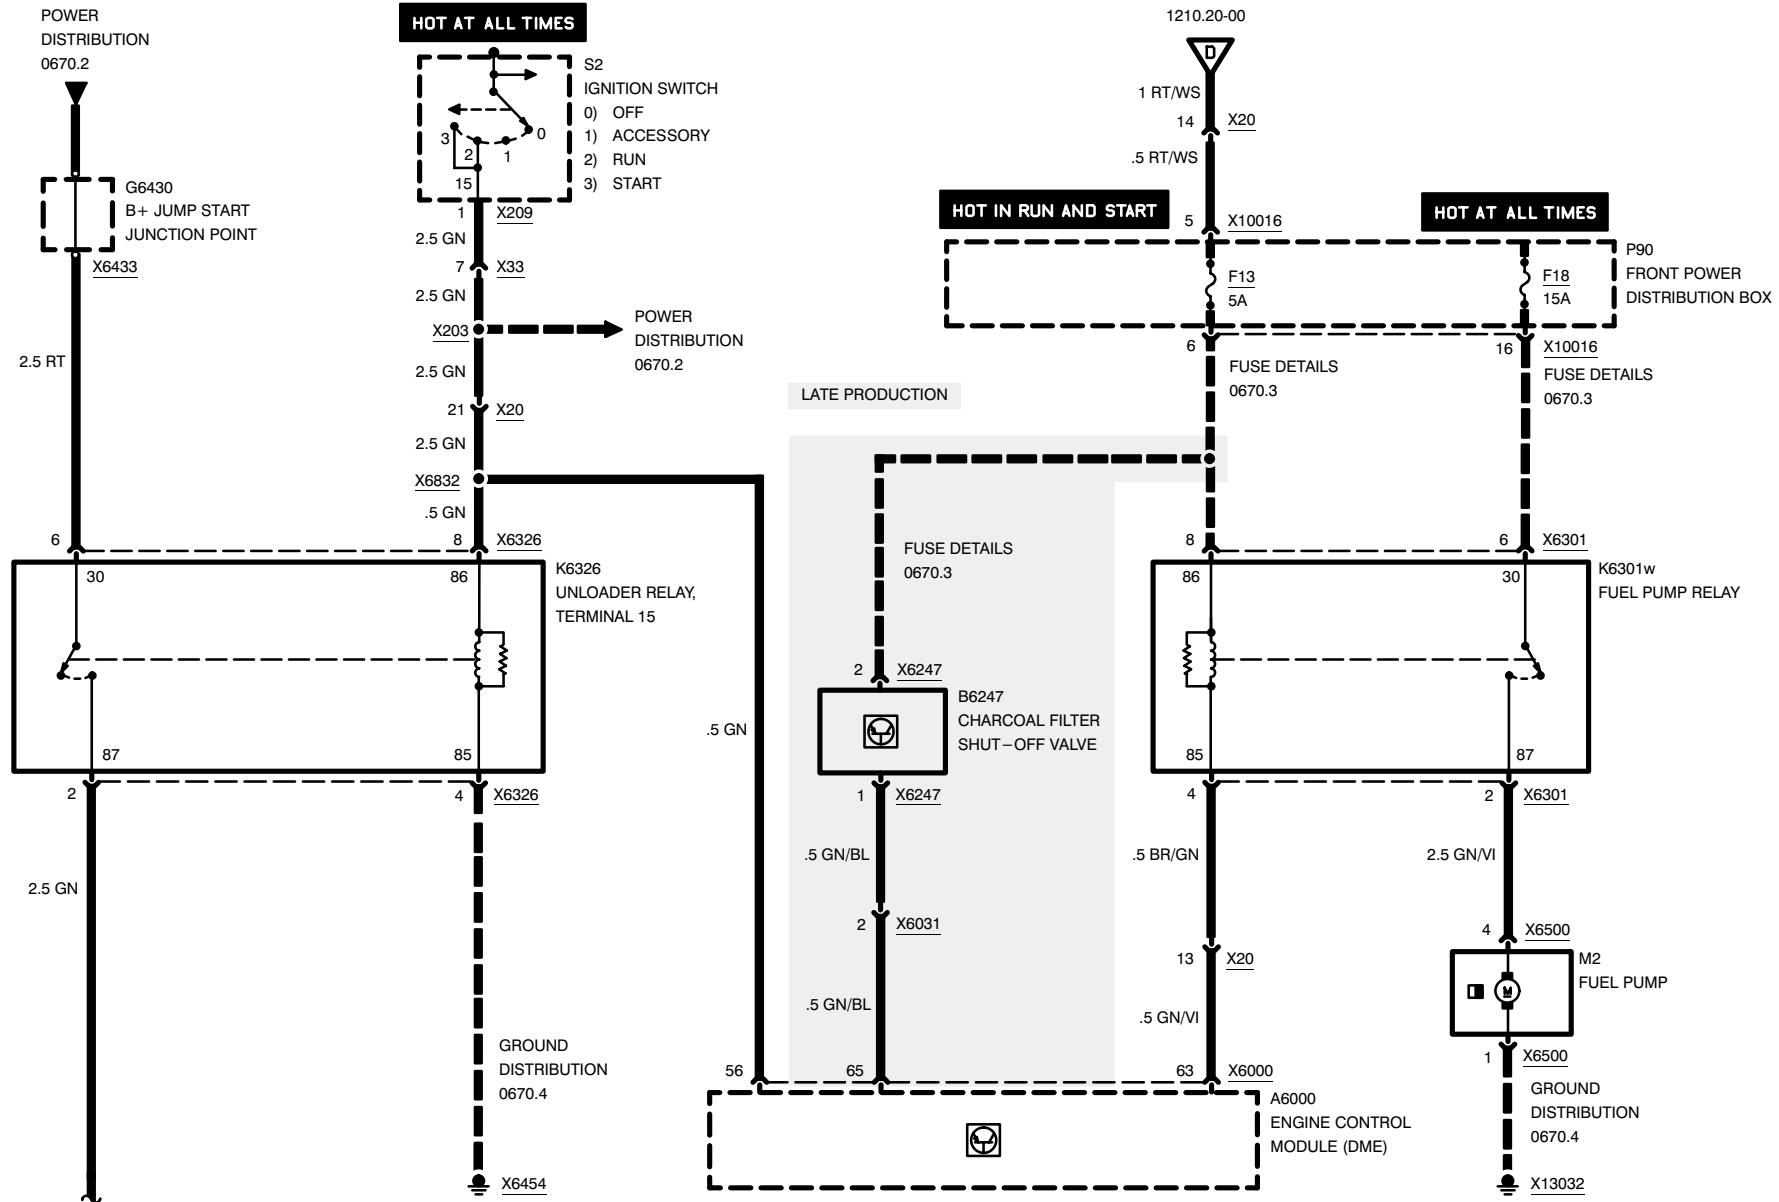

03/98

— 1210.20-03 —

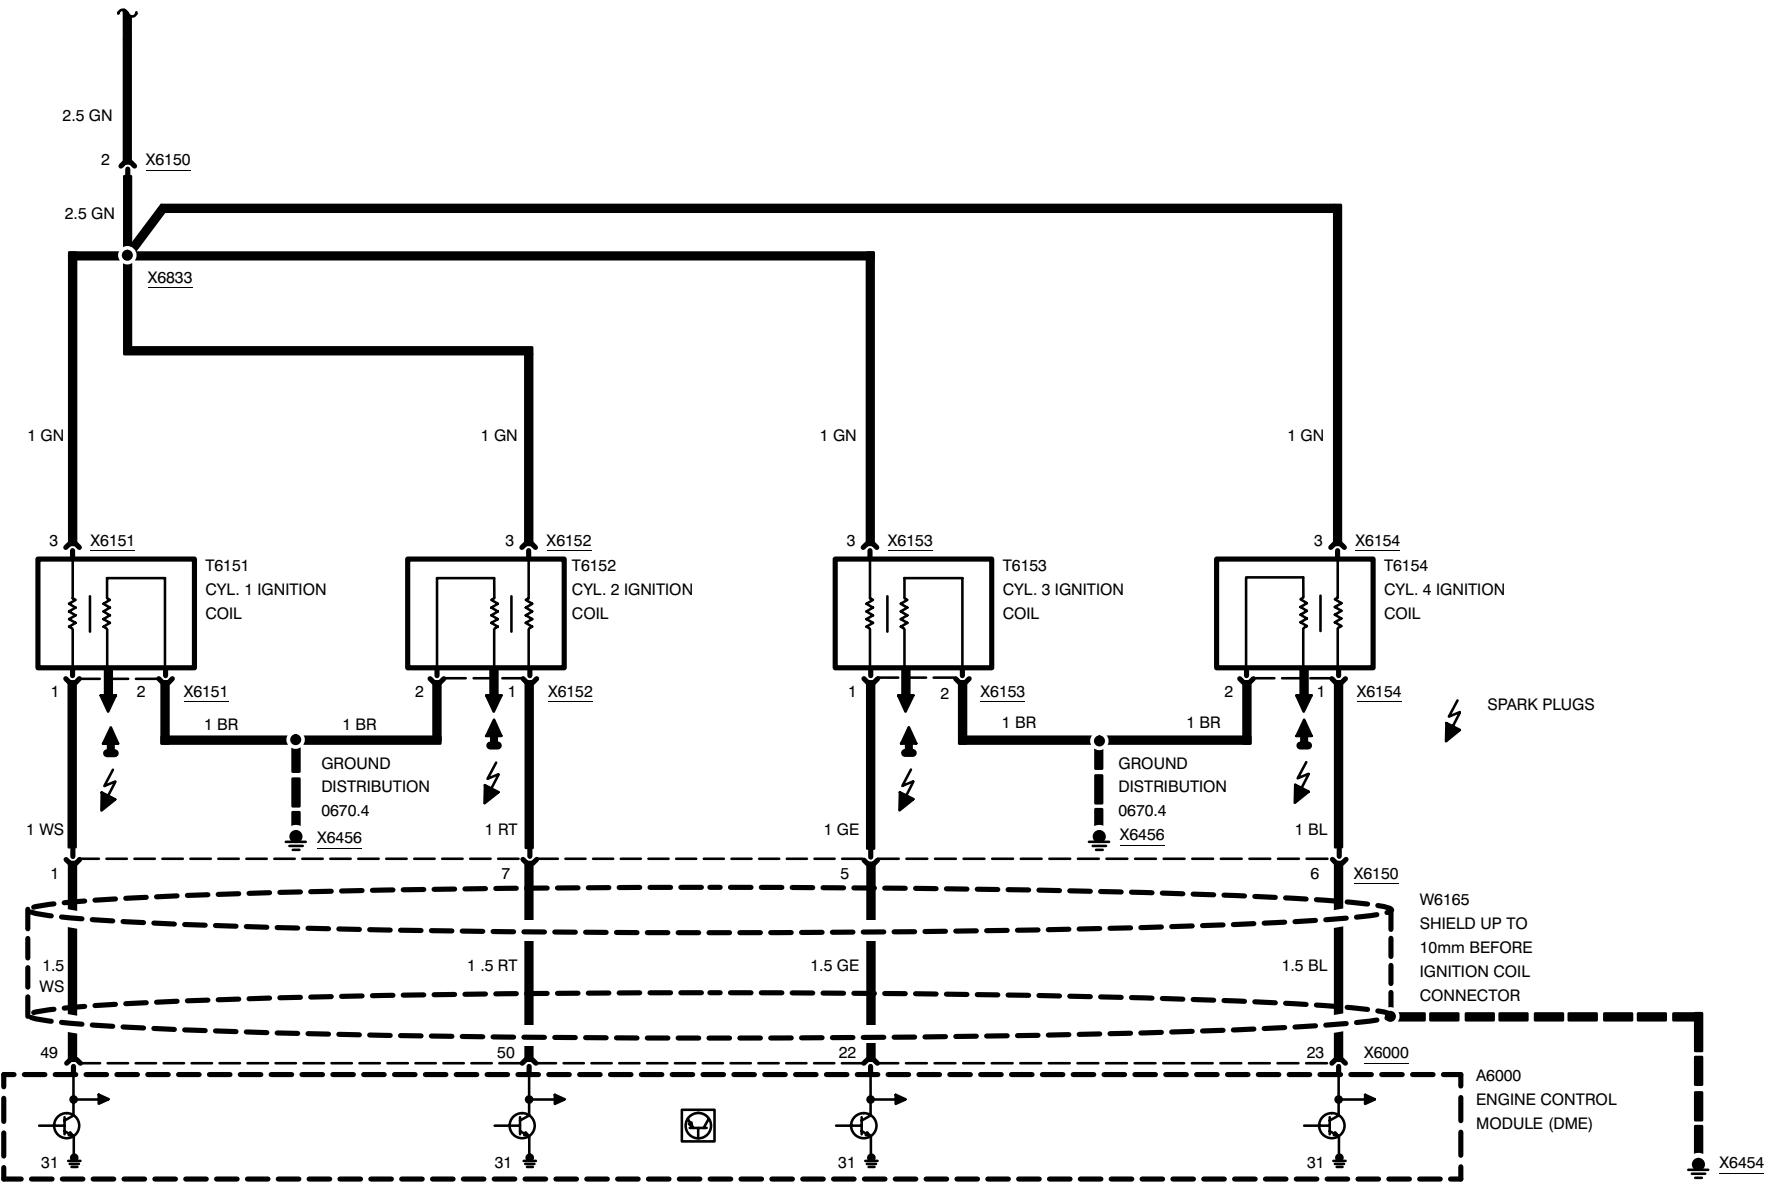

1997


## ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M44)

## HEATED OXYGEN SENSOR, CRANKSHAFT SENSORS


03/98

1210.20-04


1997

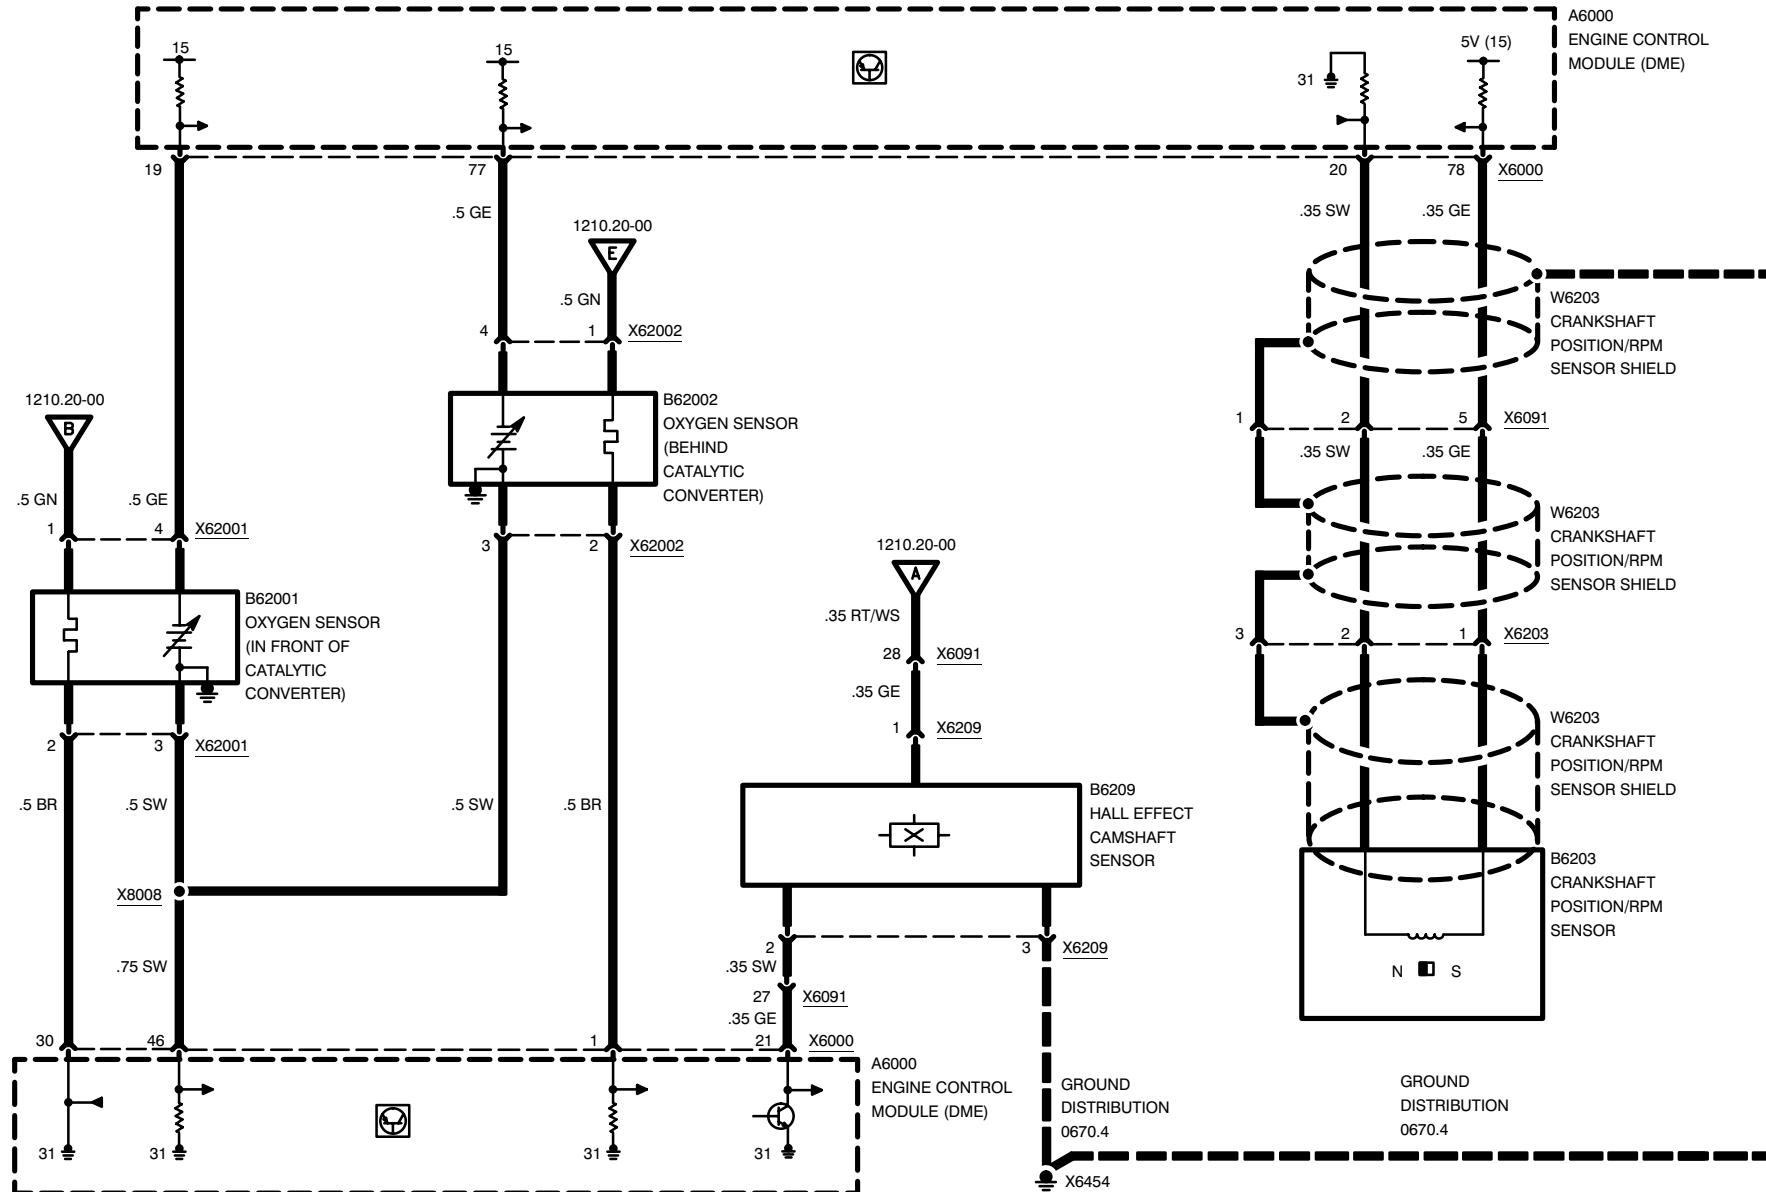

## ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M44)

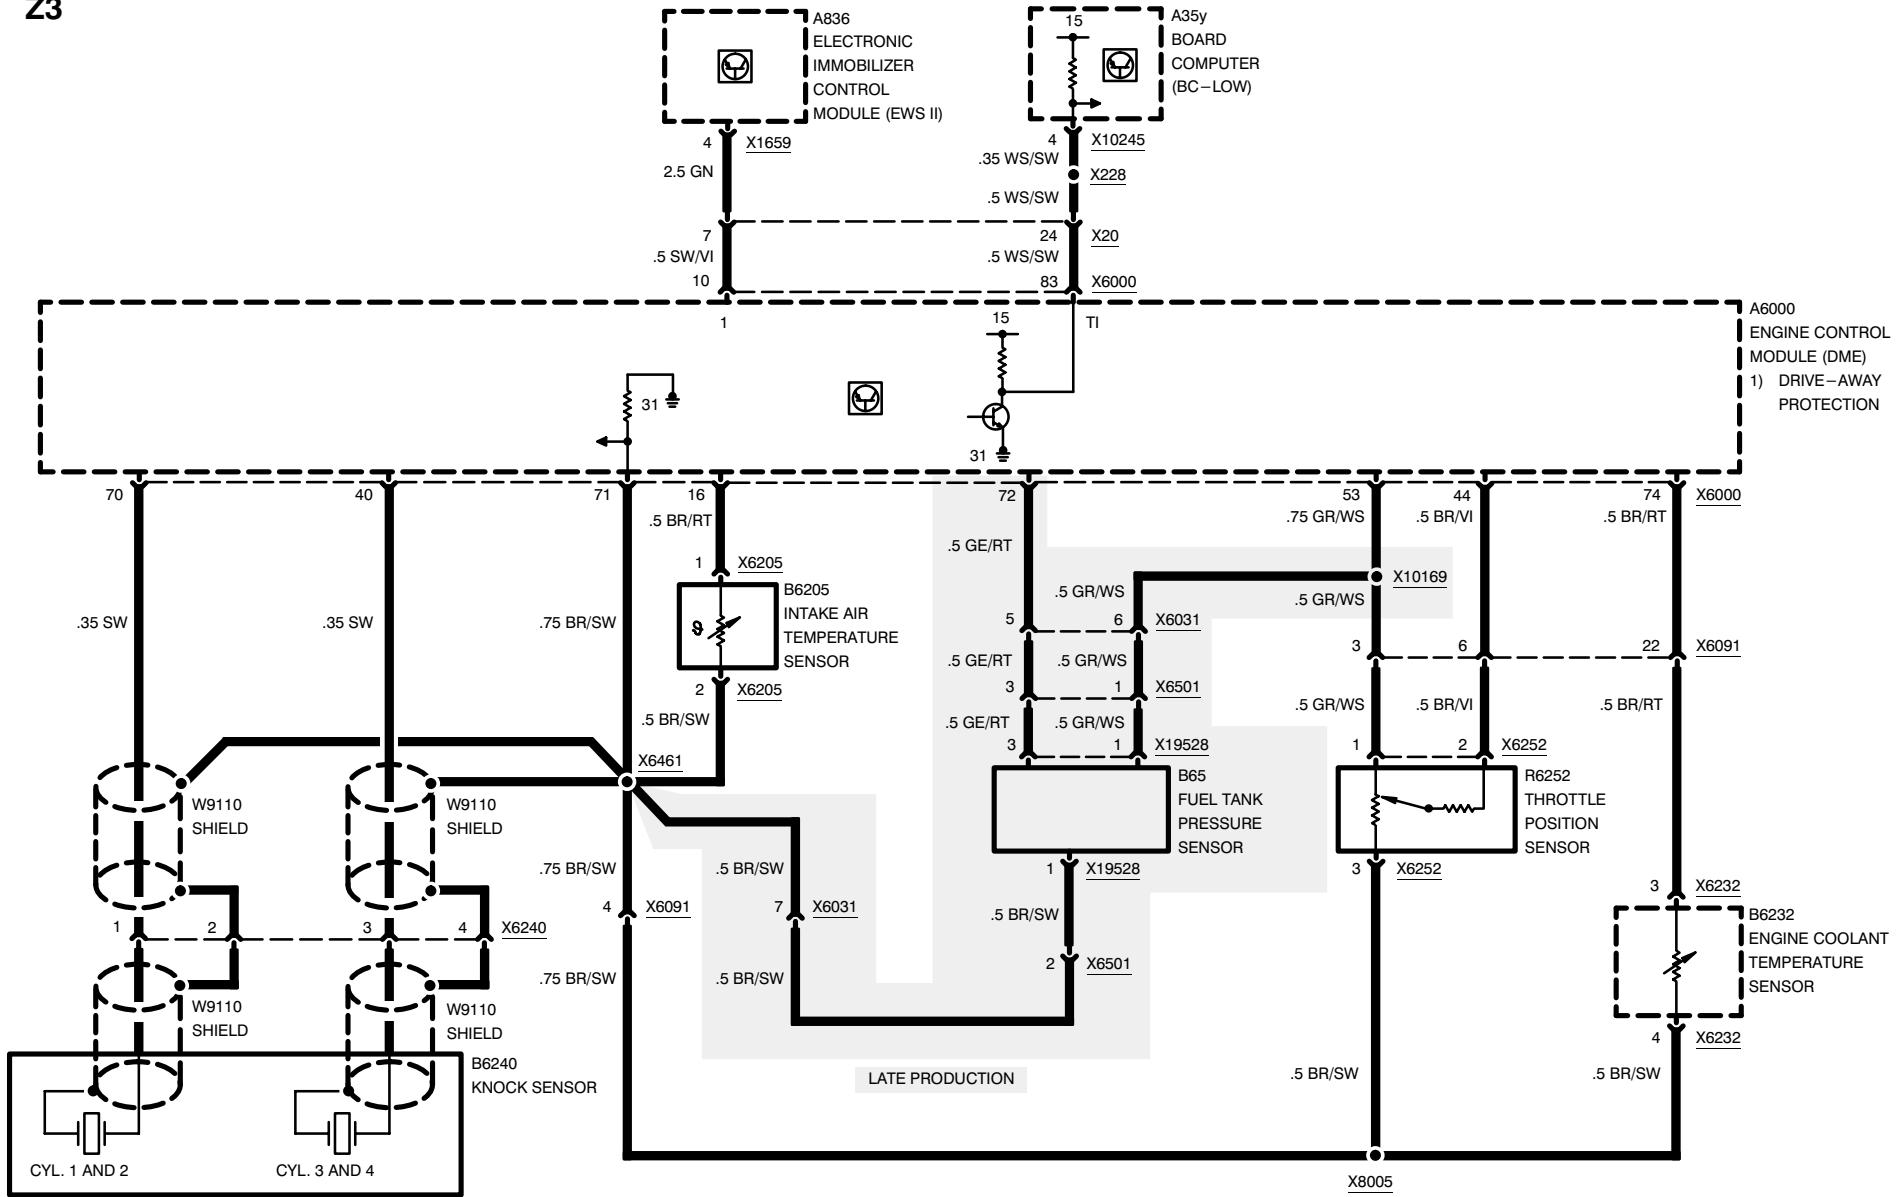

## ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M44)

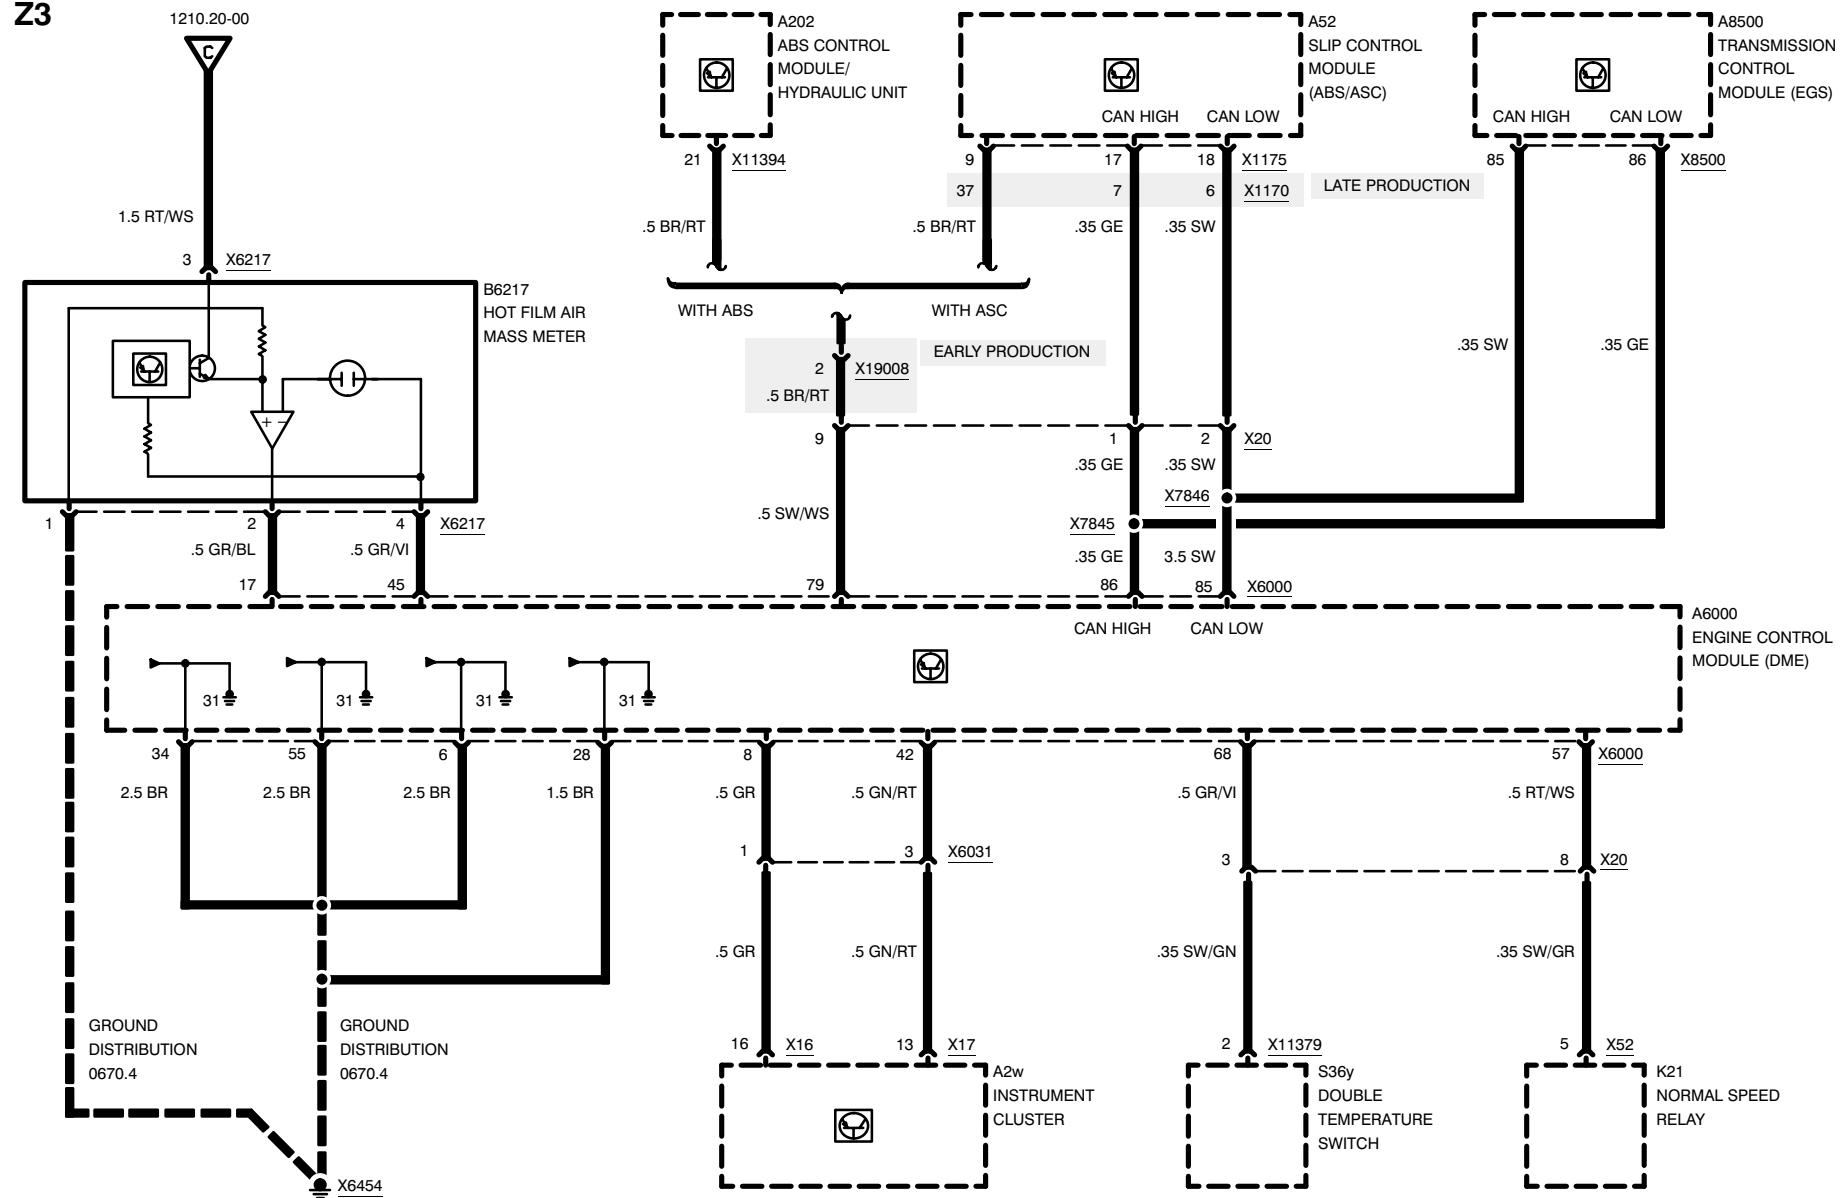


03/98

1210.20-06

1997

## ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M44)

### DATA LINK

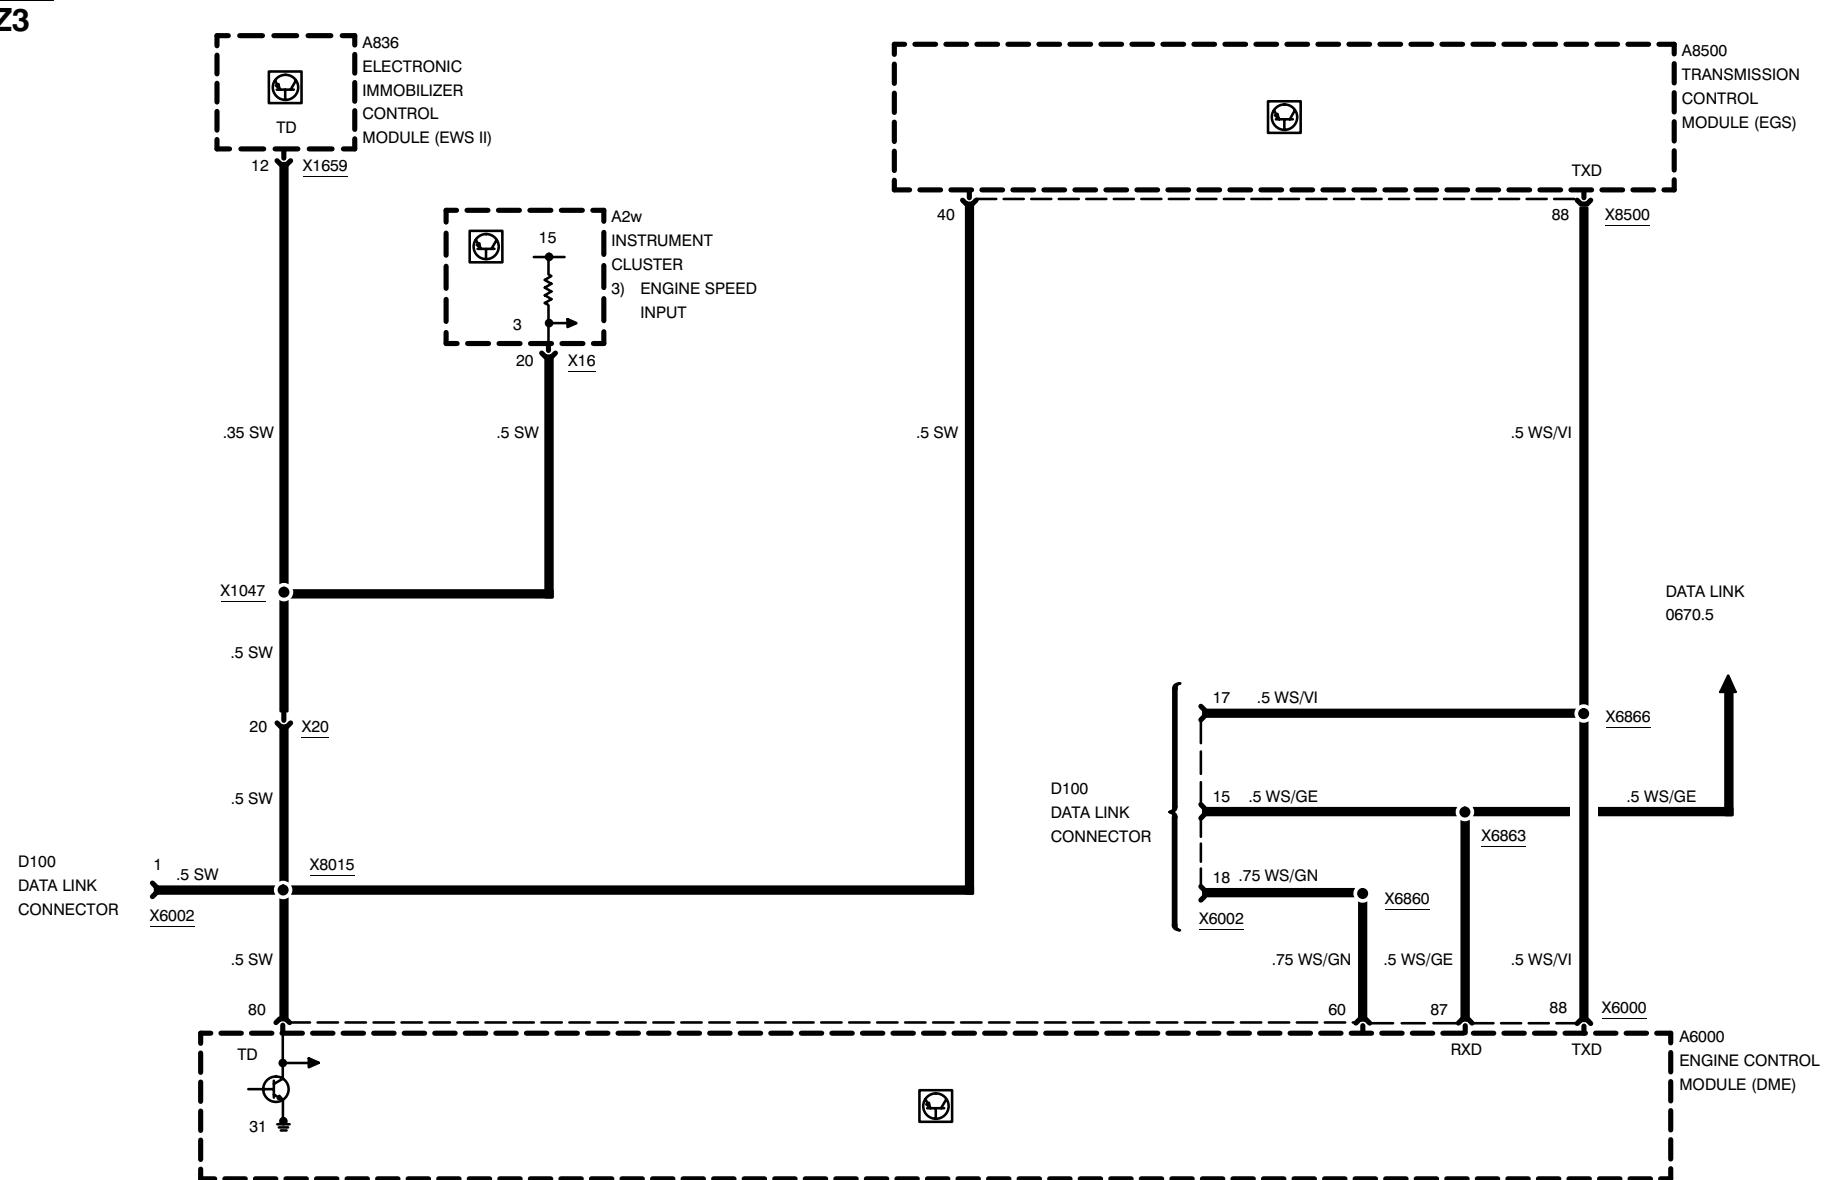

03/98

1210.20-07


1997


## ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M44)

03/98

1210.20-08

1997

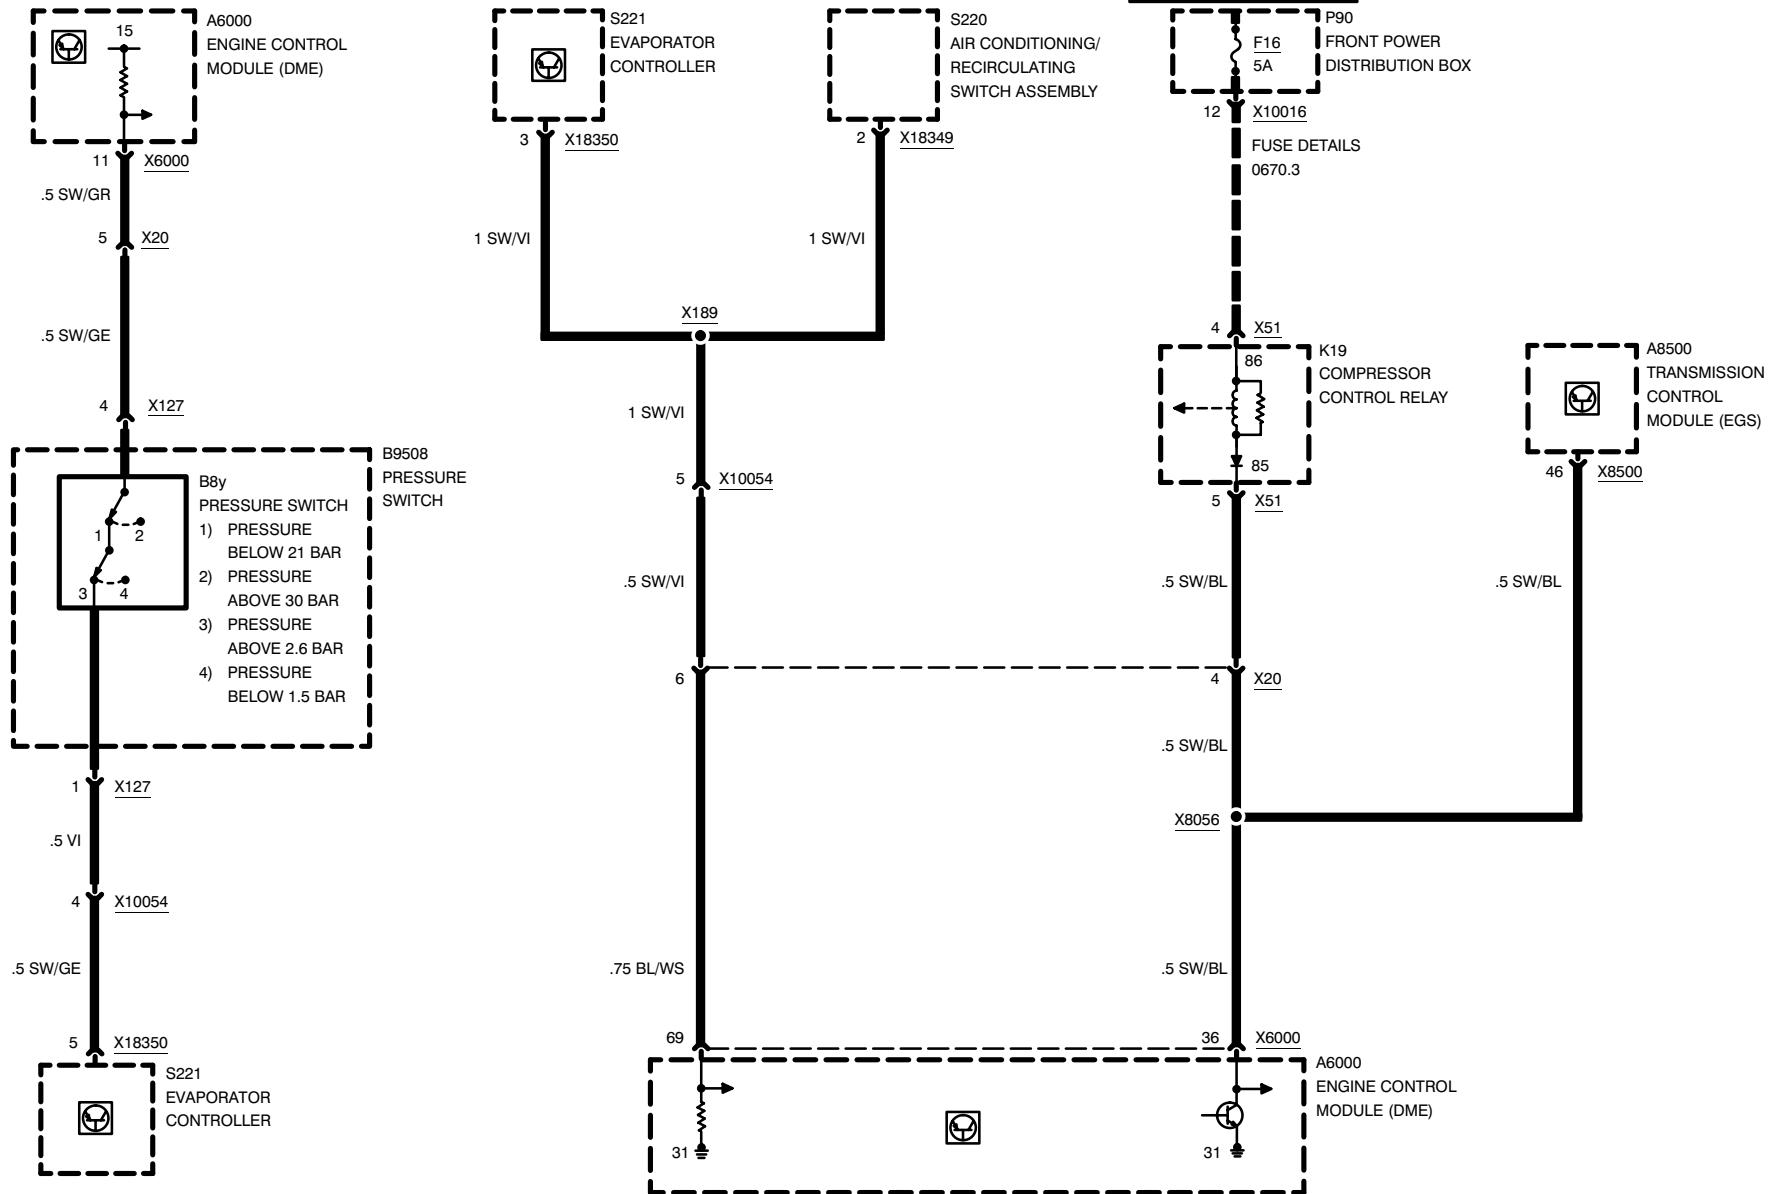

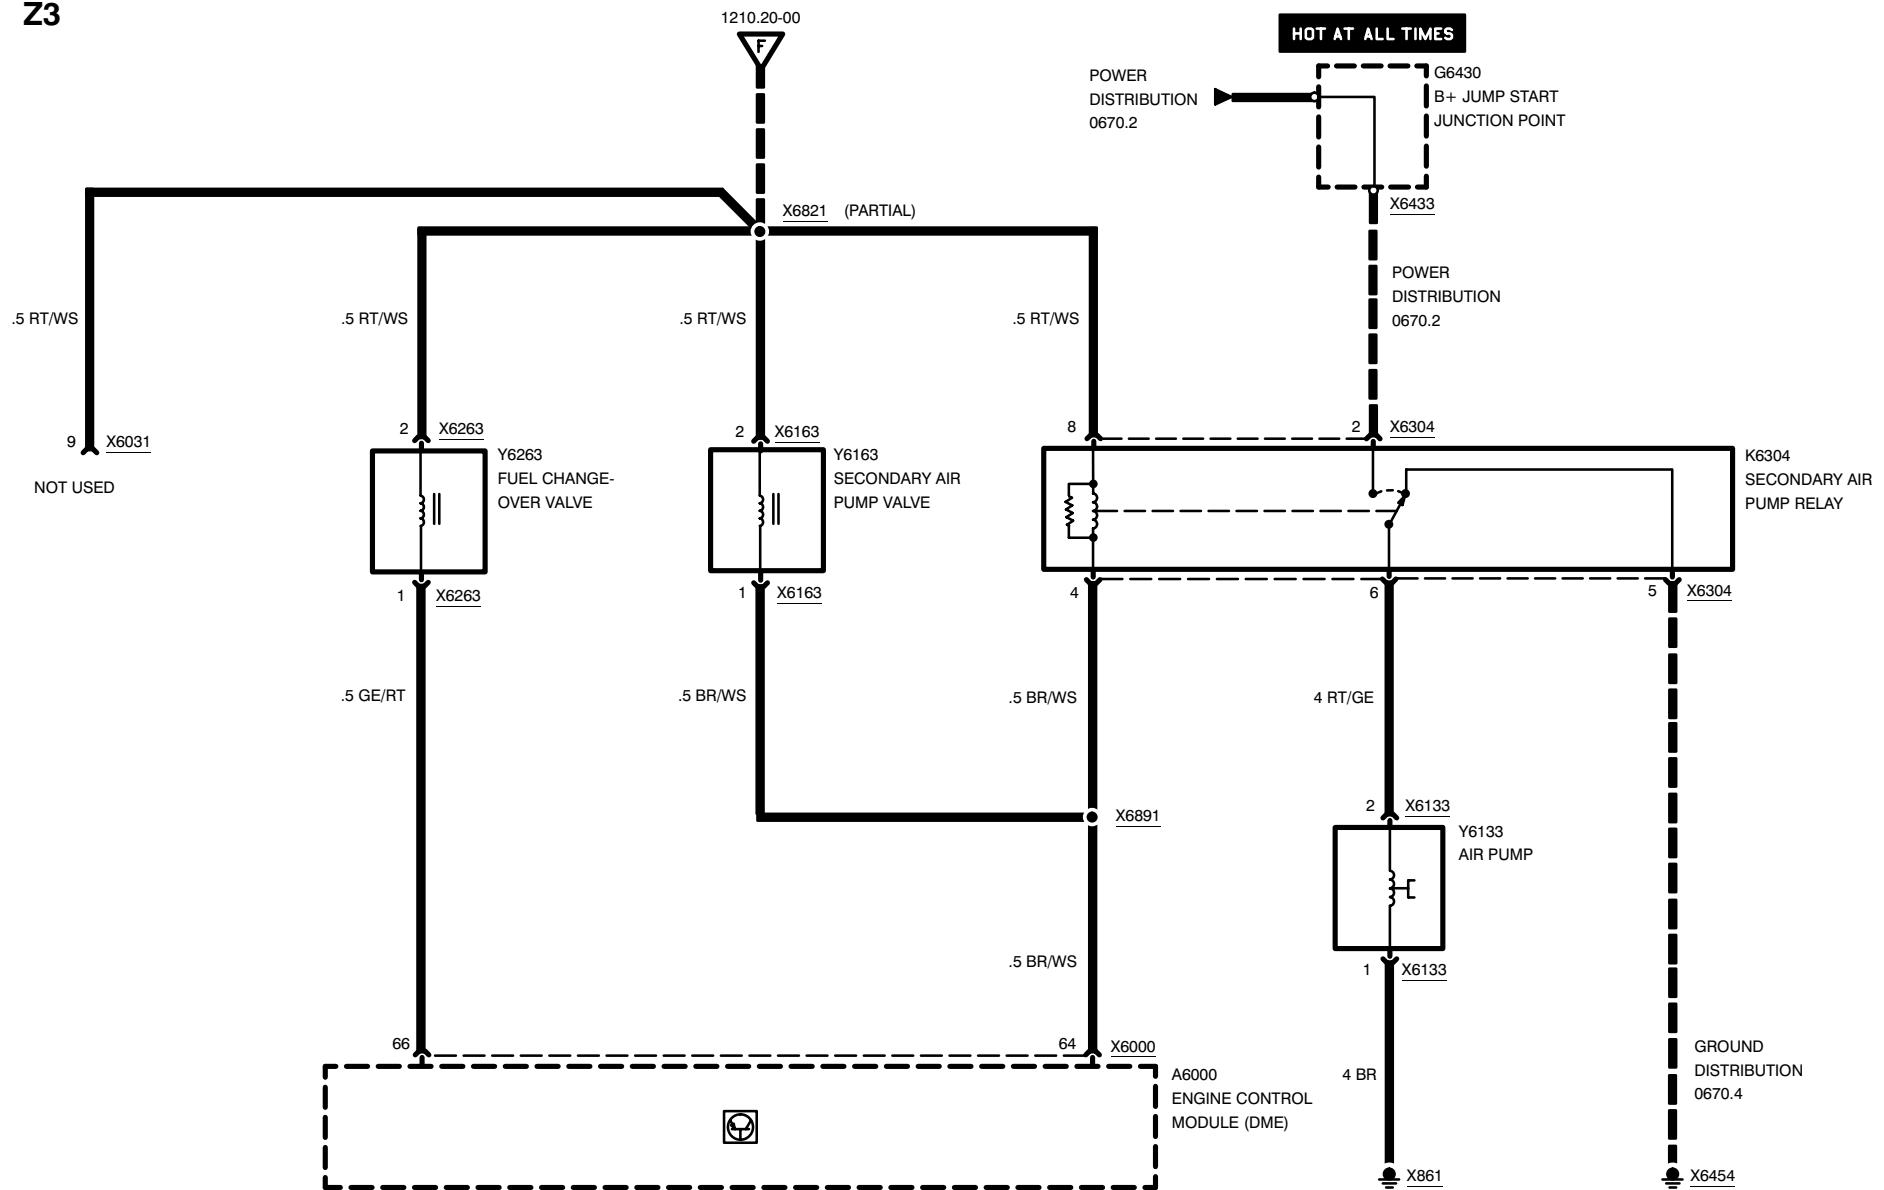



## CHARGING SYSTEM

03/98

1230.0-00

1997

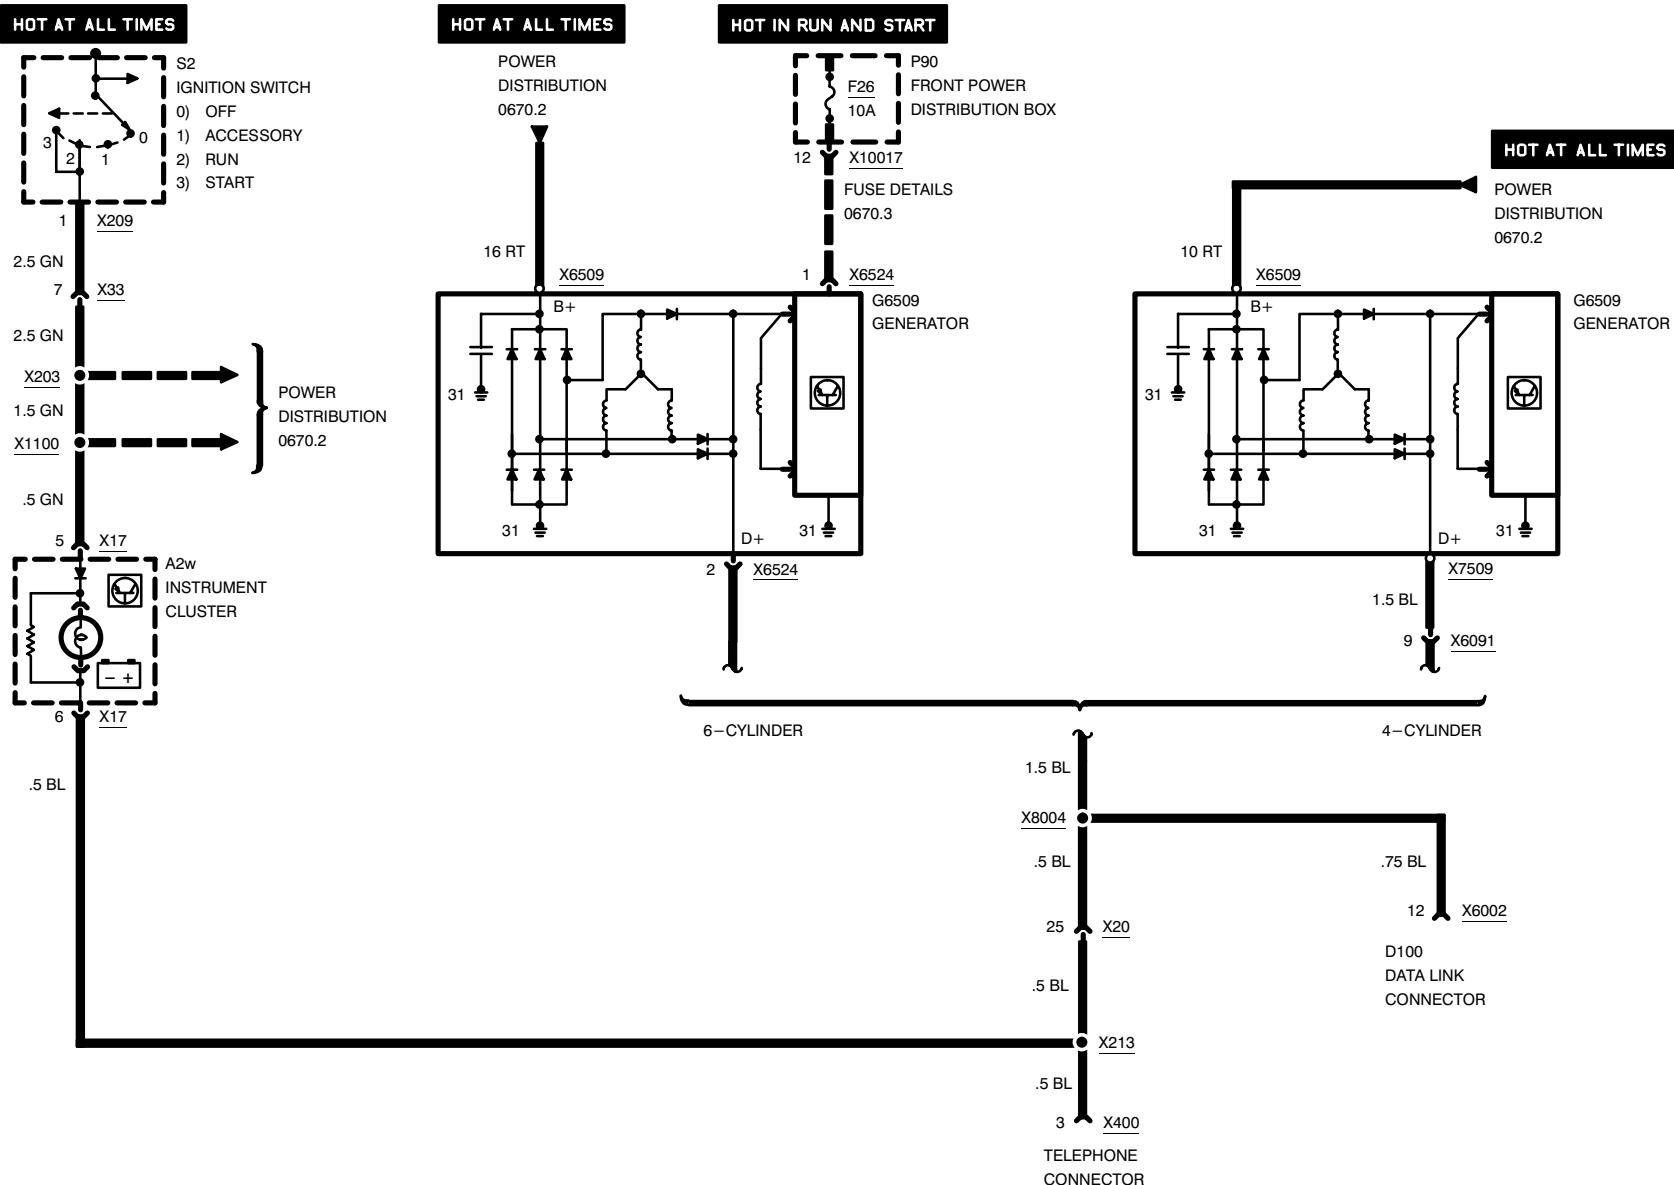


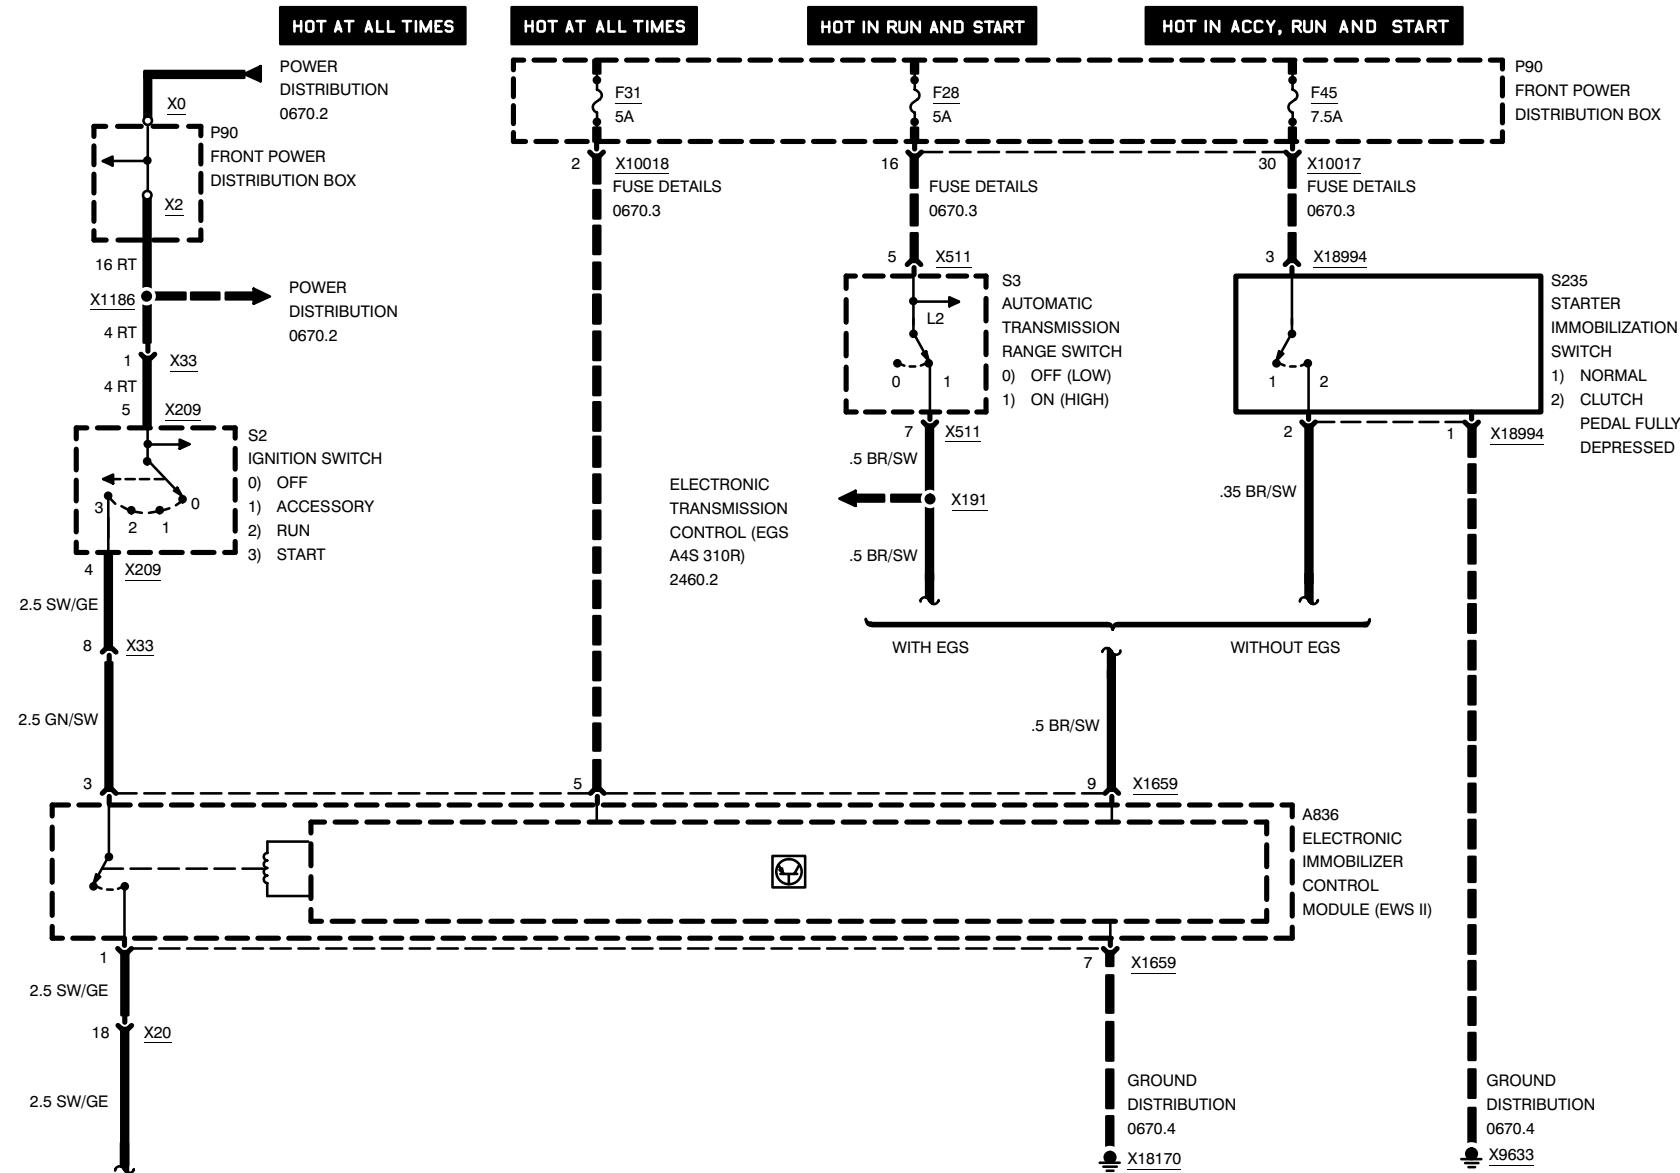

03/98

1240.0-01

1997

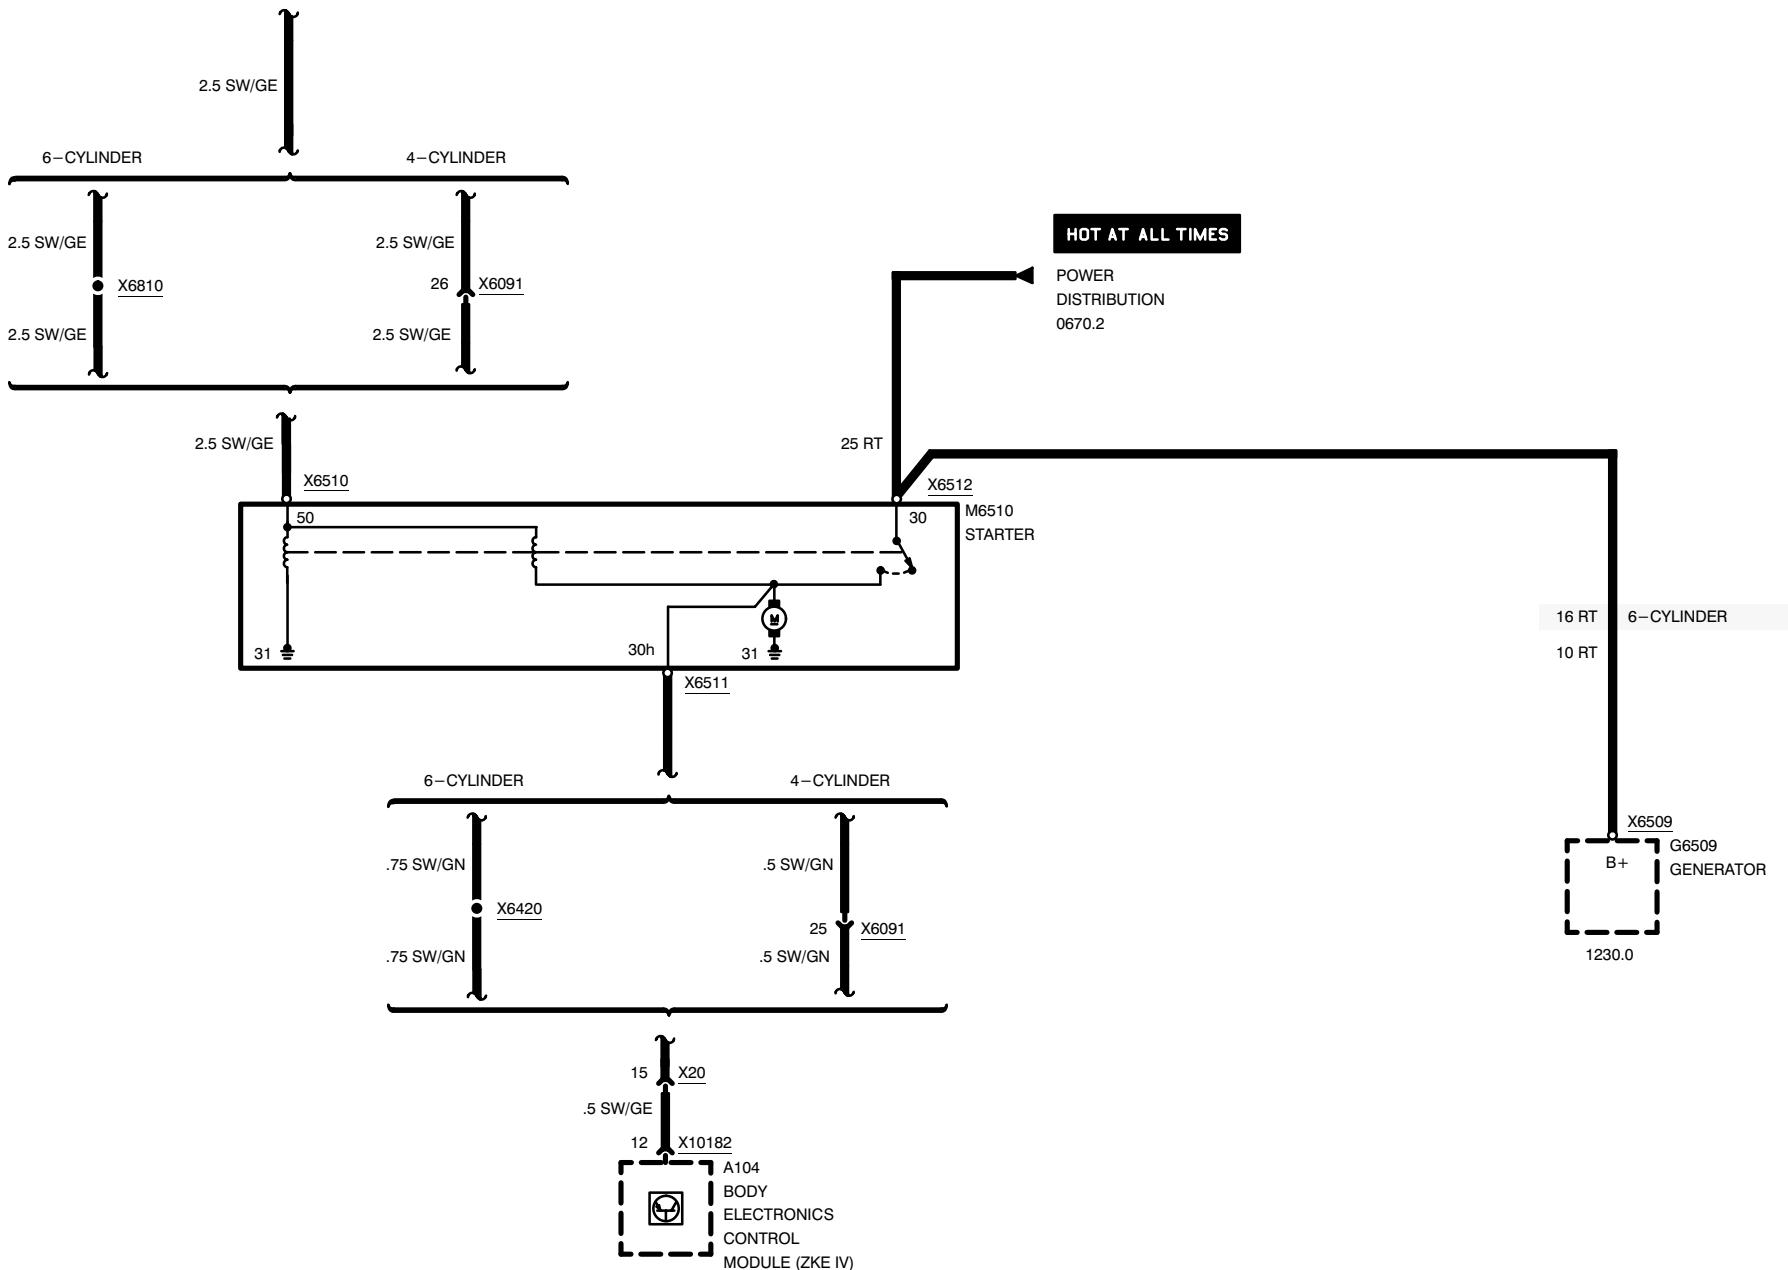



## E-BOX FAN

EARLY PRODUCTION


03/98

1290.0-00

1997

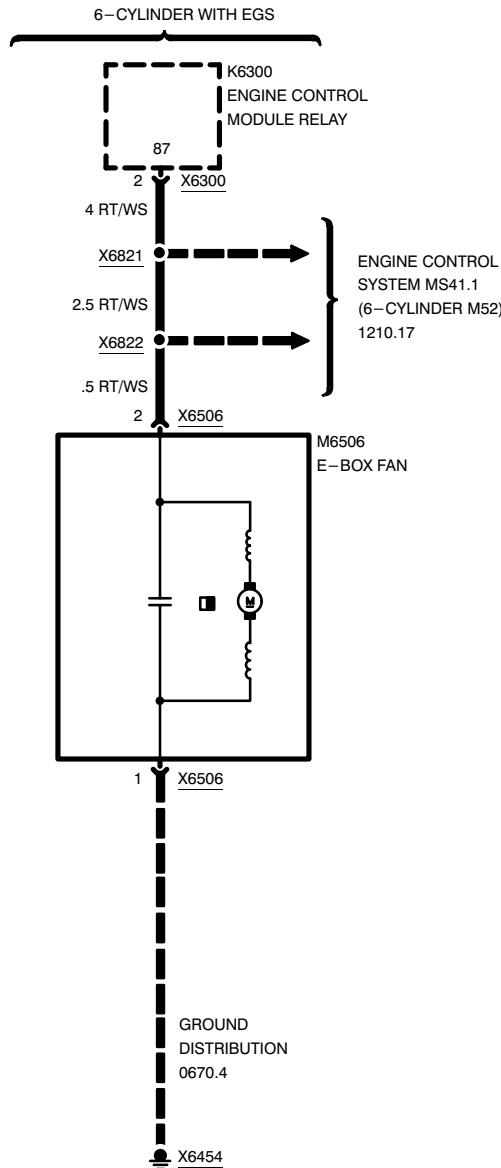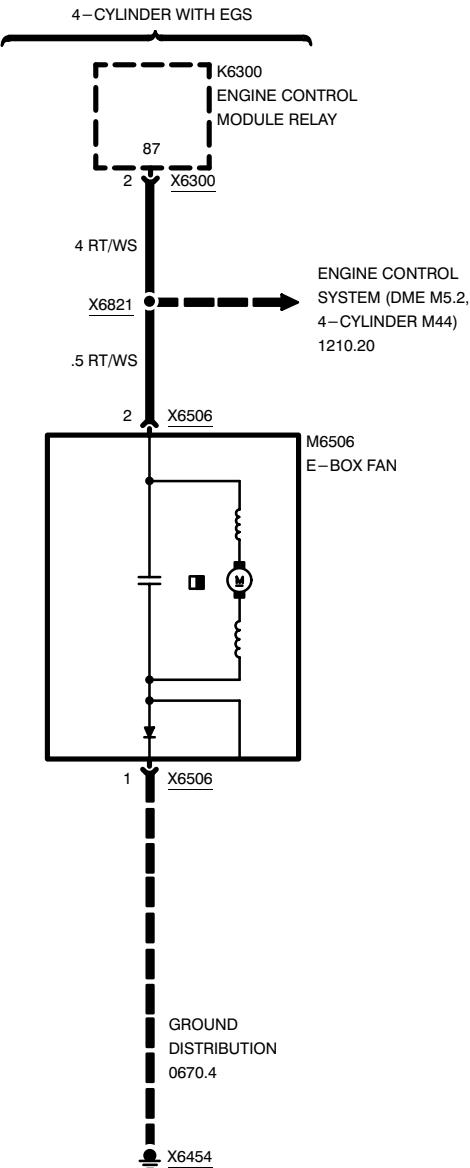


03/98 ————— 2460.2a ————— 1997

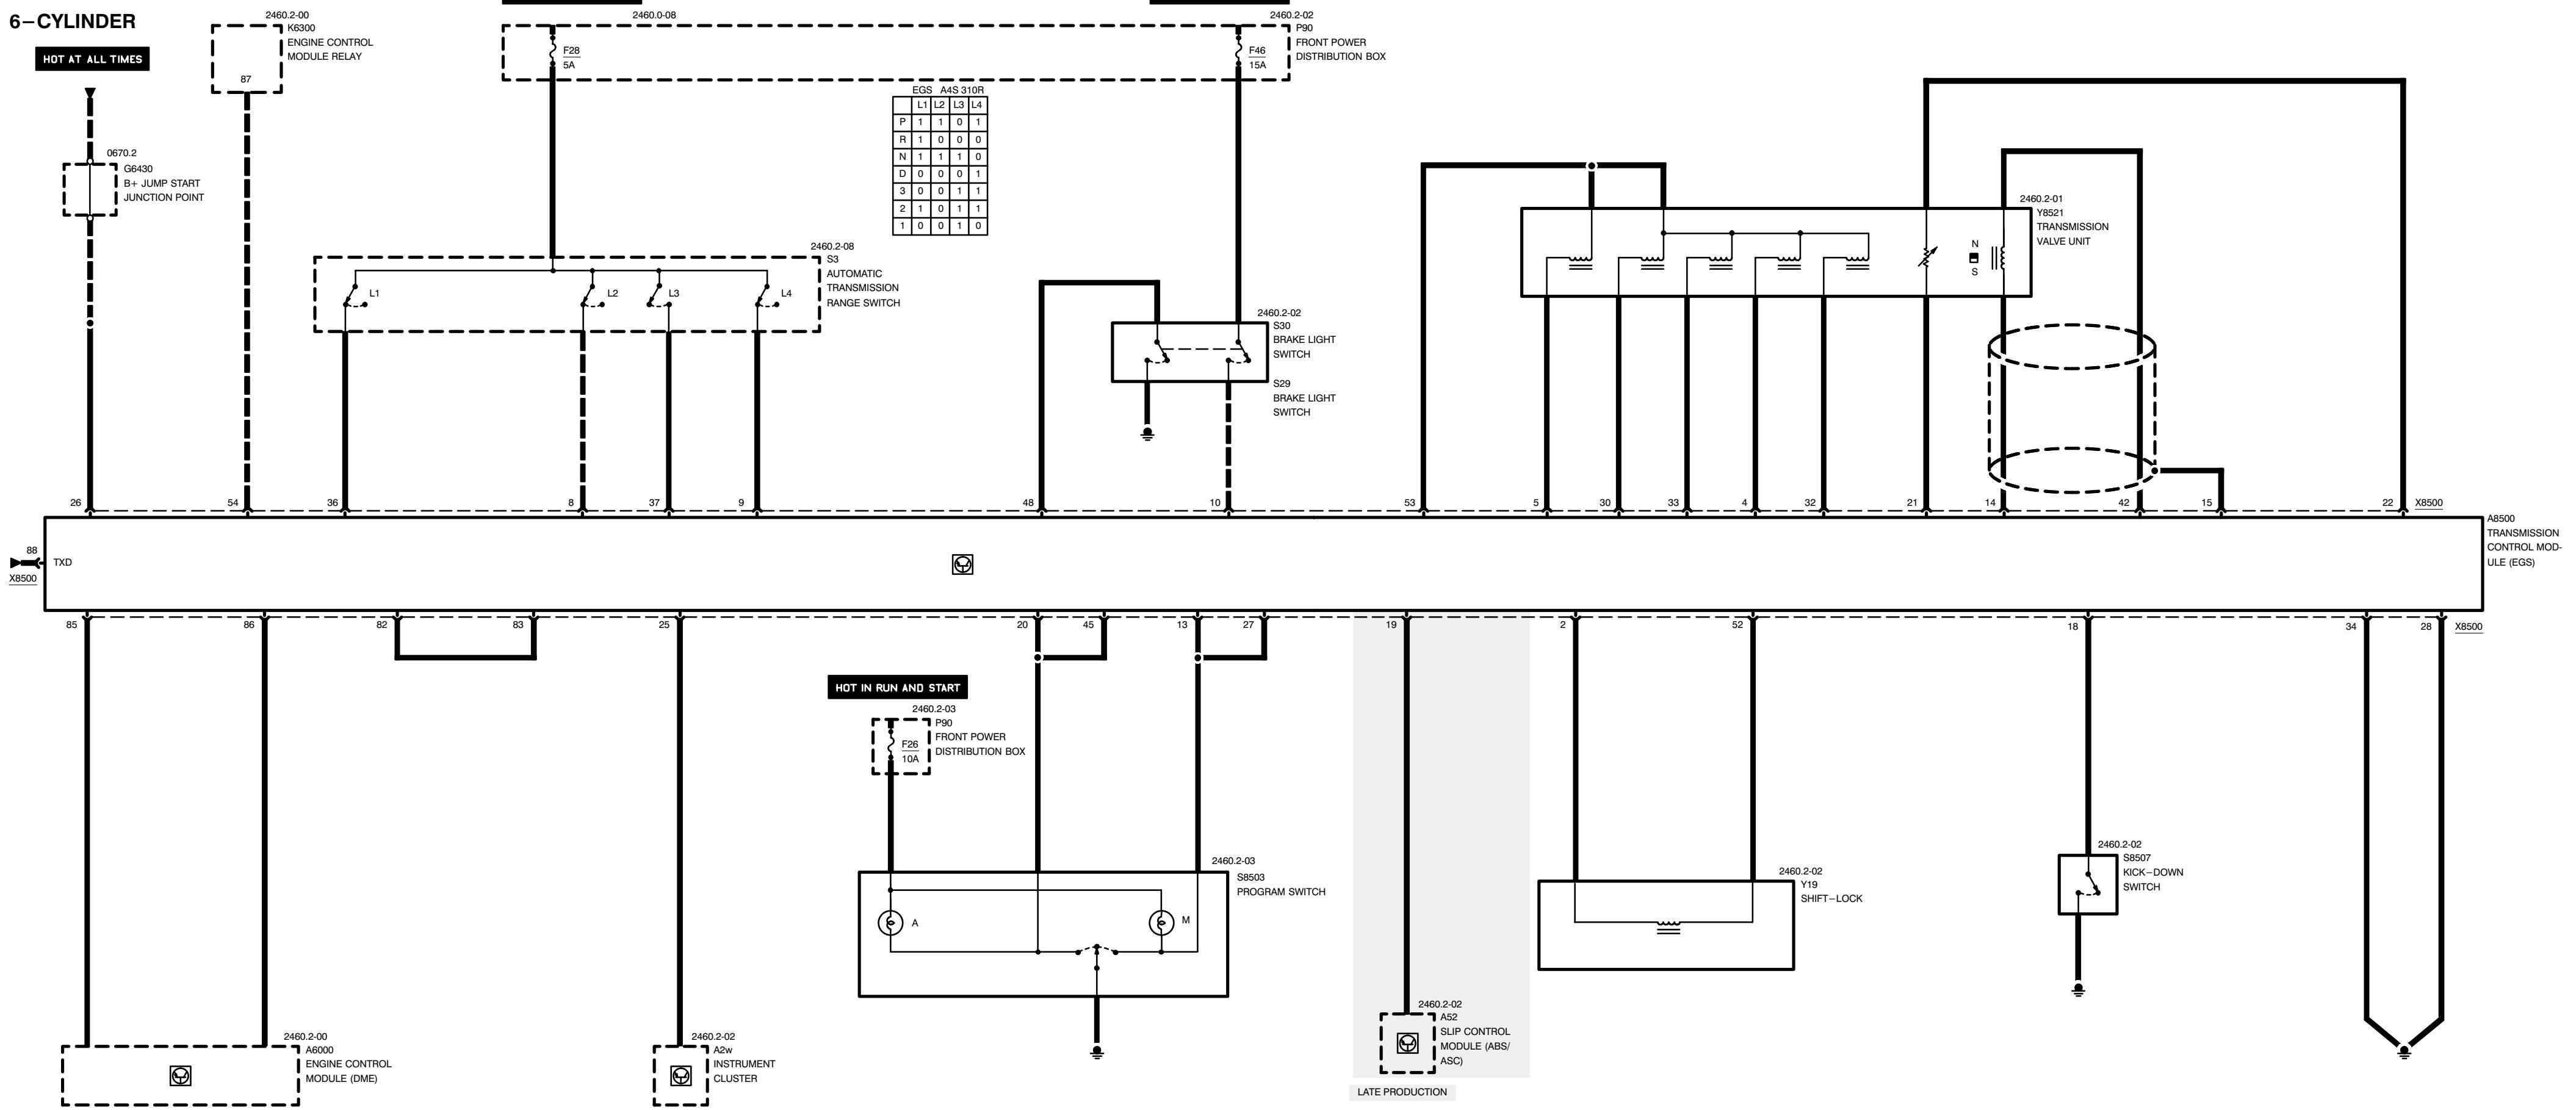**6-CYLINDER****HOT AT ALL TIMES**



Z3

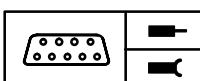**Pin Assignments****6-Cylinder****X8500**

Pin	Type	Description/Function	Connection
177		Not used	
178	M	Ground	Shift-lock
179		Not used	
180	A	Solenoid valve 3 control (-)	Transmission valve unit
181	A	Hydraulic pressure regulator control (-)	Transmission valve unit
182		Not used	
183		Not used	
184	E	Gear range signal L2	Automatic transmission range switch
185	E	Gear range signal L4	Automatic transmission range switch
186	E	Brake pedal position	Brake light switch
187		Not used	
188		Not used	
189	E	Manual mode signal	Program switch
190	E	Output speed (-)	Transmission valve unit
191	M	Ground for shield	Shield for speed sensor
192		Not used	
193		Not used	
194	E	Kick-down signal	Kick-down switch
195	E	ASC signal (Late Production)	Slip control module
196	E	Automatic mode signal	Program switch
197	E	Oil temperature signal (-)	Transmission valve unit
198	E	Oil temperature signal (+)	Transmission valve unit
199		Not used	
200		Not used	
201	A	Fault indicator signal	Instrument cluster
202	E	Battery voltage	B+ jump start junction point
203	A	M-program indication	Program switch
204	M	Ground	Ground point
205		Not used	
206	A	Solenoid valve 1 control (-)	Transmission valve unit

E = Input, A = Output, M = Ground




03/98

2460.2a-b

1997

Z3

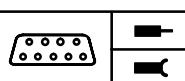

## Pin Assignments

6-Cylinder

Pin	Type	Description/Function	Connection
207		Not used	
208	A	Torque converter clutch solenoid valve control (-)	Transmission valve unit
209	A	Solenoid valve 2 control (-)	Transmission valve unit
210	M	Ground	Ground point
211		Not used	
212	E	Gear range signal L1	Automatic transmission range switch
213	E	Gear range signal L3	Automatic transmission range switch
214		Not used	
215		Not used	
216		Not used	
217		Not used	
218	E	Output speed (+)	Transmission valve unit
219		Not used	
220		Not used	
221	A	A-program indication	Program switch
222		Not used	
223		Not used	
224	E	Brake switch test signal	Brake light switch
225		Not used	
226		Not used	
227		Not used	
228	A	Shift-lock solenoid control	Shift-lock
229	A	Voltage solenoid valves	Transmission valve unit
230	E	Voltage supply terminal 87	Engine control module relay
231		Not used	
232		Not used	
233		Not used	
234		Not used	
235		Not used	
236		Not used	
237		Not used	

E = Input, A = Output, M = Ground




03/98

2460.2a-c

1997

Z3

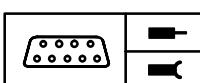


## Pin Assignments

6-Cylinder

Pin	Type	Description/Function	Connection
238		Not used	
239		Not used	
240		Not used	
241		Not used	
242		Not used	
243		Not used	
244		Not used	
245		Not used	
246		Not used	
247		Not used	
248		Not used	
249		Not used	
250		Not used	
251		Not used	
252		Not used	
253		Not used	
254		Not used	
255		Not used	
256		Not used	
257		Not used	
258	E/A	Jumper plug	
259	E/A	Jumper plug	
260		Not used	
261	E/A	CAN LOW	Engine control module
262	E/A	CAN HIGH	Engine control module
263		Not used	
264	E/A	TxD diagnostic data link	Data link connector


E = Input, A = Output, M = Ground

03/98 ————— 2460.2b ————— 1997

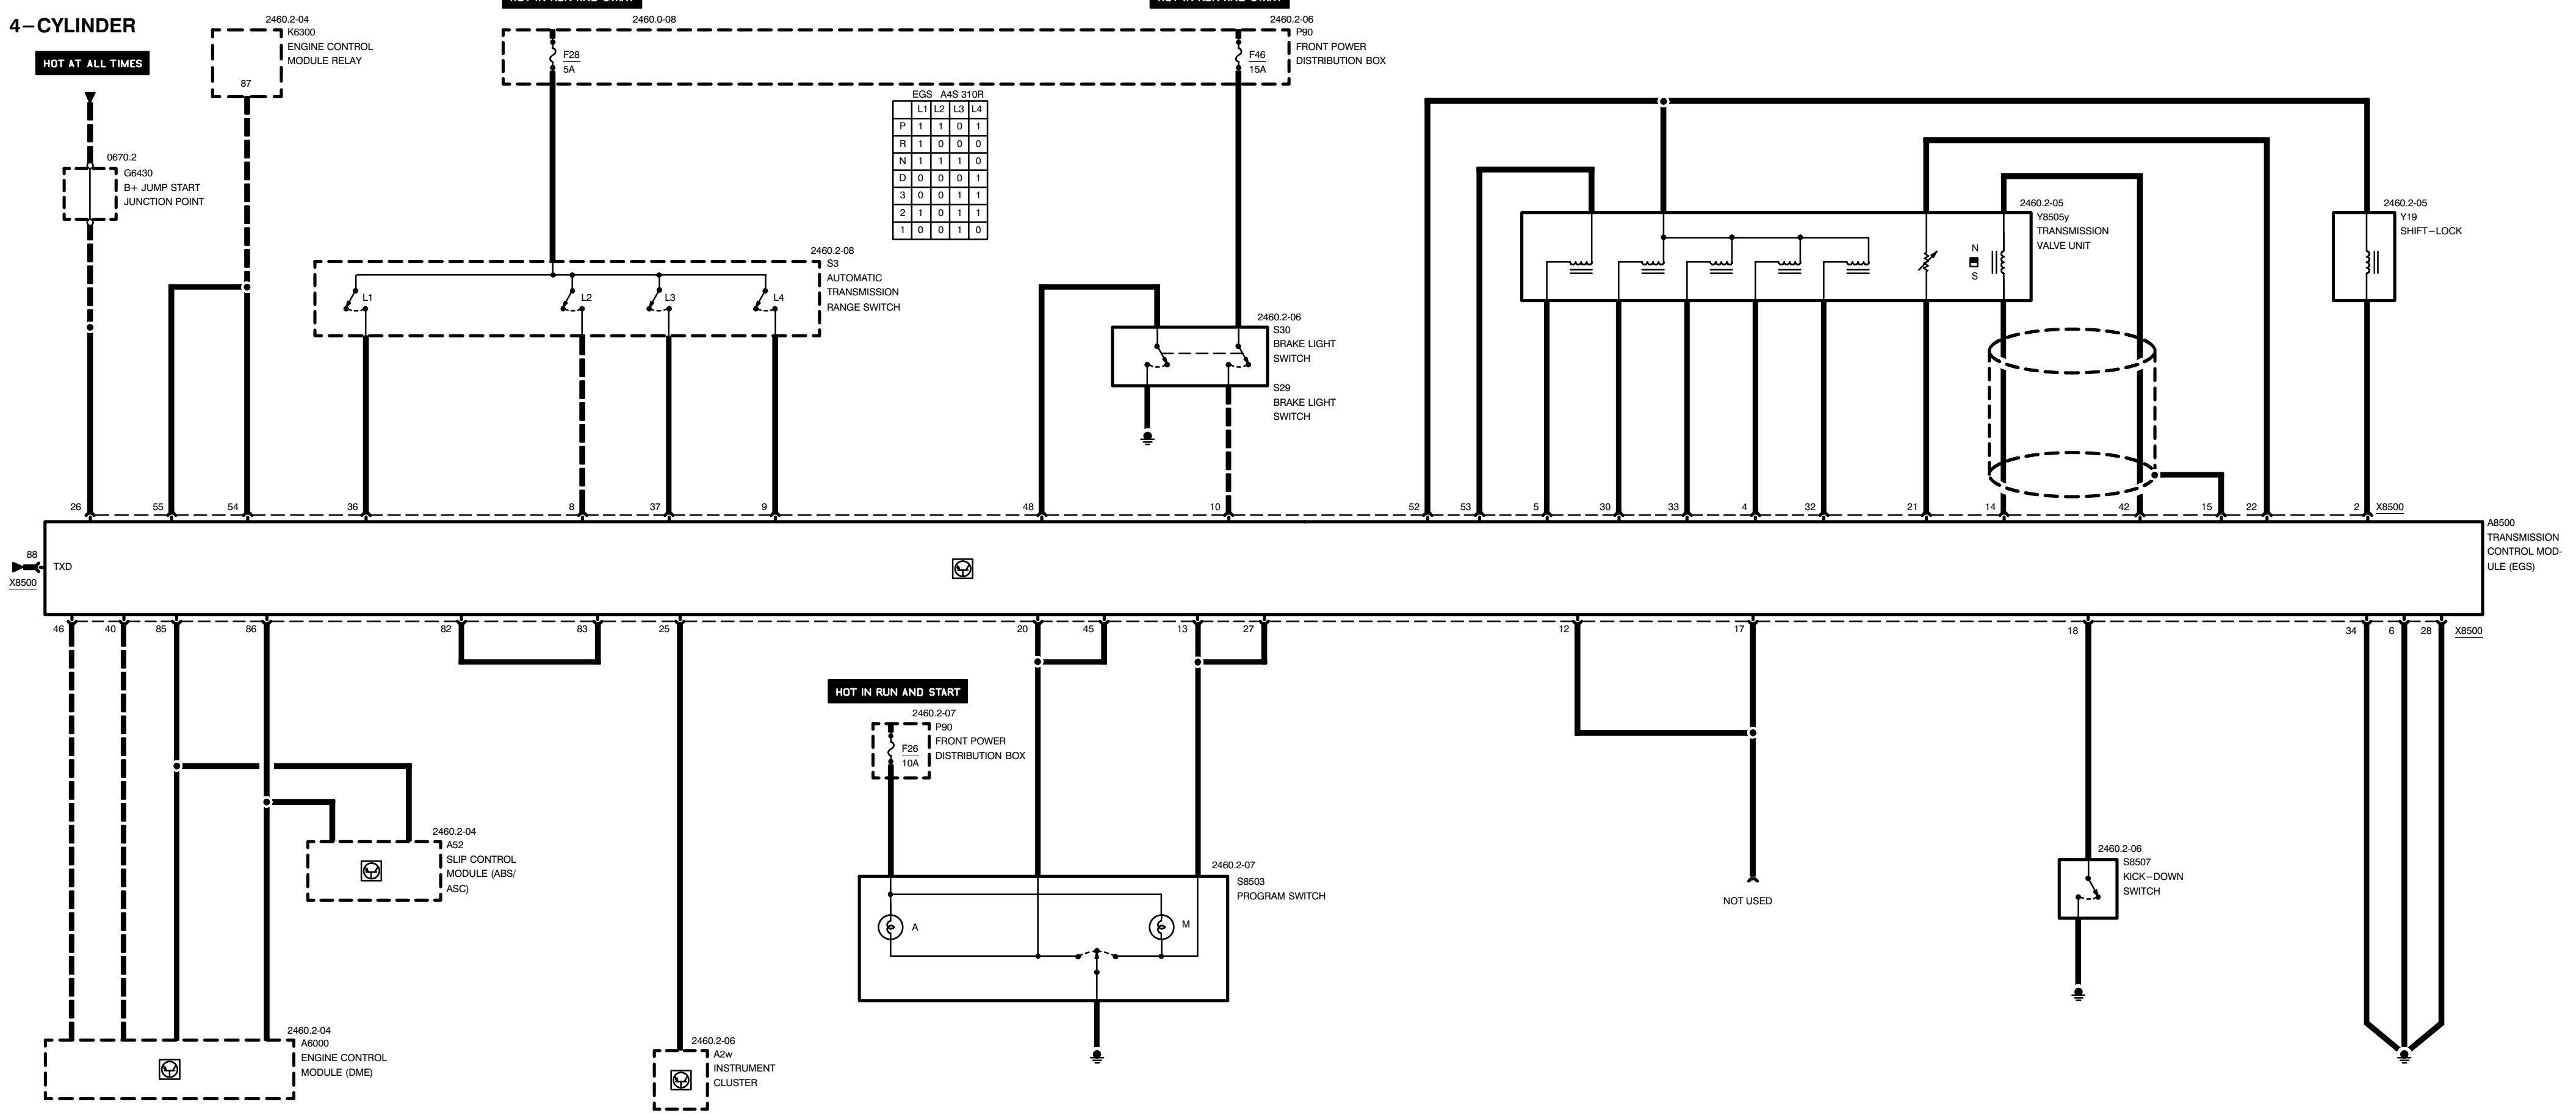**4-CYLINDER****HOT AT ALL TIMES**



Z3

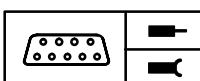
**Pin Assignments****4-Cylinder****X8500**

Pin	Type	Description/Function	Connection
265		Not used	
266	A	Shift-lock solenoid control	Shift-lock
267		Not used	
268	A	Solenoid valve 3 control (-)	Transmission valve unit
269	A	Hydraulic pressure regulator control (-)	Transmission valve unit
270	M	Ground	Ground point
271		Not used	
272	E	Gear range signal L2	Automatic transmission range switch
273	E	Gear range signal L4	Automatic transmission range switch
274	E	Brake pedal position	Brake light switch
275		Not used	
276	E	Sport mode signal	Not used
277	E	Manual mode signal	Program switch
278	E	Output speed (-)	Transmission valve unit
279	M	Ground for shield	Shield for speed sensor
280		Not used	
281	A	S-program indication	Not used
282	E	Kick-down signal	Kick-down switch
283		Not used	
284	E	Automatic mode signal	Program switch
285	E	Oil temperature signal (-)	Transmission valve unit
286	E	Oil temperature signal (+)	Transmission valve unit
287		Not used	
288		Not used	
289	A	Fault indicator signal	Instrument cluster
290	E	Battery voltage	B+ Jump start junction point
291	A	M-program indication	Program switch
292	M	Ground	Ground point
293		Not used	
294	A	Solenoid valve 1 control (-)	Transmission valve unit

E = Input, A = Output, M = Ground



Z3

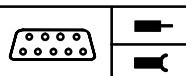

## Pin Assignments

4-Cylinder

Pin	Type	Description/Function	Connection
295		Not used	
296	A	Torque converter clutch solenoid valve control (-)	Transmission valve unit
297	A	Solenoid valve 2 control (-)	Transmission valve unit
298	M	Ground	Ground point
299		Not used	
300	E	Gear range signal L1	Automatic transmission range switch
301	E	Gear range signal L3	Automatic transmission range switch
302		Not used	
303		Not used	
304	E	RPM speed signal TD	Engine control module
305		Not used	
306	E	Output speed (+)	Transmission valve unit
307		Not used	
308		Not used	
309	A	A-program indication	Program switch
310	E	A/C compressor-ON-signal	Engine control module
311		Not used	
312	E	Brake switch test signal	Brake light switch
313		Not used	
314		Not used	
315		Not used	
316	A	Voltage supply	Shift-lock/Transmission valve unit
317	E	Voltage pressure regulator	Transmission valve unit
318	E	Voltage supply terminal 87	Engine control module relay
319	E	Voltage supply terminal 87	Engine control module relay
320		Not used	
321		Not used	
322		Not used	
323		Not used	
324		Not used	
325		Not used	

E = Input, A = Output, M = Ground




03/98

2460.2b-c

1997

Z3

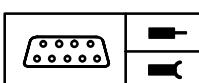

## Pin Assignments

4-Cylinder

Pin	Type	Description/Function	Connection
326		Not used	
327		Not used	
328		Not used	
329		Not used	
330		Not used	
331		Not used	
332		Not used	
333		Not used	
334		Not used	
335		Not used	
336		Not used	
337		Not used	
338		Not used	
339		Not used	
340		Not used	
341		Not used	
342		Not used	
343		Not used	
344		Not used	
345		Not used	
346	E/A	Jumper plug	
347	E/A	Jumper plug	
348		Not used	
349	E/A	CAN LOW	Engine control module
350	E/A	CAN HIGH	Engine control module
351		Not used	
352	E/A	TxD diagnostic data link	Data link connector

E = Input, A = Output, M = Ground


## ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310R)


6-CYLINDER

03/98

2460.2-00

1997

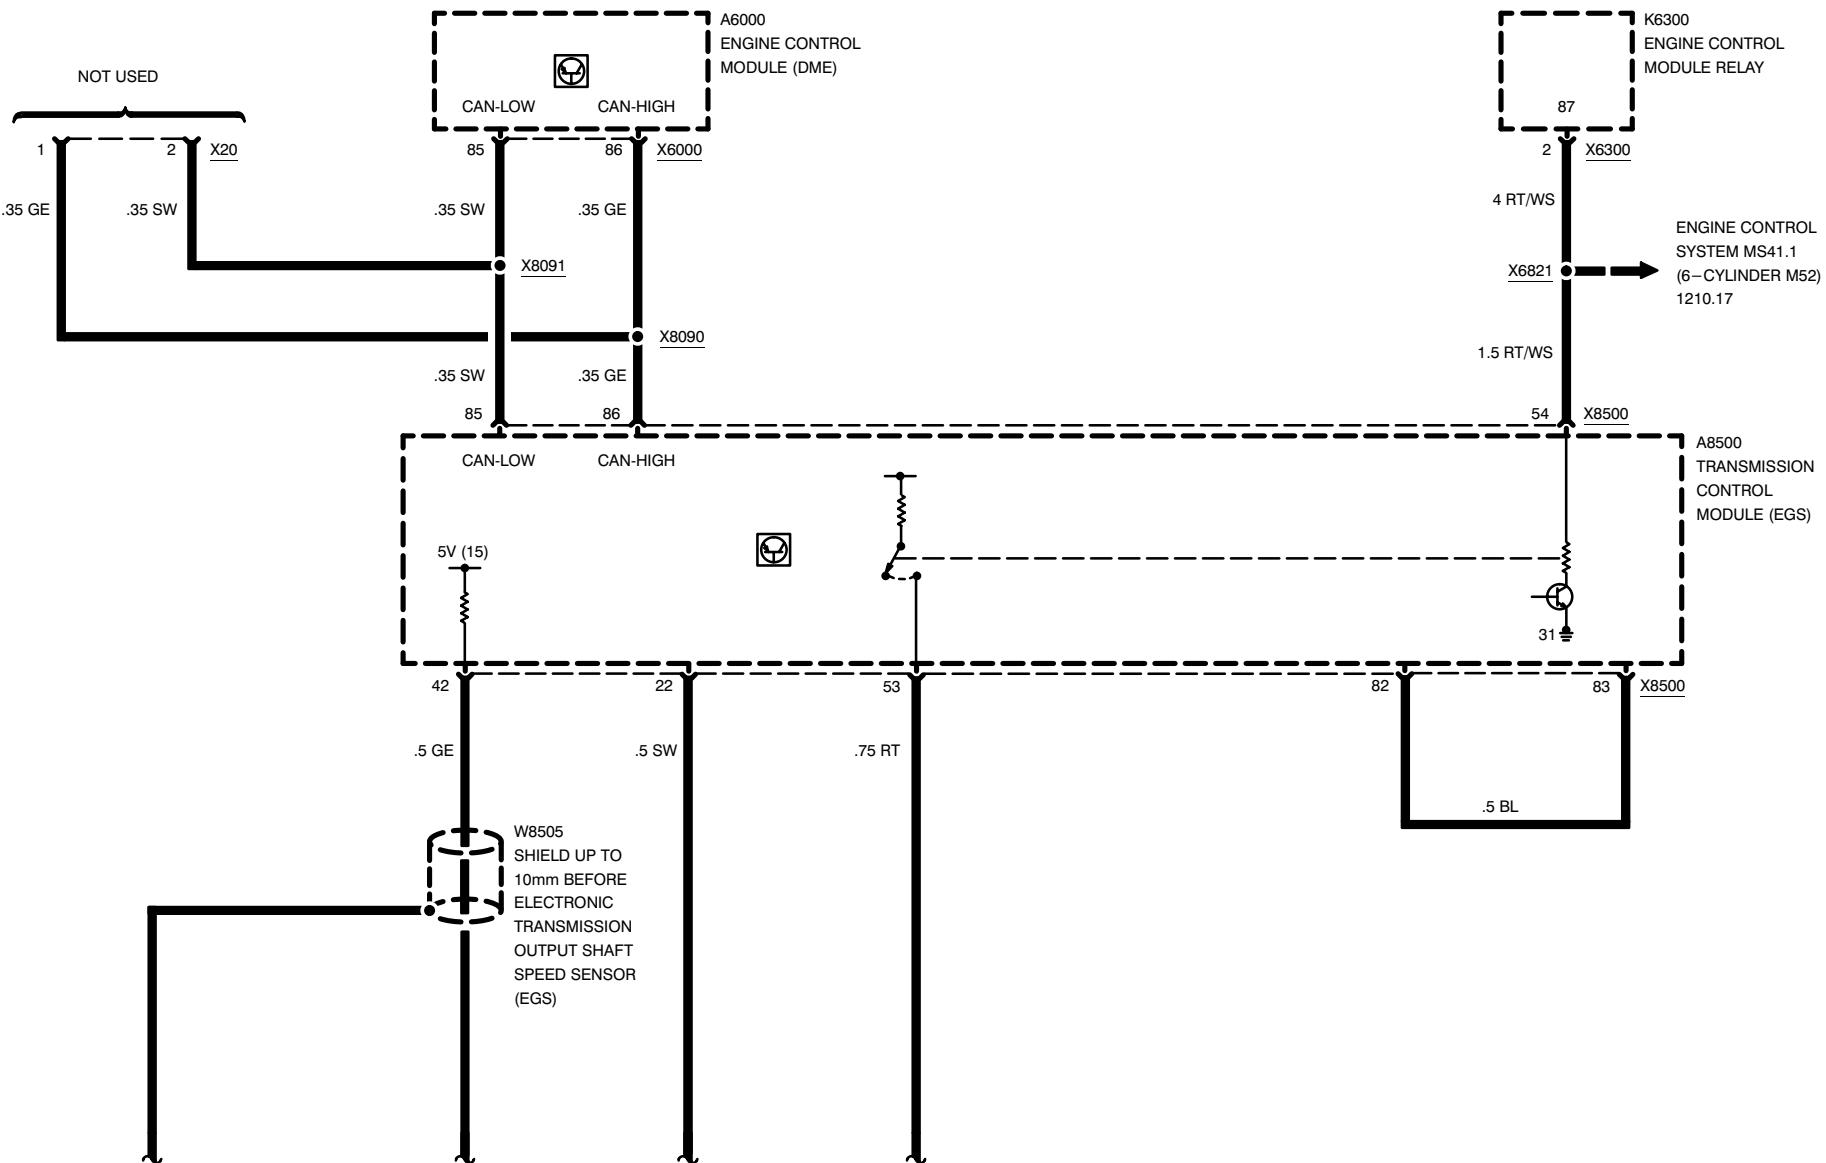

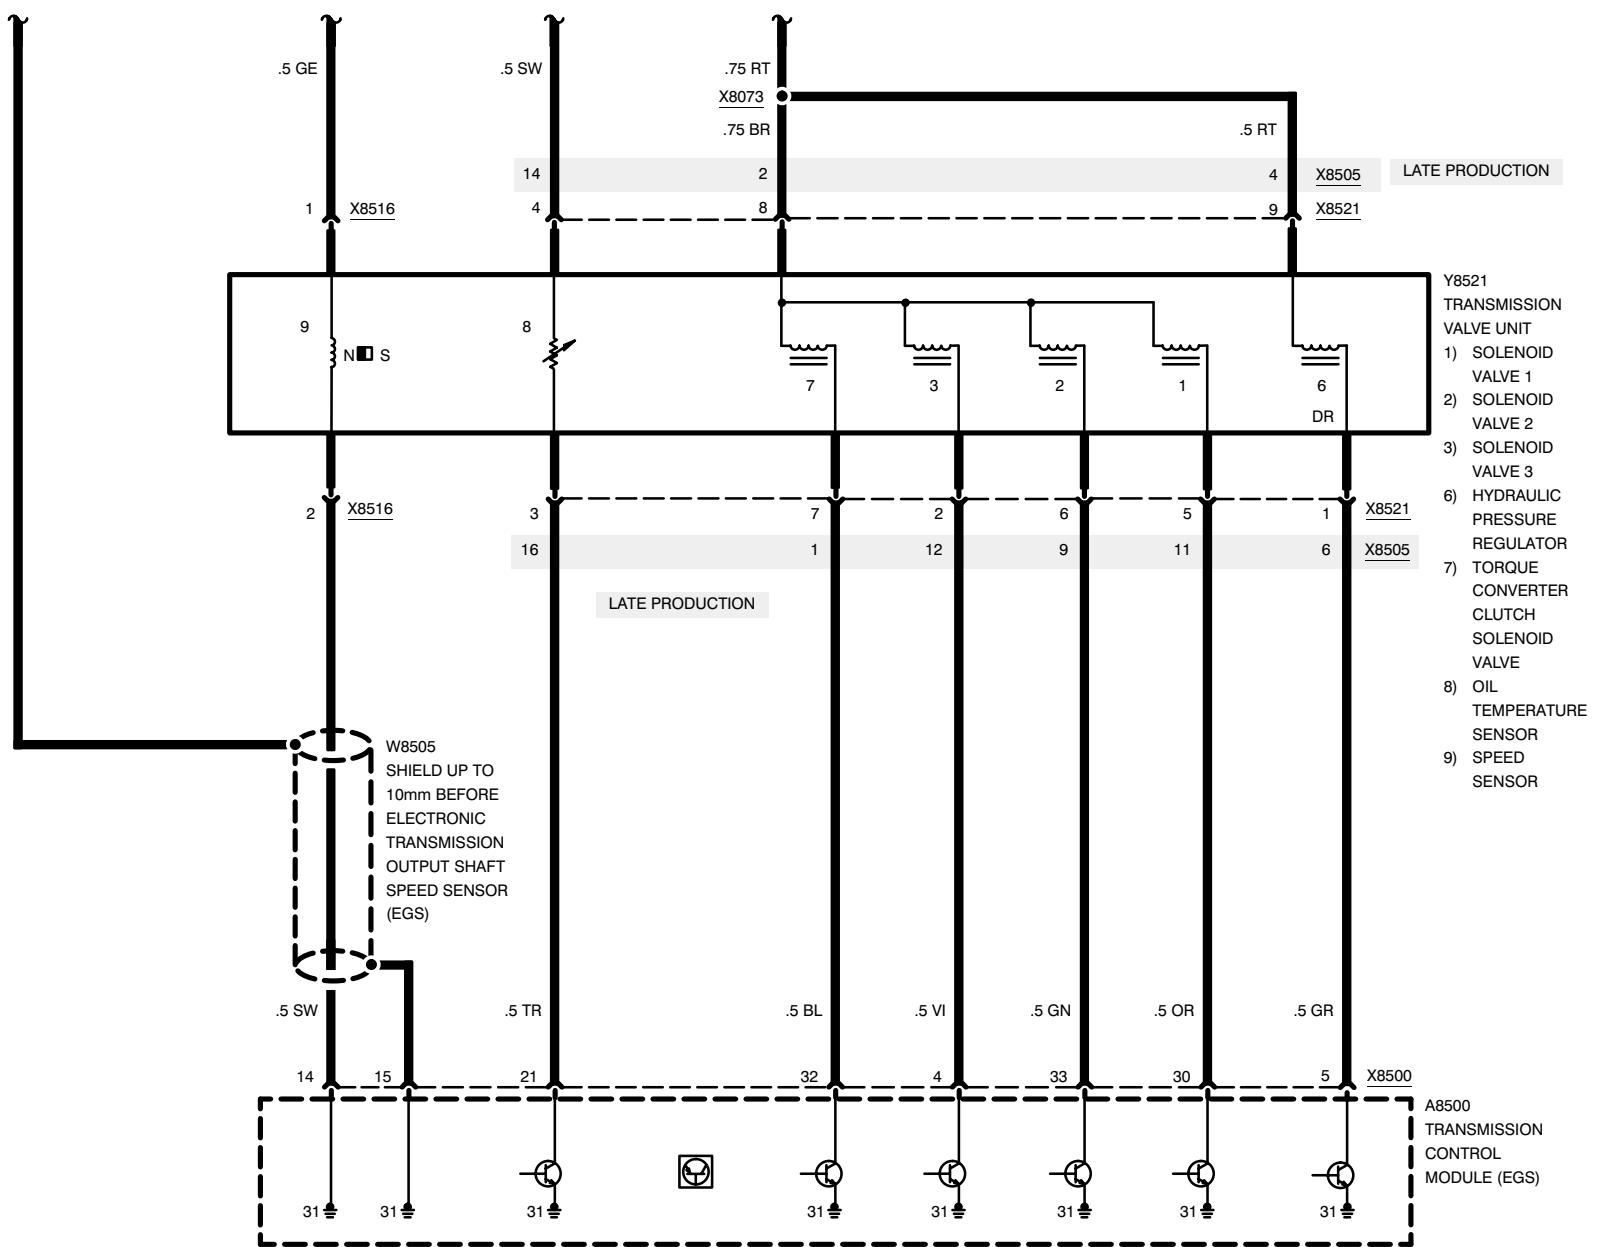

# ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310R)


6-CYLINDER


## SHIFT LOCK, DATA LINK, KICK-DOWN SWITCH

03/98

2460.2-02

1997

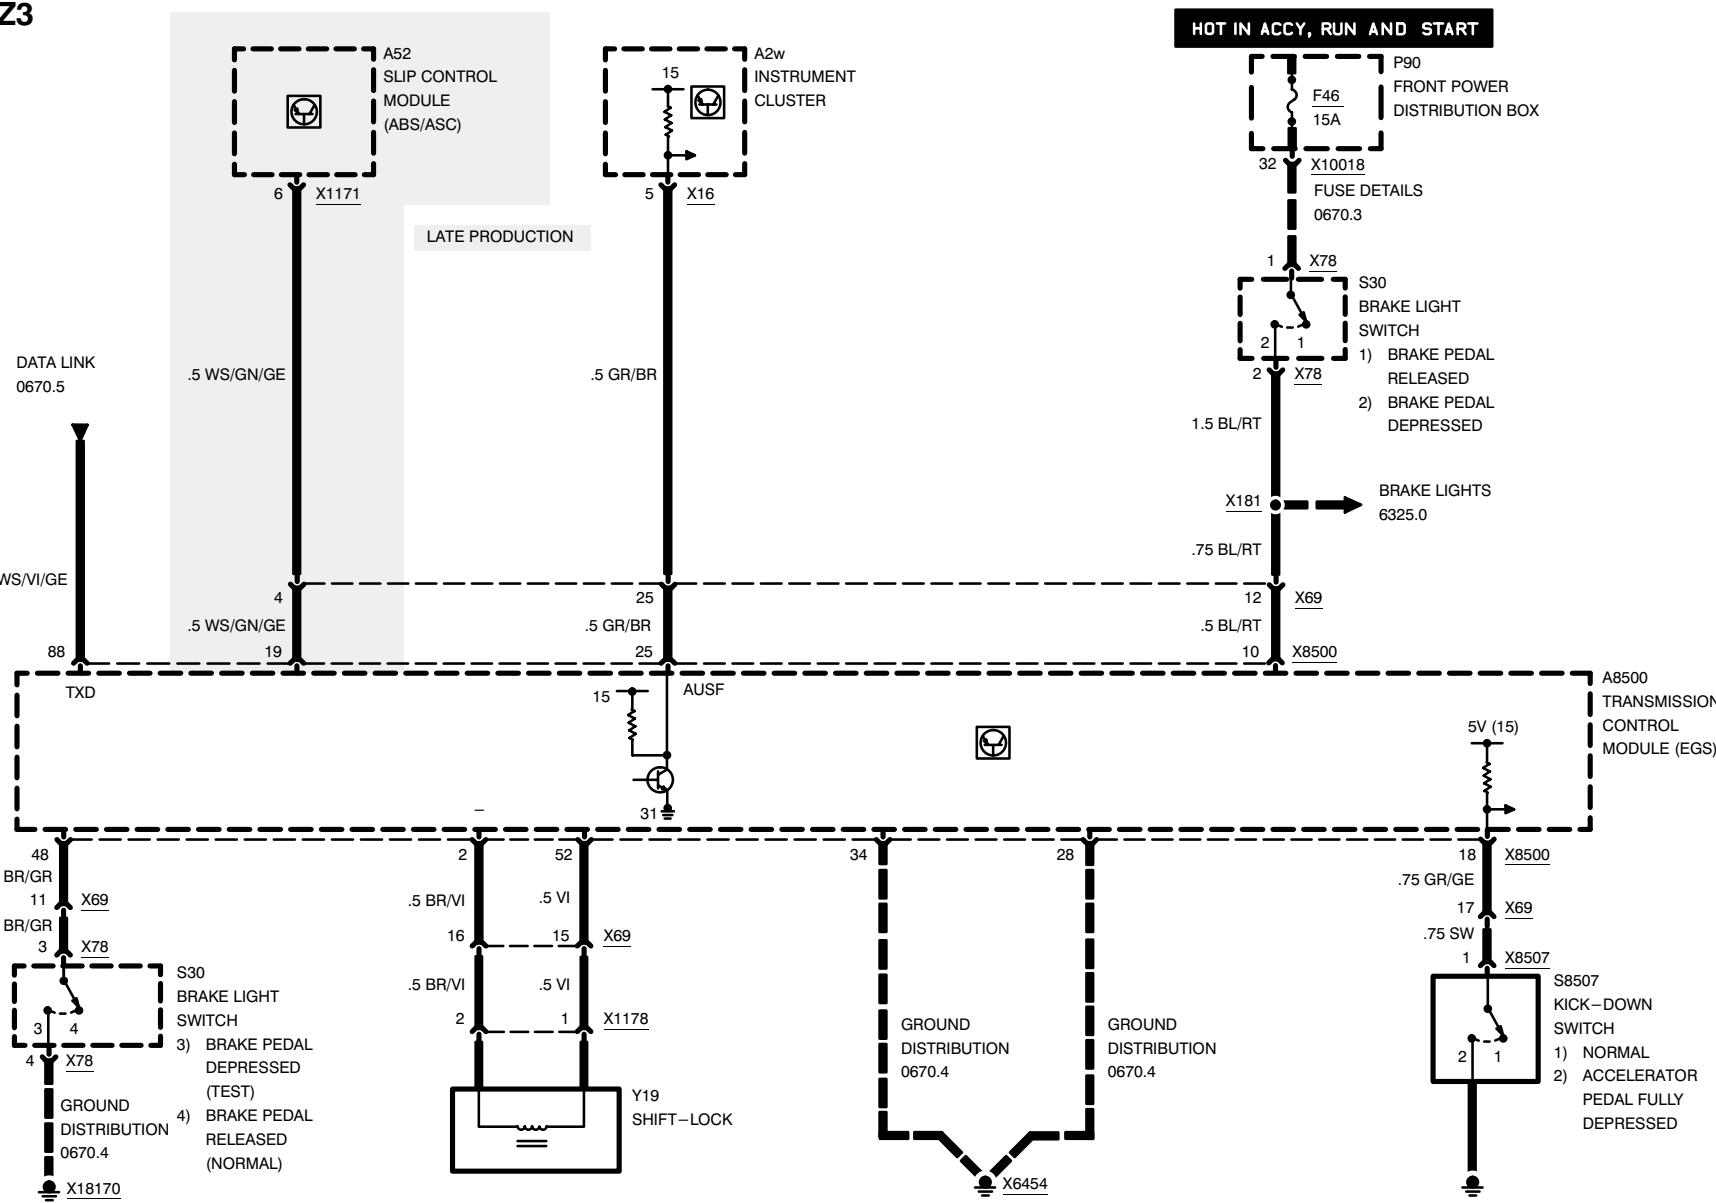

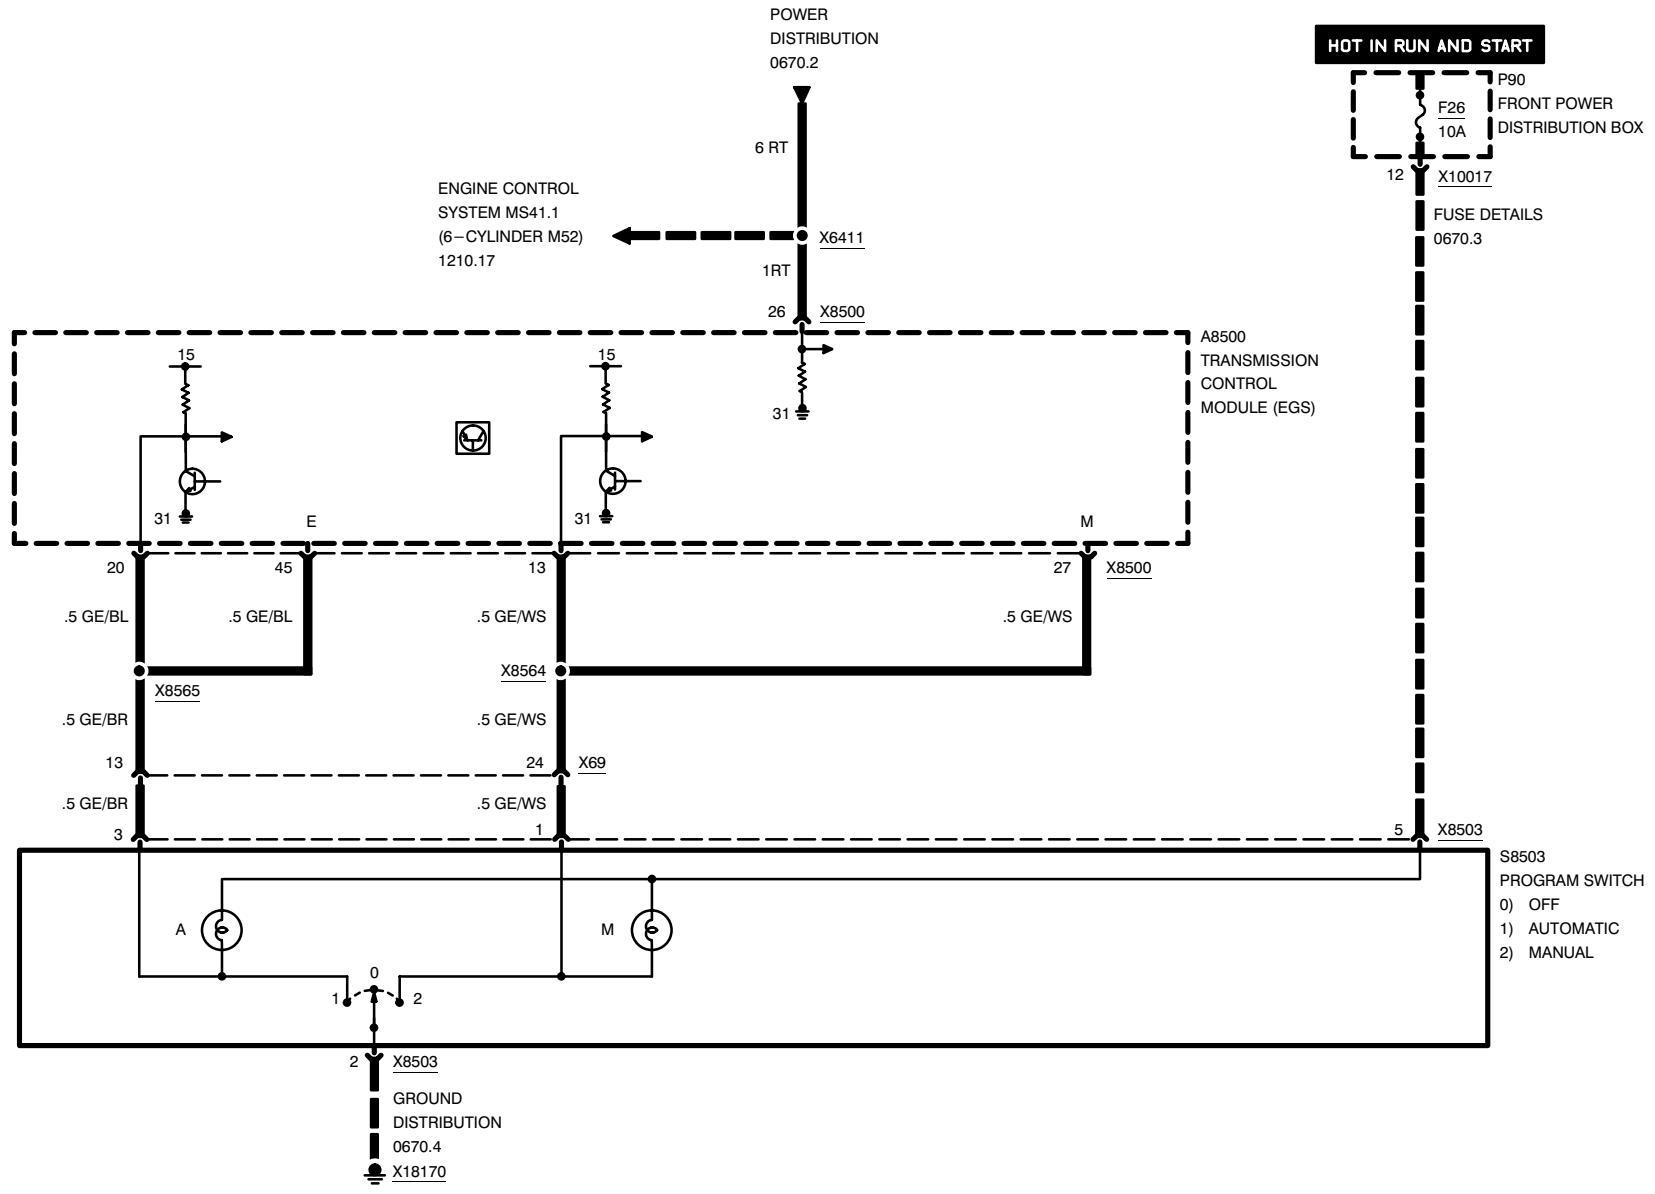


## ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310R)


4-CYLINDER

03/98

2460.2-04

1997

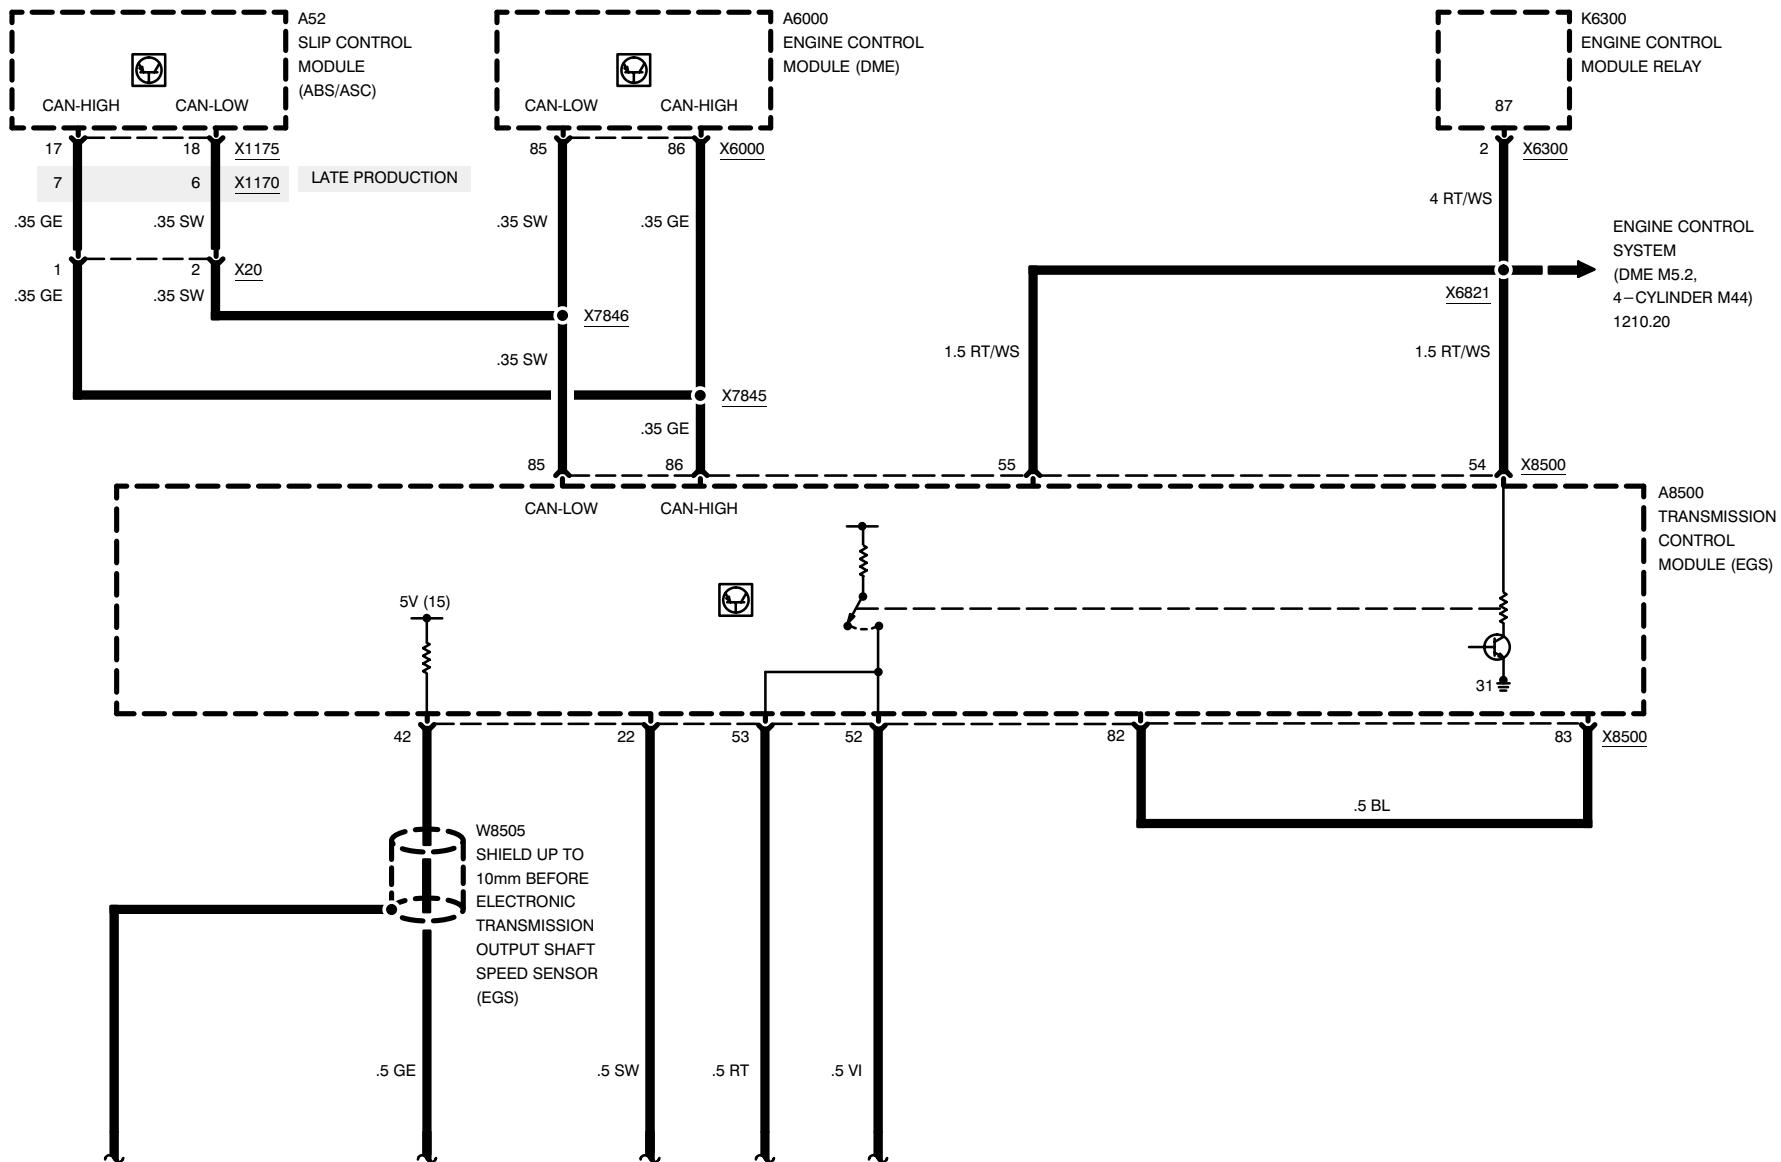

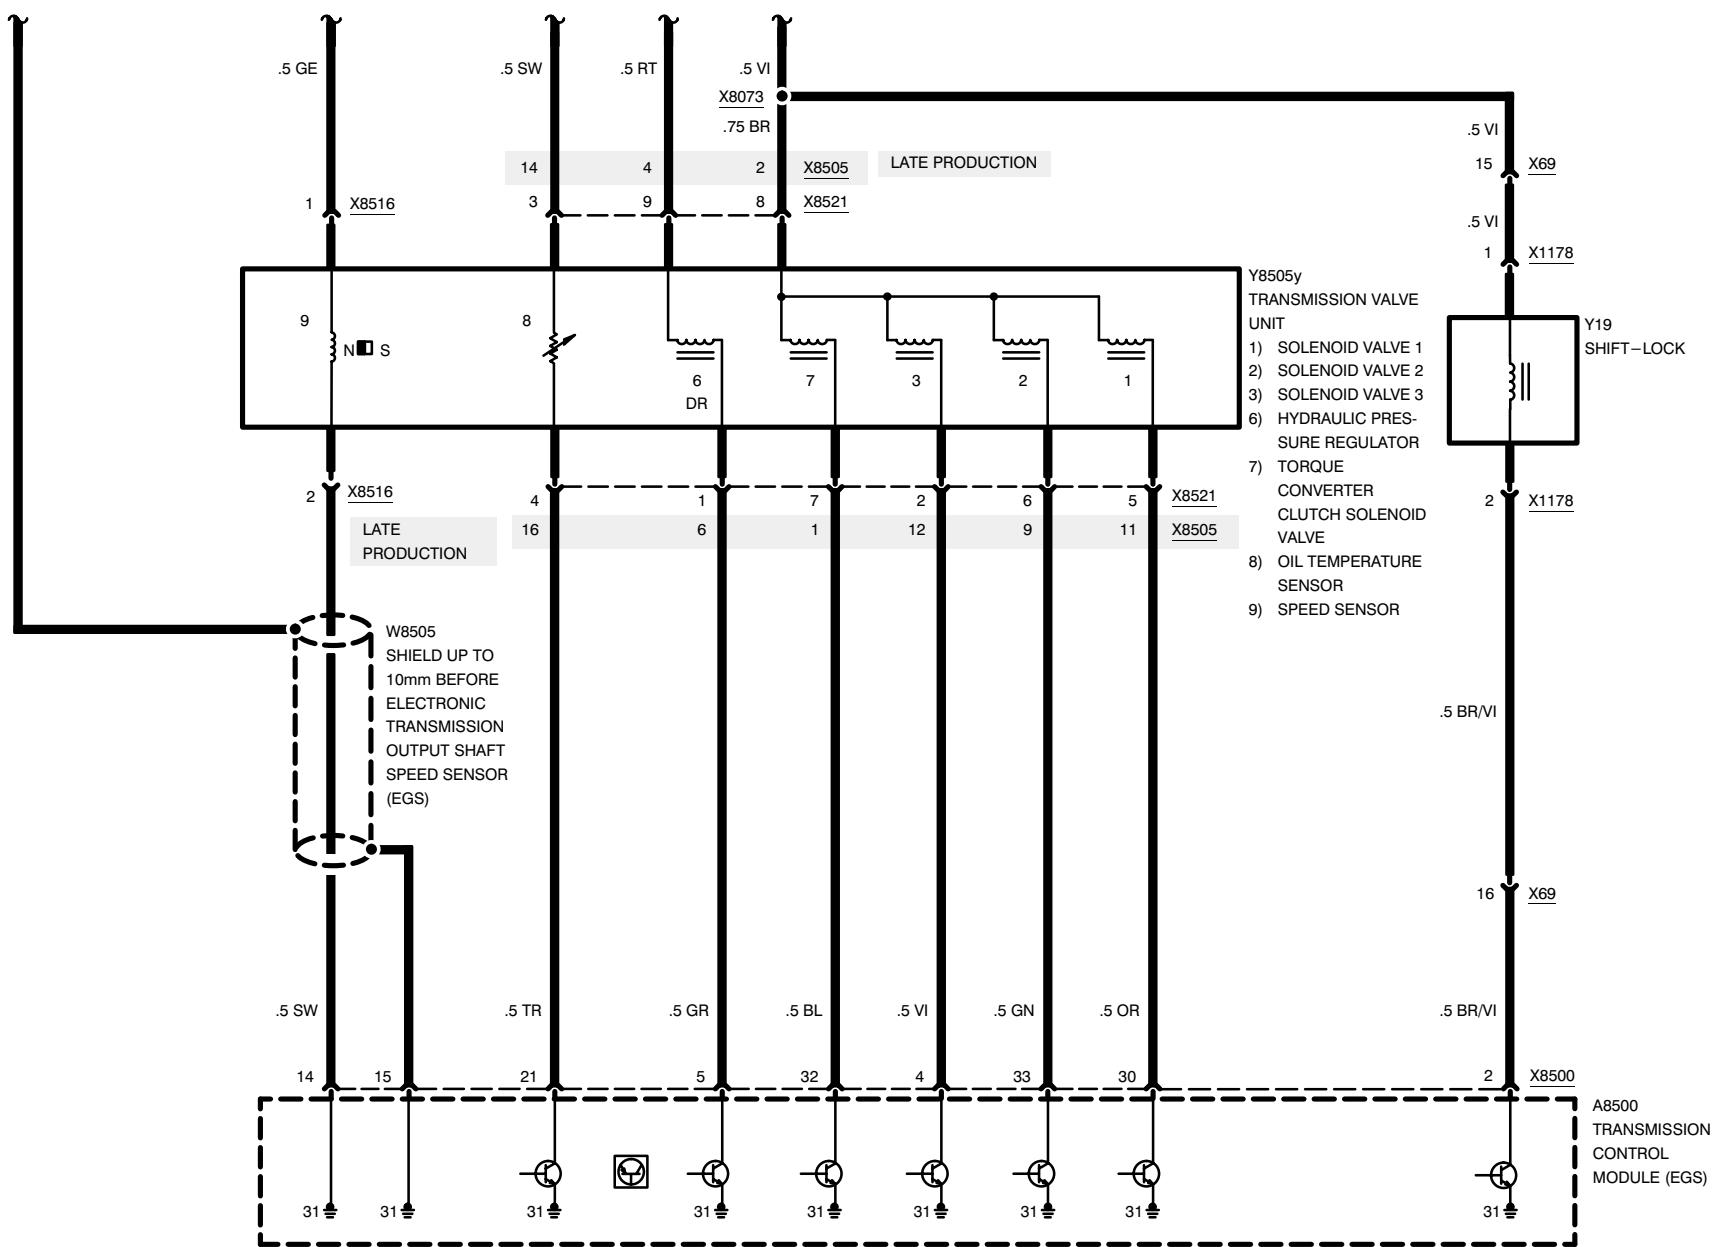



## ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310R)

4-CYLINDER

03/98

2460.2-06

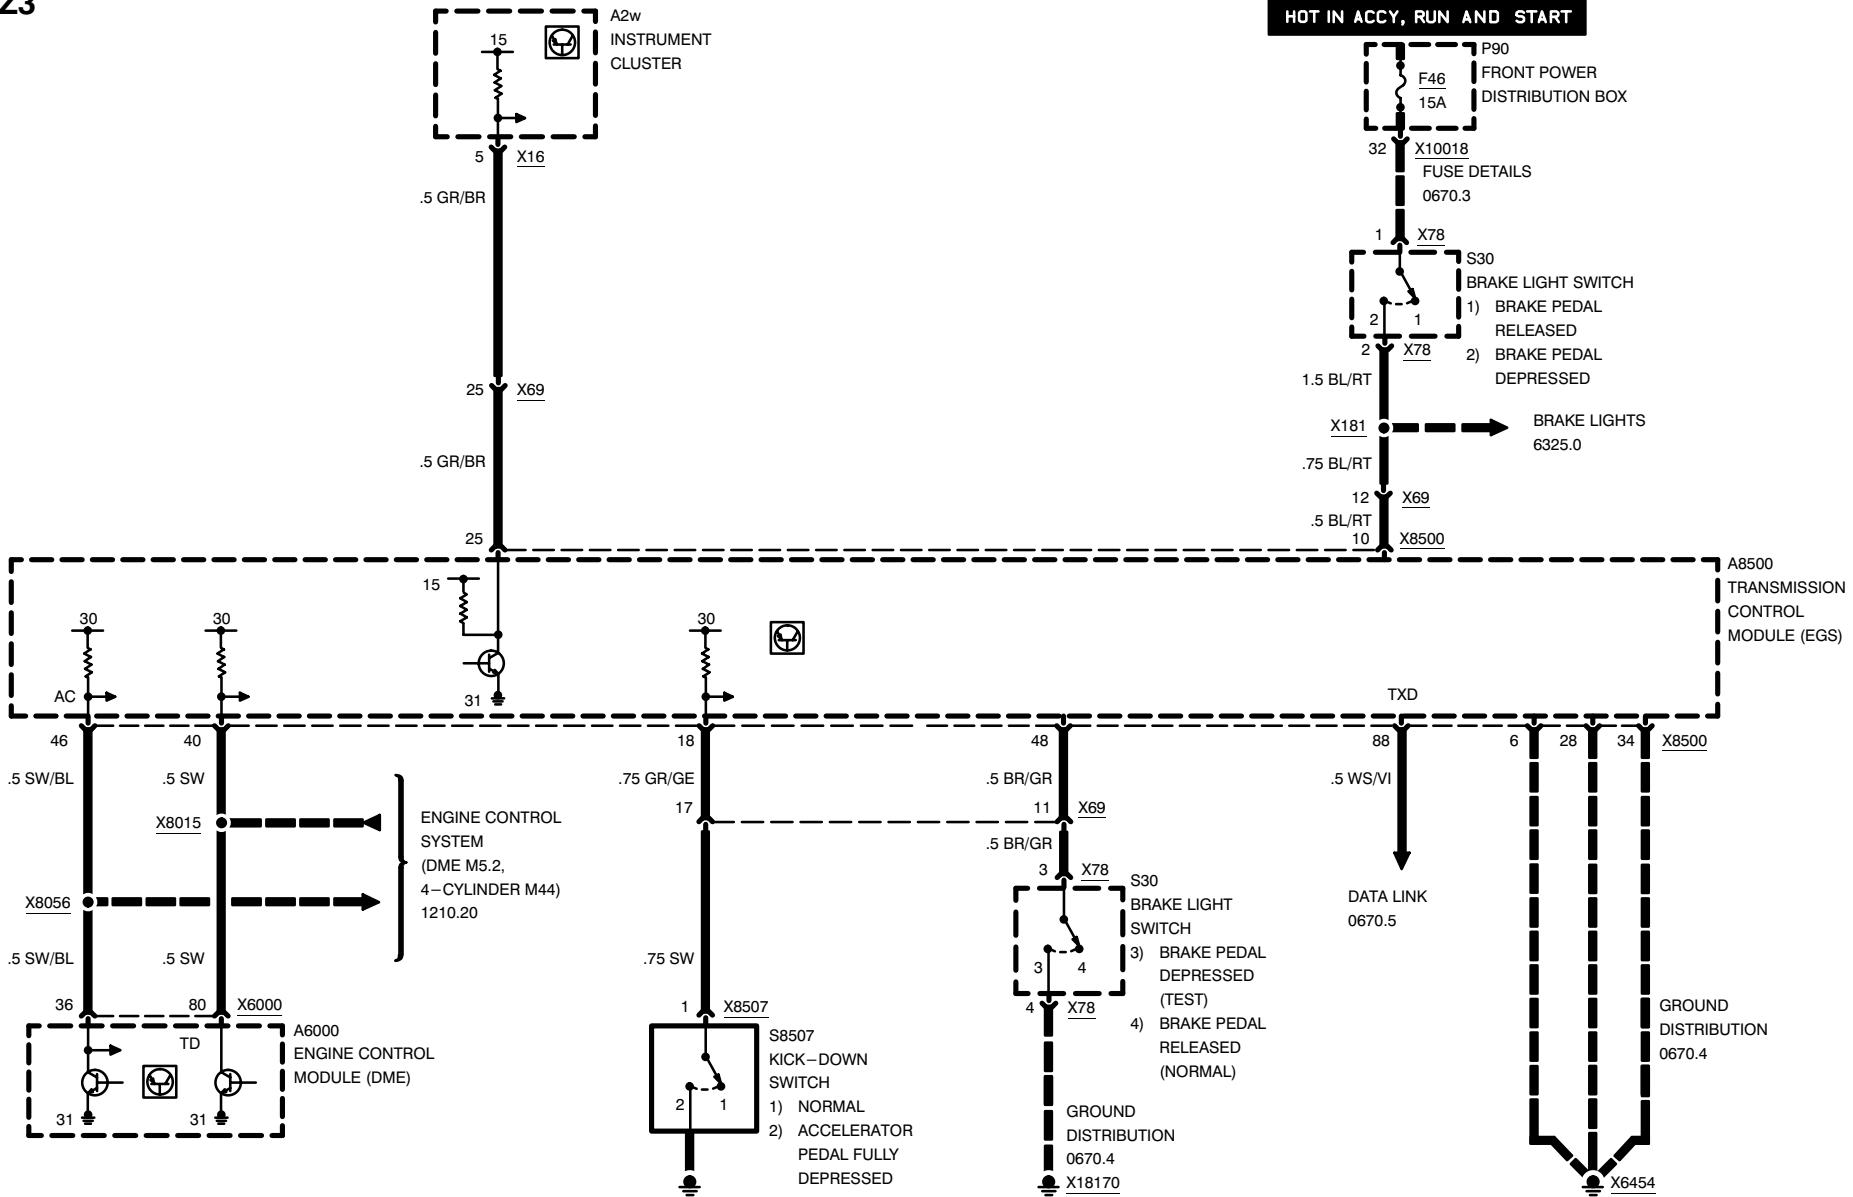

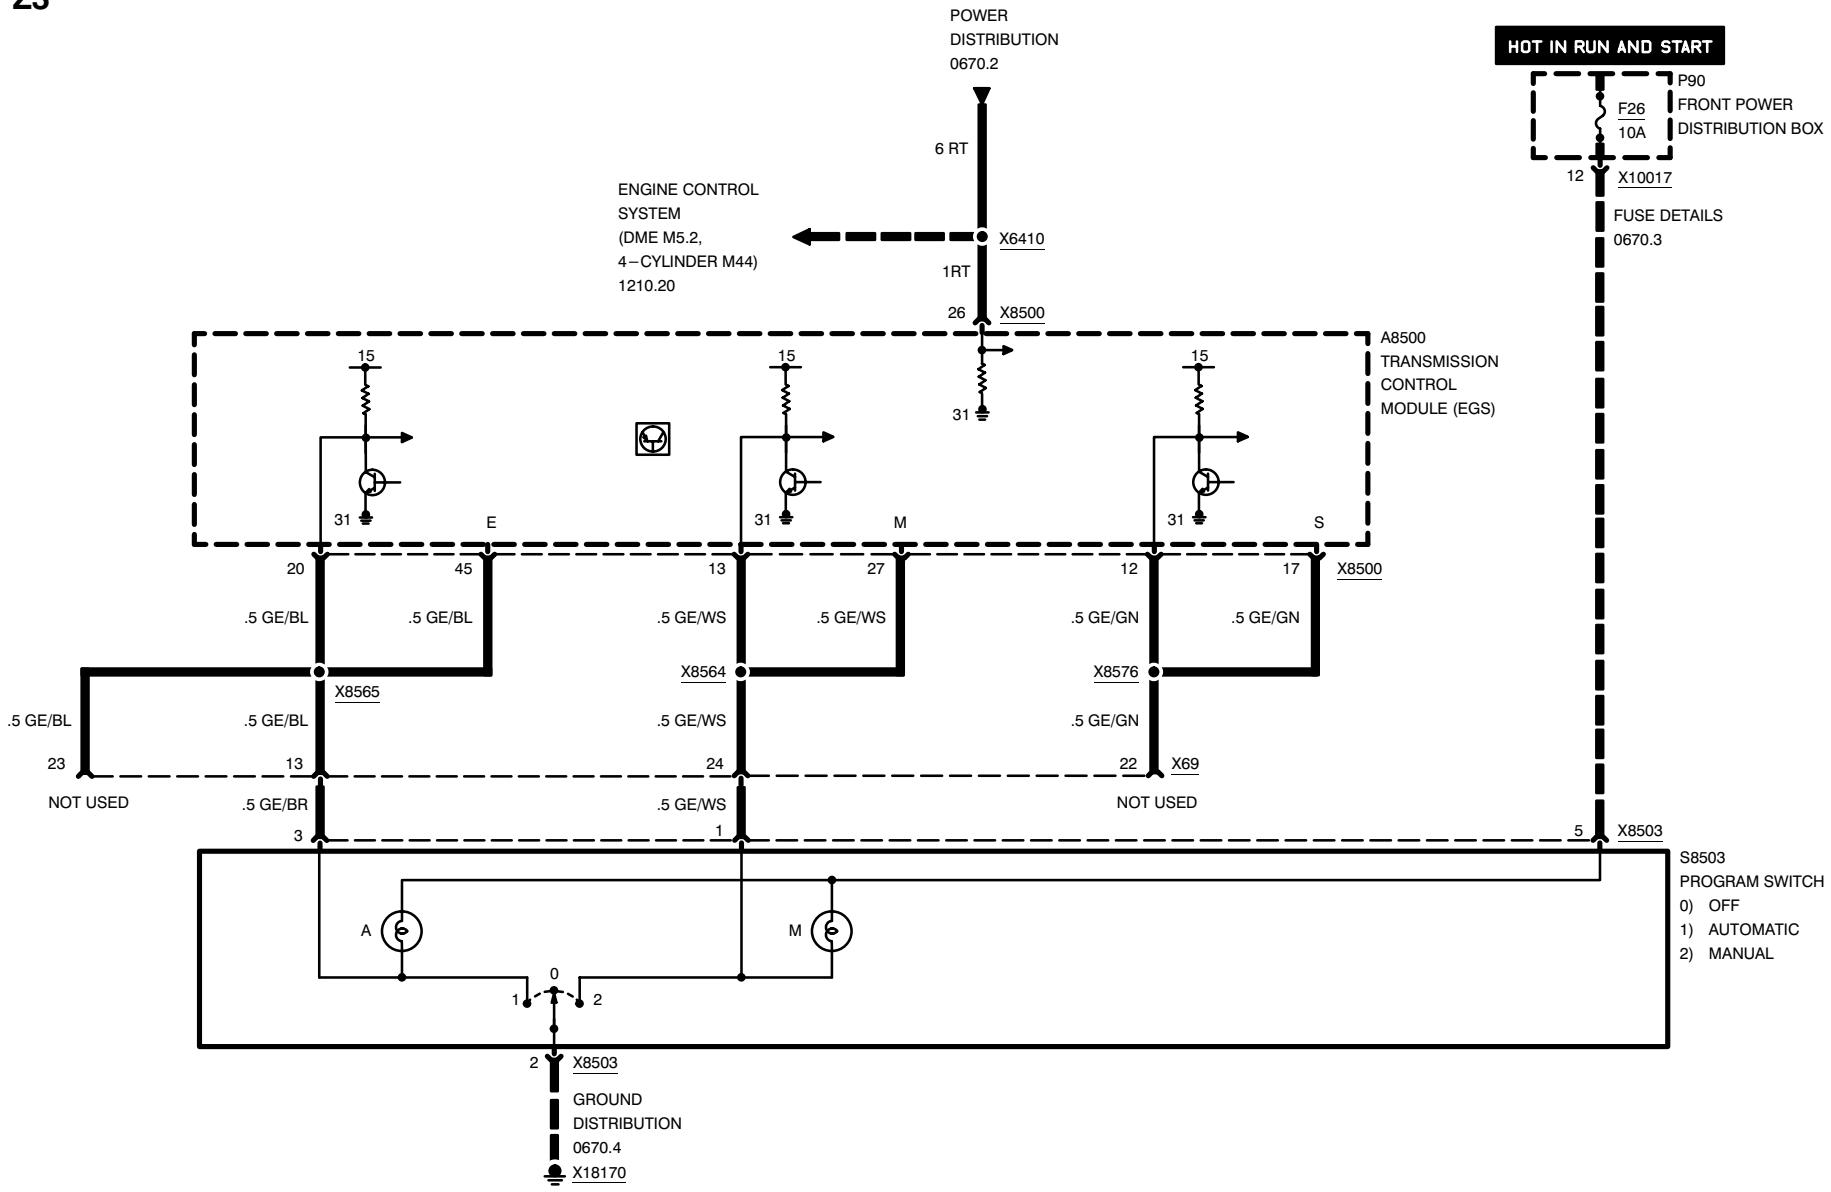


## ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310R)


03/98

2460.2-08

1997

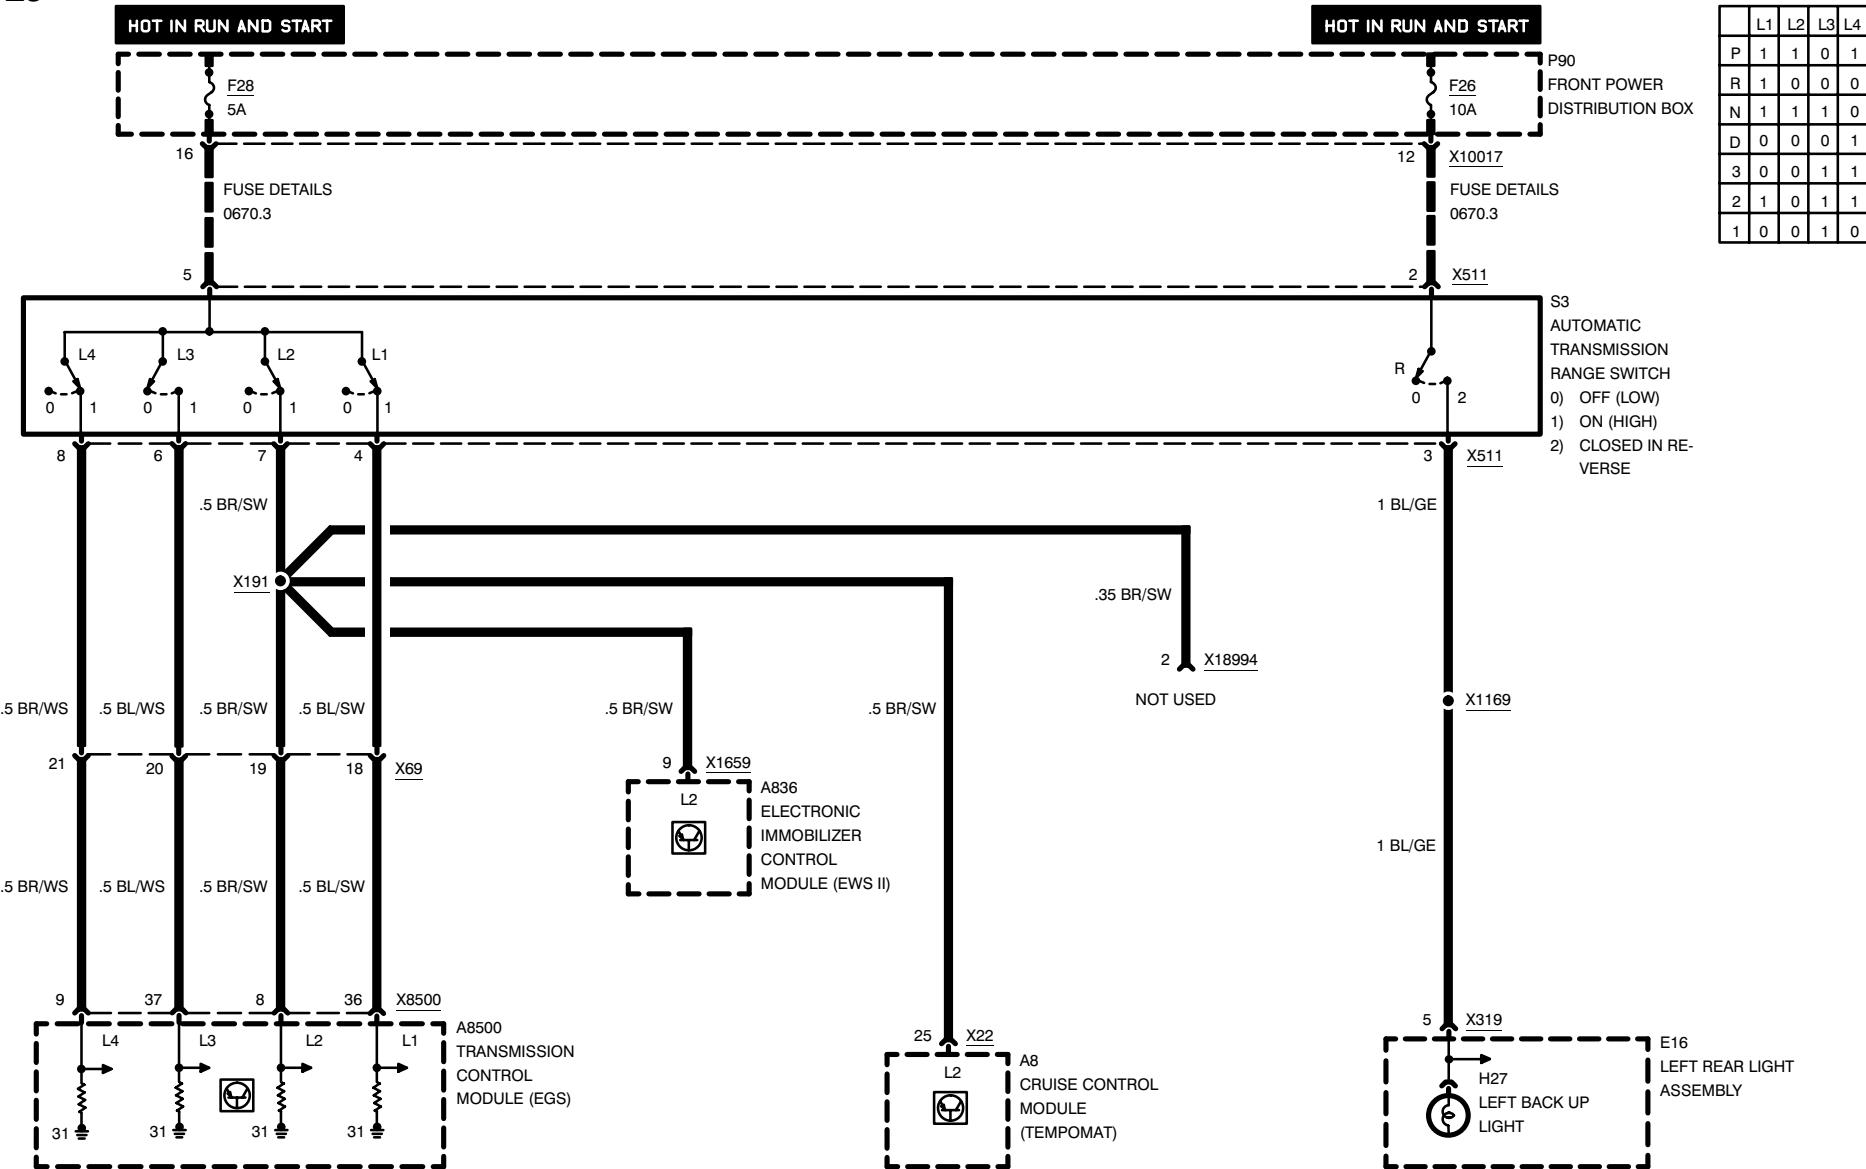

## SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)

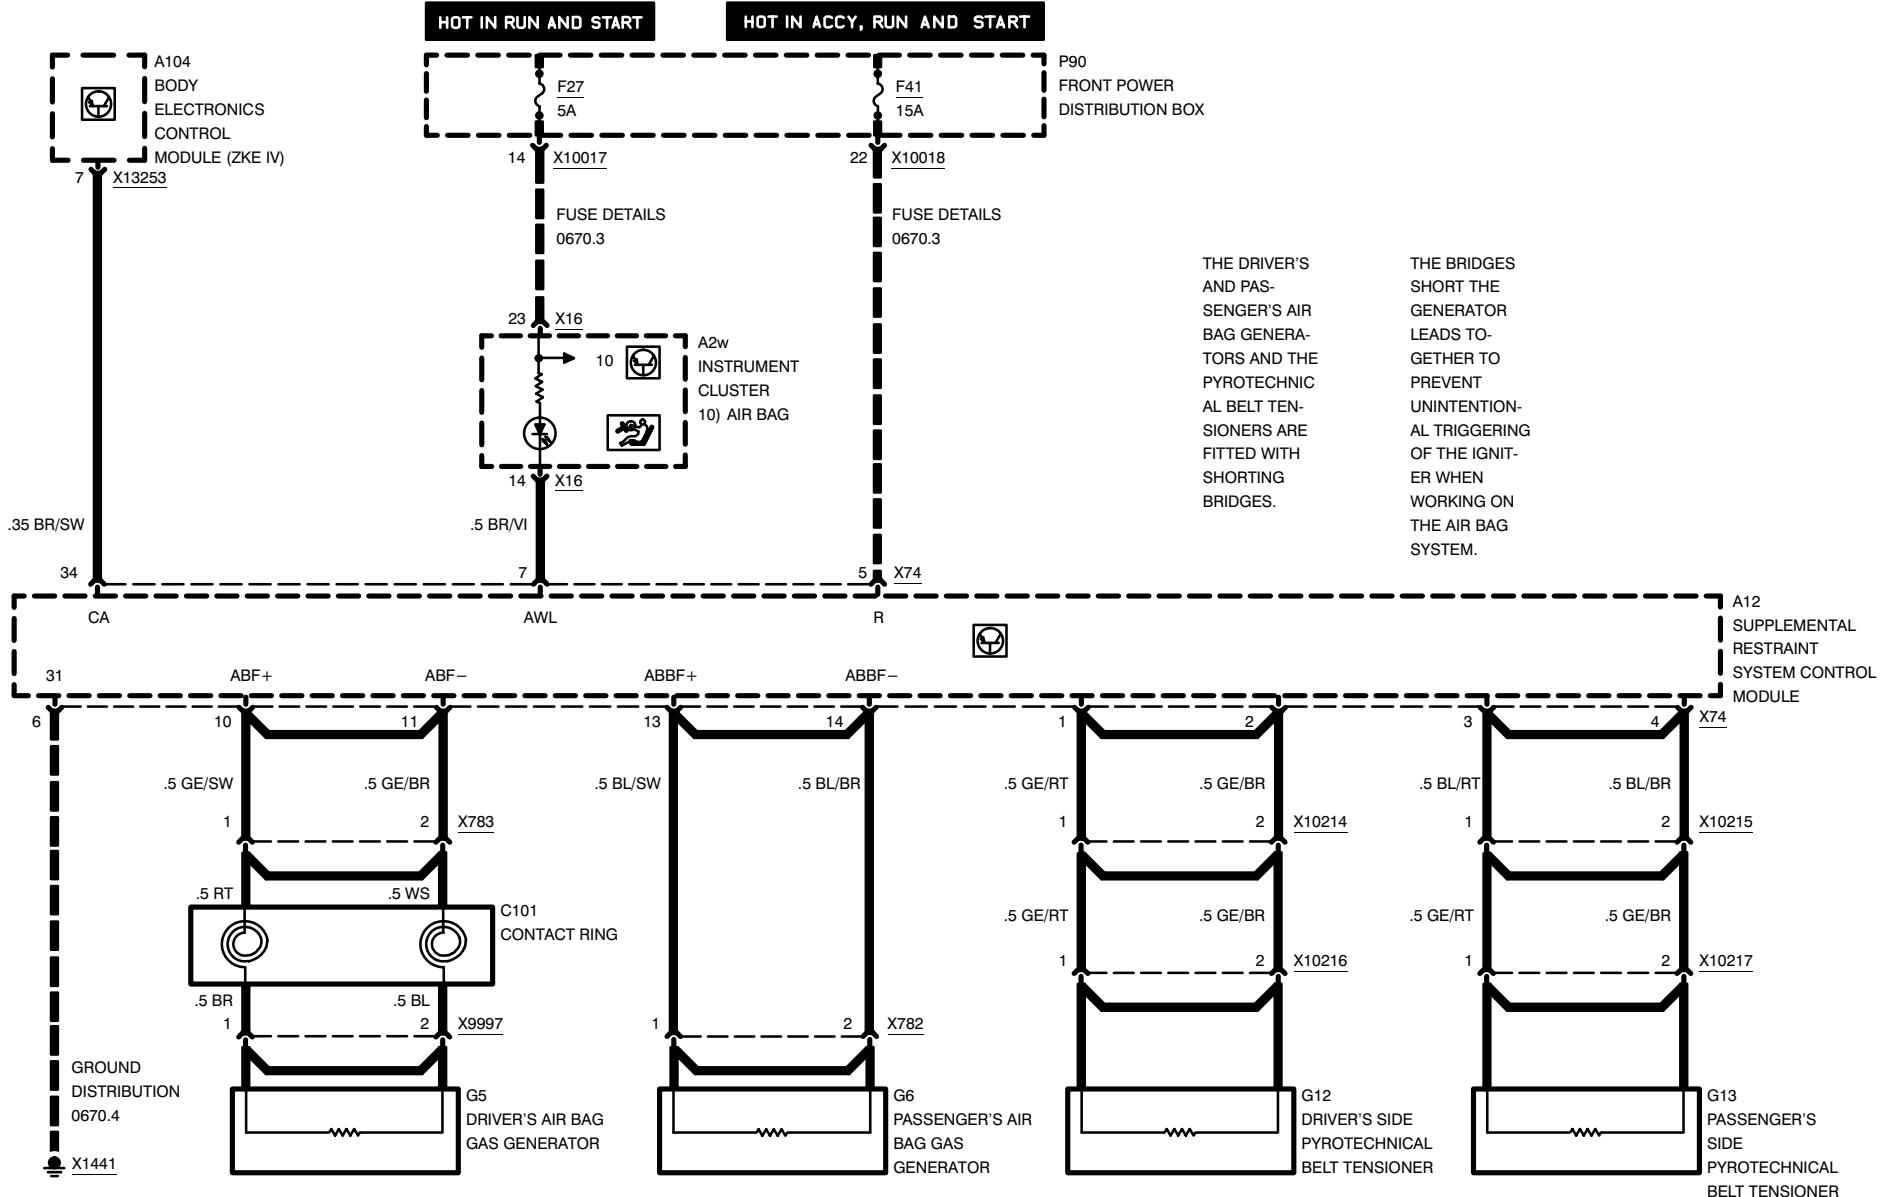


## SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)

03/98

3234.0-01


1997

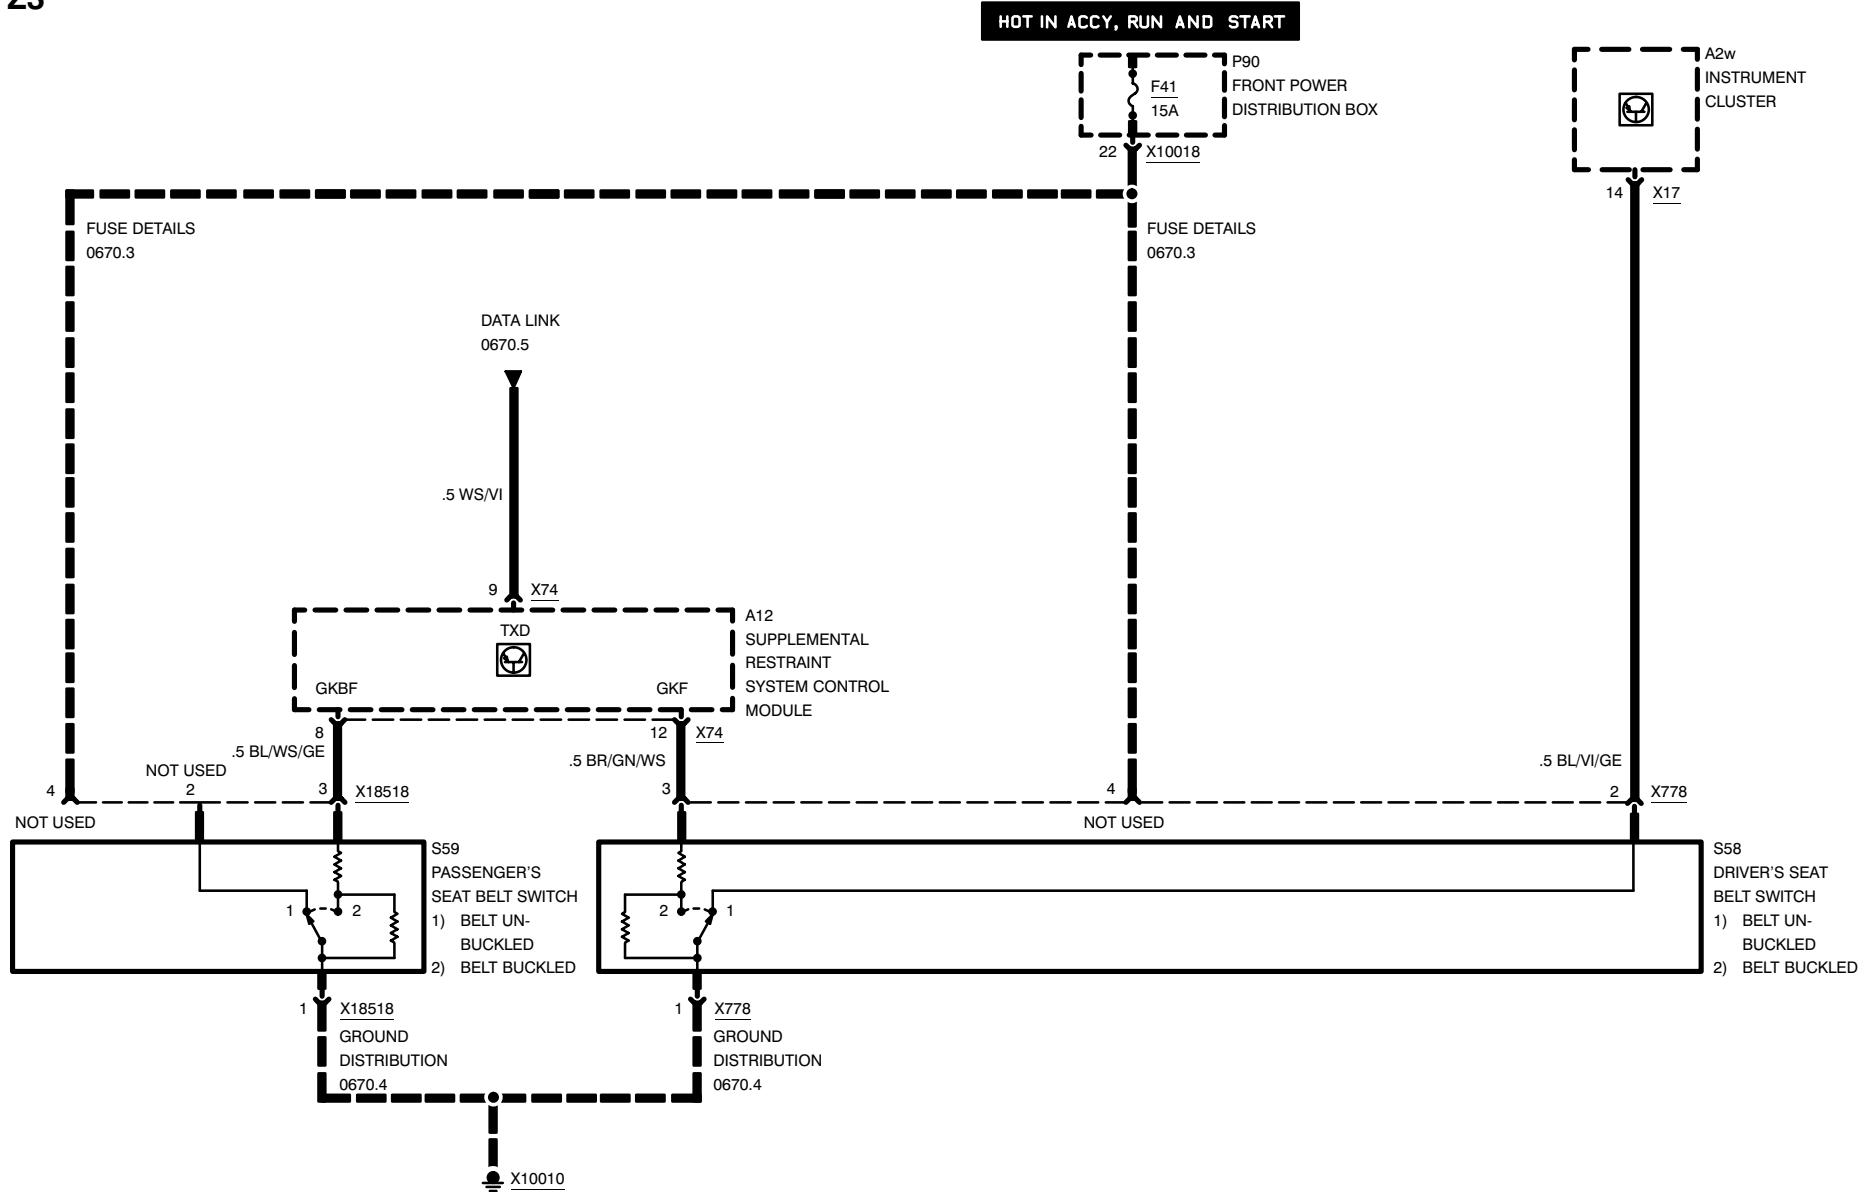

# SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)

03/98

3234.0-02 — 1997

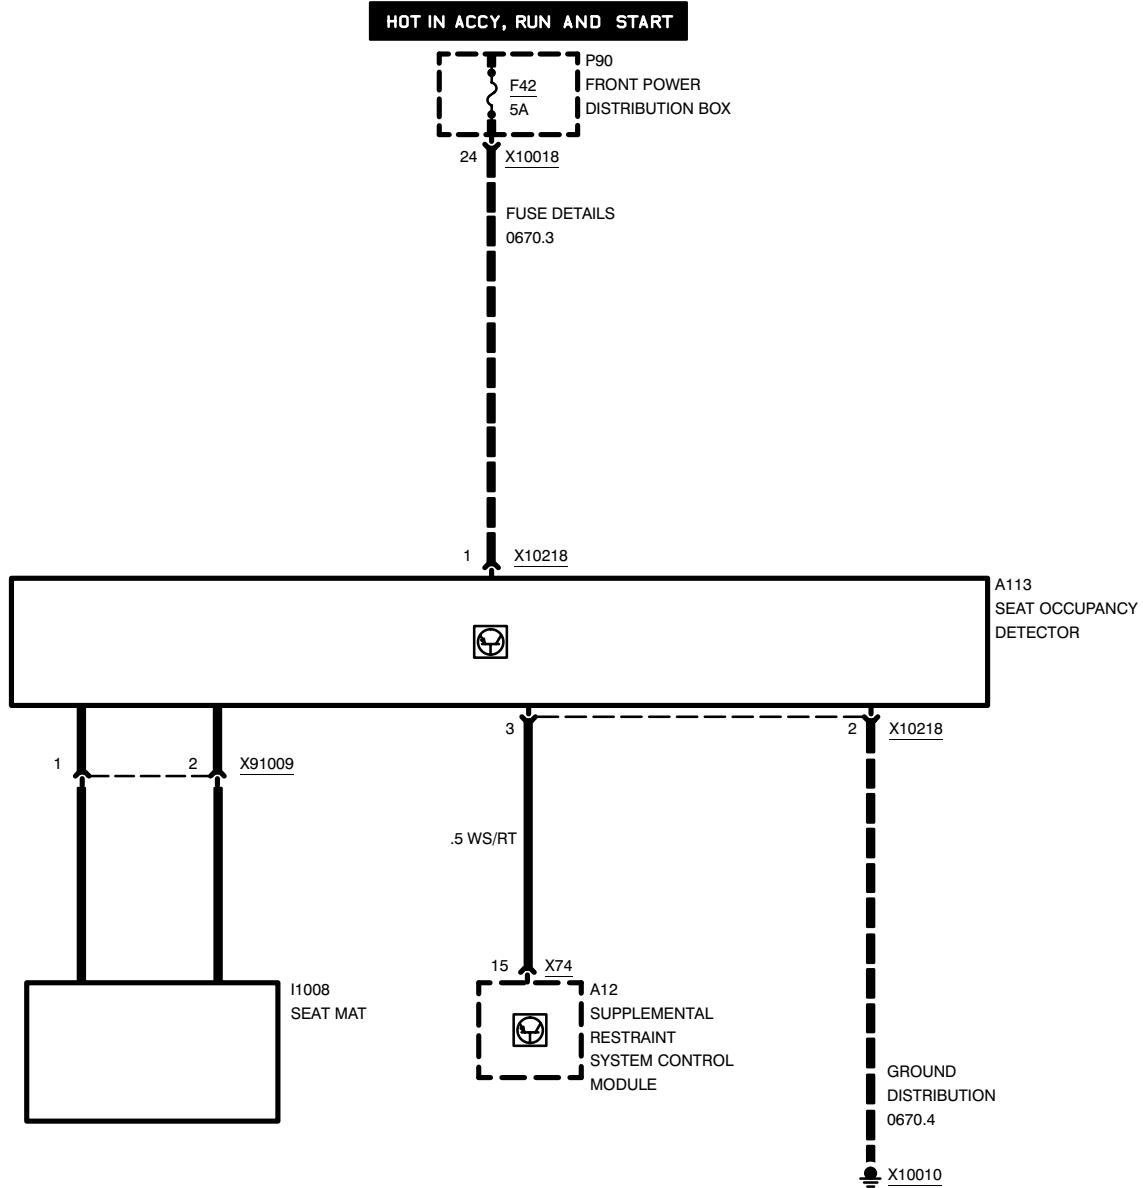


## SLIP CONTROL (ABS)

03/98

3450.0-00

1997

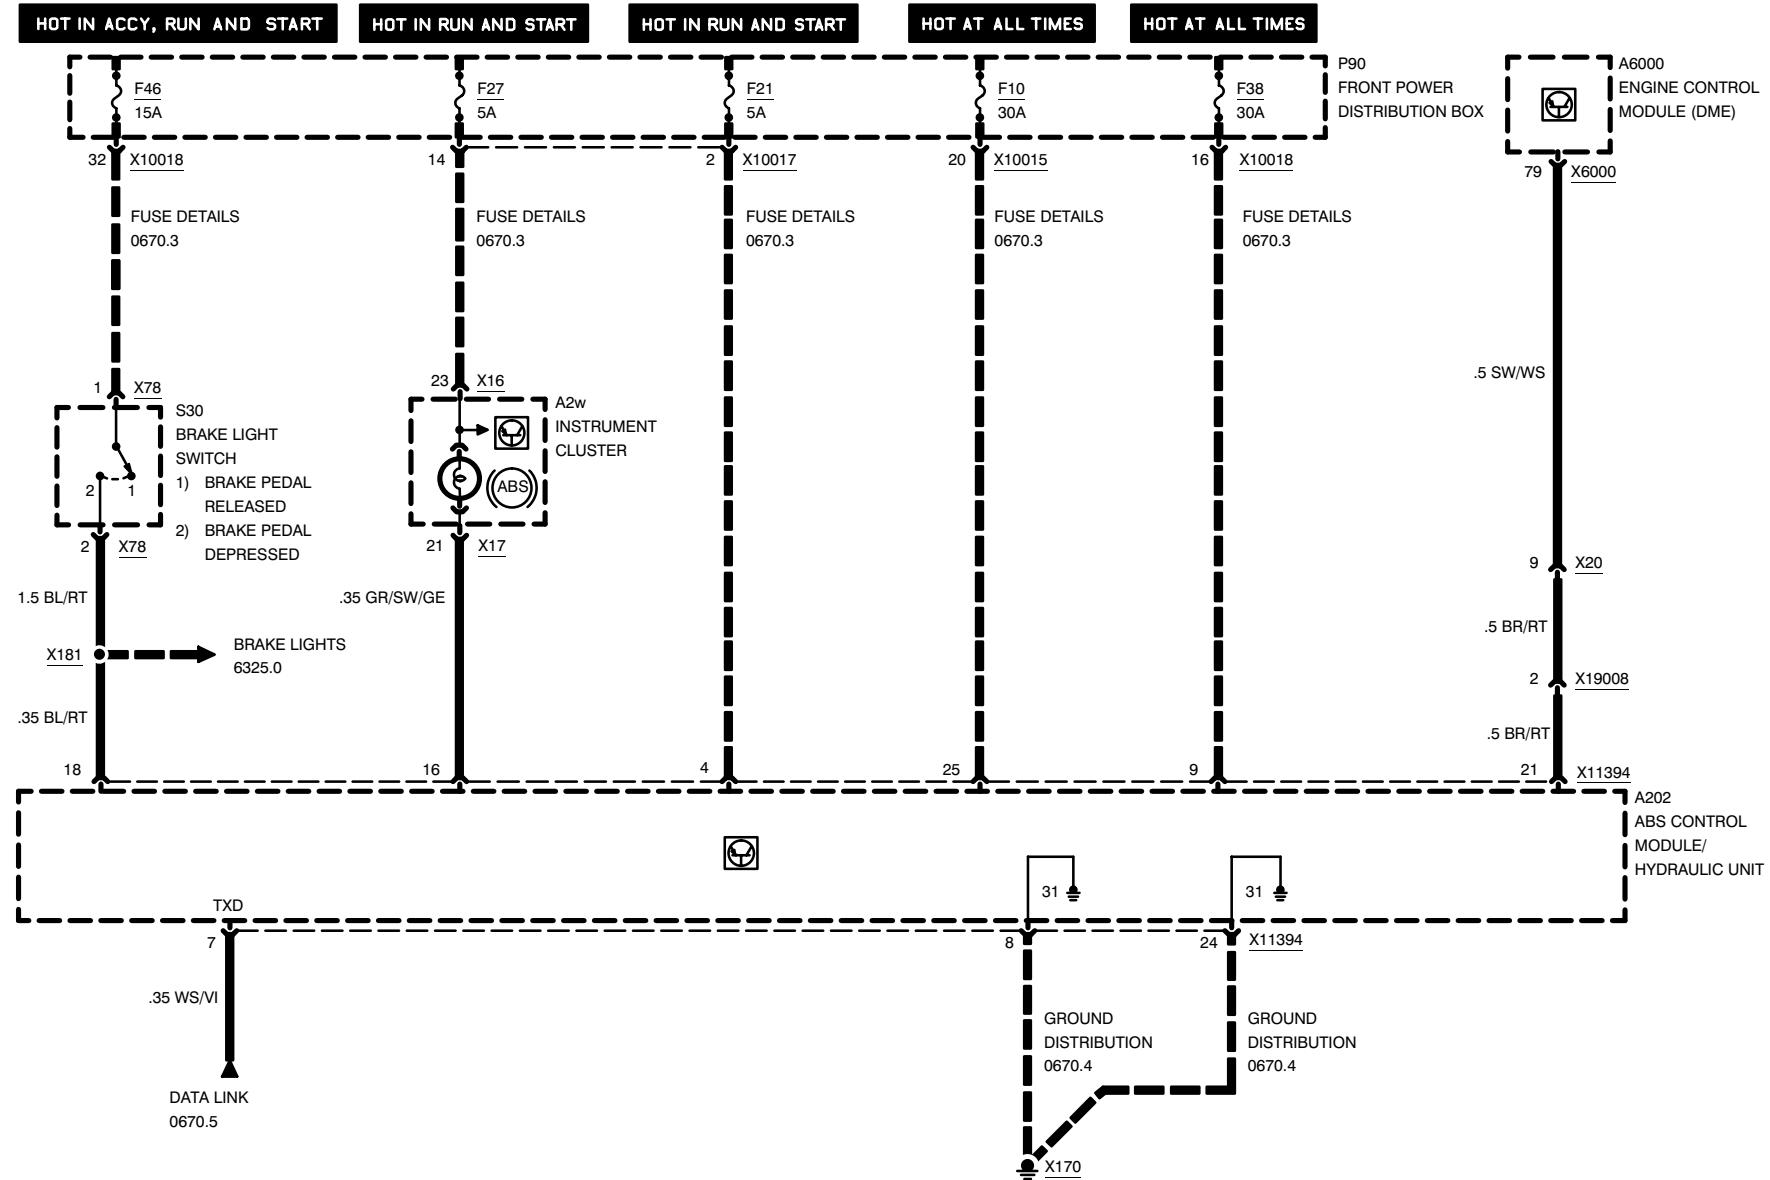


## SLIP CONTROL (ABS)


03/98


3450.0-01

1997

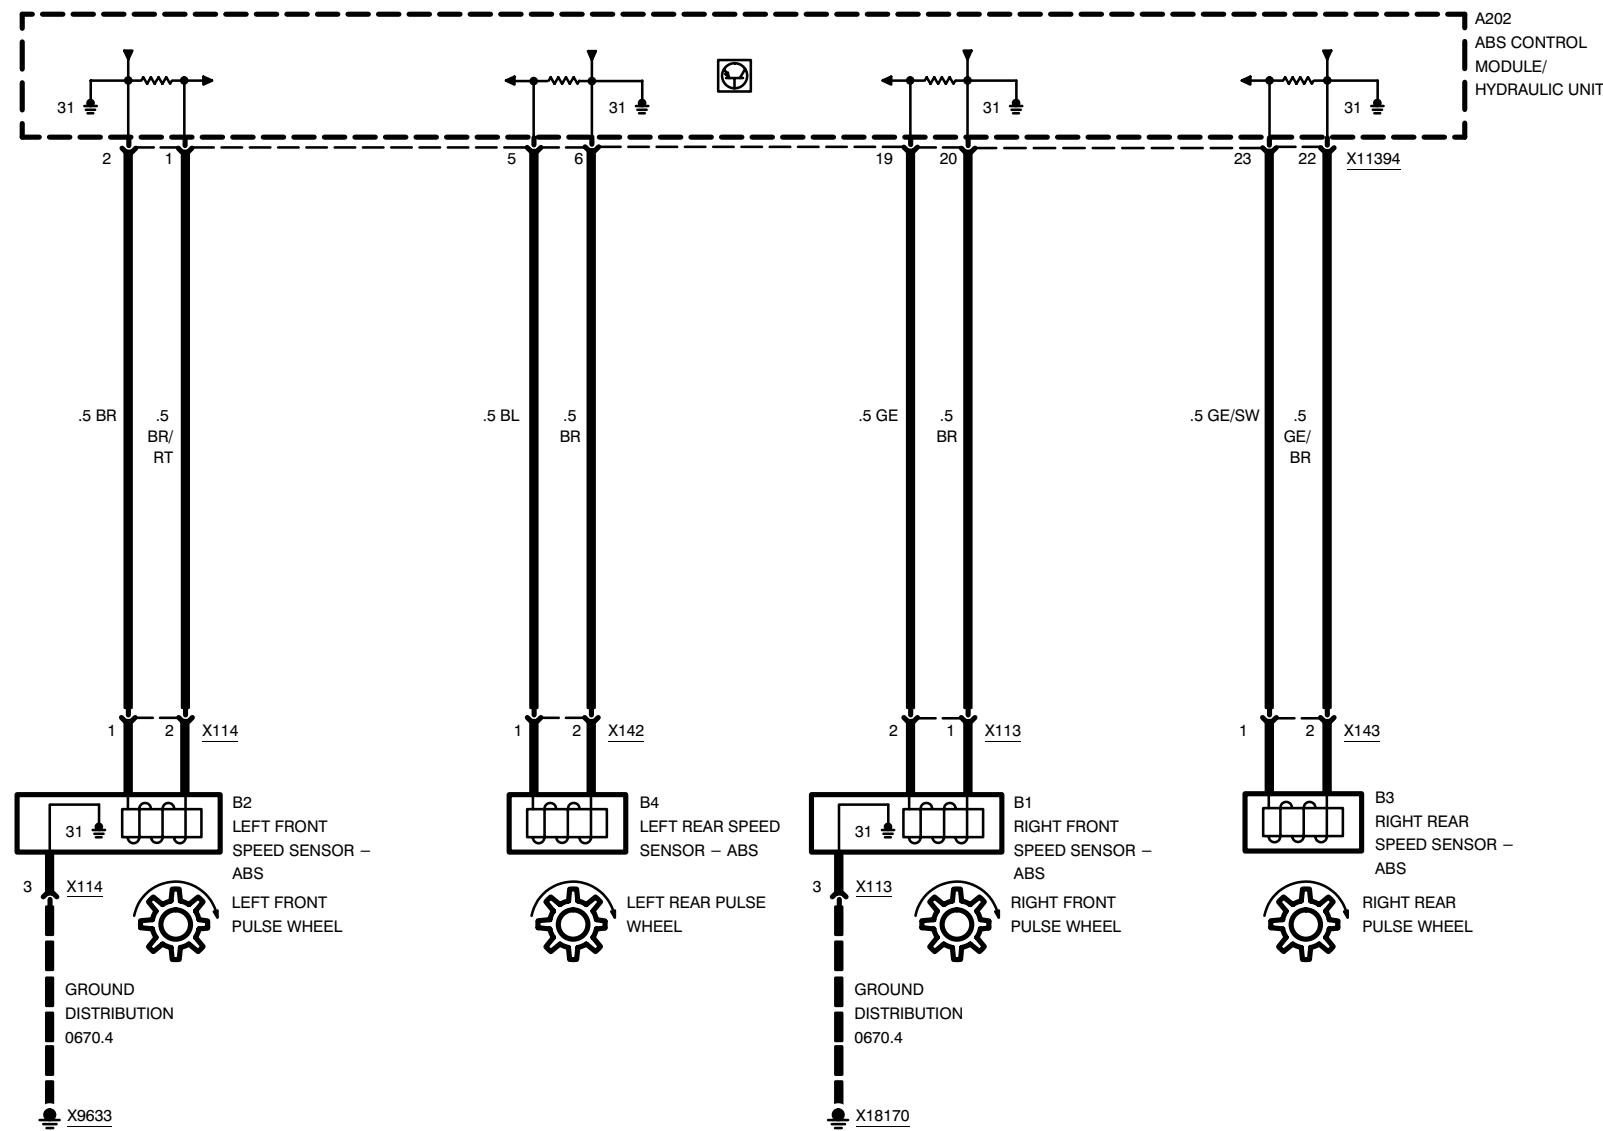

## 6-CYLINDER

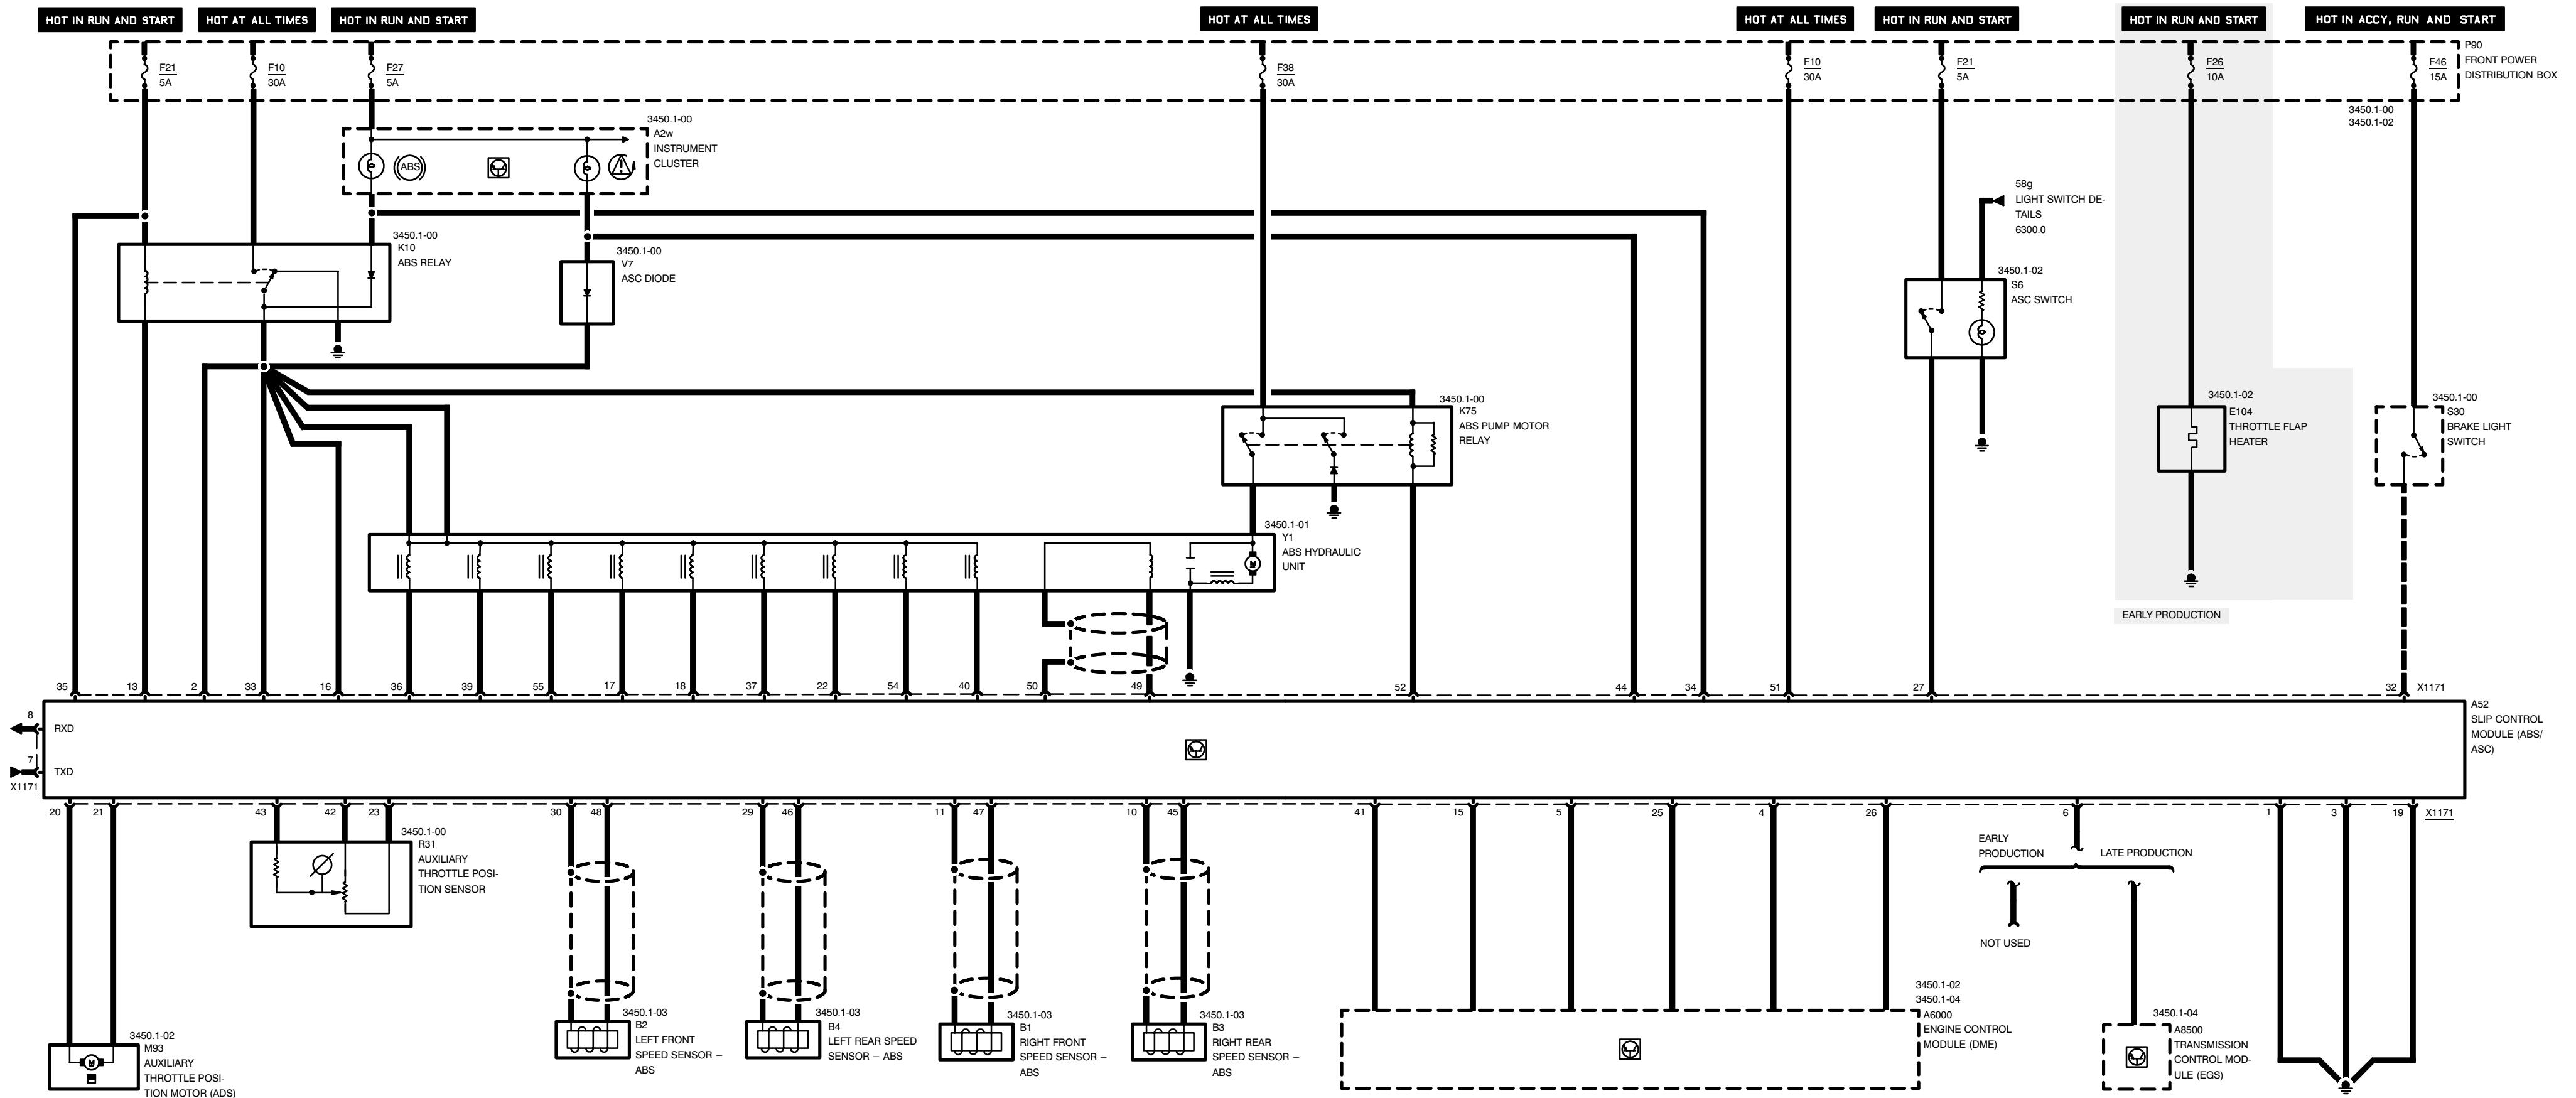

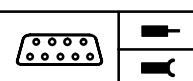

## Pin Assignments

6-Cylinder

X1171

Pin	Type	Description/Function	Connection
1	M	Ground	Ground
2	E	Battery voltage	ABS relay
3	M	Ground, module	Ground
4	E	Ignition cut-off signal	DME module
5	A	EML signal	DME module
6	A	Transmission influence	Transmission control module Early Production: Not used
7	E/A	TxD signal	Diagnostic link
8	A	RxD signal	Diagnostic link
9		Not used	
10	A	Sensor ground	ABS speed sensor rear right
11	A	Sensor ground	ABS speed sensor front right
12		Not used	
13	A	ABS-power protection relay	ABS power protection relay
14		Not used	
15	A	Right rear speed signal	DME module
16	E	Current	ABS relay
17	A	Solenoid valve signal left rear	ABS hydraulic unit
18	A	Solenoid valve signal left rear	ABS hydraulic unit
19	M	Ground	Ground
20	A	ADS step motor (-)	ADS step motor
21	A	ADS step motor (+)	ADS step motor
22	A	Solenoid valve signal right front	ABS hydraulic unit
23	E	ASC throttle flap potentiometer (-)	ASC throttle flap motor potentiometer
24		Not used	
25	E	Signal idle speed	DME module
26	A	Throttle flap position	DME module
27	E	ASC switch signal	ASC switch
28		Not used	
29	A	Sensor ground	ABS speed sensor rear left

E = Input, A = Output, M = Ground





Z3

**Pin Assignments****6-Cylinder**

Pin	Type	Description/Function	Connection
30	A	Sensor ground	ABS speed sensor front left
31		Not used	
32	E	Brake signal	Brake light switch
33	E	Plus supply	ABS protection relay
34	A	ABS lamp control	Instrument cluster
35	E	Ignition signal	Fuse 21
36	A	Solenoid valve	ABS hydraulic unit
37	A	Solenoid valve signal right front	ABS hydraulic unit
38		Not used	
39	A	Solenoid valve signal right rear	ABS hydraulic unit
40	A	Solenoid valve signal left front	ABS hydraulic unit
41	E	Speed signal	DME module
42	E	ASC throttle flap potentiometer (+)	ASC throttle flap potentiometer
43	E	ASC throttle flap signal	ASC throttle flap potentiometer
44	A	ASC lamp control	Instrument cluster
45	E	Speed sensor signal rear right	Speed sensor rear right
46	E	Speed sensor signal rear left	Speed sensor rear left
47	E	Speed sensor signal front right	Speed sensor front right
48	E	Speed sensor signal front left	Speed sensor front left
49	E	Pump motor sensor signal	ABS hydraulic unit
50	E	Shield pump motor sensor	ABS hydraulic unit
51	E	Plus supply	Front power distribution box, fuse 10
52	A	ABS pump motor relay	ABS pump motor relay
53		Not used	
54	A	Solenoid valve signal left front	ABS hydraulic unit
55	A	Solenoid valve signal left rear	ABS hydraulic unit

E = Input, A = Output, M = Ground

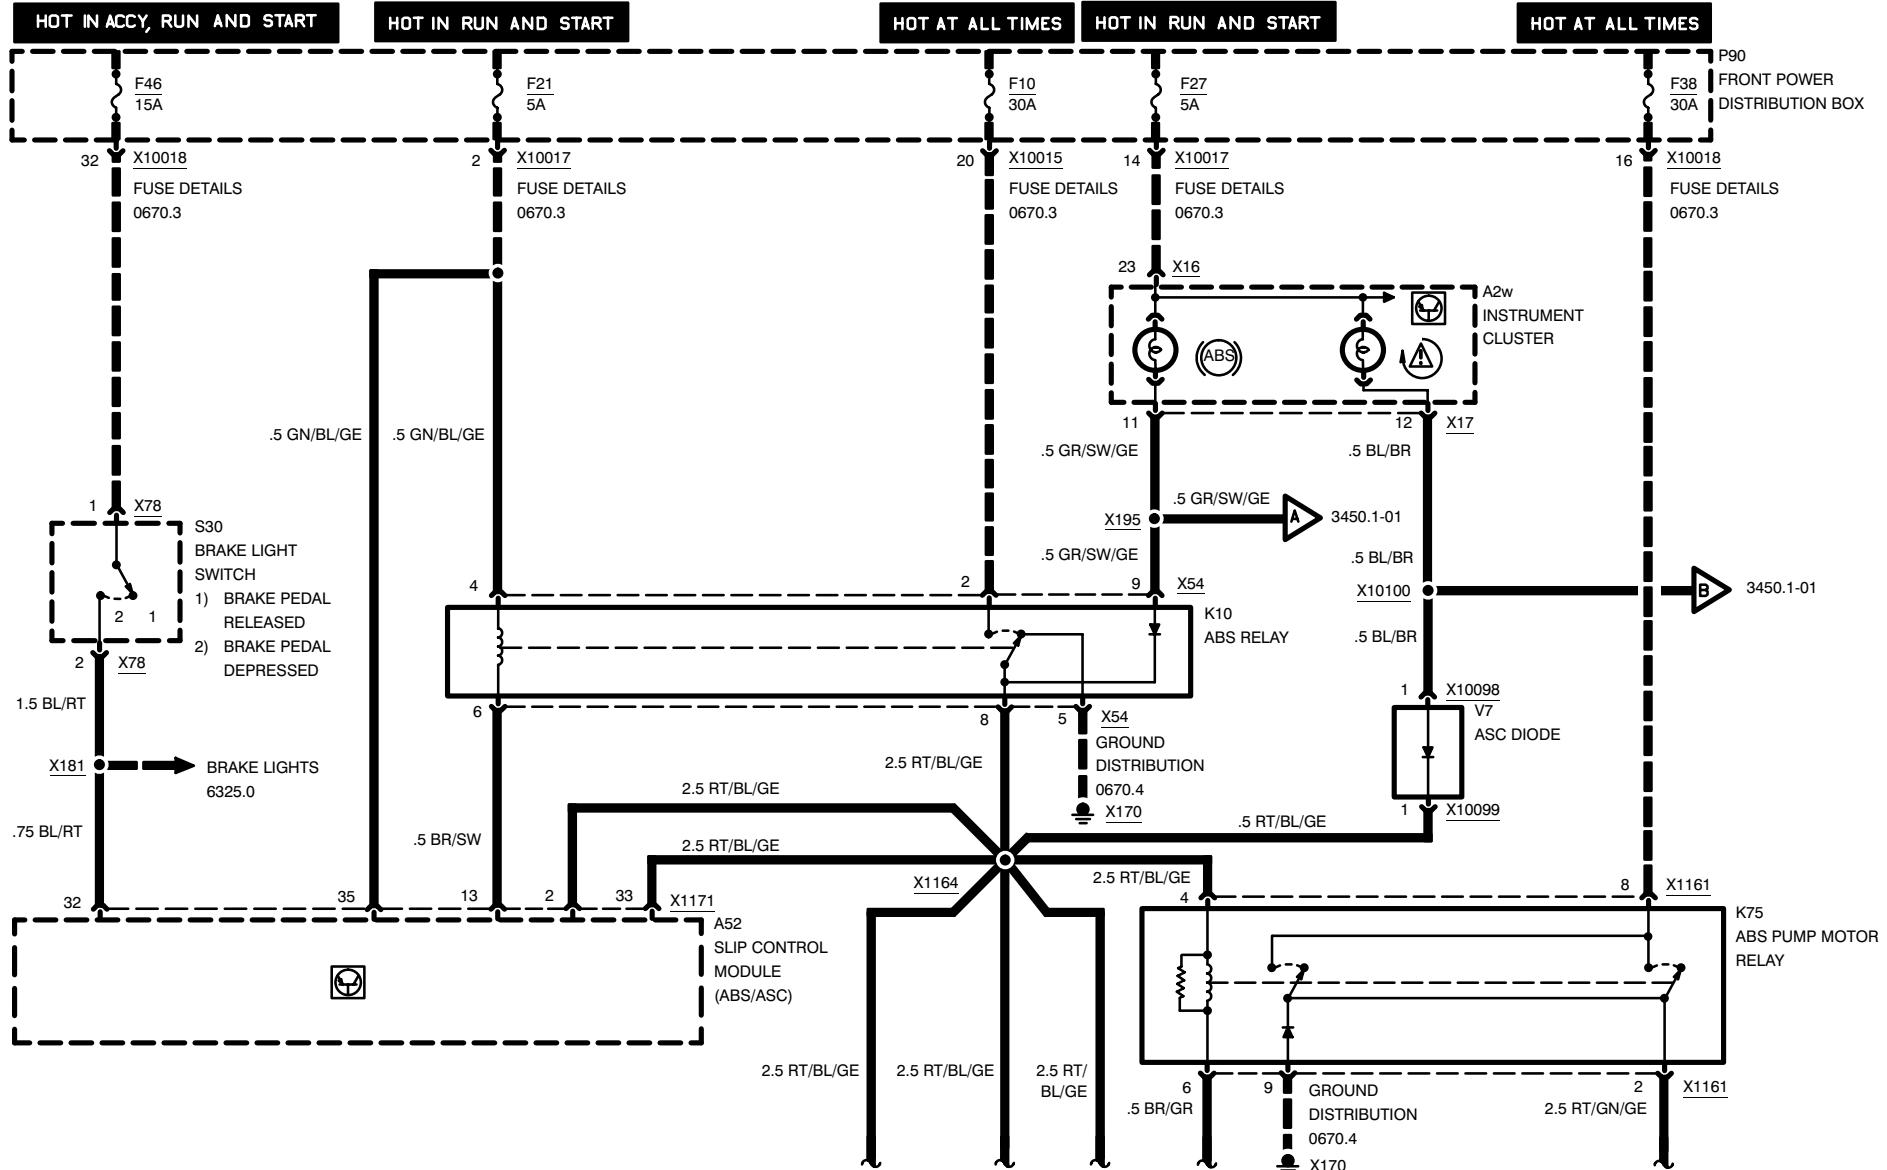

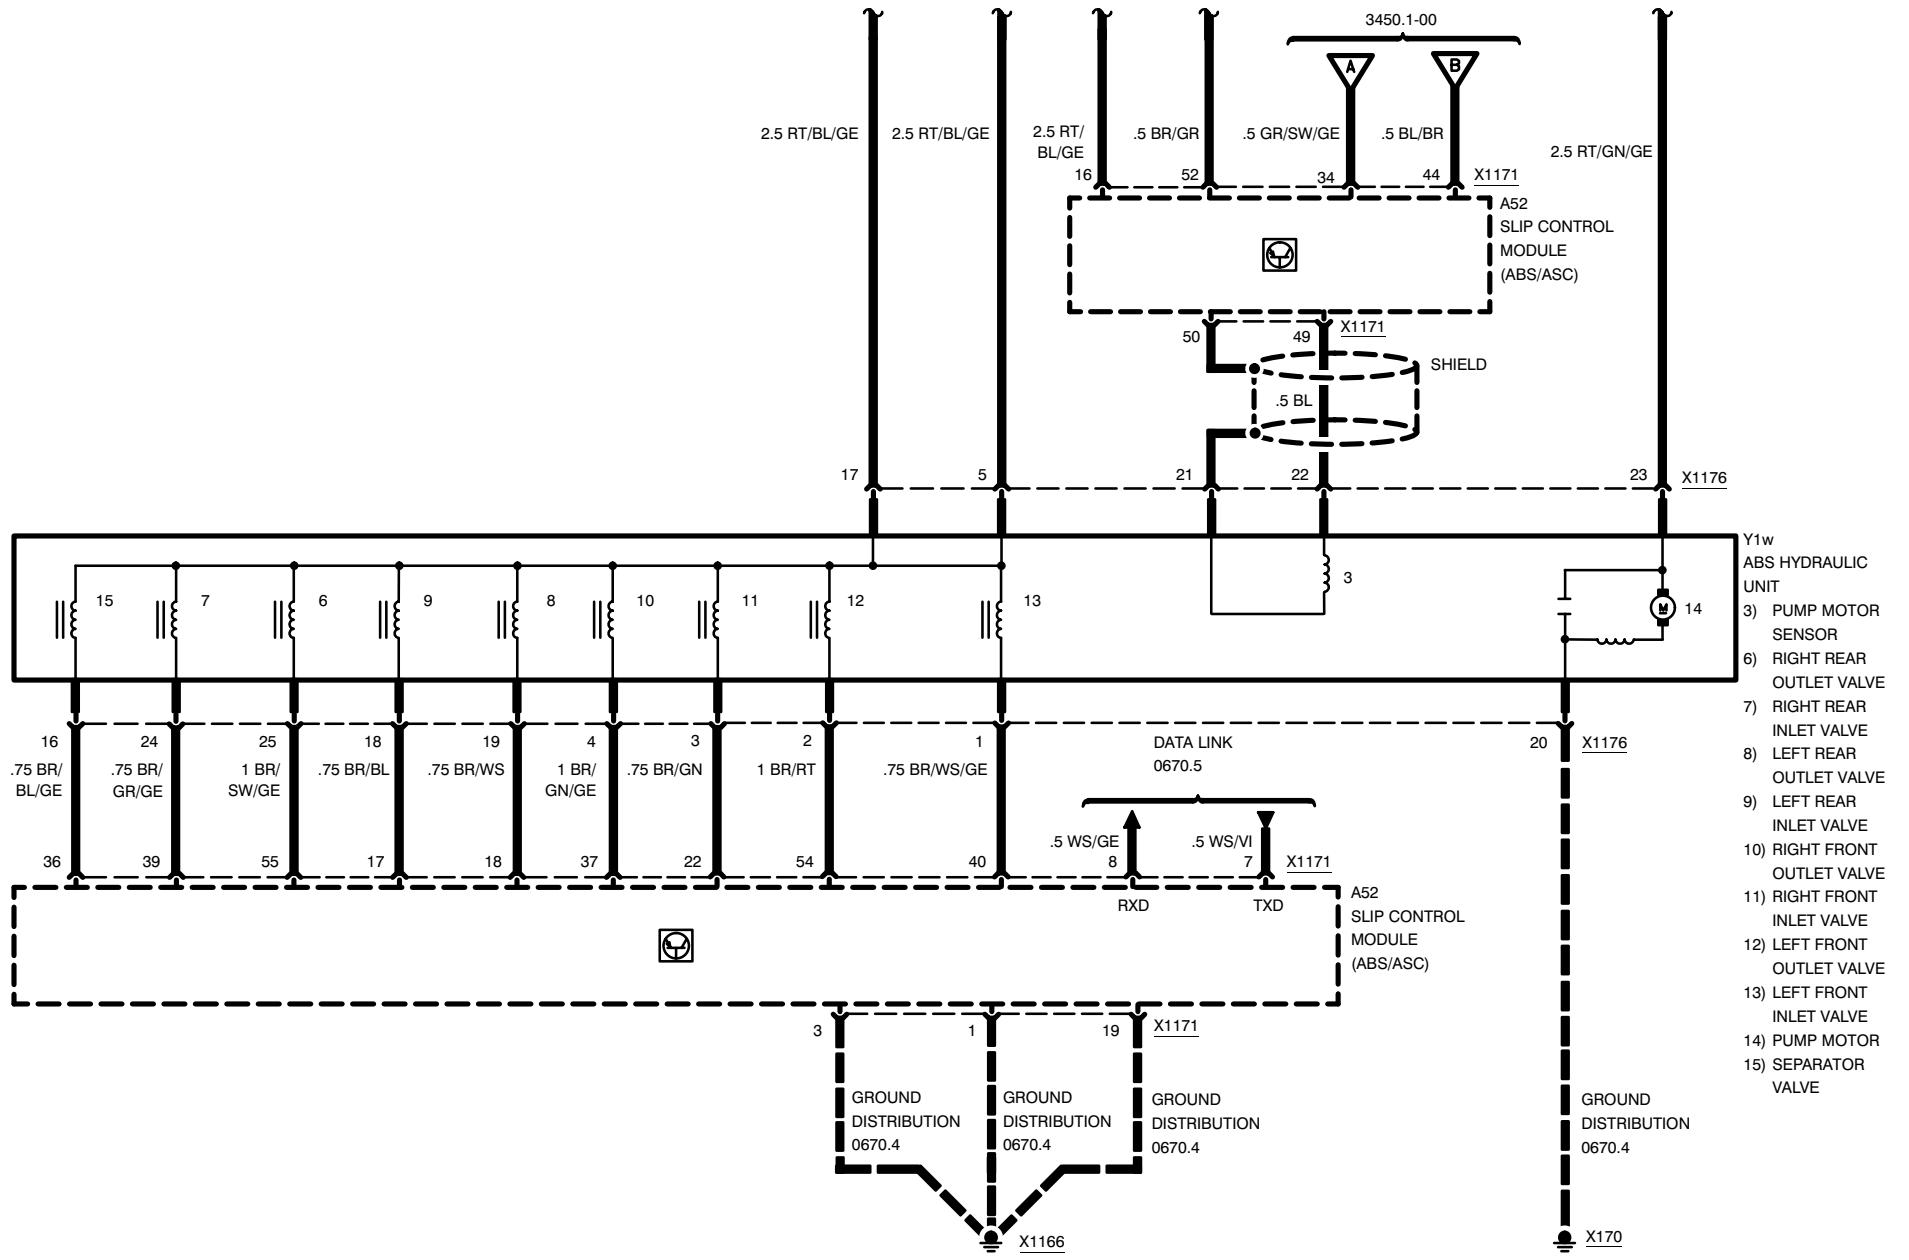


## SLIP CONTROL (ABS/ASC)

6-CYLINDER

03/98

3450.1-02

1997

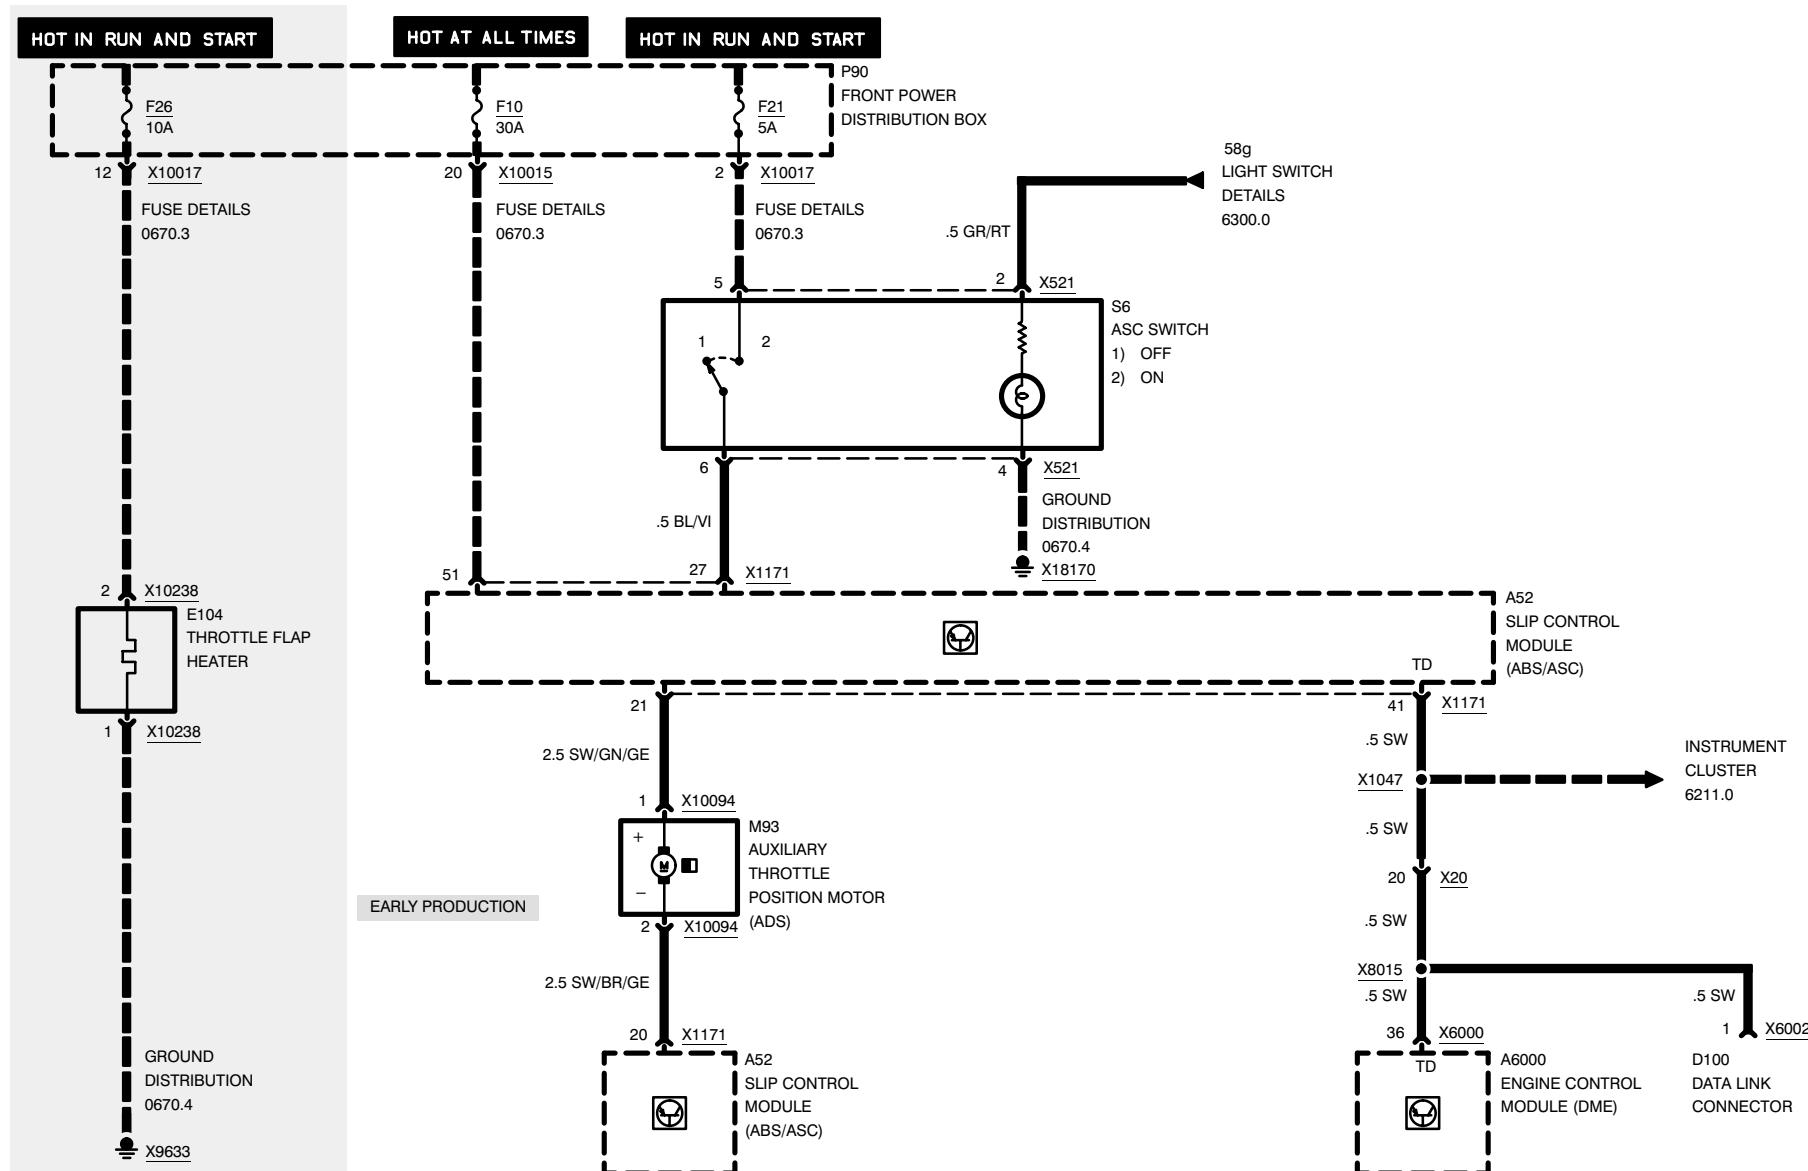


## SLIP CONTROL (ABS/ASC)

6-CYLINDER

03/98

3450.1-03

1997

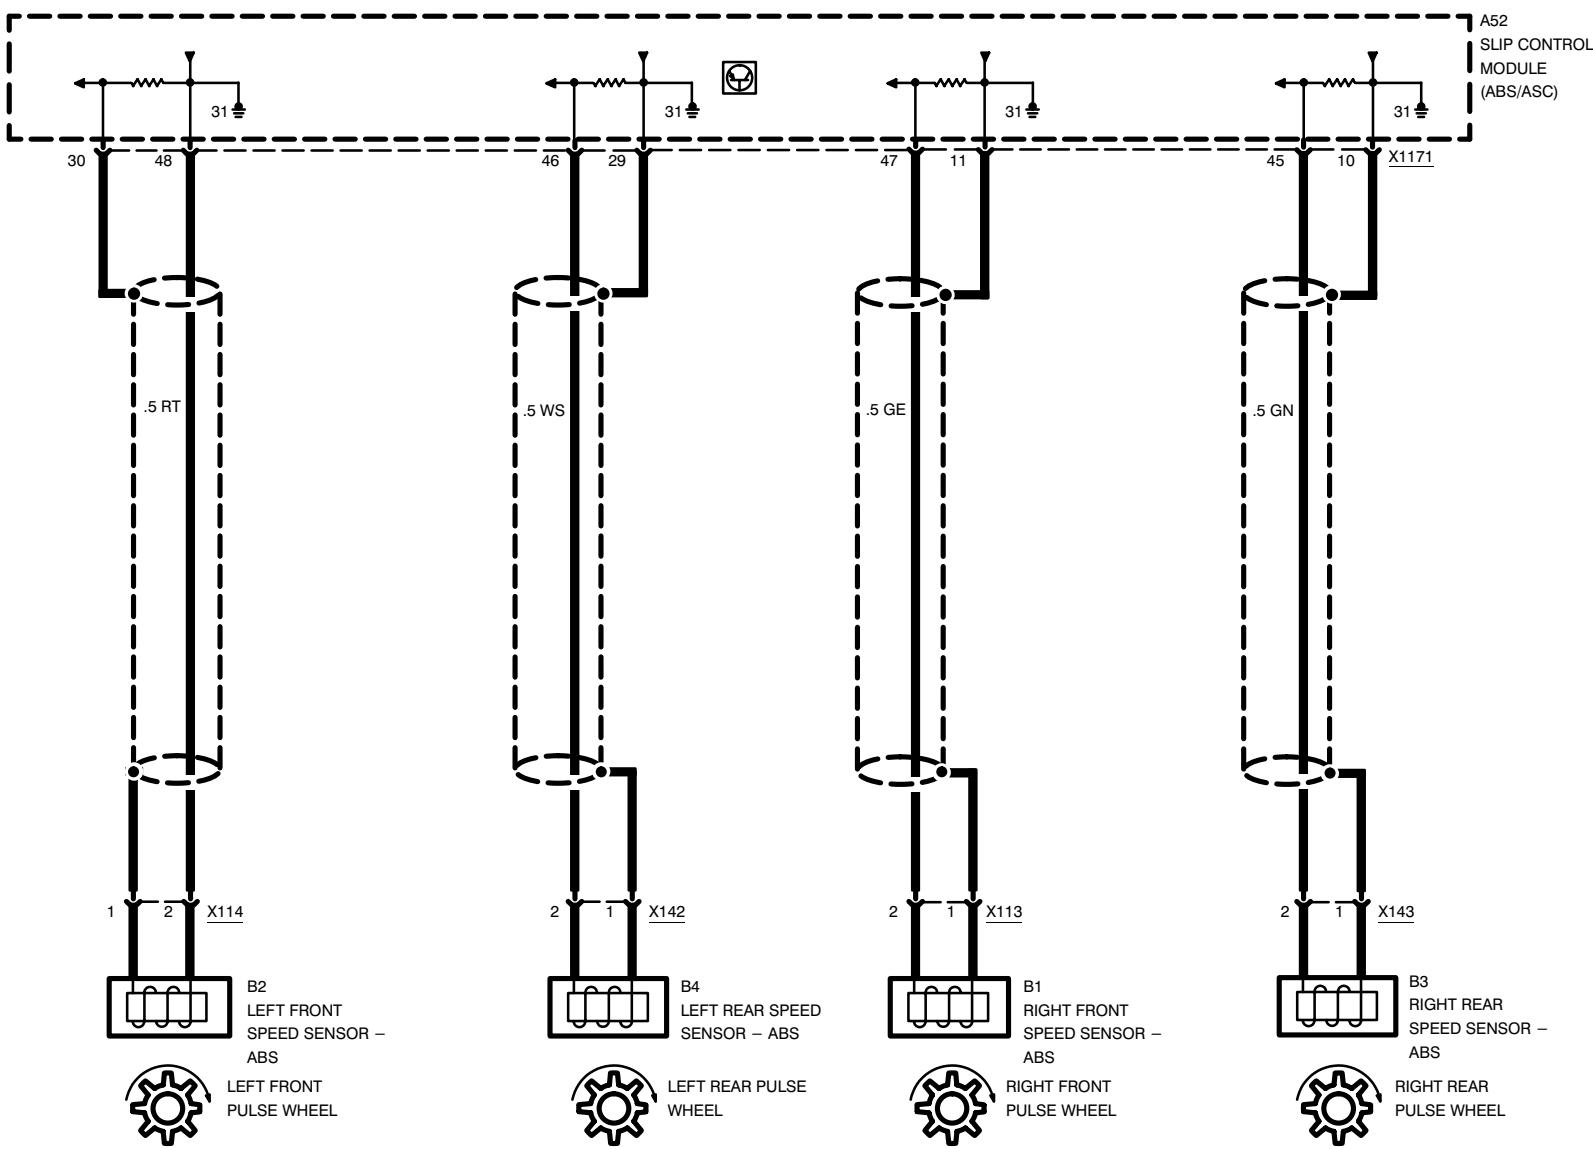


## SLIP CONTROL (ABS/ASC)

6-CYLINDER


03/98


3450.1-04

1997

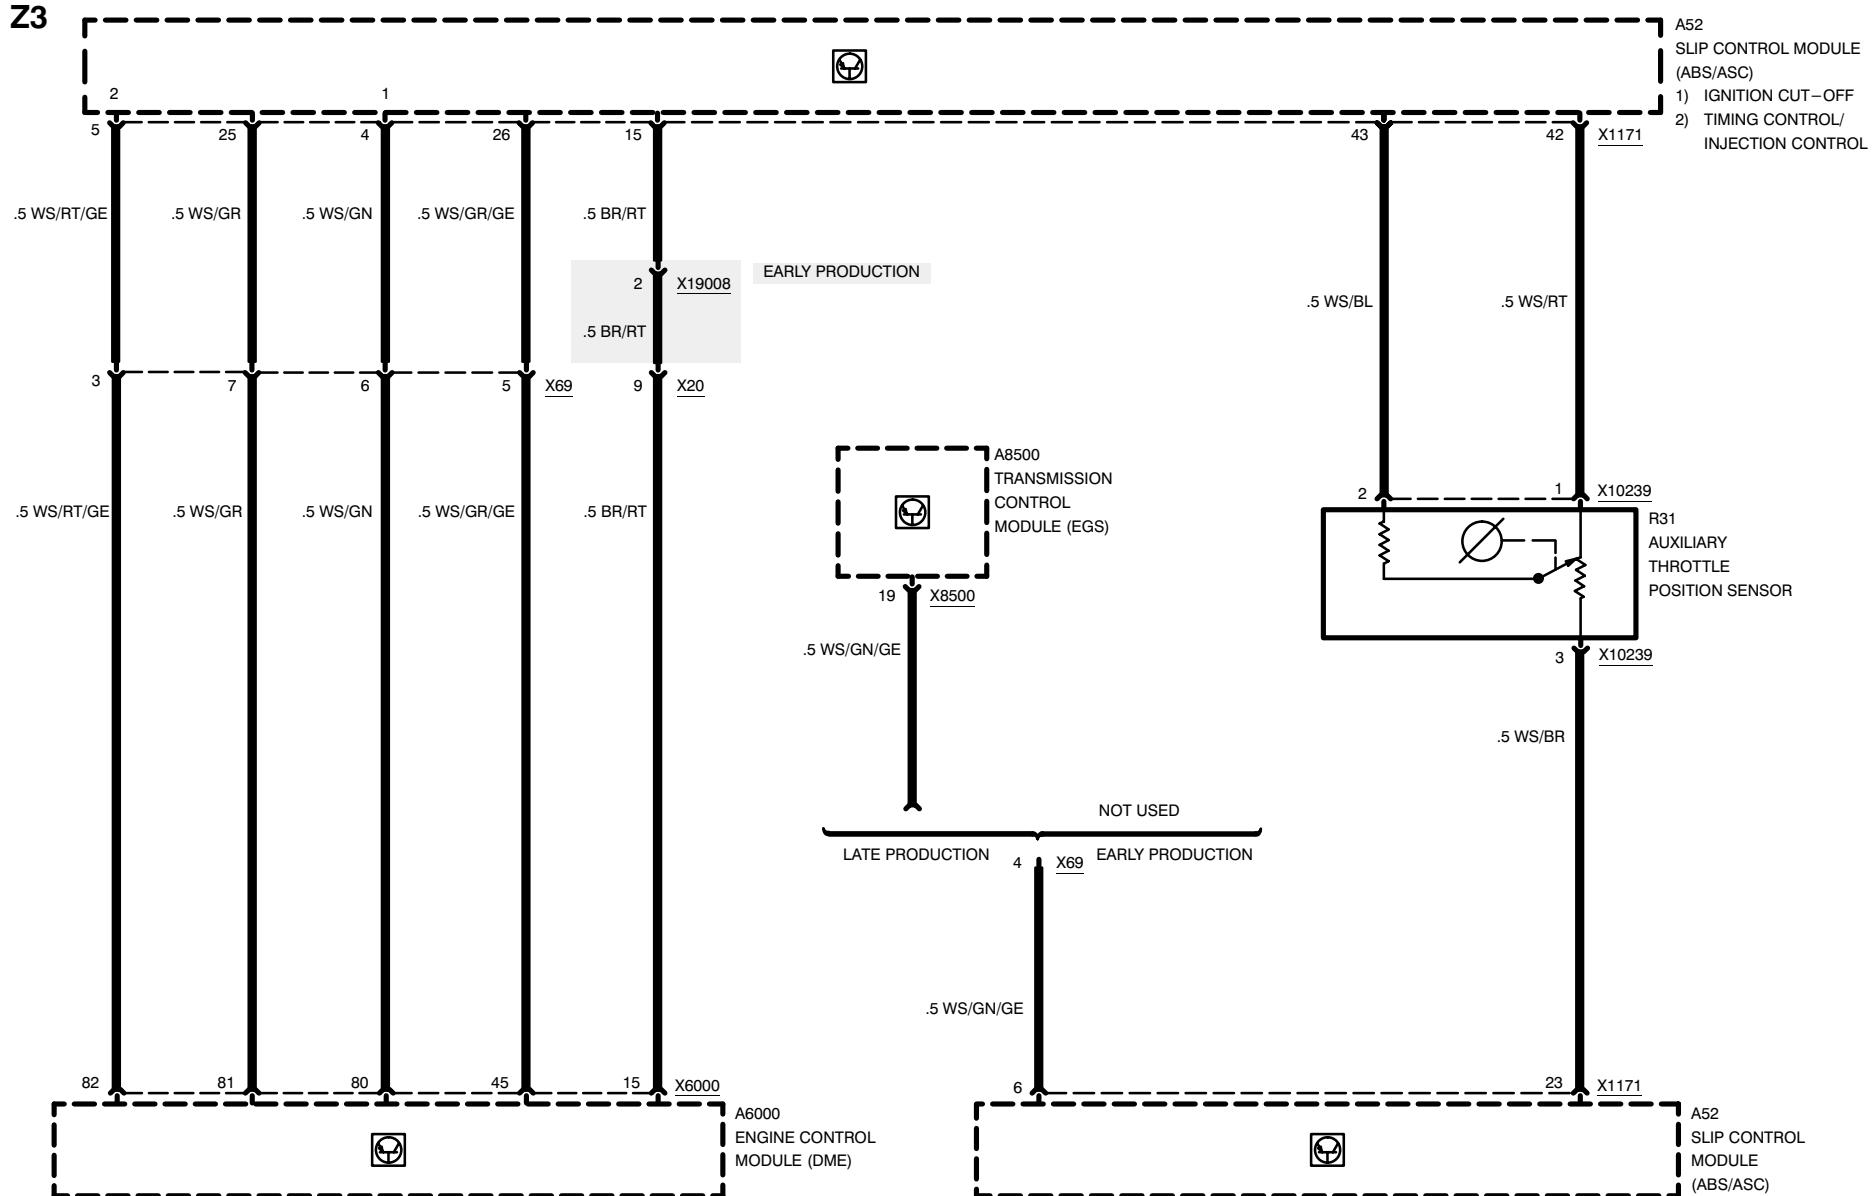

## **4-CYLINDER EARLY PRODUCTION**

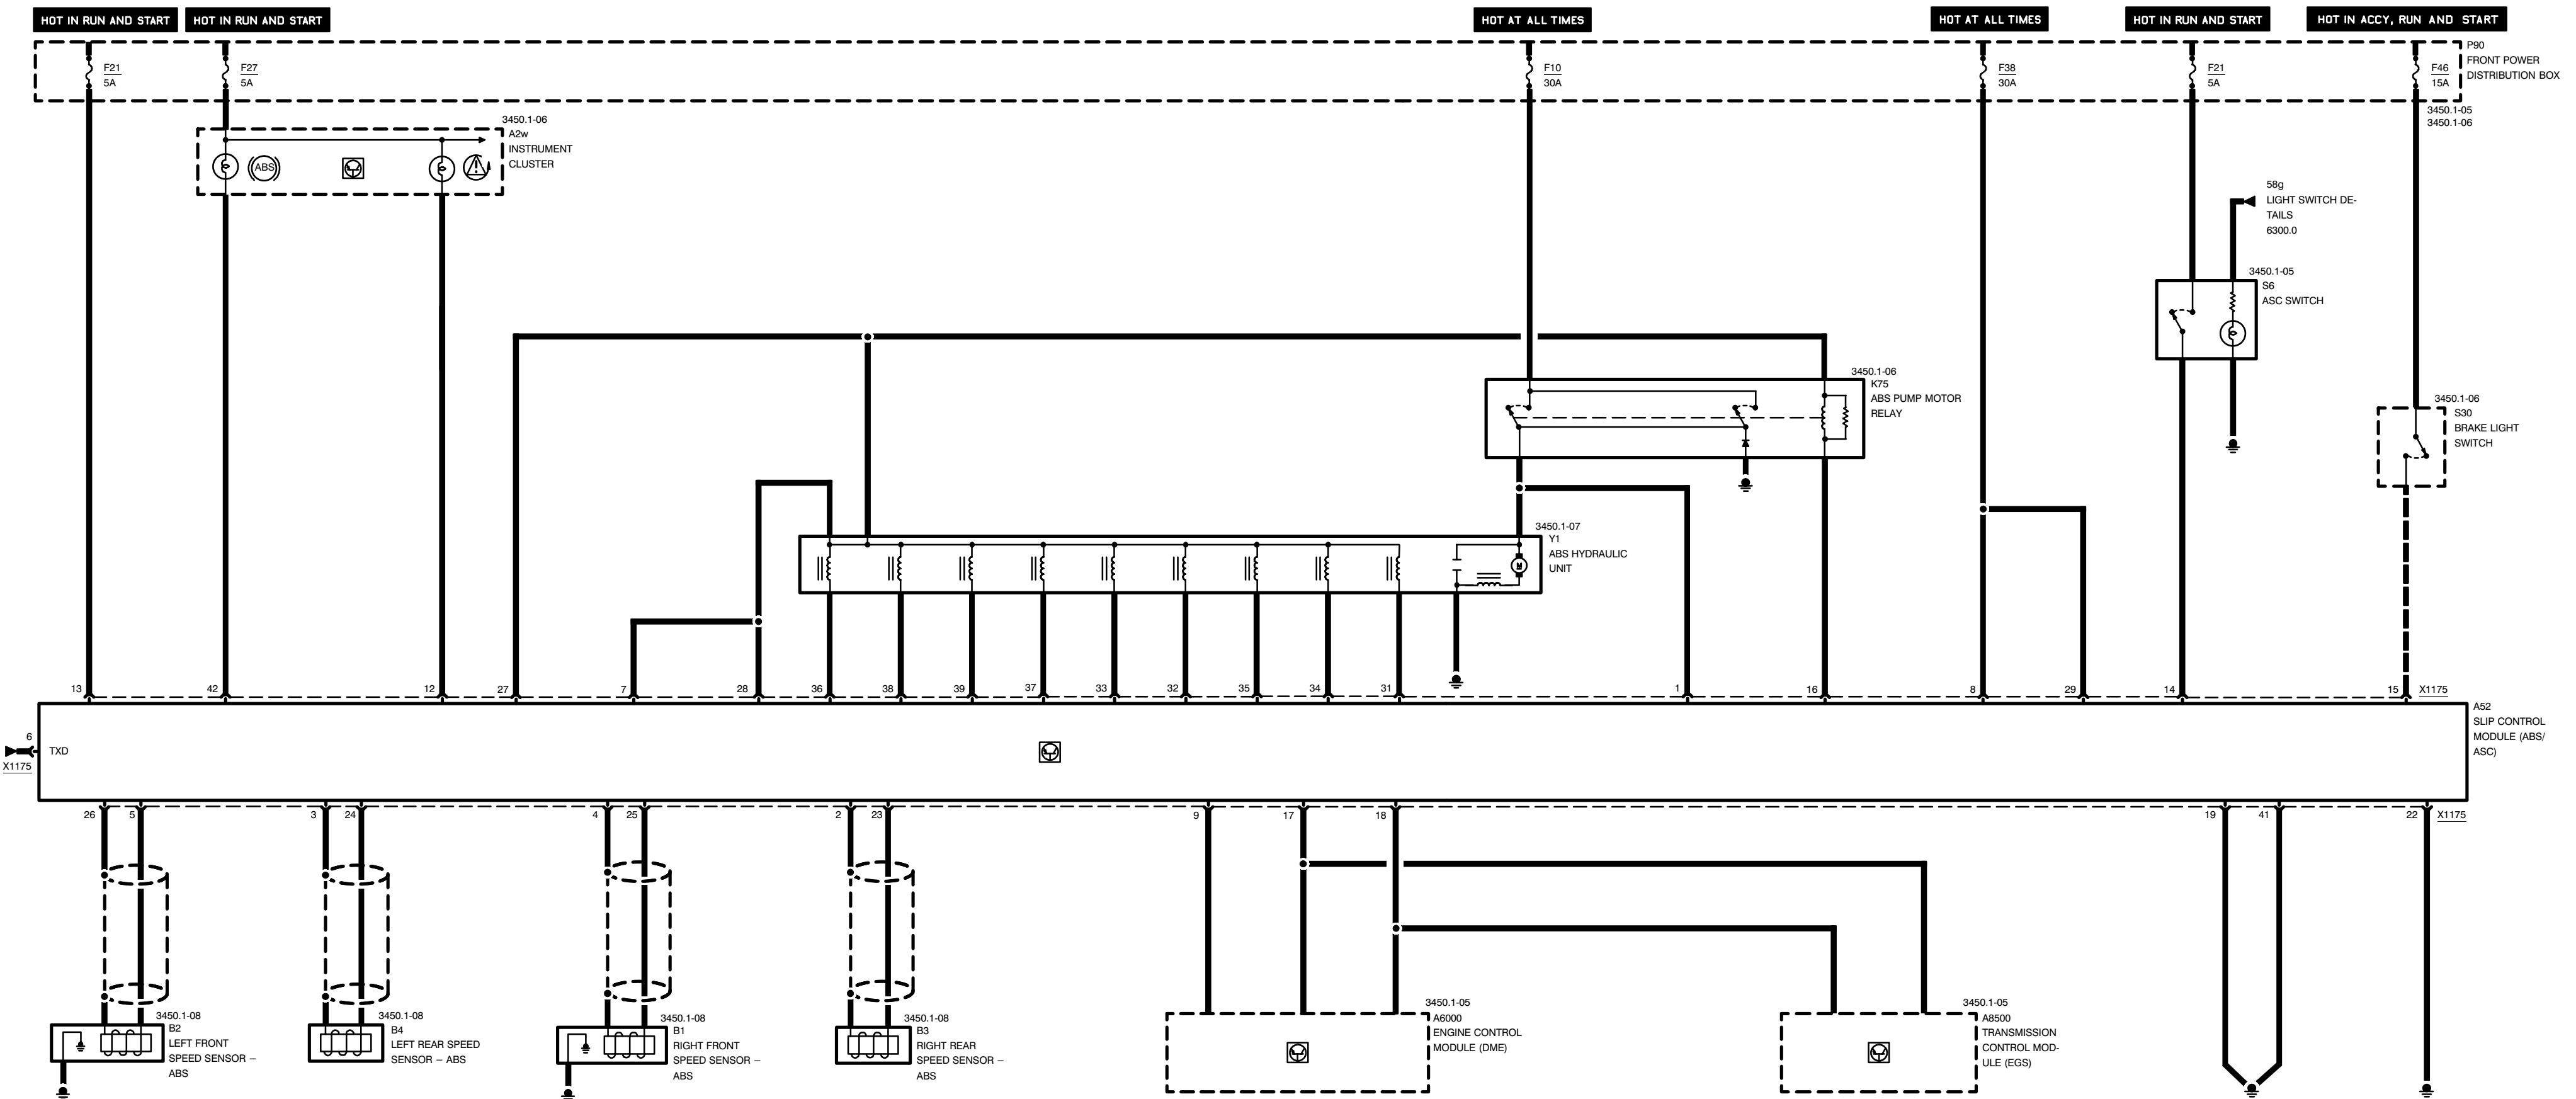

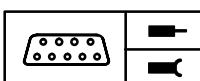**Pin Assignments****4-Cylinder  
Early Production****X1175**

Pin	Type	Description/Function	Connection
1	E	Signal pump motor	ABS pump motor relay
2	A	Sensor ground	Right rear speed sensor – ABS
3	A	Sensor ground	Left rear speed sensor – ABS
4	A	Sensor ground	Right front speed sensor – ABS
5	A	Sensor ground	Left front speed sensor – ABS
6	E/A	TxD diagnostic data link	Data link connector
7	A	ABS signal	ABS hydraulic unit
8	E	Voltage supply	Fuse 38
9	A	Speed signal right rear	DME module
10		Not used	
11		Not used	
12	A	ASC signal	Instrument cluster
13	E	Voltage supply	Fuse 21
14	E	ASC signal	ASC switch
15	E	Brake pedal position	Brake light switch
16	A	Activate relay	ABS pump motor relay
17	E/A	CAN HIGH	DME/EGS module
18	E/A	CAN LOW	DME/EGS module
19	M	Ground	Ground point
20		Not used	
21		Not used	
22	M	Ground	Ground point
23	E	Speed signal	Right rear speed sensor – ABS
24	E	Speed signal	Left rear speed sensor – ABS
25	E	Speed signal	Right front speed sensor – ABS
26	E	Speed signal	Left front speed sensor – ABS
27	A	ABS signal	ABS pump motor relay/Hydraulic unit
28	A	ABS signal	ABS hydraulic unit
29	E	Voltage supply	Fuse 38
30		Not used	

E = Input, A = Output, M = Ground




03/98

3450.1b-b

1997

Z3

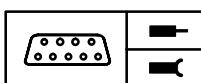

## Pin Assignments

4-Cylinder  
Early Production

Pin	Type	Description/Function	Connection
31	A	Seperator valve	ABS hydraulic unit
32	A	Left rear inlet valve	ABS hydraulic unit
33	A	Left rear outlet valve	ABS hydraulic unit
34	A	Right rear inlet valve	ABS hydraulic unit
35	A	Right rear outlet valve	ABS hydraulic unit
36	A	Left front outlet valve	ABS hydraulic unit
37	A	Right front outlet valve	ABS hydraulic unit
38	A	Left front inlet valve	ABS hydraulic unit
39	A	Right front inlet valve	ABS hydraulic unit
40		Not used	
41	M	Ground	Ground point
42	A	ABS signal	Instrument cluster

E = Input, A = Output, M = Ground

## SLIP CONTROL (ABS/ASC)


## 4-CYLINDER EARLY PRODUCTION

03/98

3450.1-05

1997

Z3

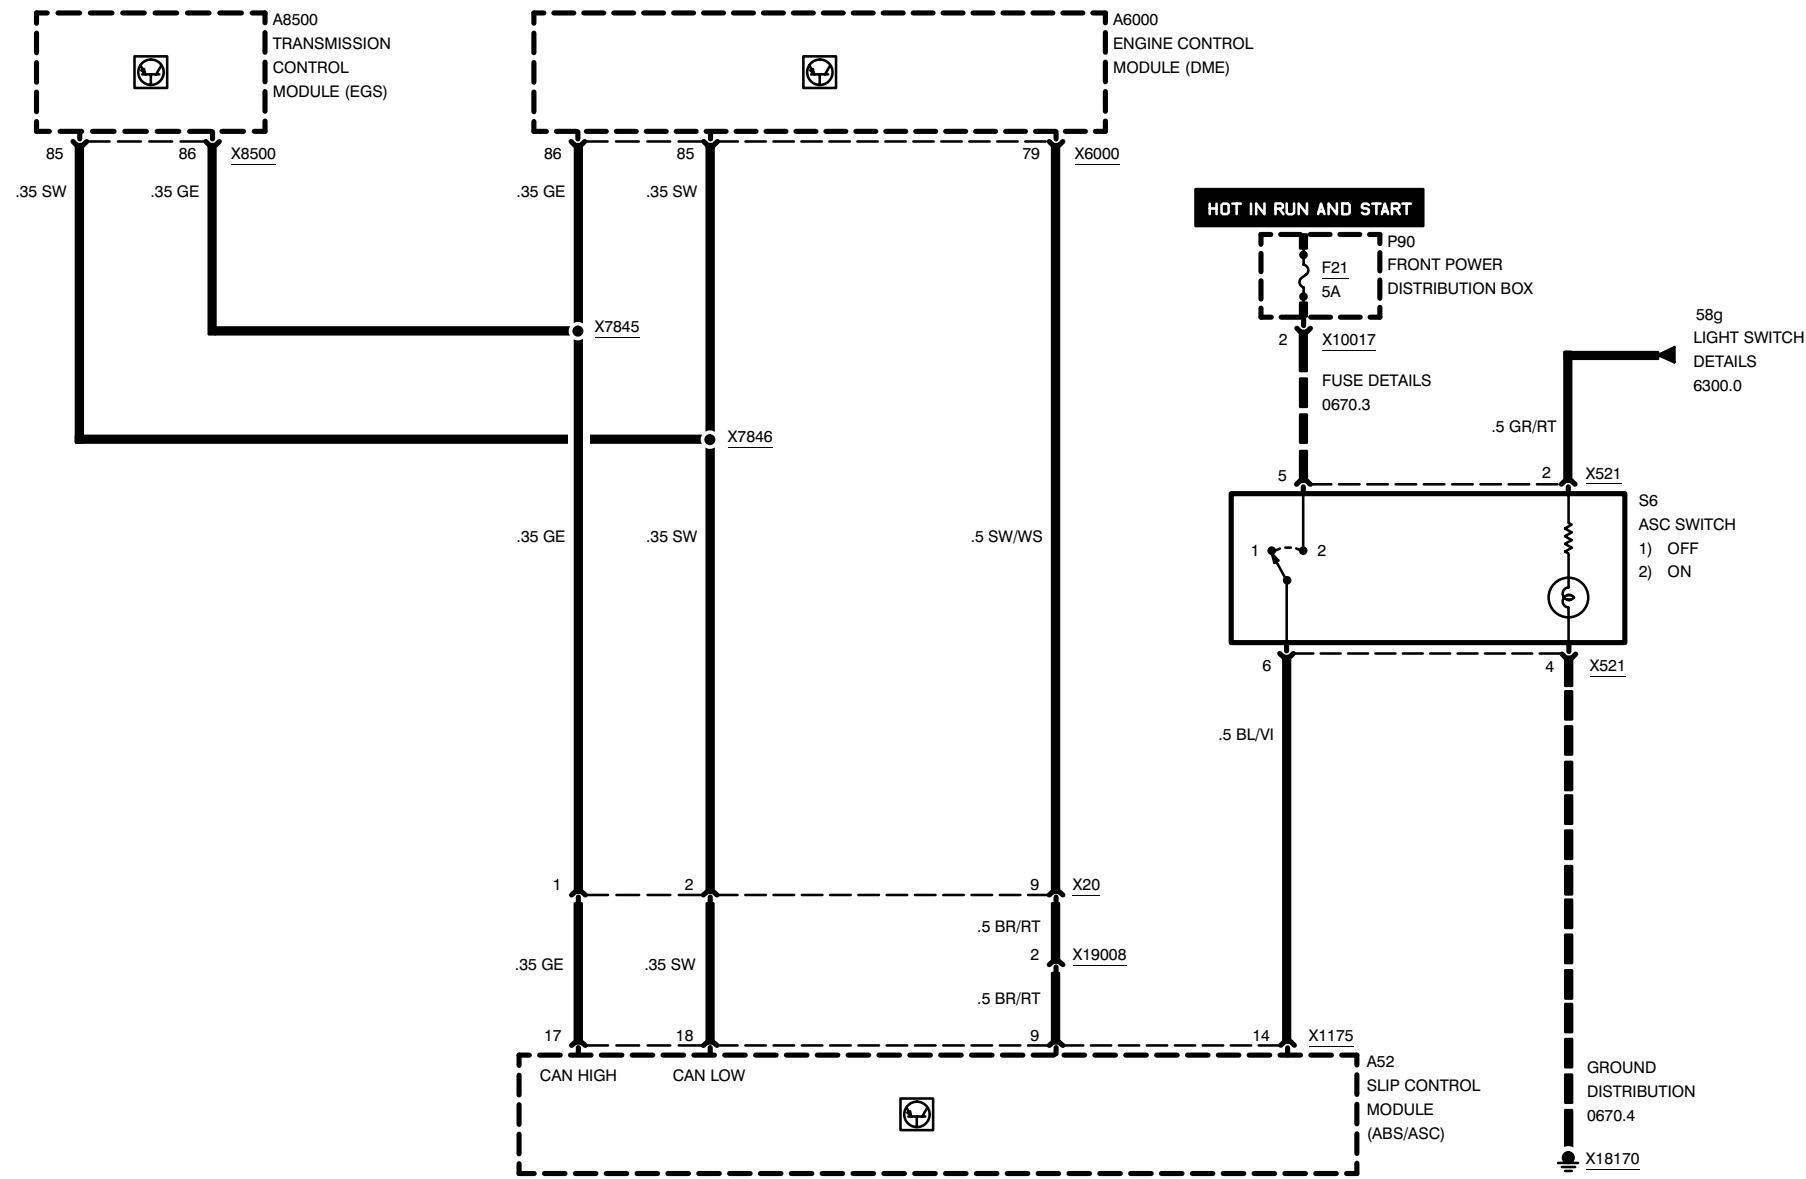


## SLIP CONTROL (ABS/ASC)


## 4-CYLINDER EARLY PRODUCTION

03/98

3450.1-06

1997

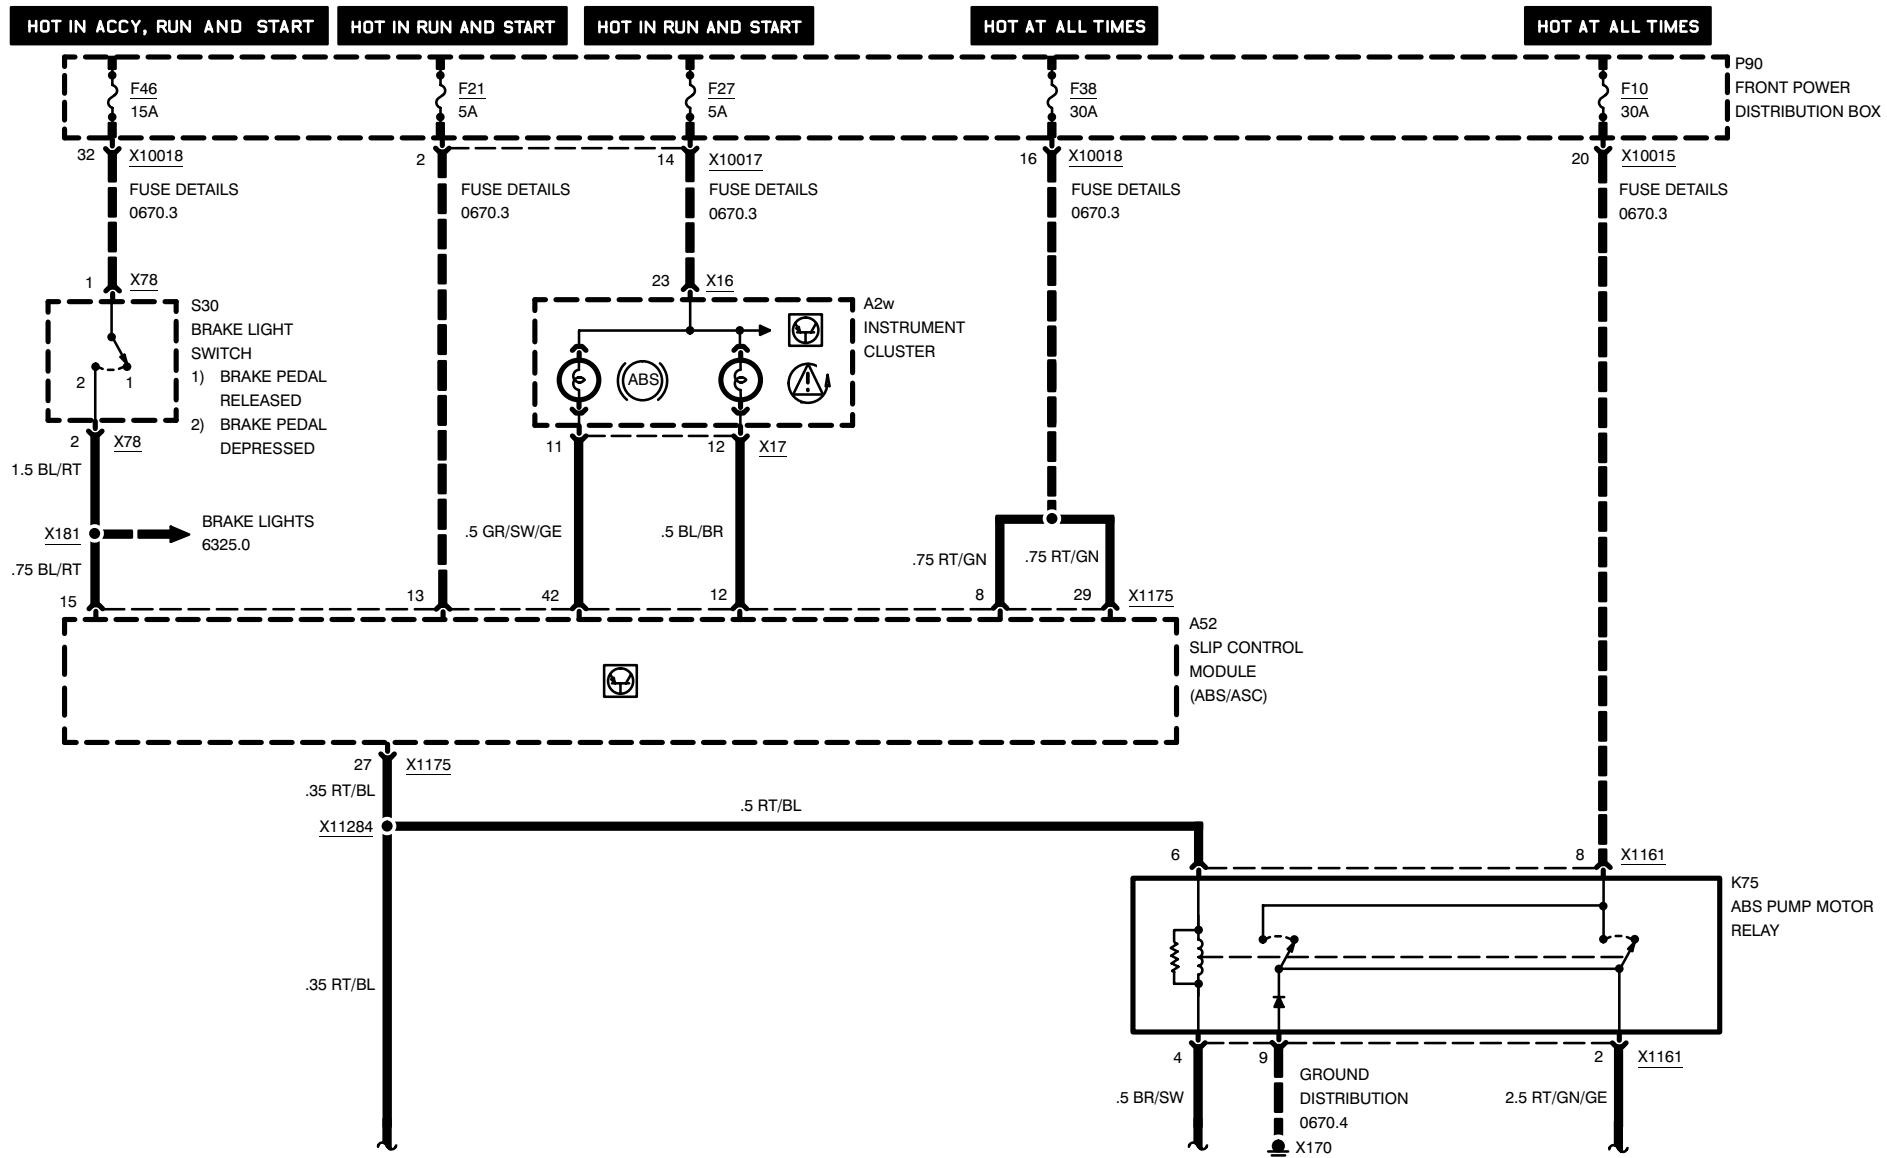

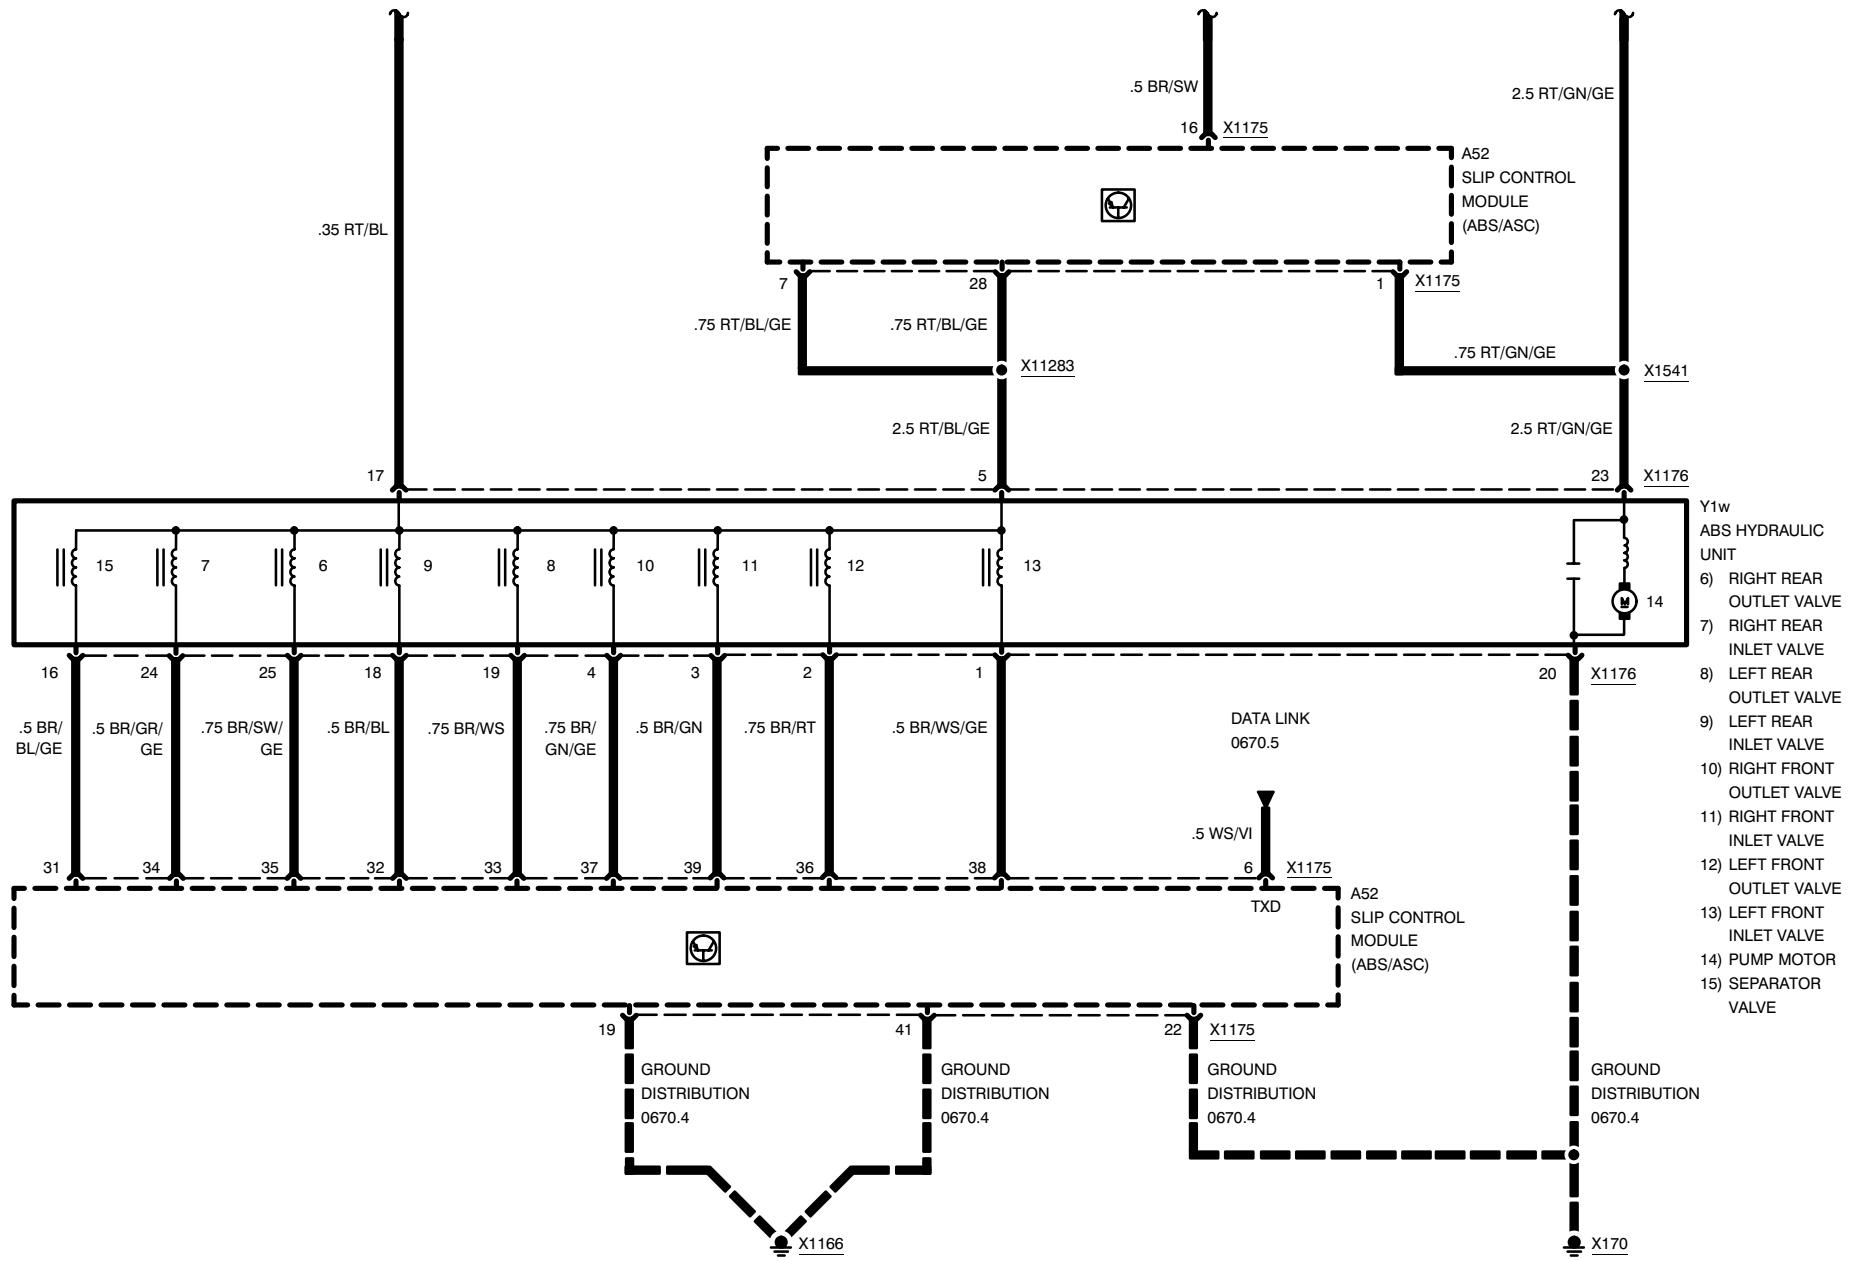


## SLIP CONTROL (ABS/ASC)

4-CYLINDER    EARLY PRODUCTION


03/98


3450.1 -08

1997

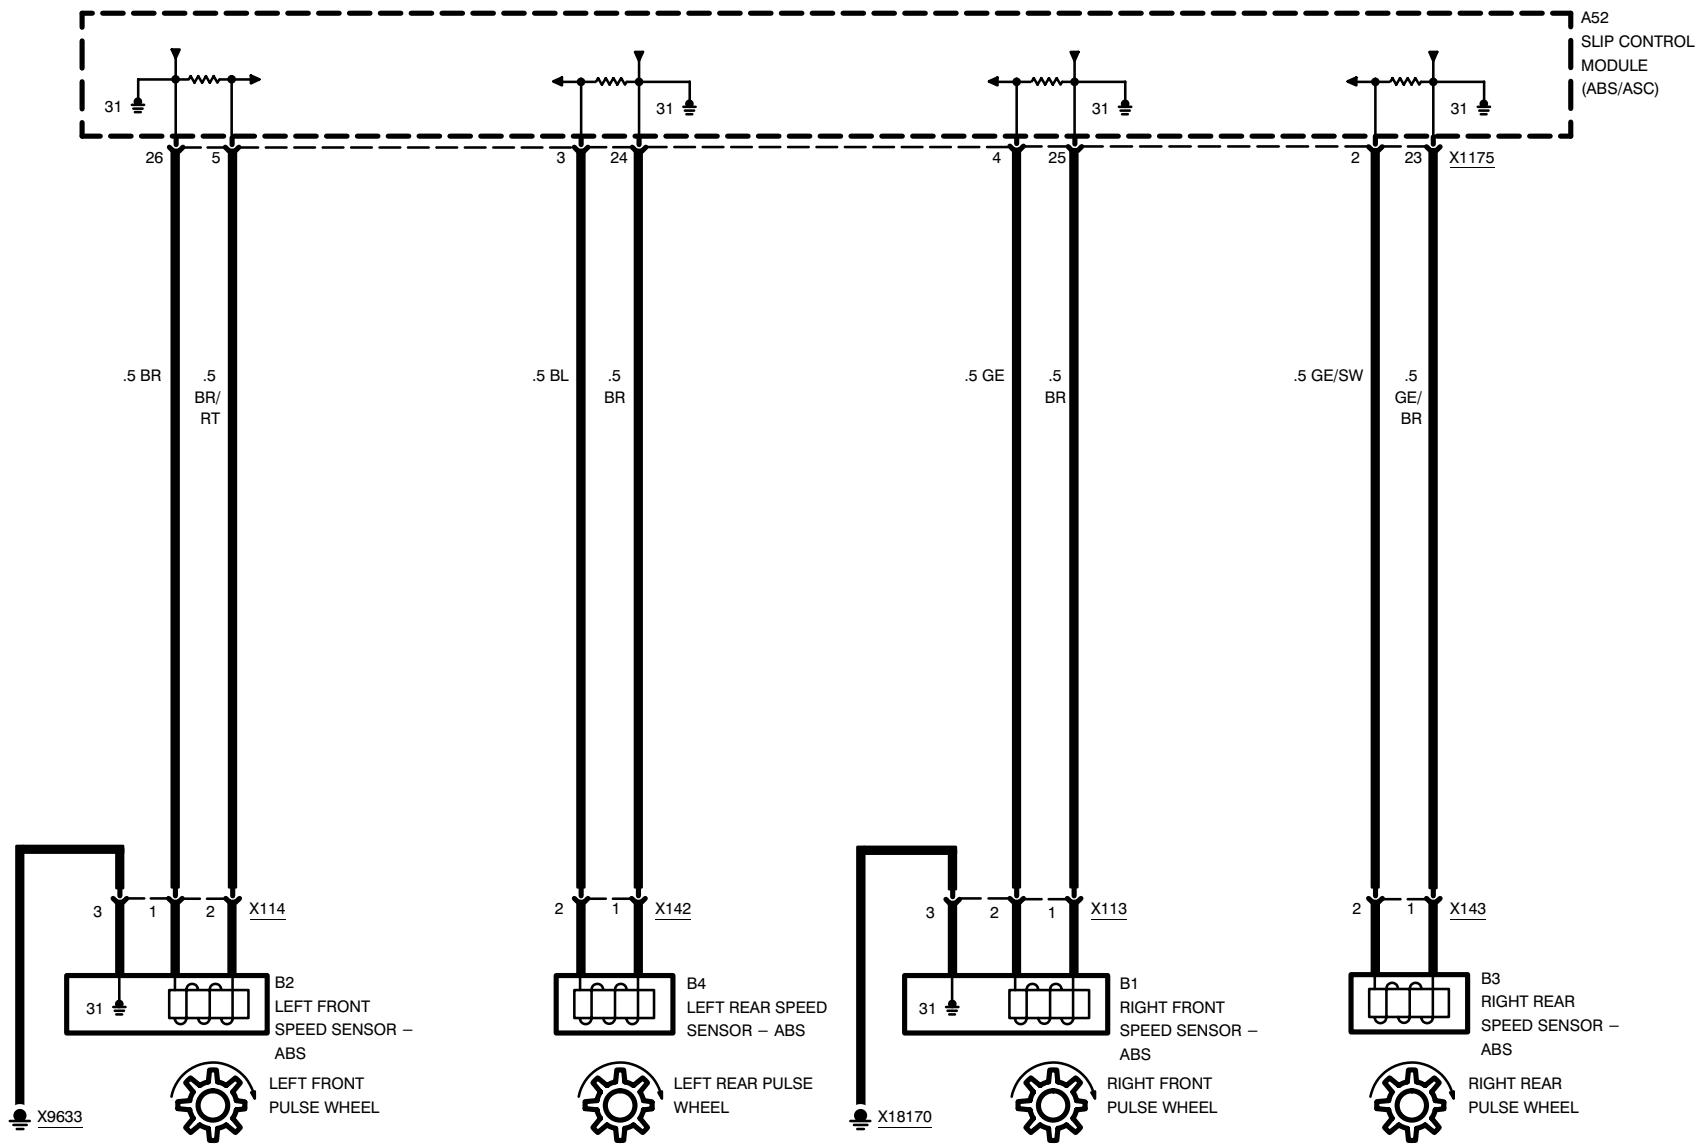

## 4-CYLINDER LATE PRODUCTION

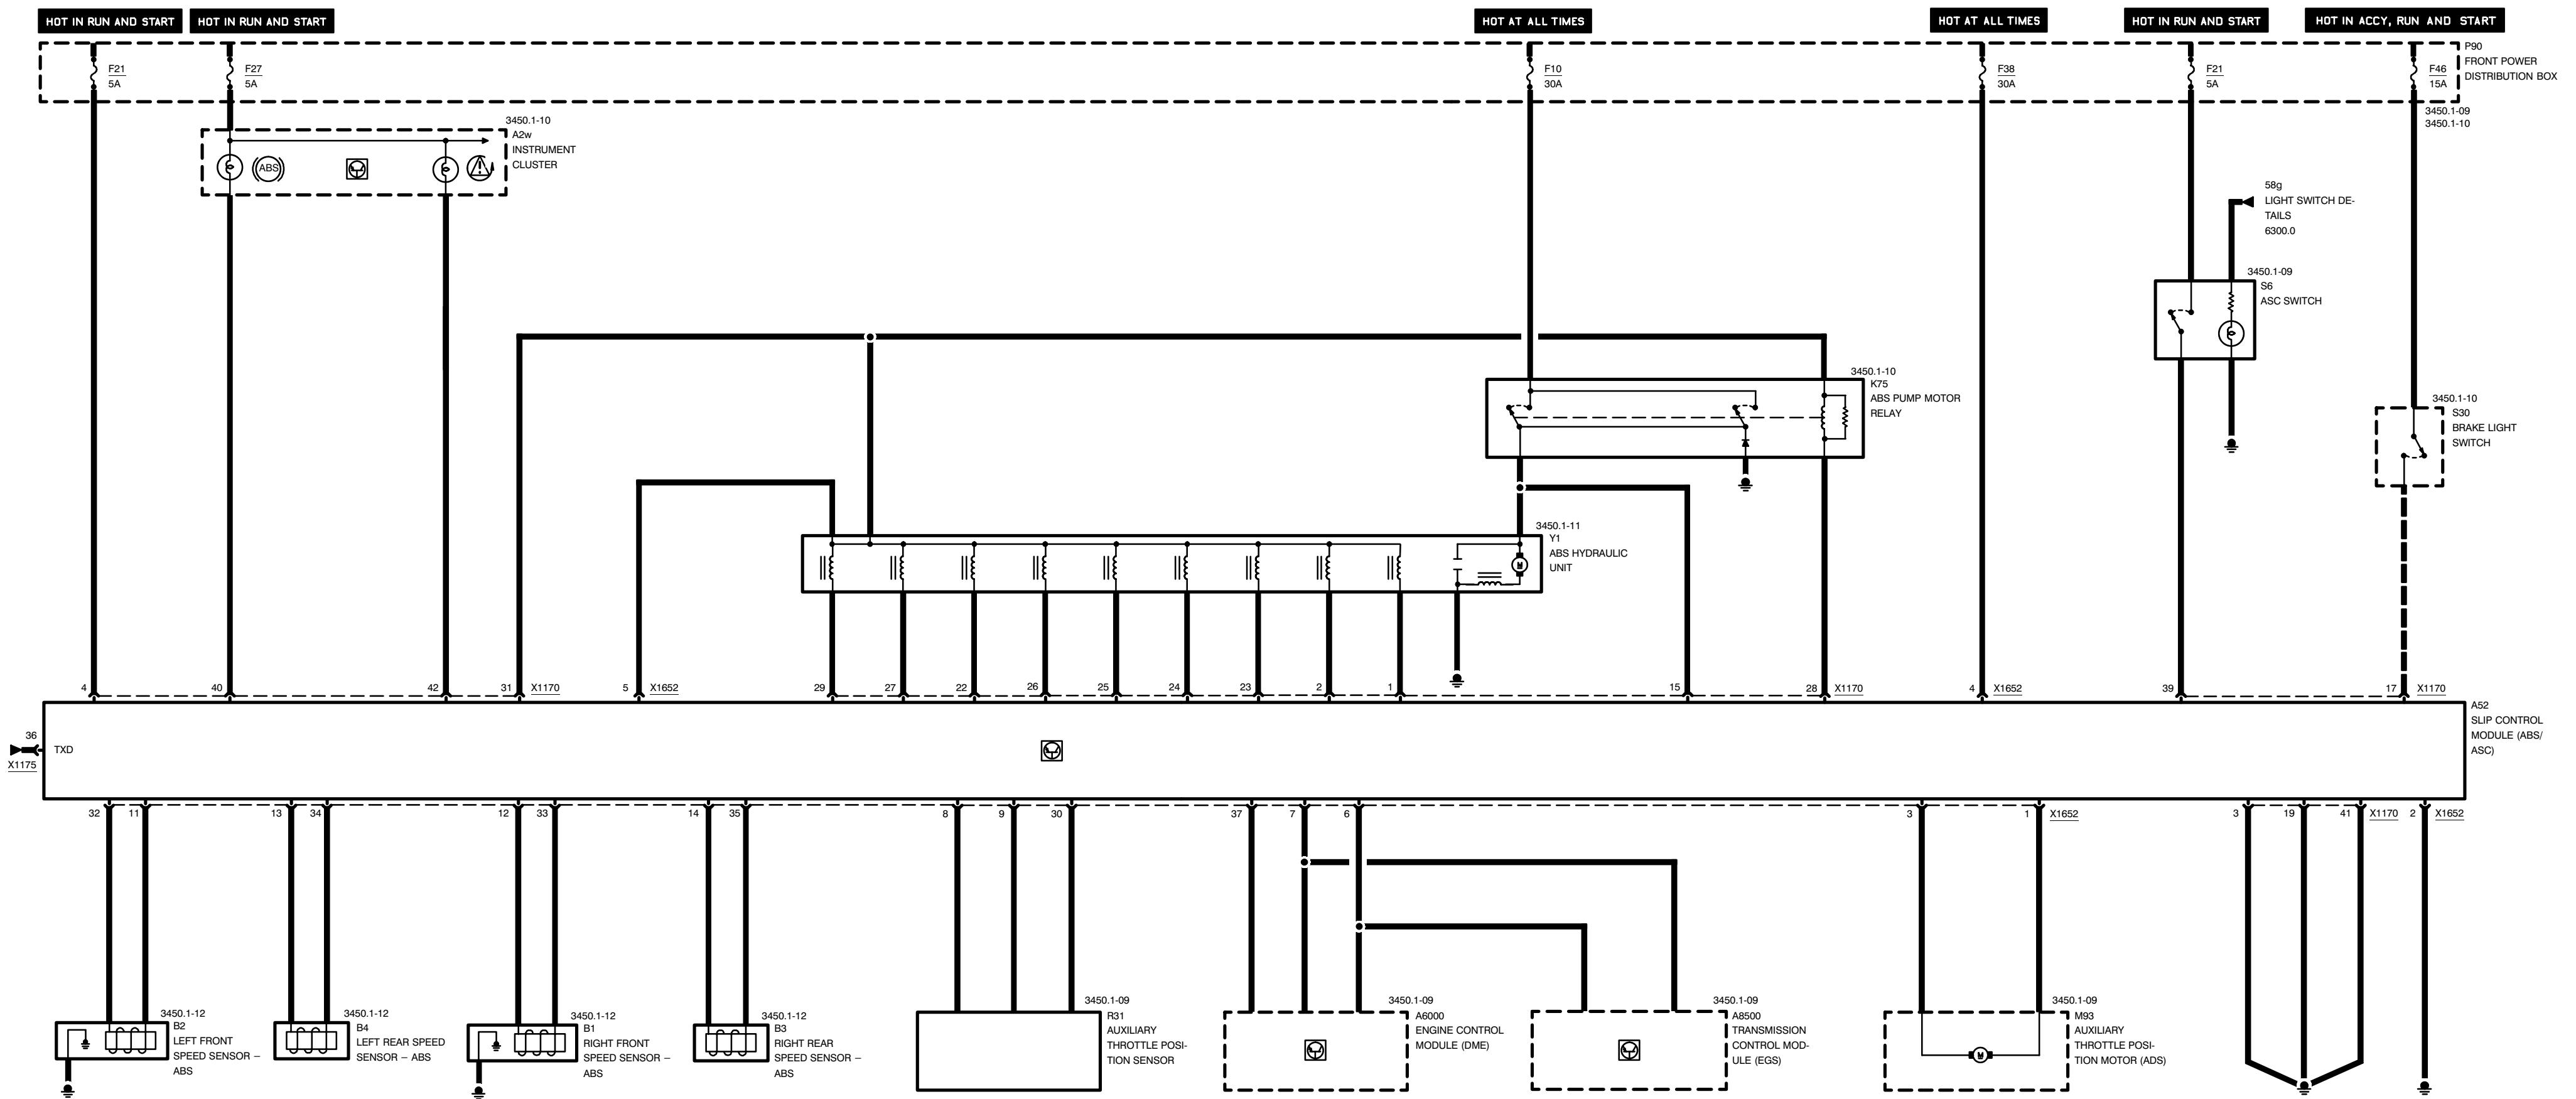

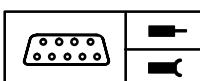**Pin Assignments****4-Cylinder  
Late Production****X1170**

Pin	Type	Description/Function	Connection
43	A	Left front inlet valve	ABS hydraulic unit
44	A	Left front outlet valve	ABS hydraulic unit
45	M	Ground	Ground point
46	E	Voltage supply	Fuse 21
47		Not used	
48	E/A	CAN LOW	DME/EGS module
49	E/A	CAN HIGH	DME/EGS module
50	E	Throttle position signal 1	Auxiliary throttle position sensor
51	E	Throttle position signal 3	Auxiliary throttle position sensor
52		Not used	
53	A	Sensor ground	Left front speed sensor – ABS
54	A	Sensor ground	Right front speed sensor – ABS
55	A	Sensor ground	Left rear speed sensor – ABS
56	A	Sensor ground	Right rear speed sensor – ABS
57	E	Signal pump motor	ABS pump motor relay
58		Not used	
59	E	Brake pedal position	Brake light switch
60		Not used	
61	M	Ground	Ground point
62		Not used	
63		Not used	
64	A	Right rear outlet valve	ABS hydraulic unit
65	A	Right front inlet valve	ABS hydraulic unit
66	A	Right front outlet valve	ABS hydraulic unit
67	A	Left rear outlet valve	ABS hydraulic unit
68	A	Left rear inlet valve	ABS hydraulic unit
69	A	Right rear inlet valve	ABS hydraulic unit
70	A	Activate relay	ABS pump motor relay
71	A	Separator valve	ABS hydraulic unit
72	E	Throttle position signal 2	Auxiliary throttle position sensor

E = Input, A = Output, M = Ground




03/98

3450.1c-b

1997

Z3

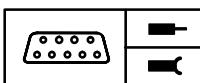

## Pin Assignments

4-Cylinder  
Late Production

Pin	Type	Description/Function	Connection
73	A	ABS signal	ABS pump motor relay/Hydraulic unit
74	E	Speed signal	Left front speed sensor – ABS
75	E	Speed signal	Right front speed sensor – ABS
76	E	Speed signal	Left rear speed sensor – ABS
77	E	Speed signal	Right rear speed sensor – ABS
78	E/A	TxD diagnostic data link	Data link connector
79	A	Speed signal right rear	DME module
80		Not used	
81	E	ASC signal	ASC switch
82	A	ABS signal	Instrument cluster
83	M	Ground	Ground point
84	A	ASC signal	Instrument cluster

## X1652

Pin	Type	Description/Function	Connection
1	A	ADS step motor (-)	Auxiliary throttle position motor
2	M	Ground	Ground point
3	A	ADS step motor (+)	Auxiliary throttle position motor
4	E	Voltage supply	Fuse 38
5	A	ABS signal	ABS hydraulic unit

E = Input, A = Output, M = Ground



## SLIP CONTROL (ABS/ASC)

## 4-CYLINDER LATE PRODUCTION

03/98

3450.1-09

Z3

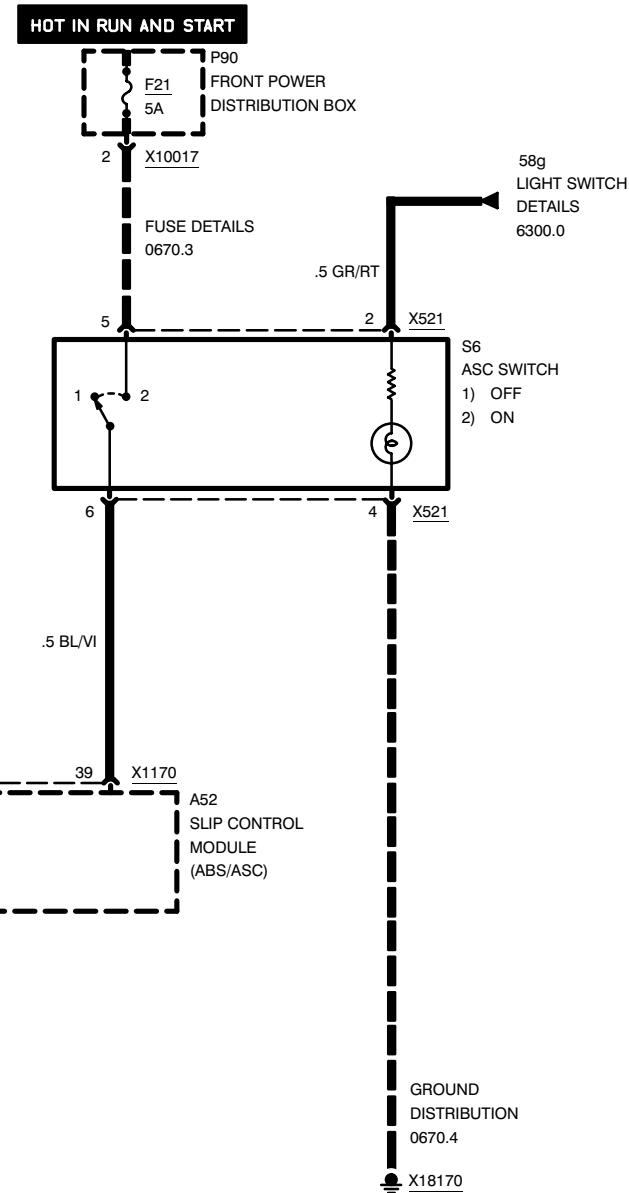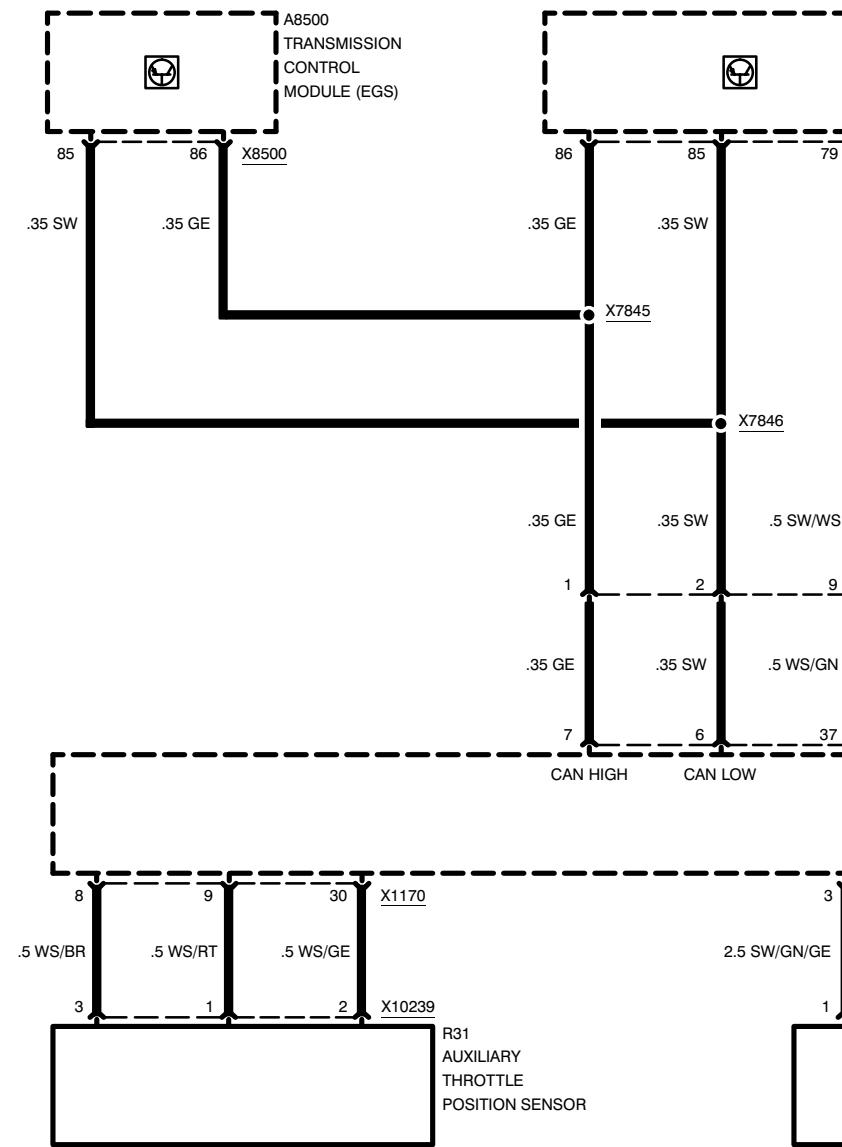

1997


## SLIP CONTROL (ABS/ASC)


## 4-CYLINDER LATE PRODUCTION

03/98

3450.1-10

1997

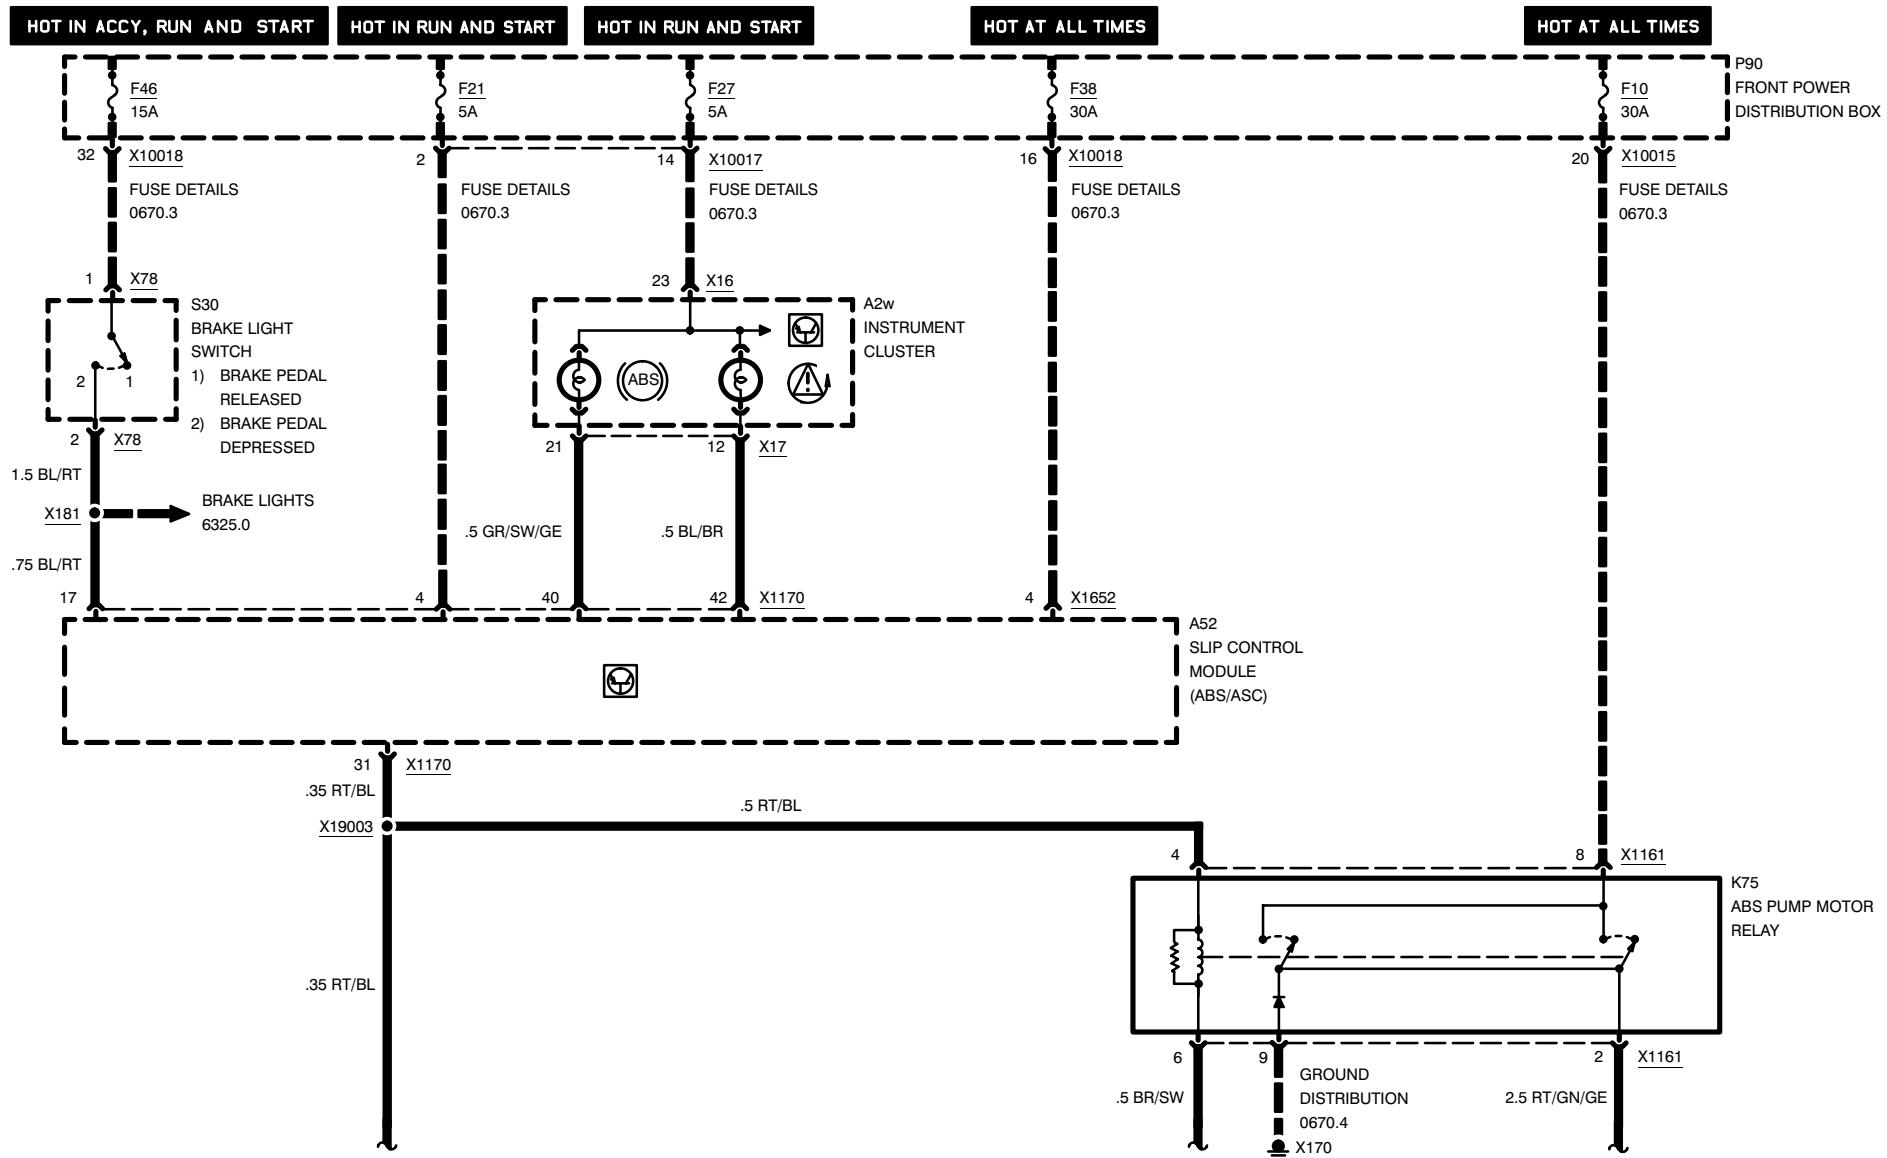

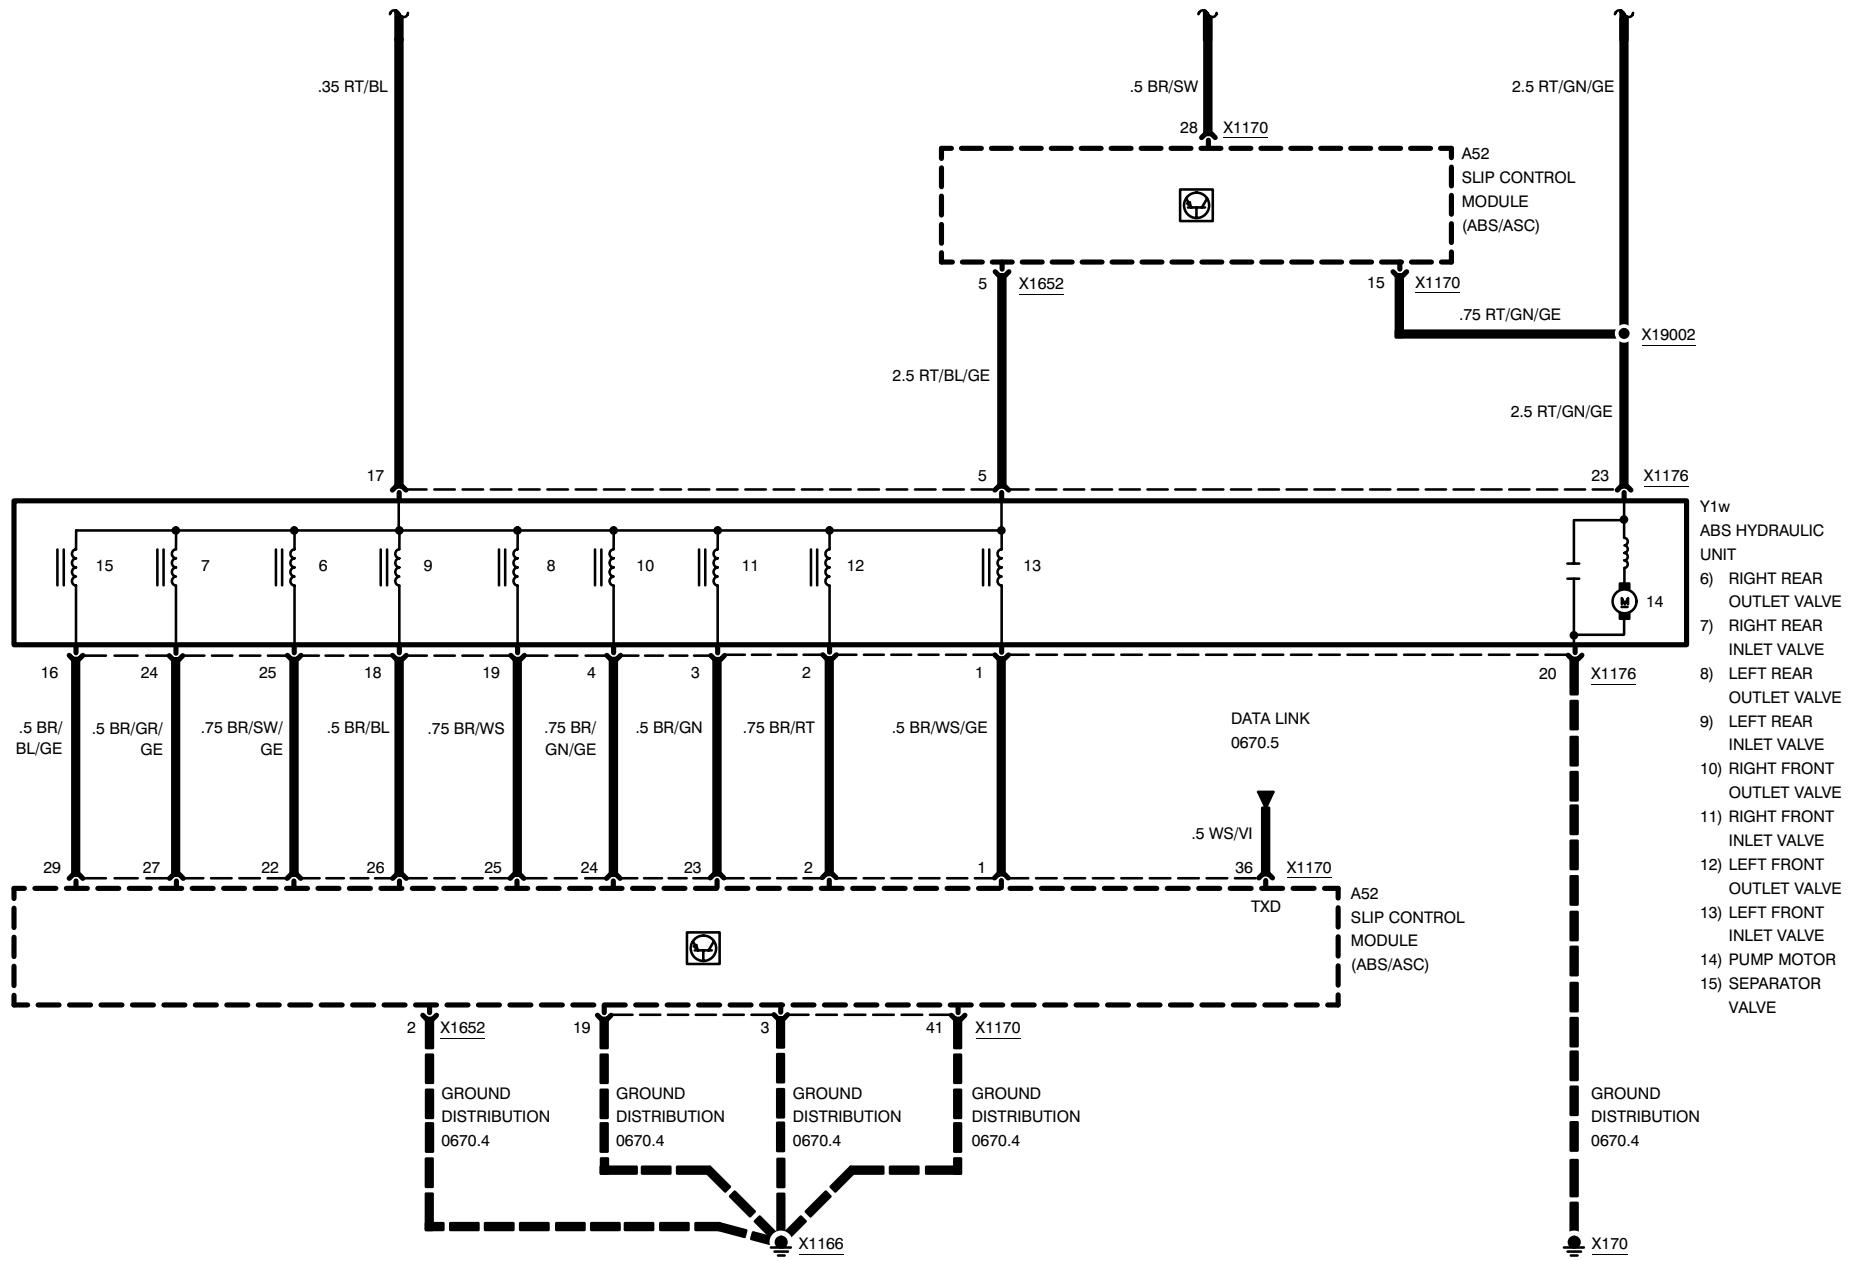



## SLIP CONTROL (ABS/ASC)

4-CYLINDER LATE PRODUCTION

03/98

3450.1-12 — 1997

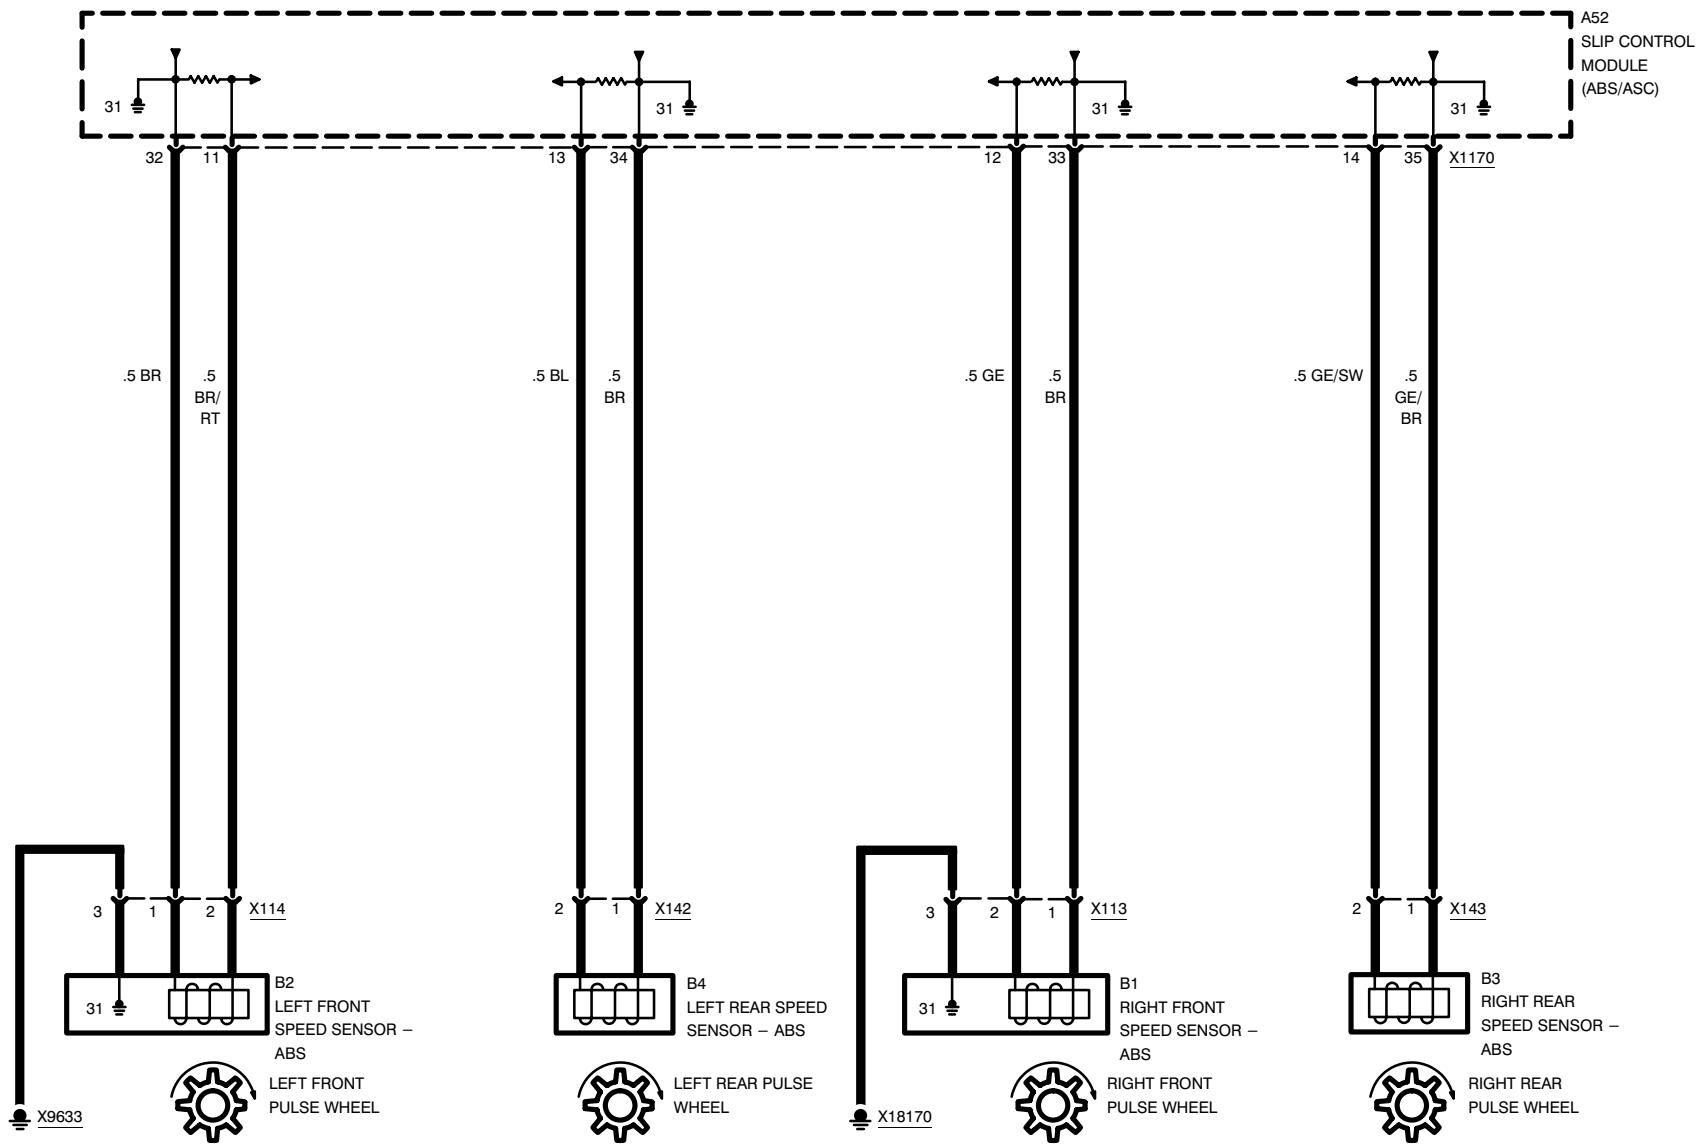


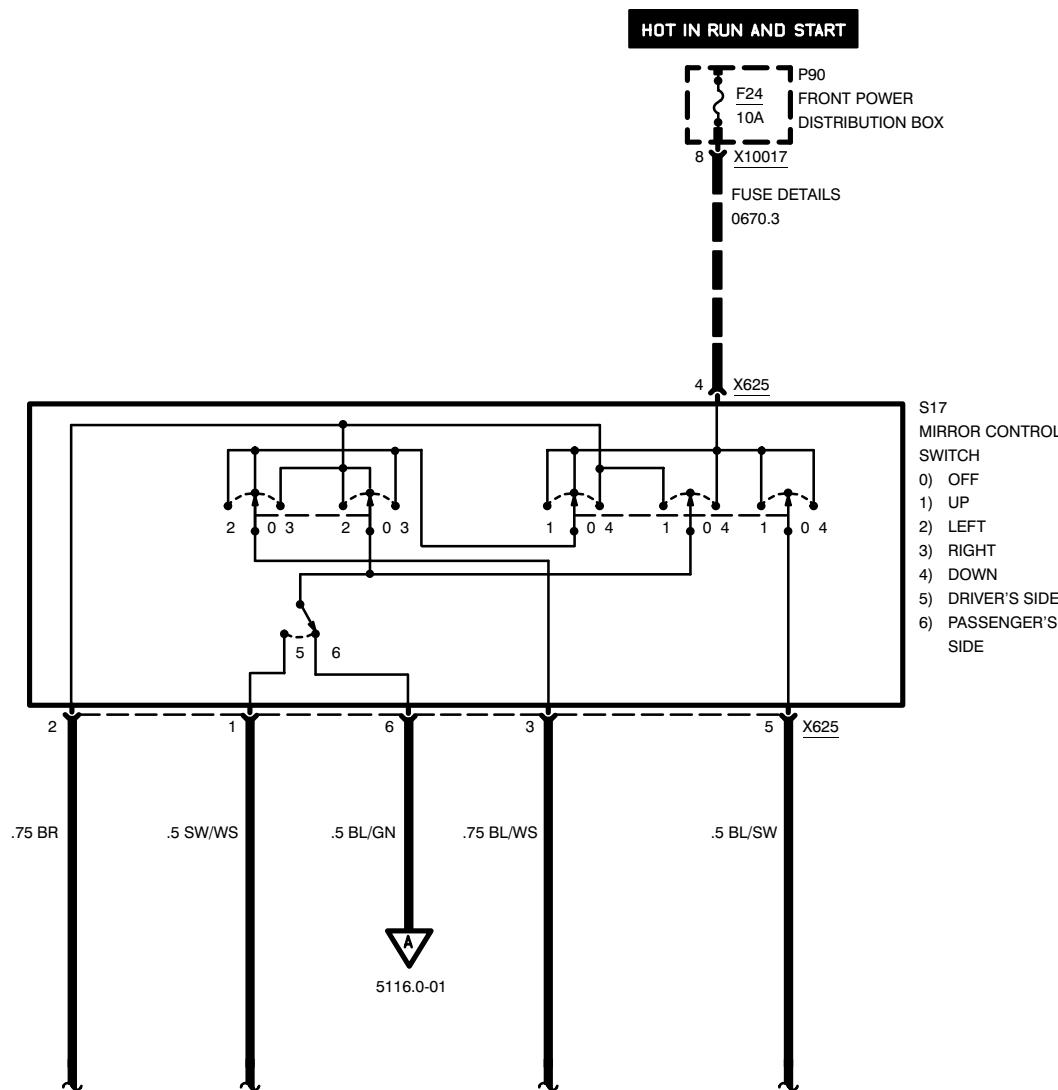

03/98


— 5116.0-01 —

1997

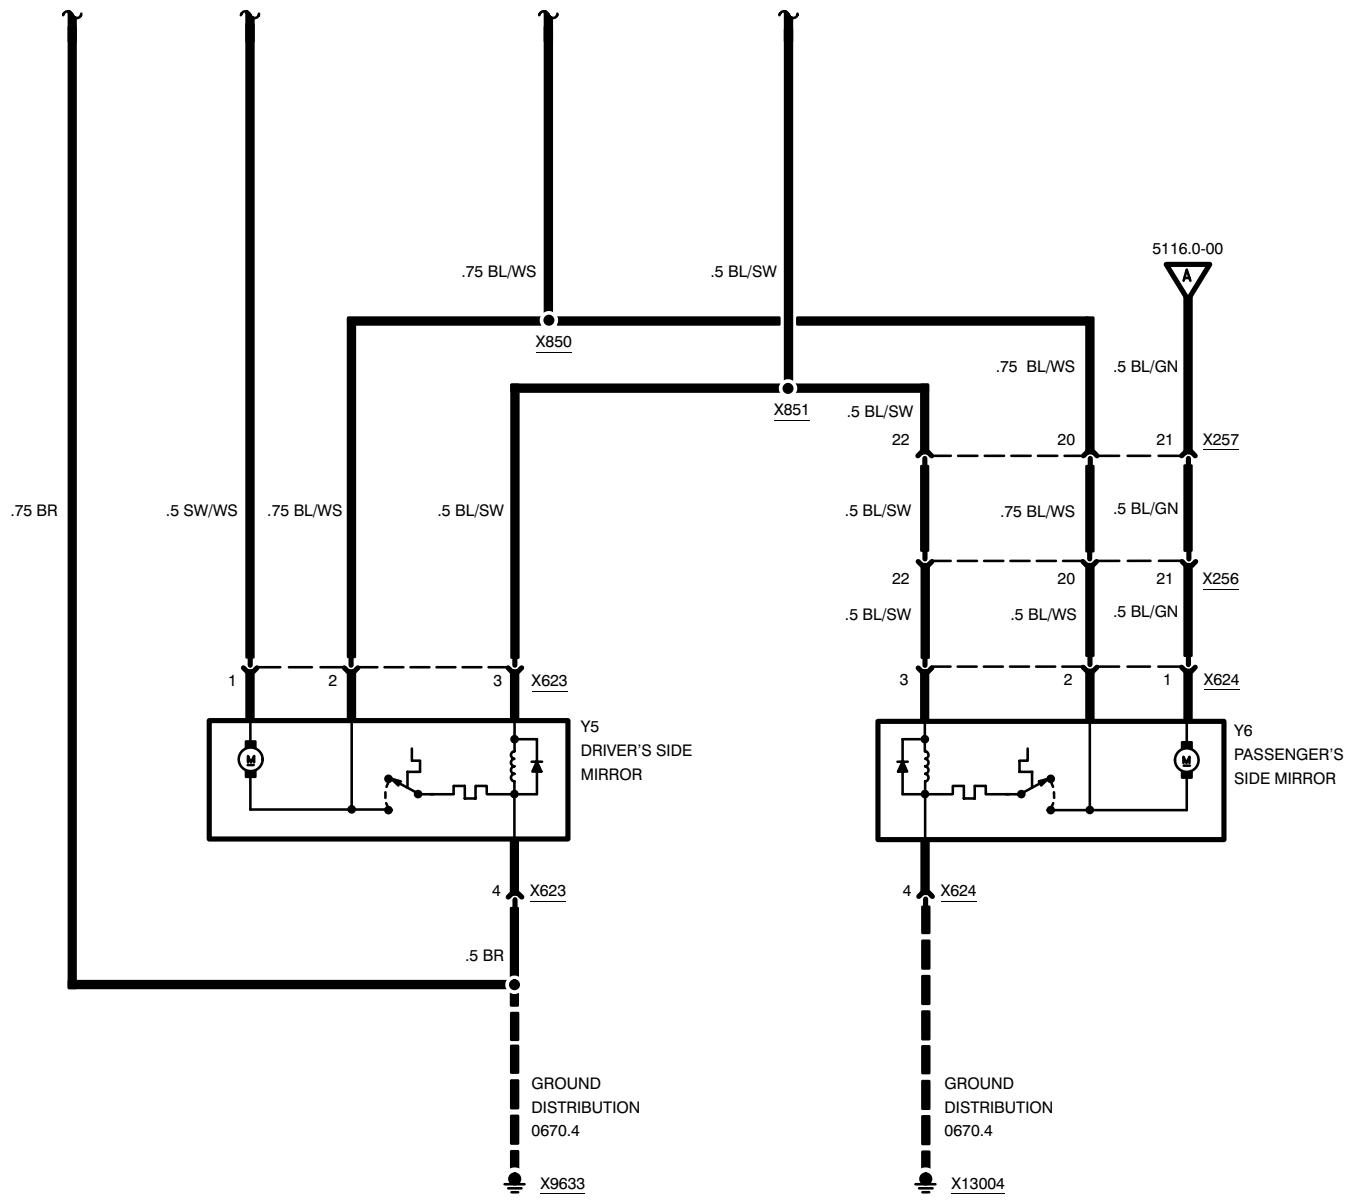

# ZKE CENTRAL LOCKING (ZV)

## INPUTS, DRIVE-AWAY PROTECTION

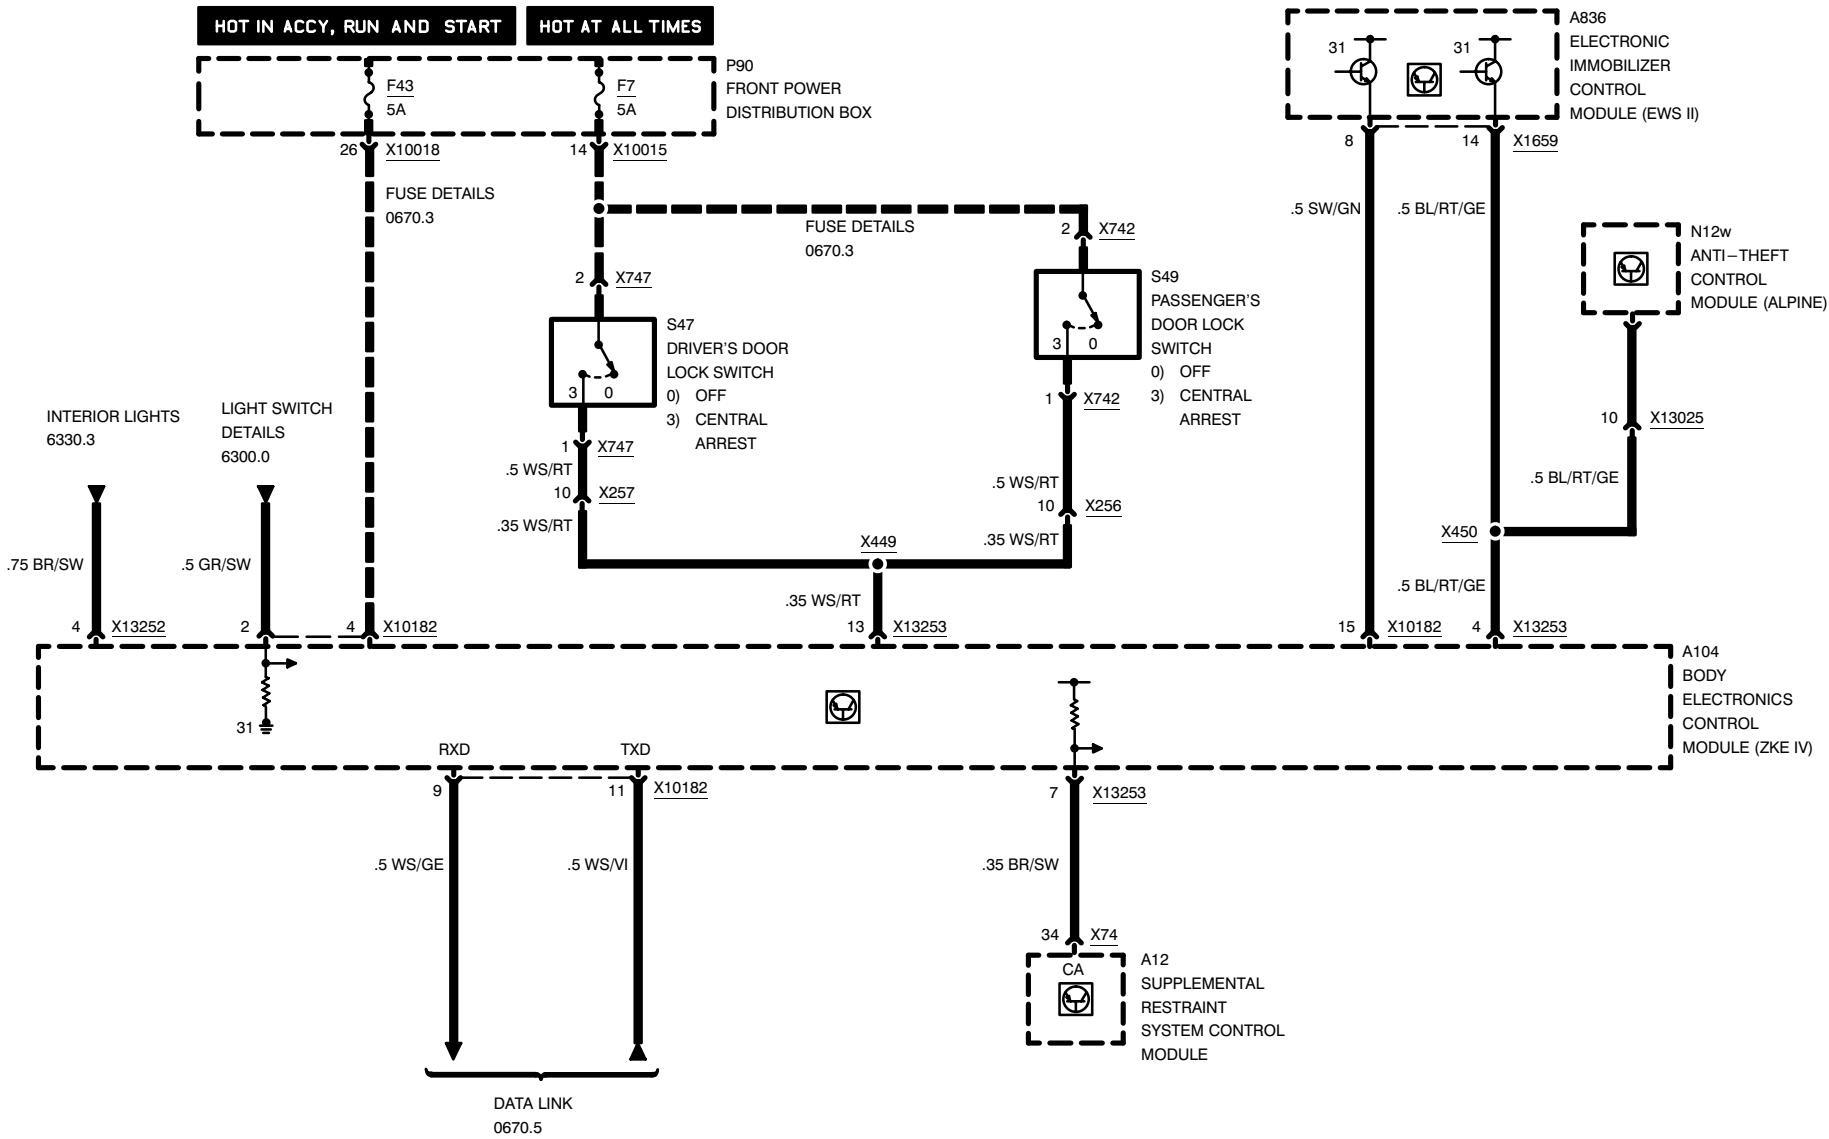


## ZKE CENTRAL LOCKING (ZV)

## INPUT DETAILS

03/98

5126.0-01

1997

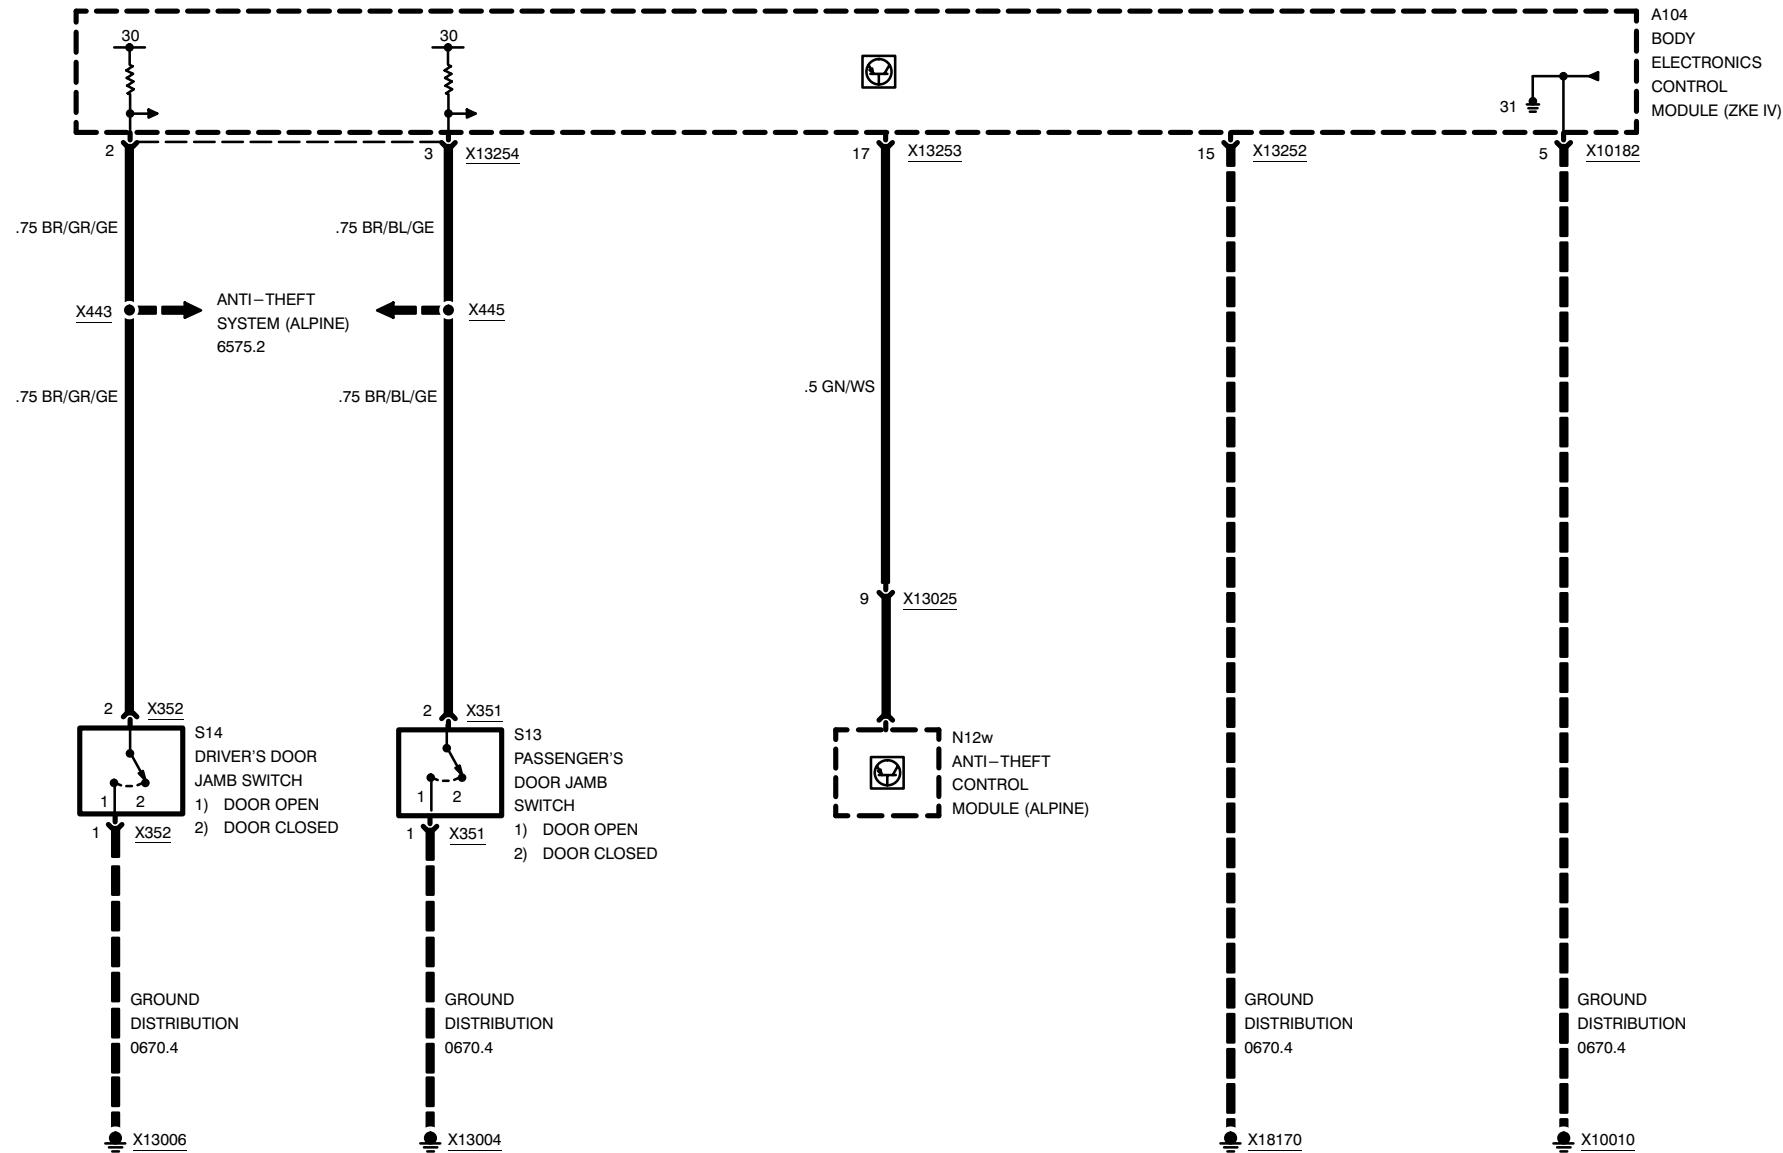


## ZKE CENTRAL LOCKING (ZV)

## OUTPUT DETAILS

03/98

5126.0-02


1997

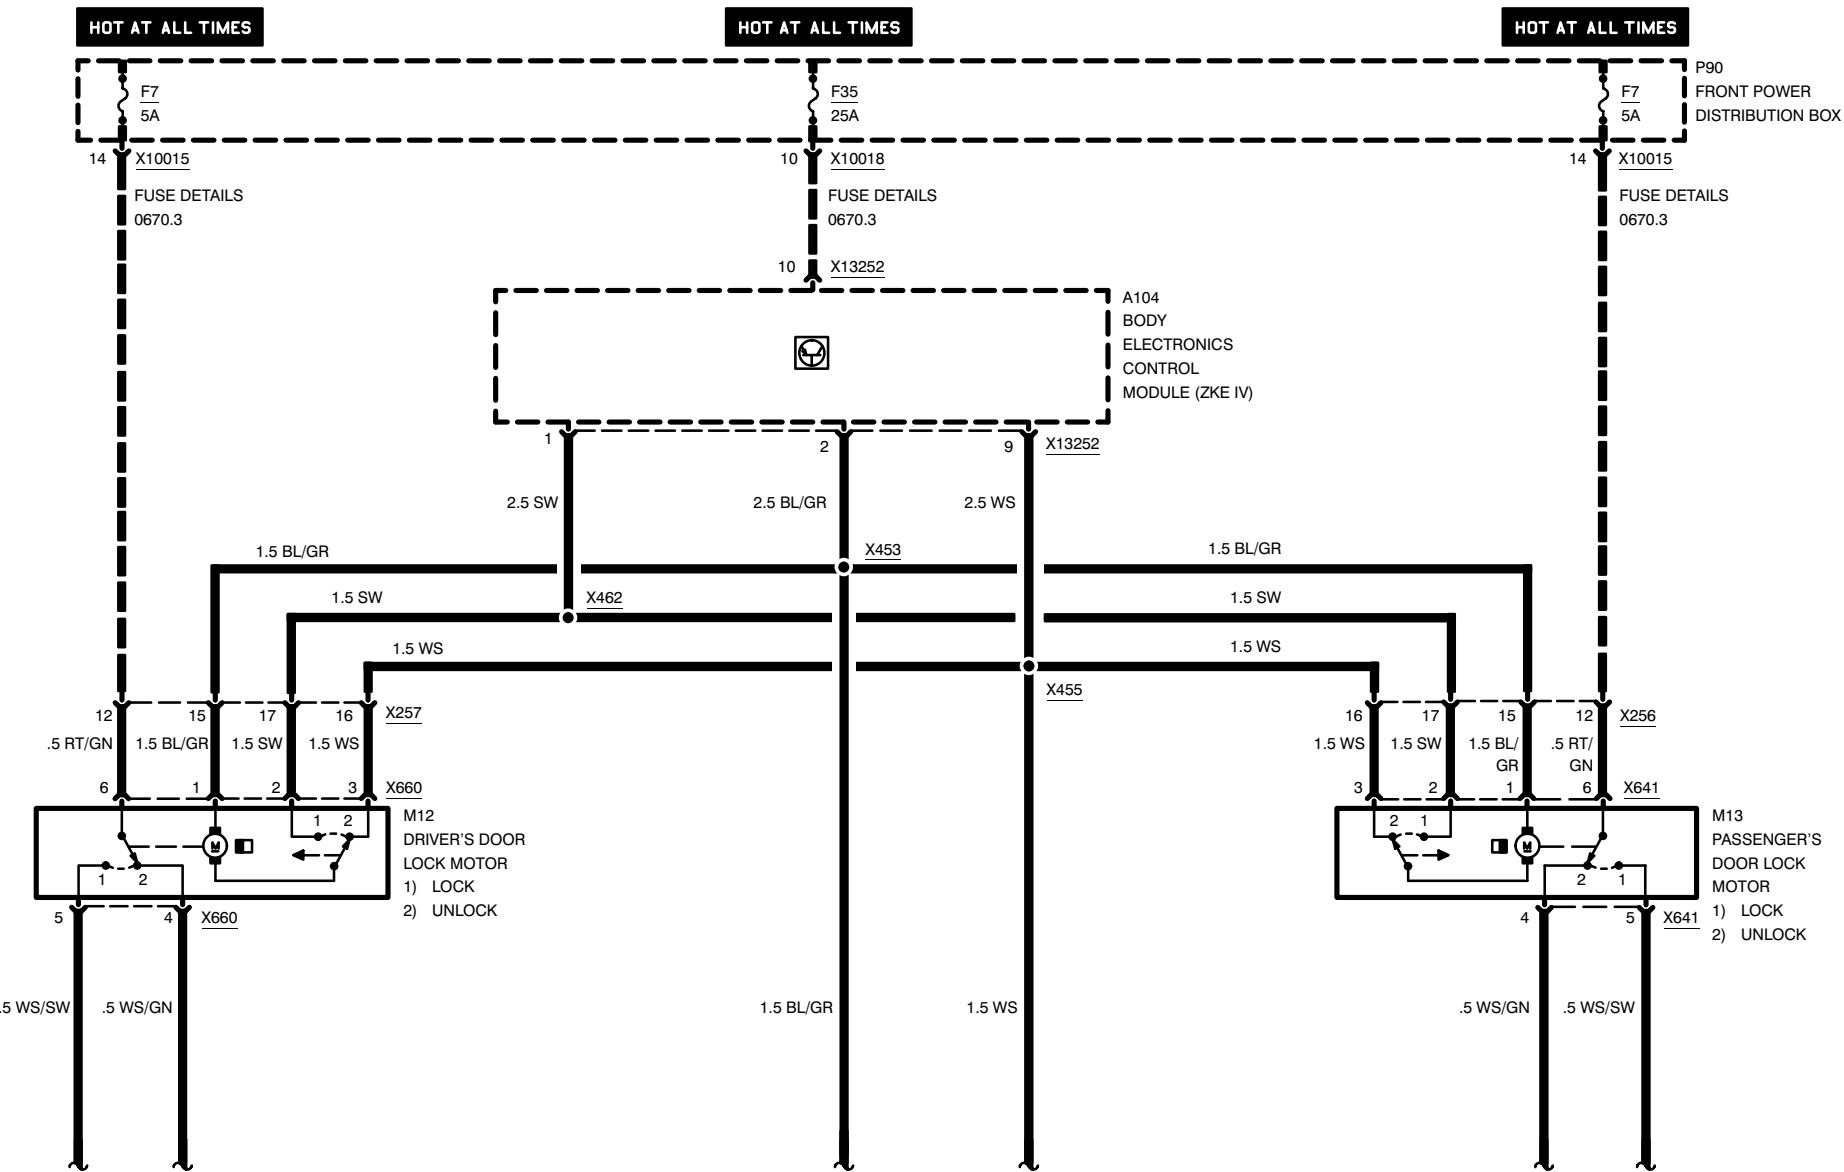

03/98

5126.0-03

1997

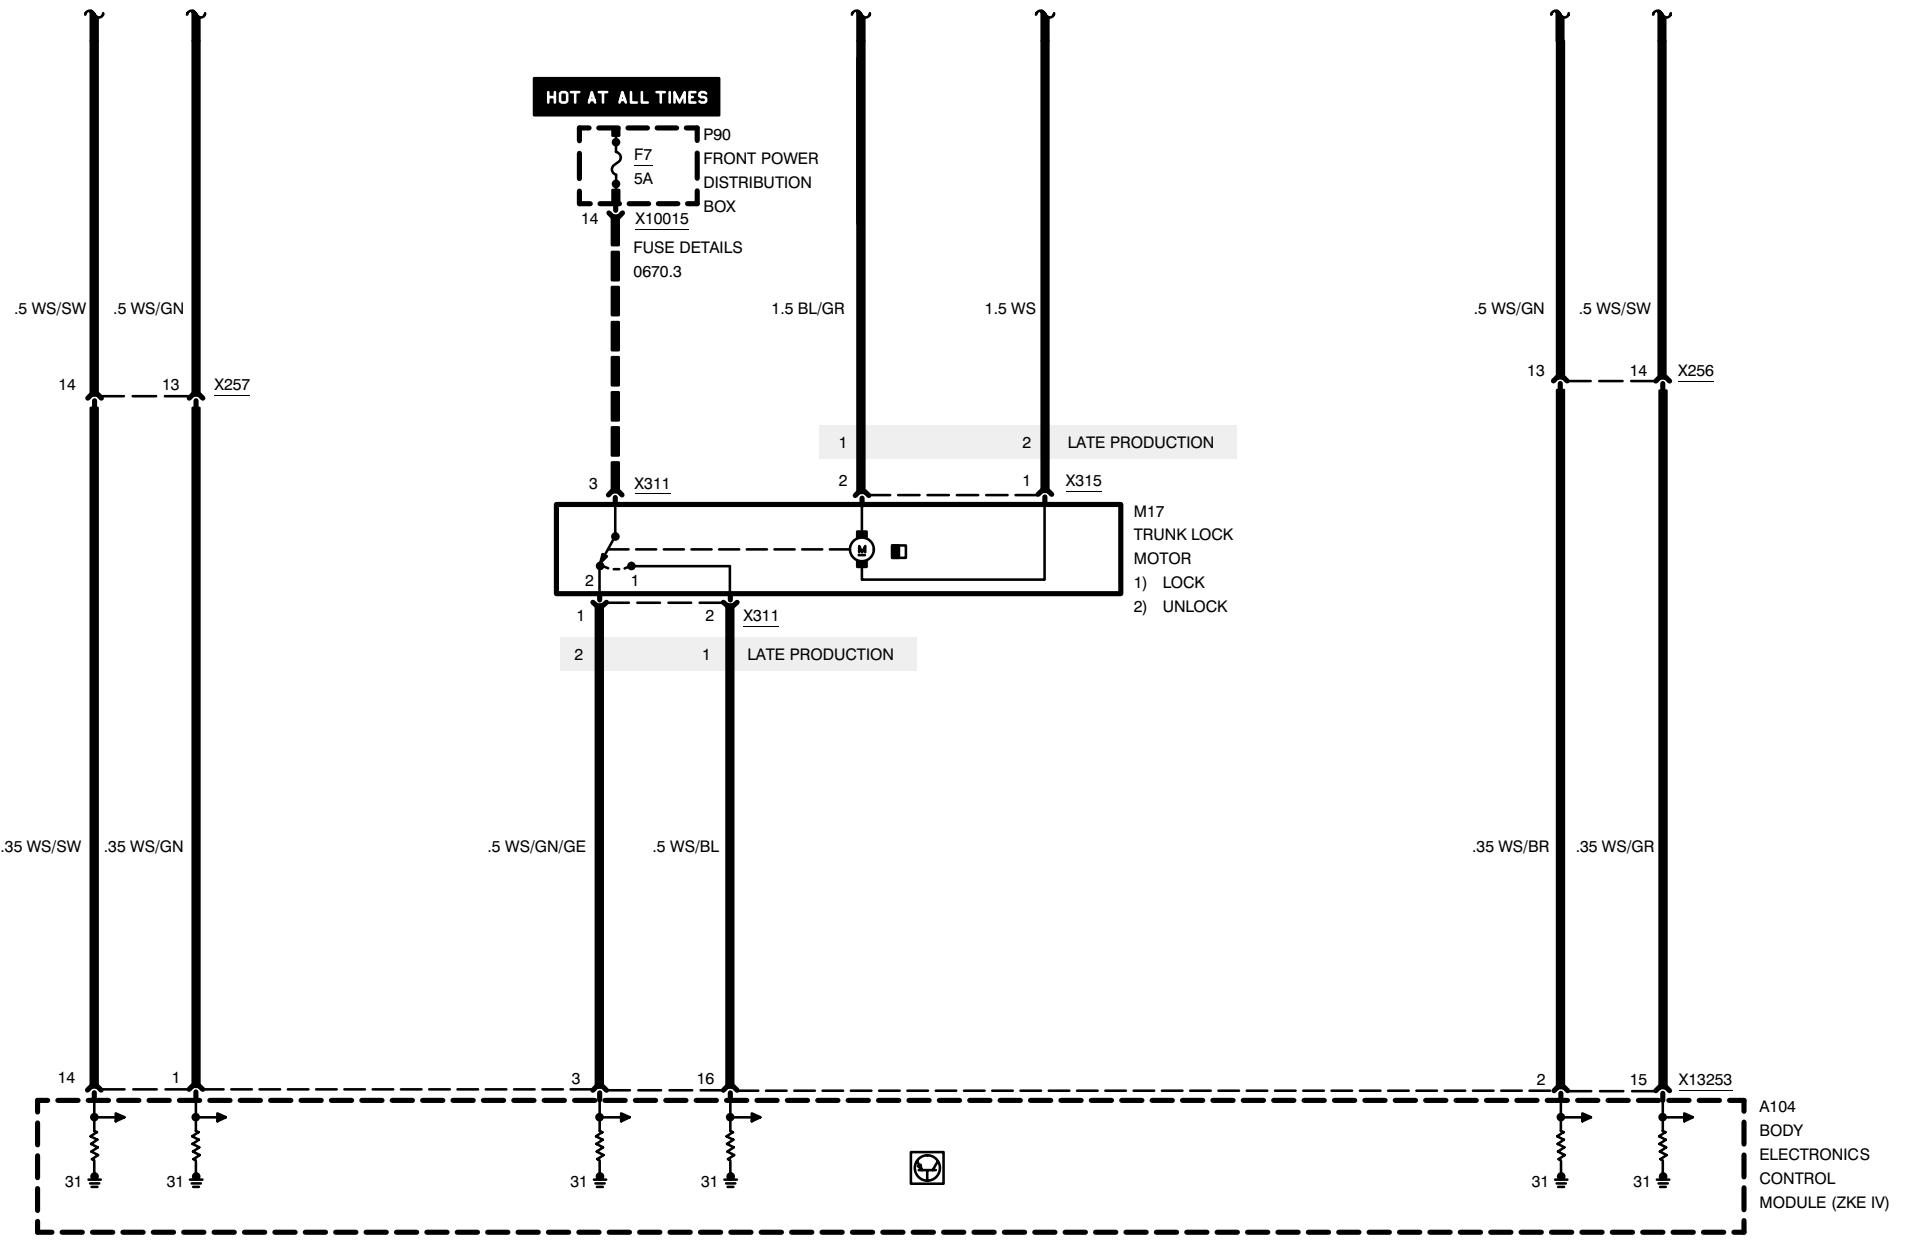


# ZKE POWER WINDOWS (FH)

## INPUT DETAILS

03/98

5133.0-00

1997

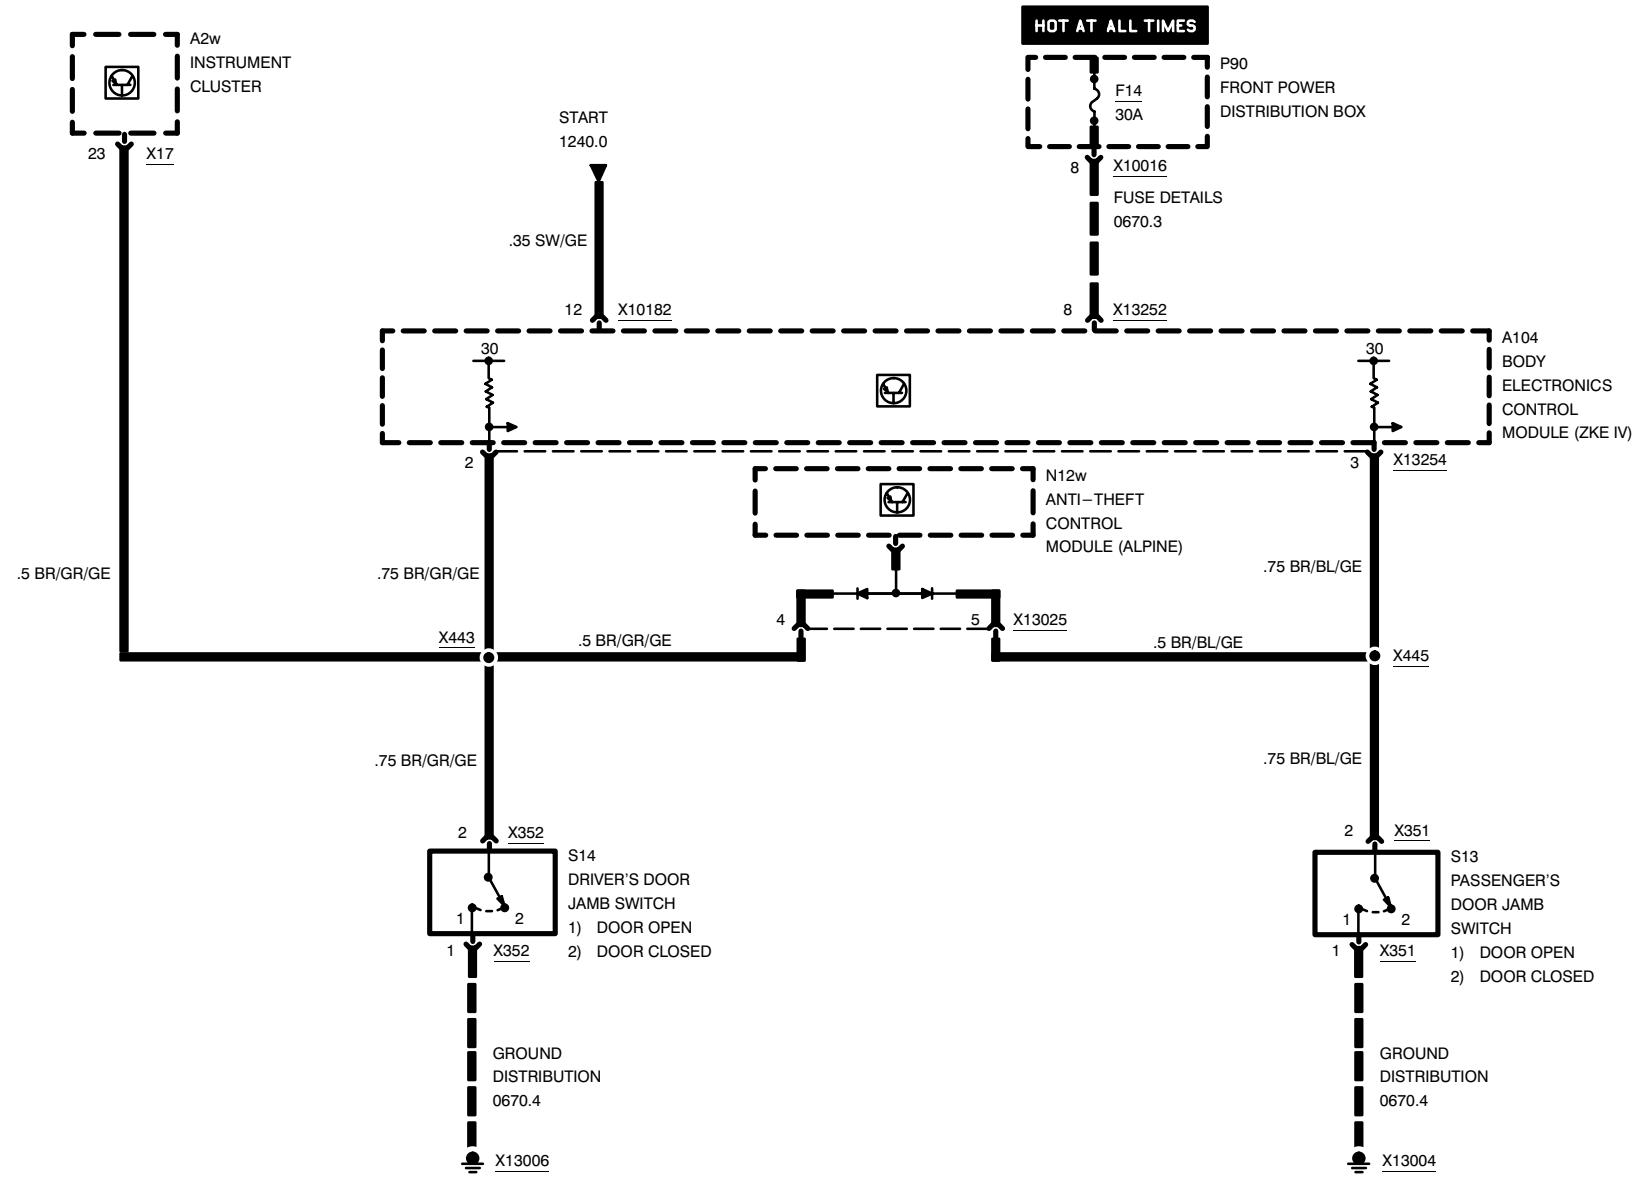



## ZKE POWER WINDOWS (FH)


### INPUT DETAILS

Z3

03/98

5133.0-01

1997

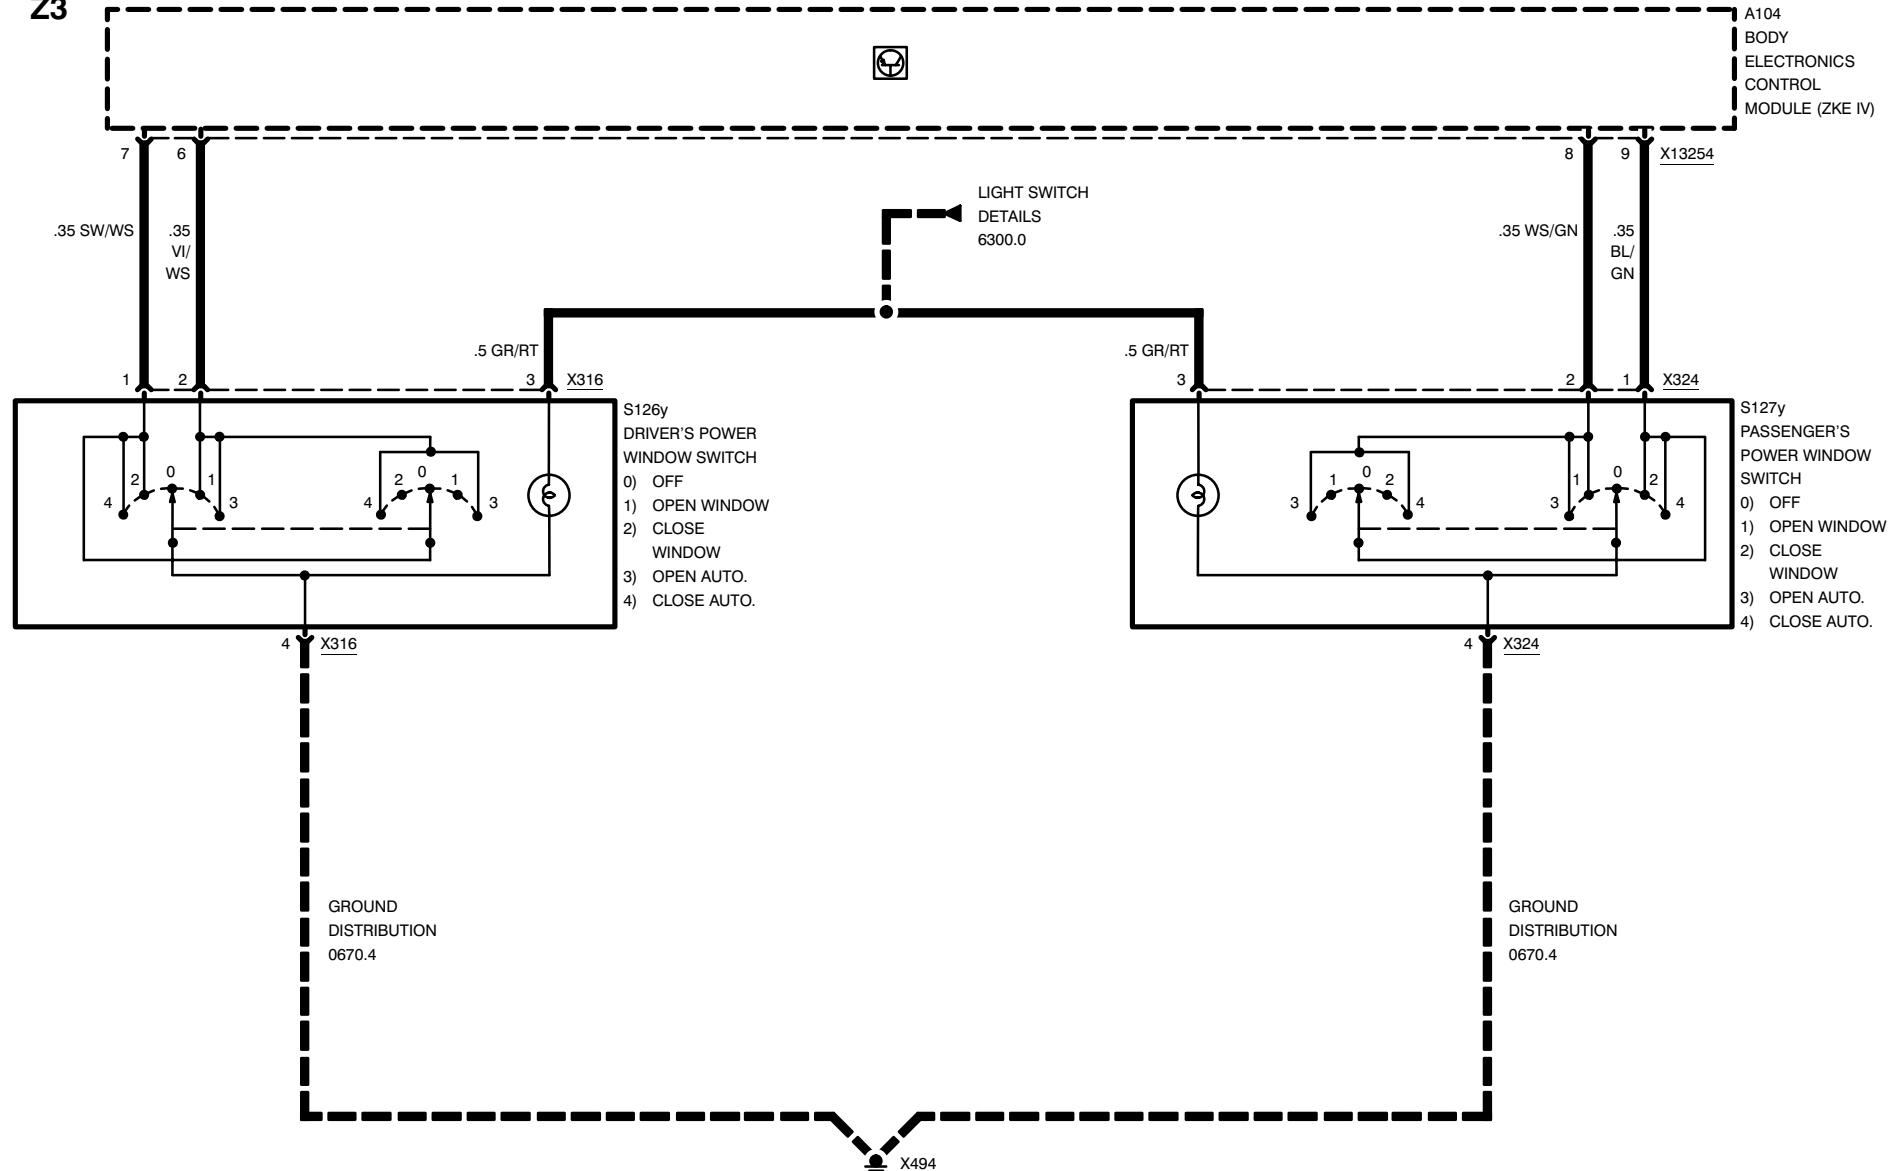

# ZKE POWER WINDOWS (FH)


## OUTPUT DETAILS

Z3

03/98

5133.0-02

1997

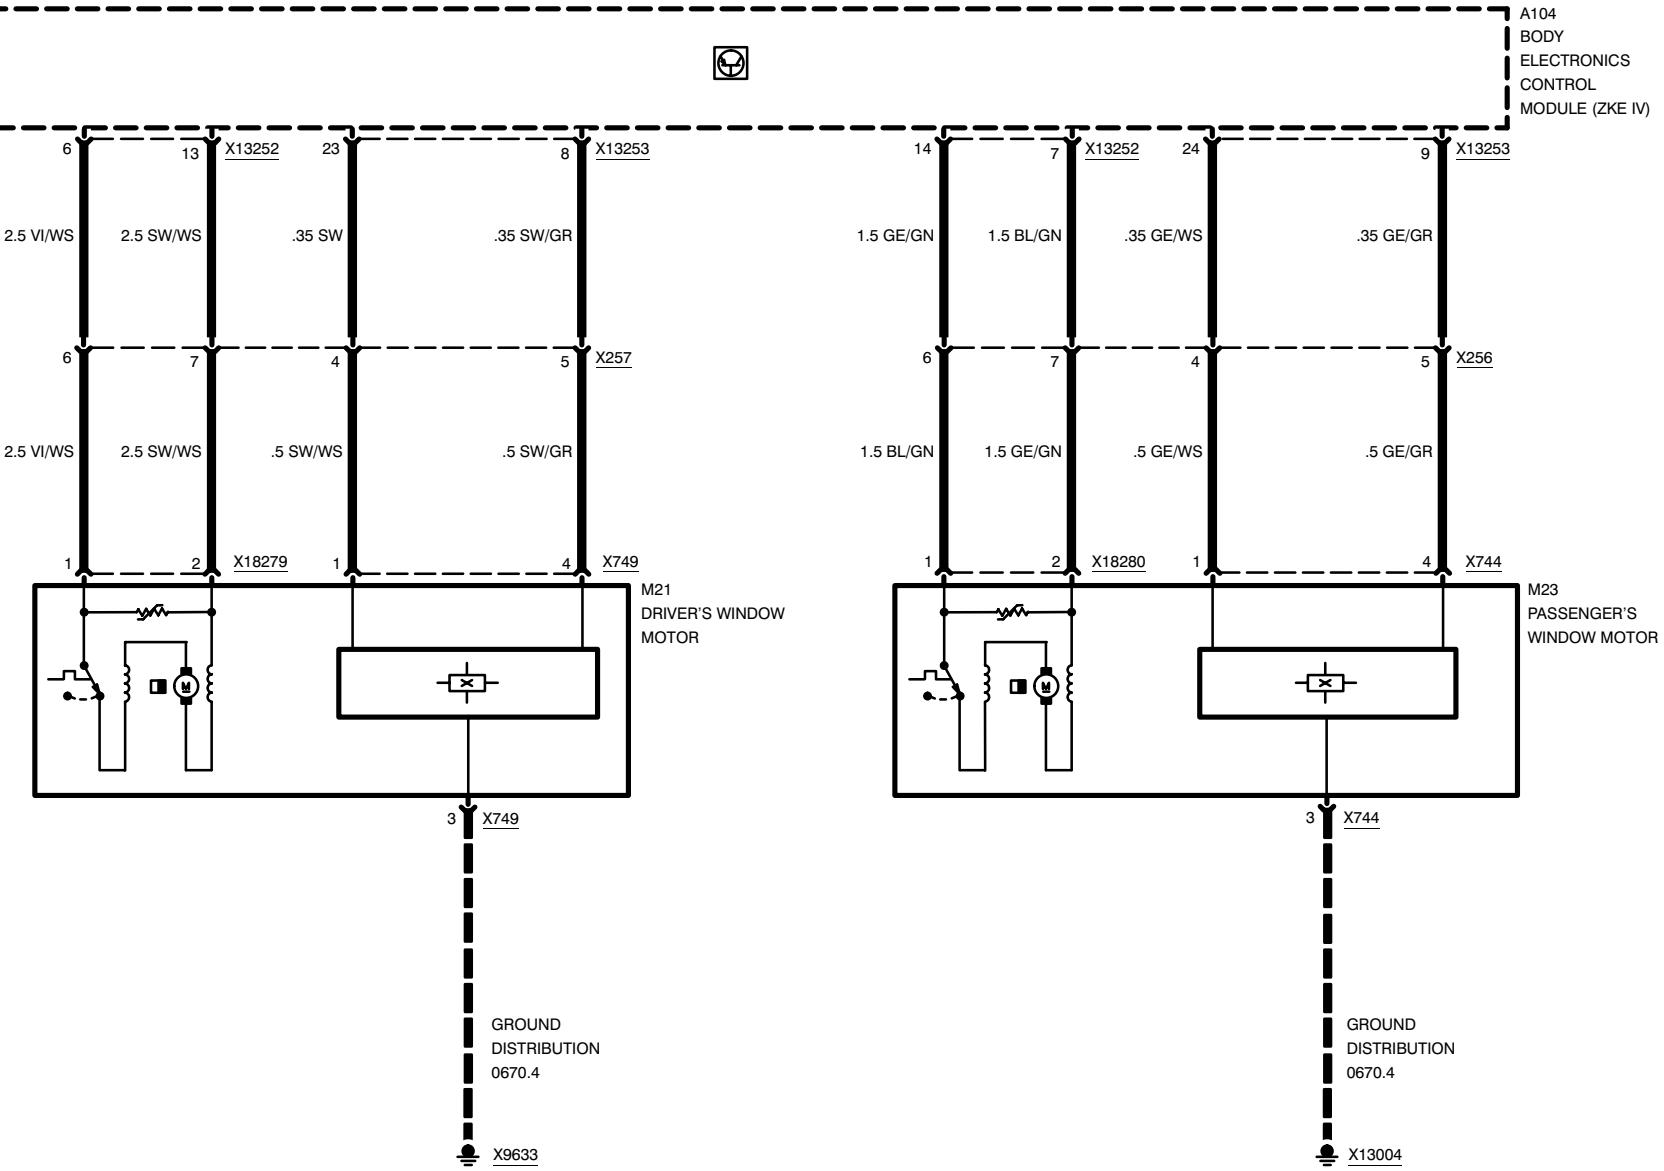



# POWER SEATS

## DRIVER'S SEAT


Z3


EARLY PRODUCTION

03/98

5200.0-00

1997

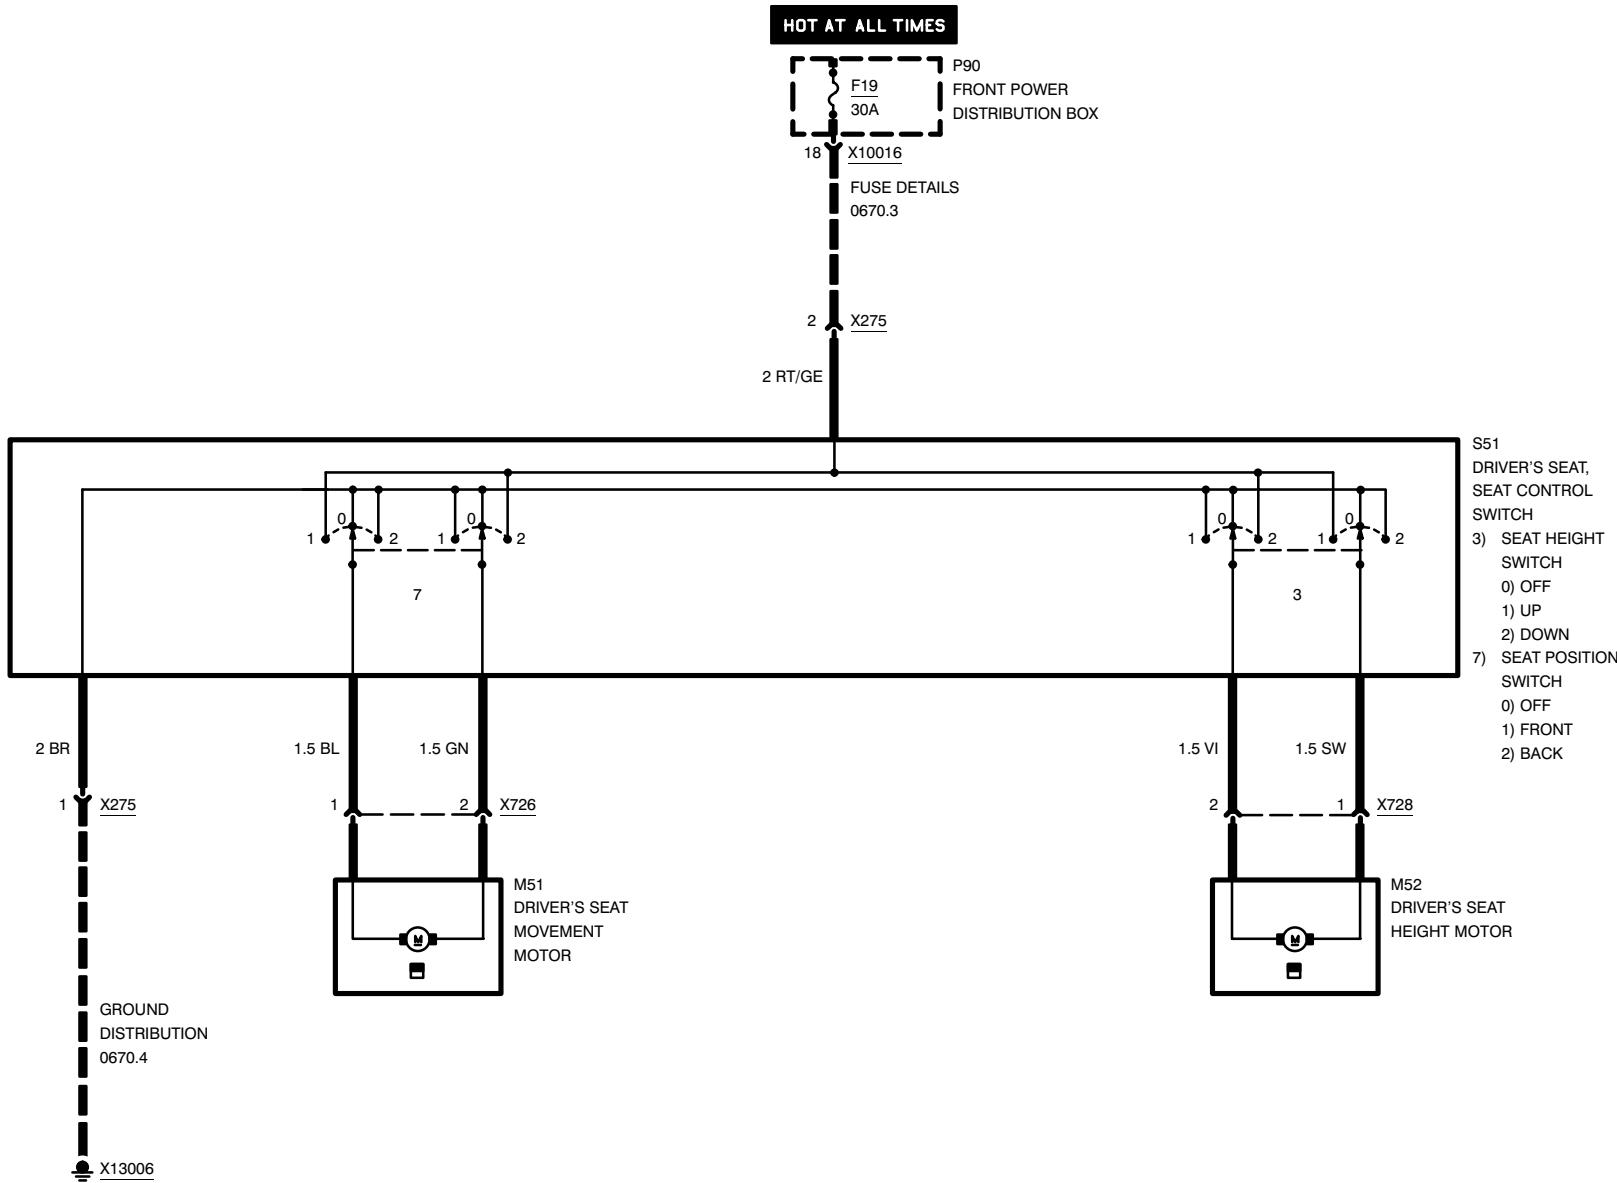

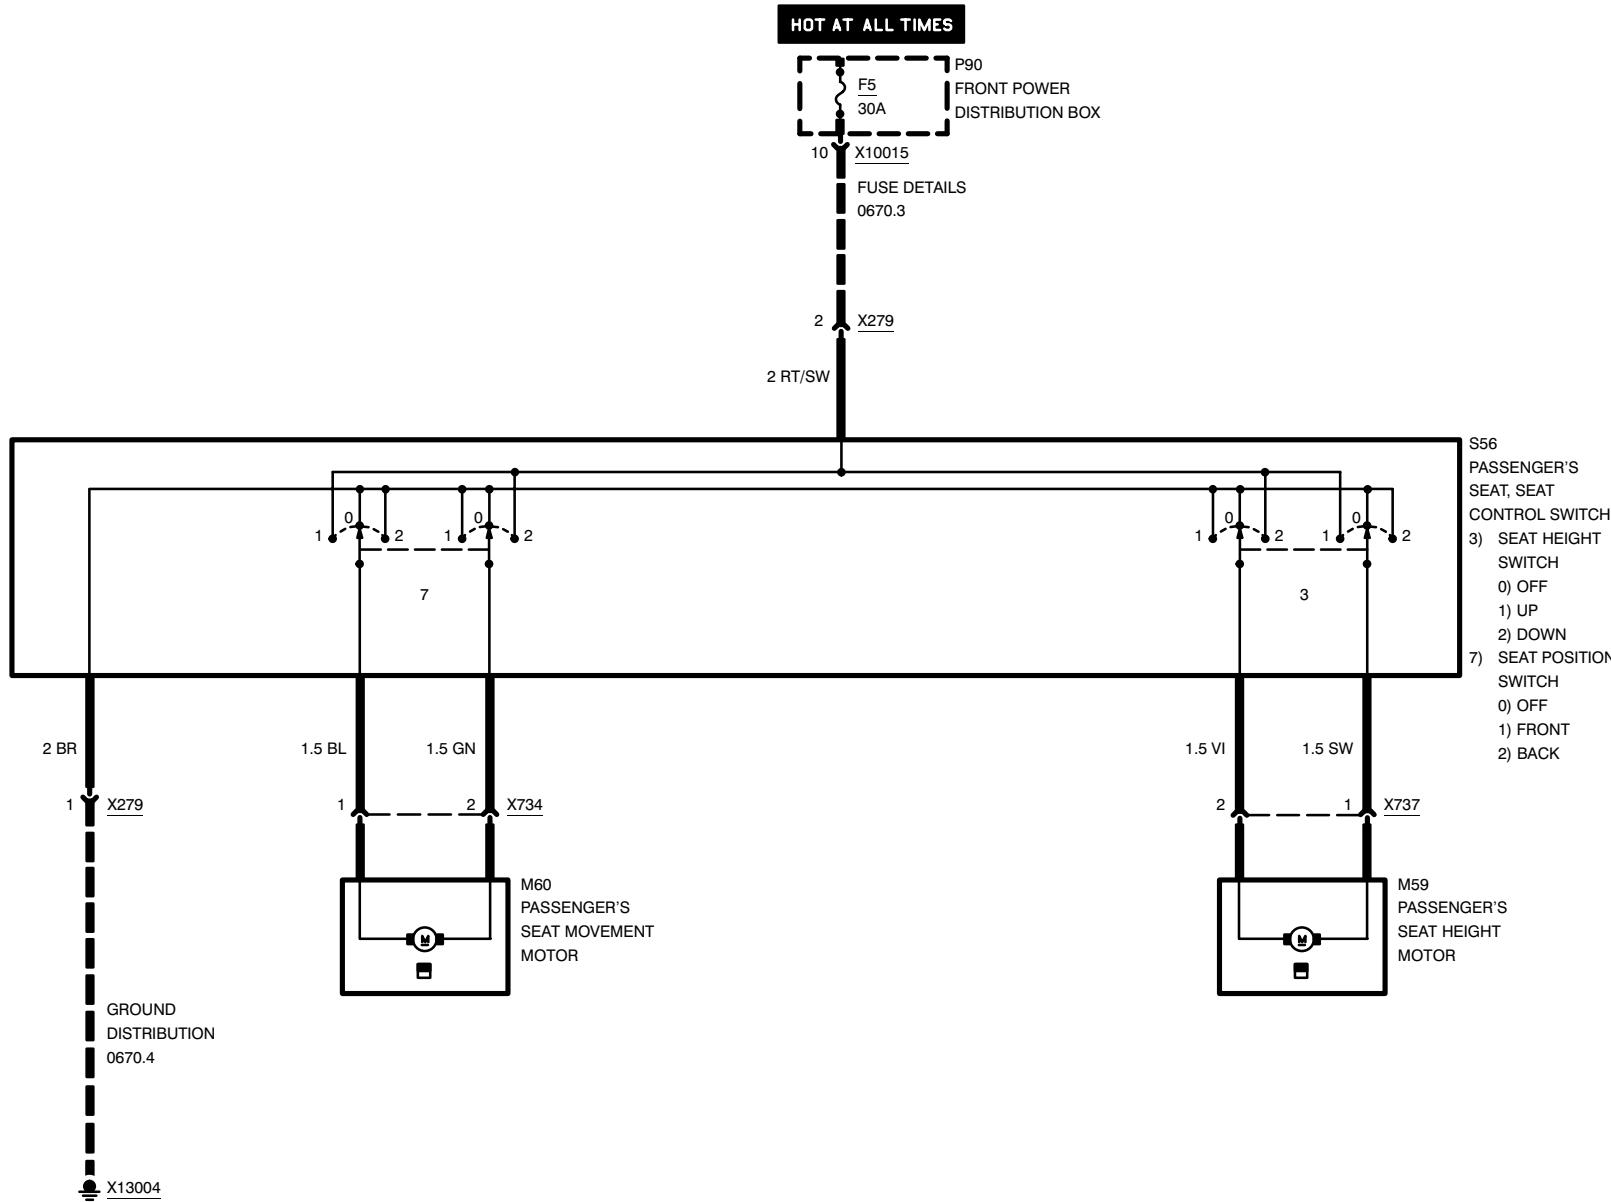



# POWER SEATS

## DRIVER'S SEAT


Z3


# SPORT SEATS EARLY PRODUCTION

03/98

5200.0-02

1997

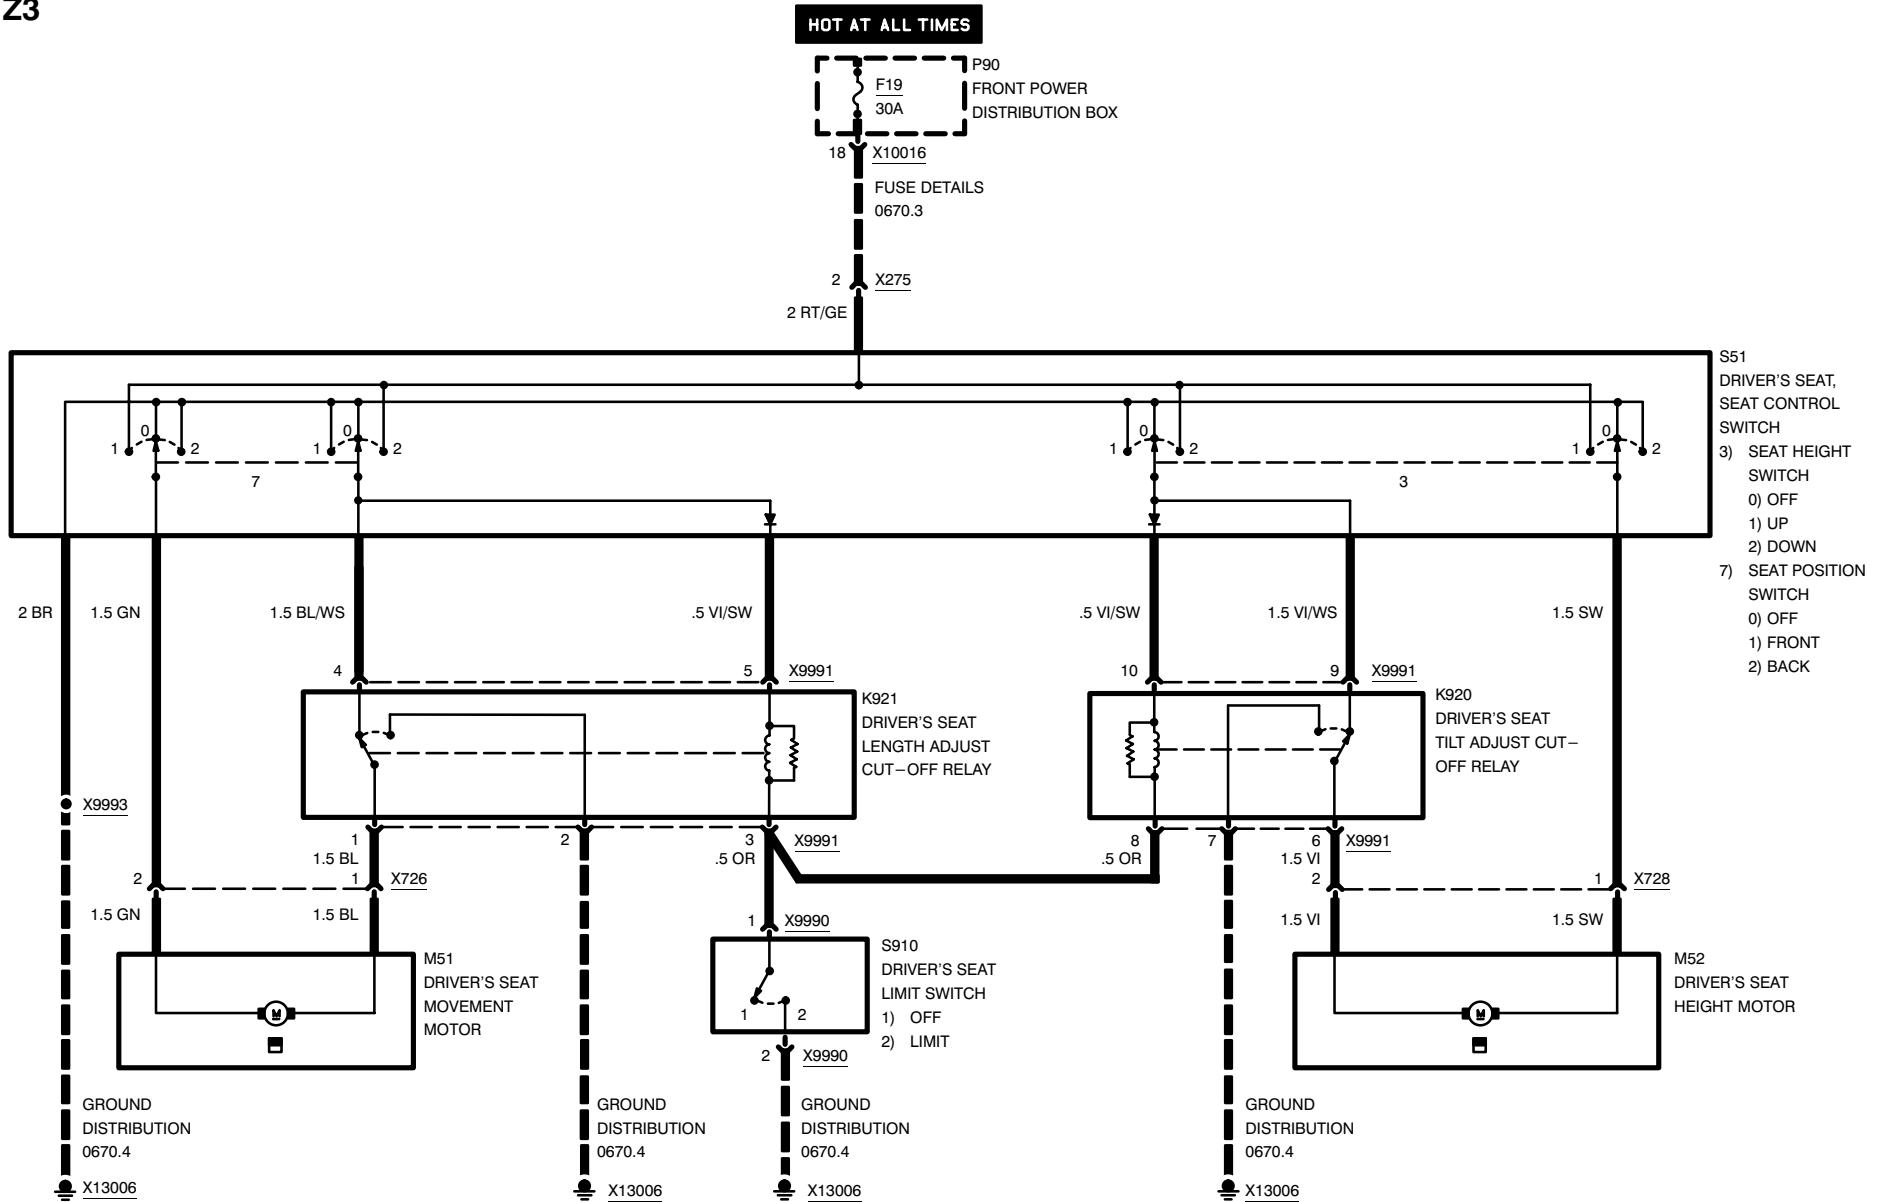

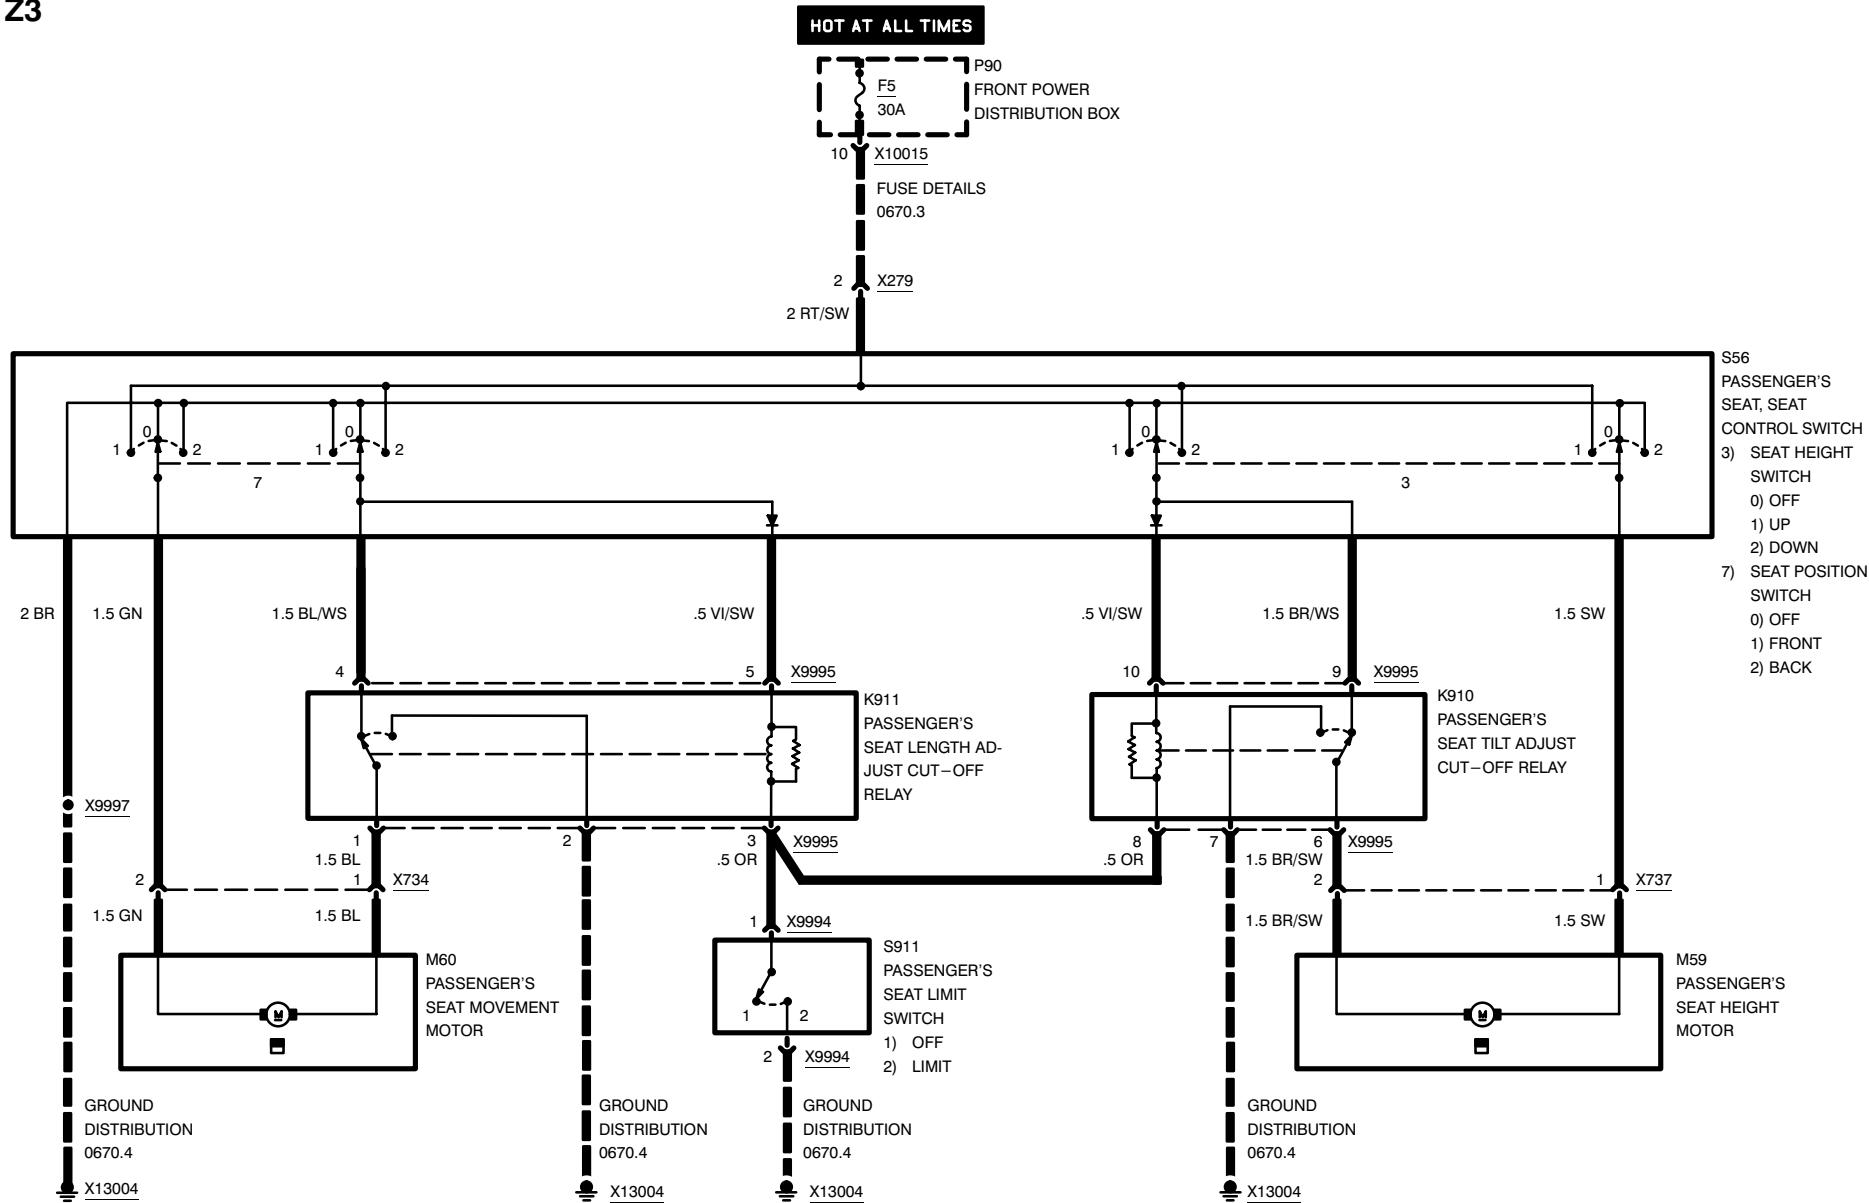



# POWER SEATS

## DRIVER'S SEAT


Z3


LATE PRODUCTION

03/98

5200.0-04

1997

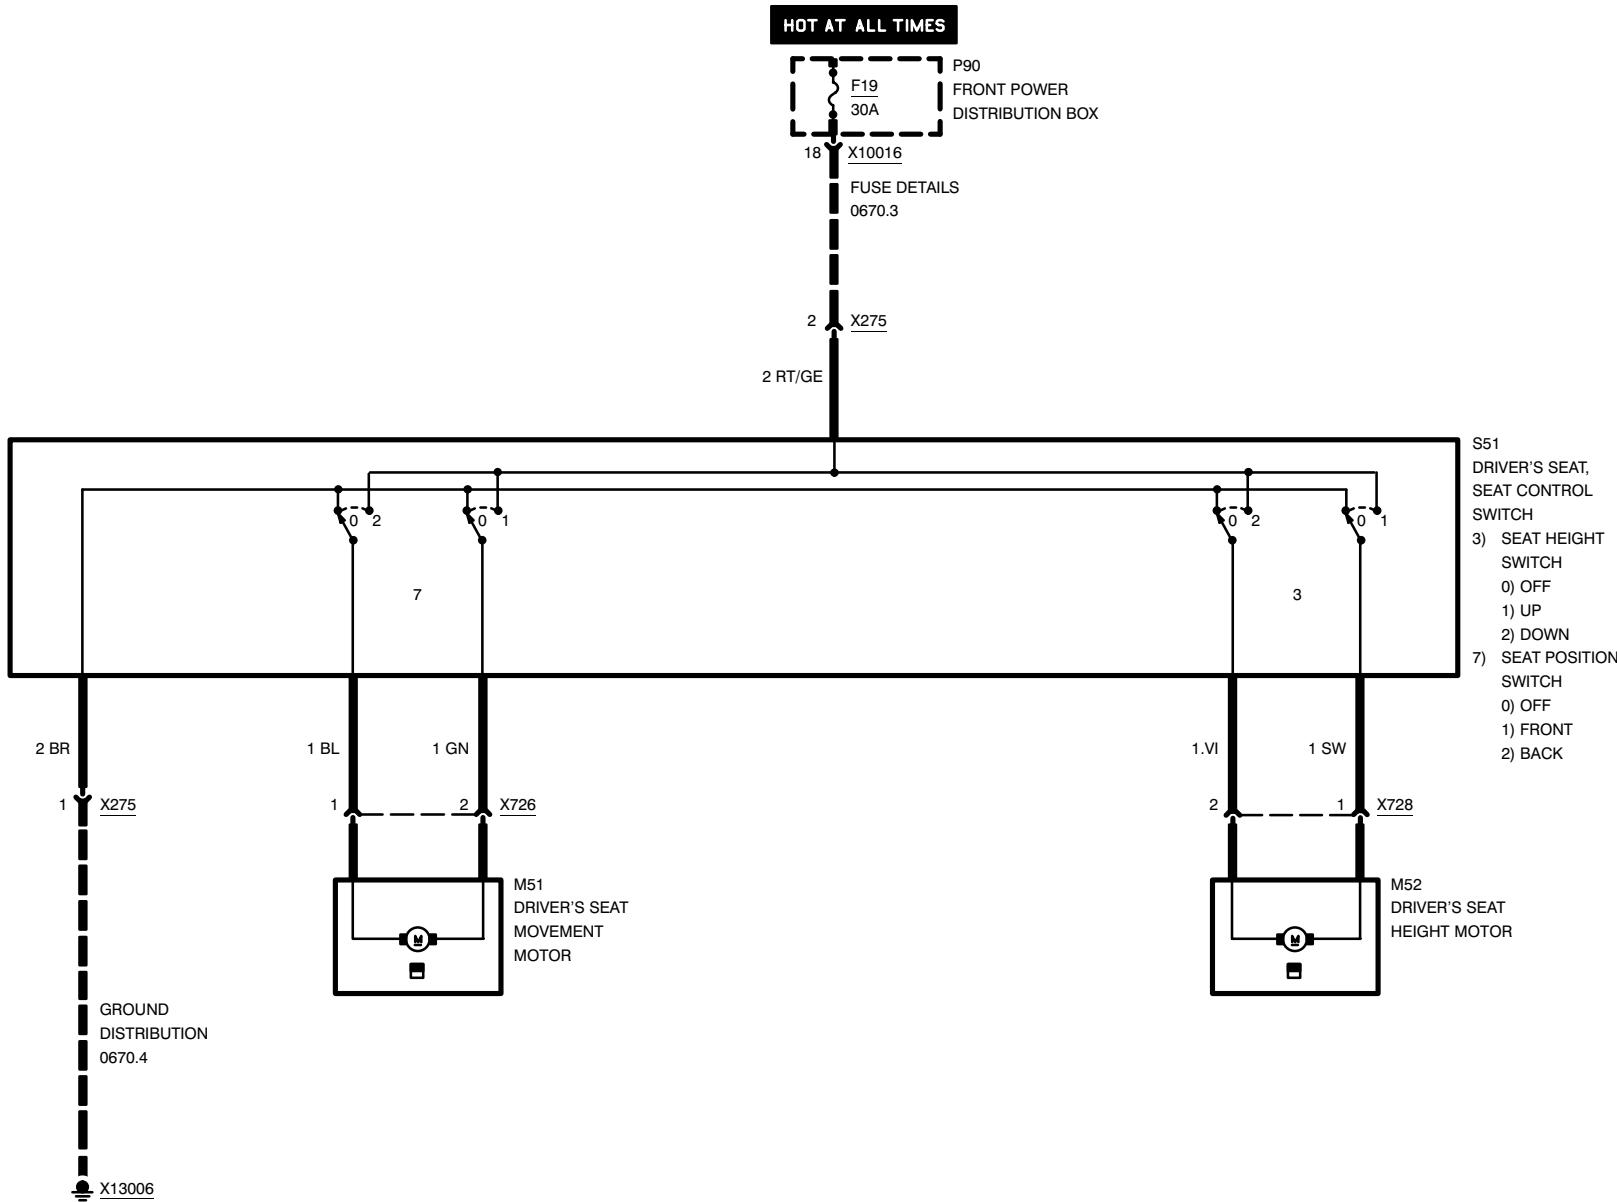

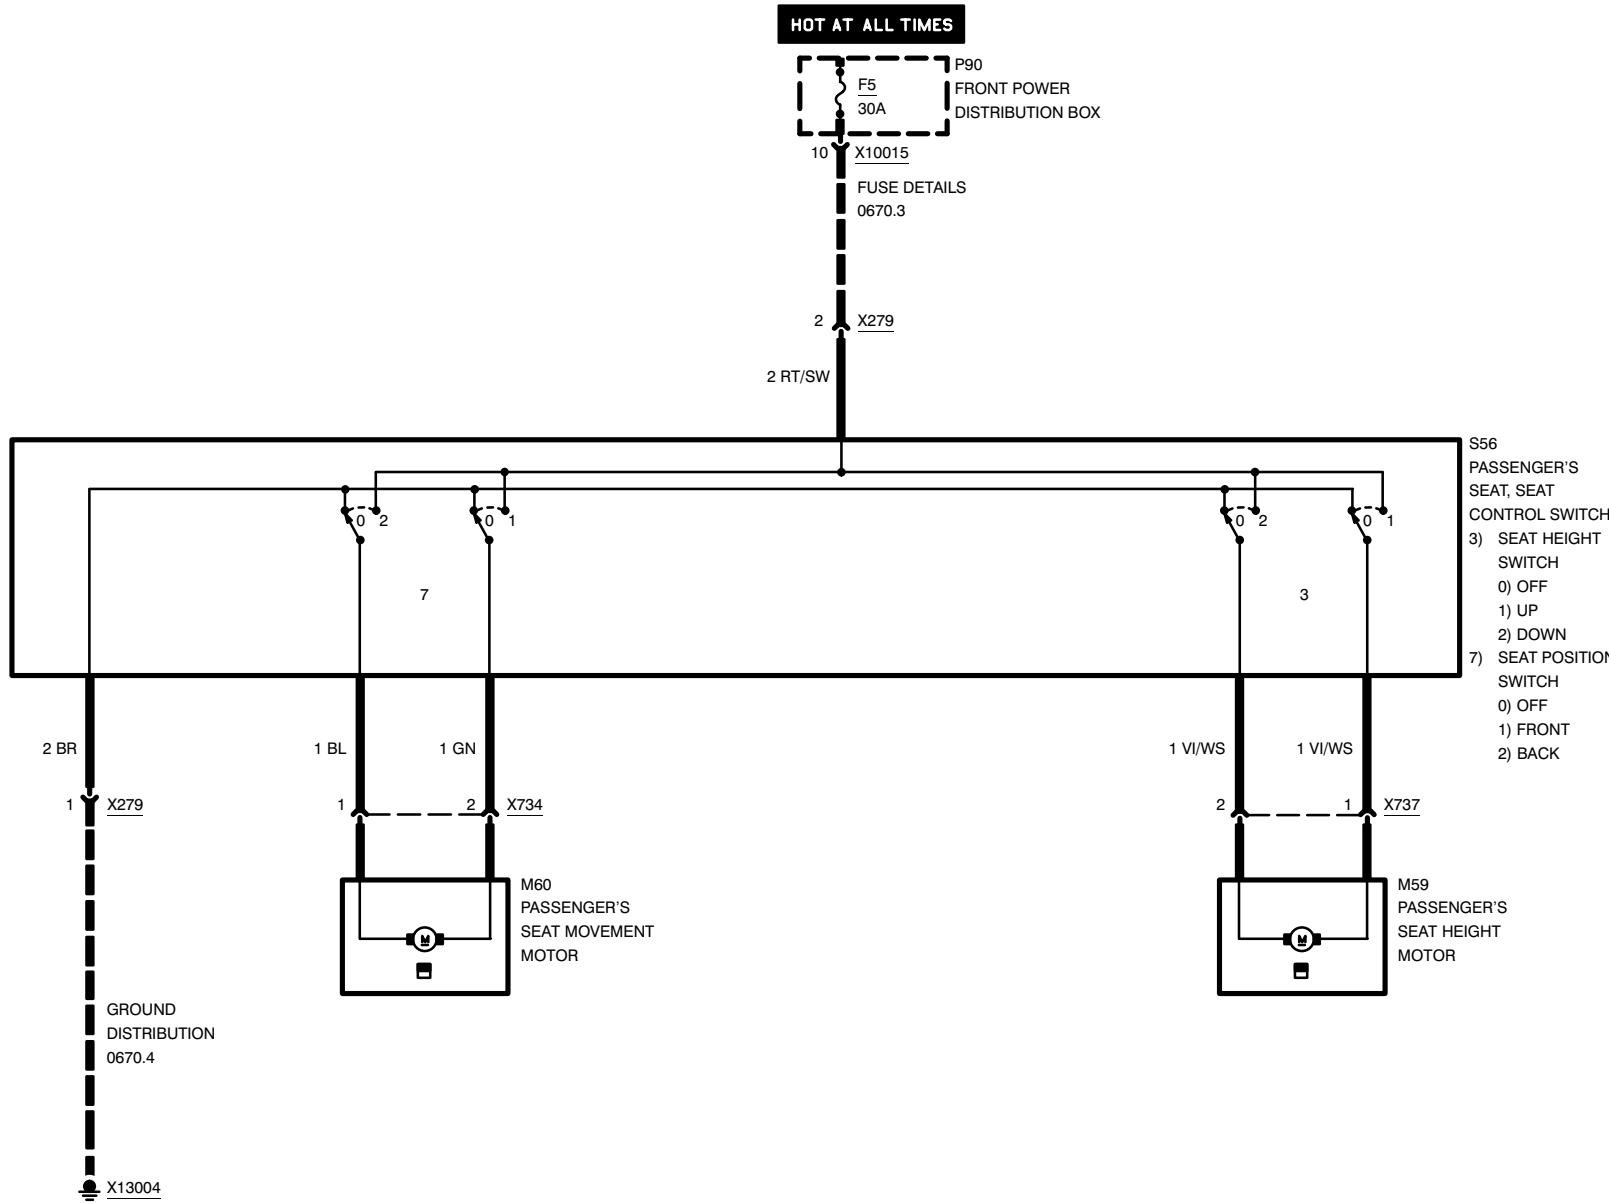



# POWER SEATS

## DRIVER'S SEAT


Z3

# SPORT SEATS LATE PRODUCTION

03/98

5200.0-06

1997

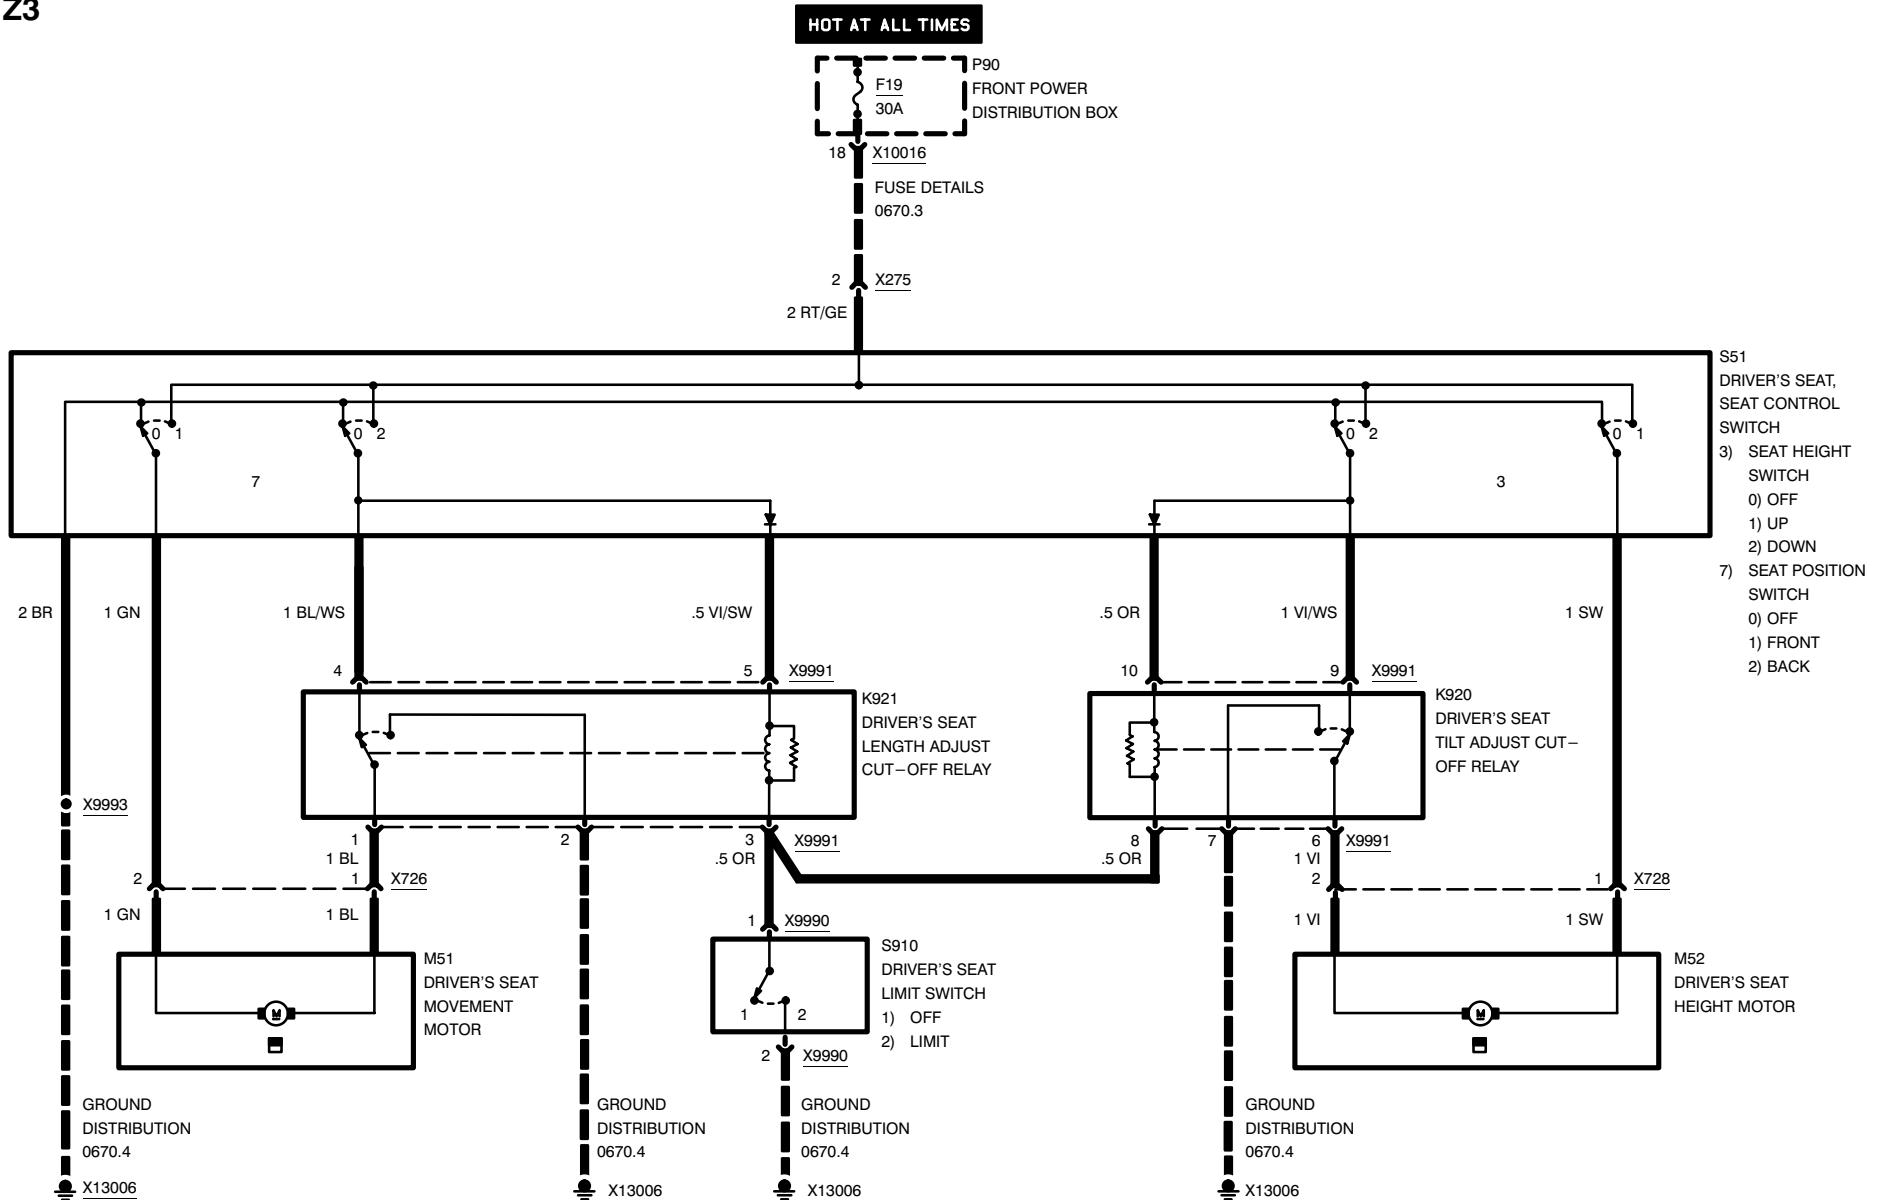



# POWER SEATS

## PASSENGER'S SEAT


Z3

# SPORT SEATS LATE PRODUCTION

03/98

5200.0-07

1997

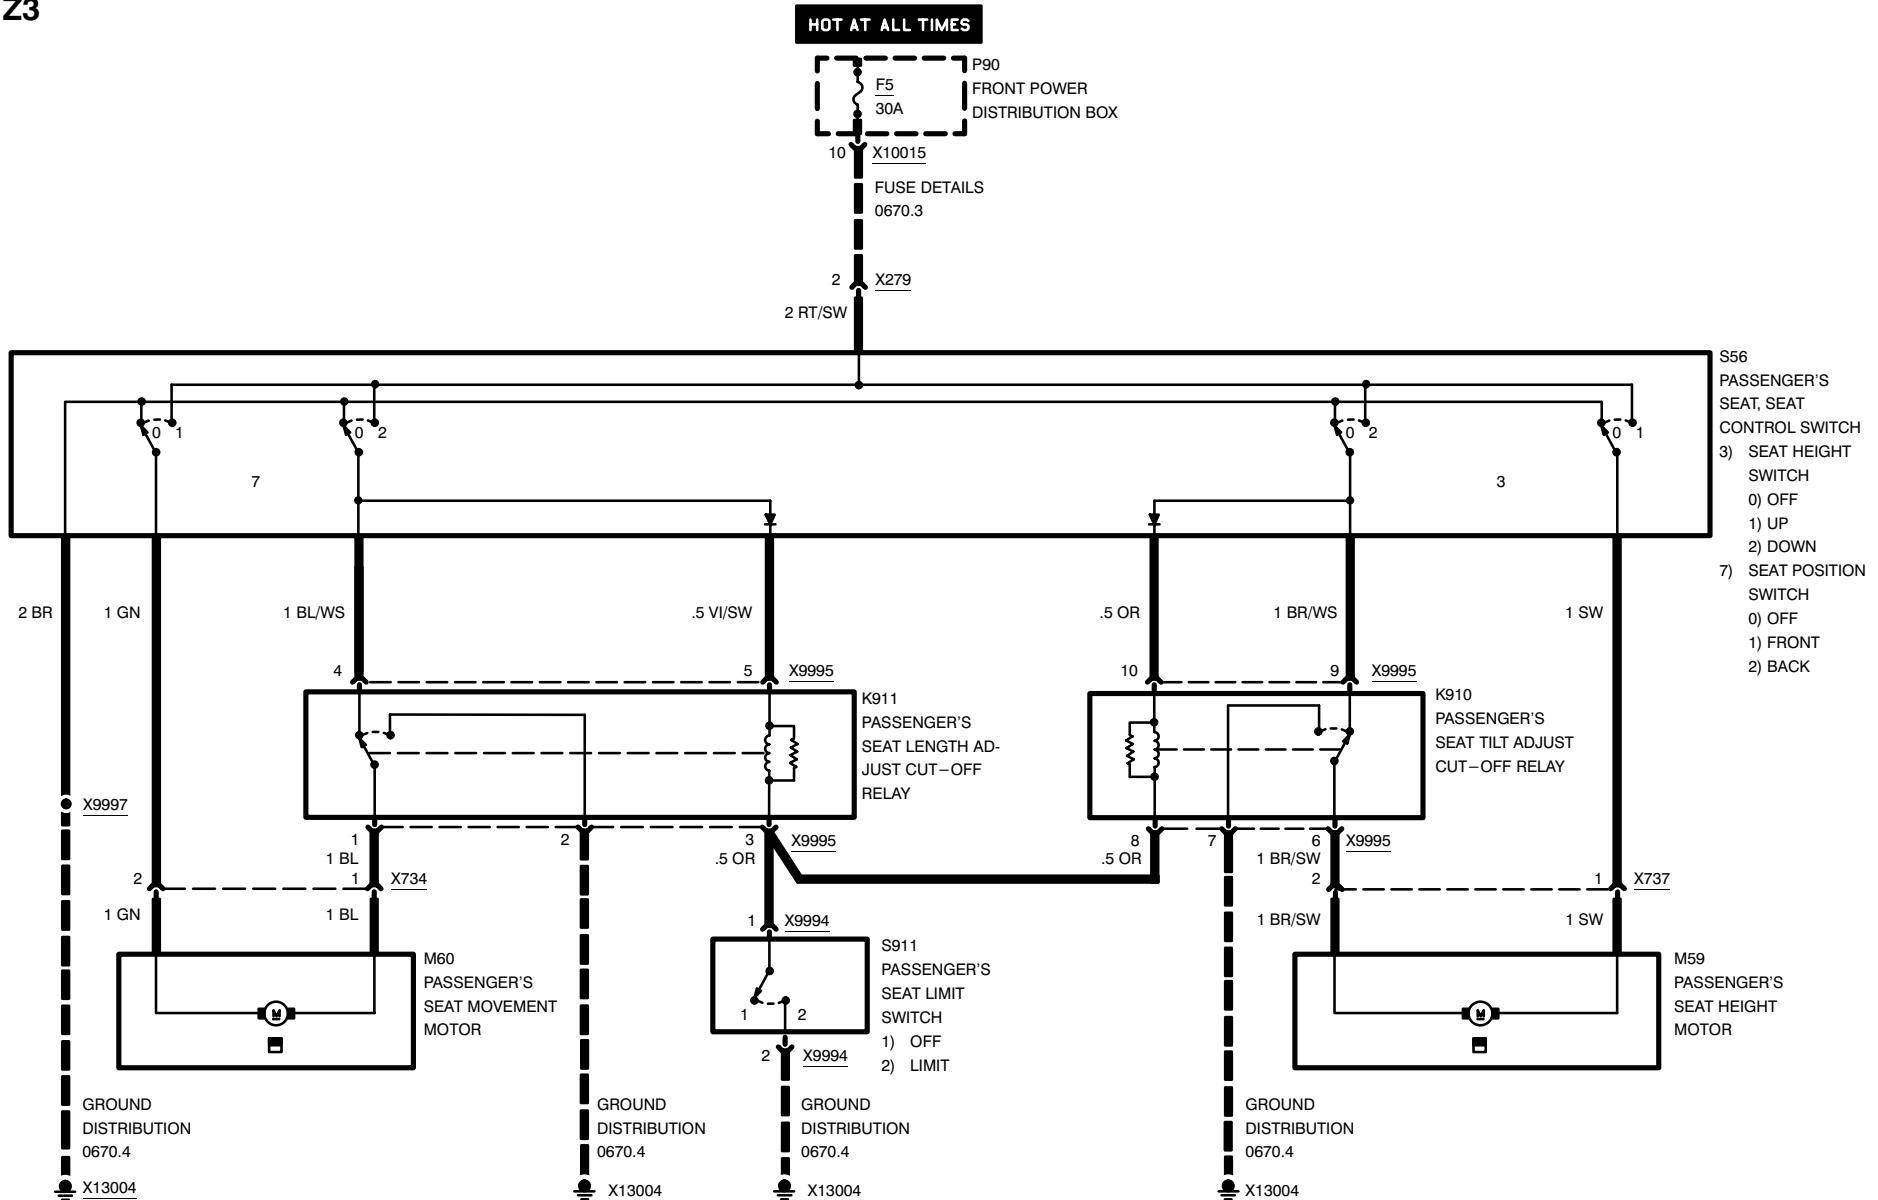


## HEATED SEATS

03/98

5203.0-00

1997

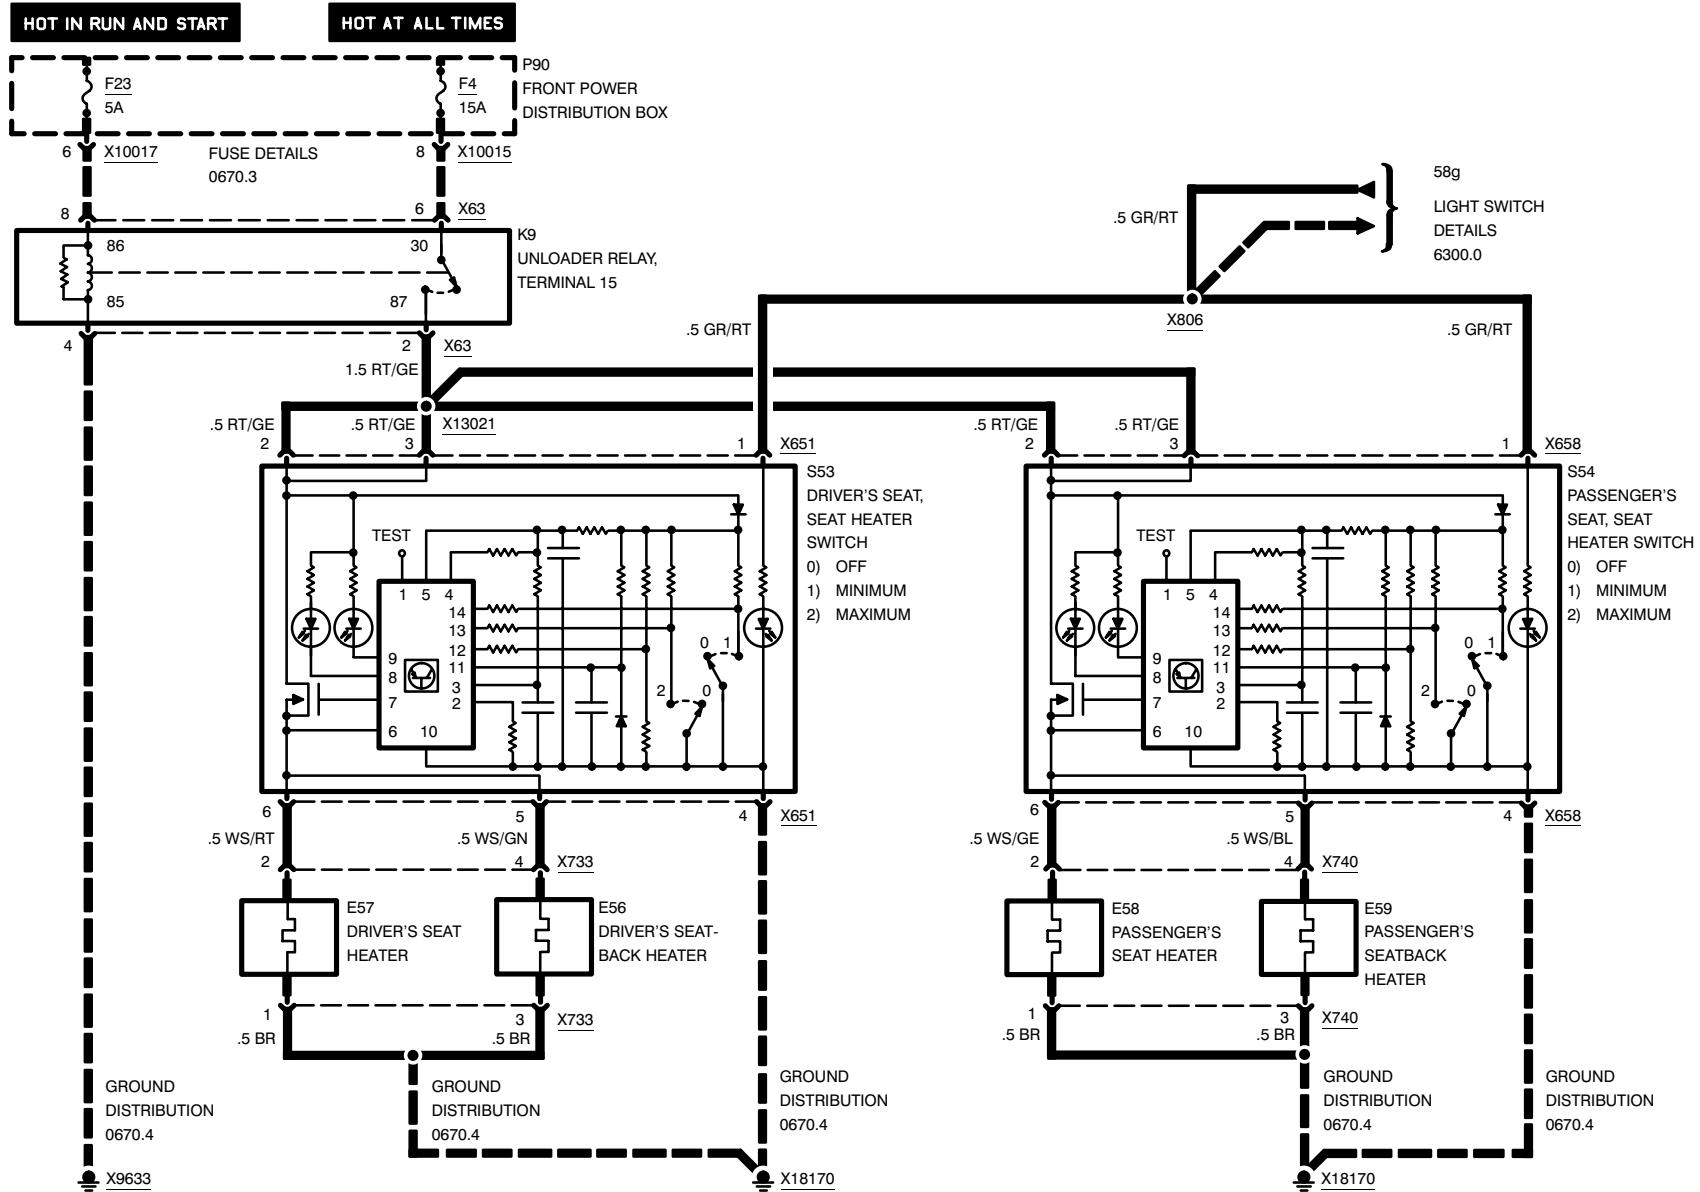


## ELECTRO-MECHANICAL CONVERTIBLE TOP

03/98

5430.0-00

1997

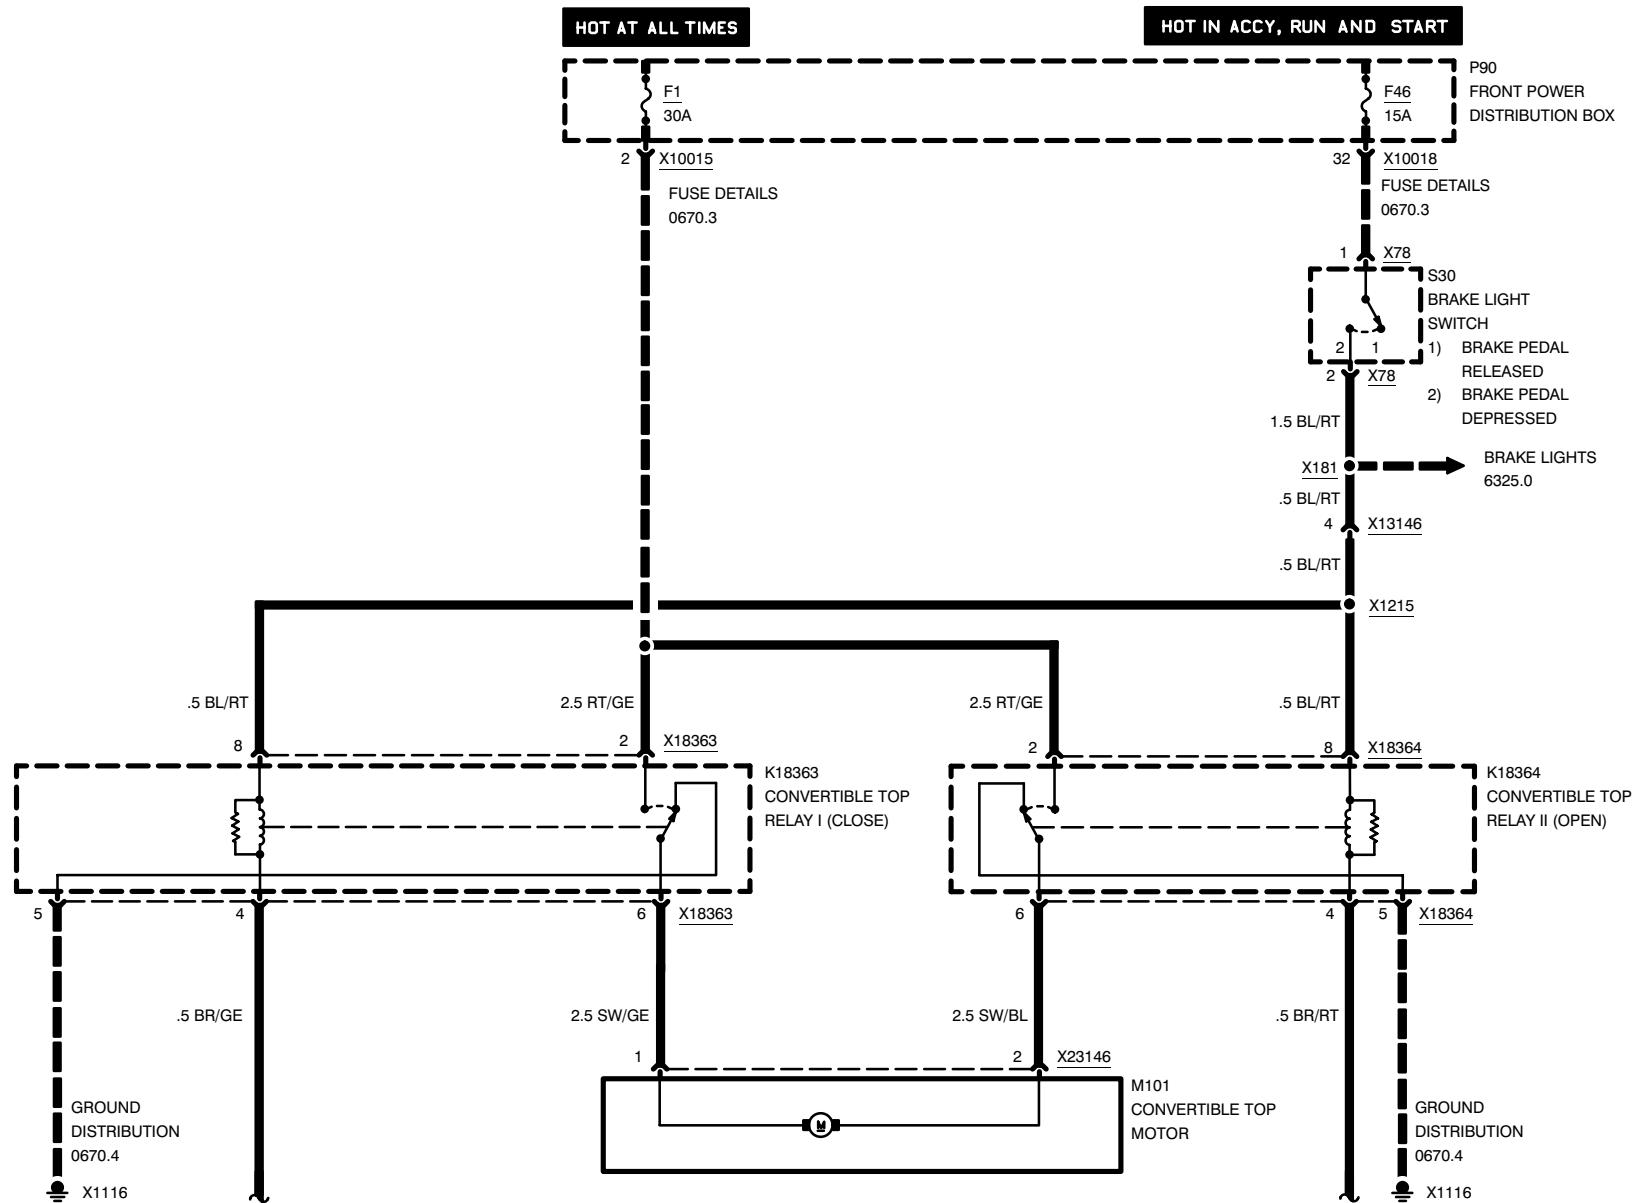


03/98

— 5430.0-01 —

1997

58g  
LIGHT SWITCH  
DETAILS  
6300.0

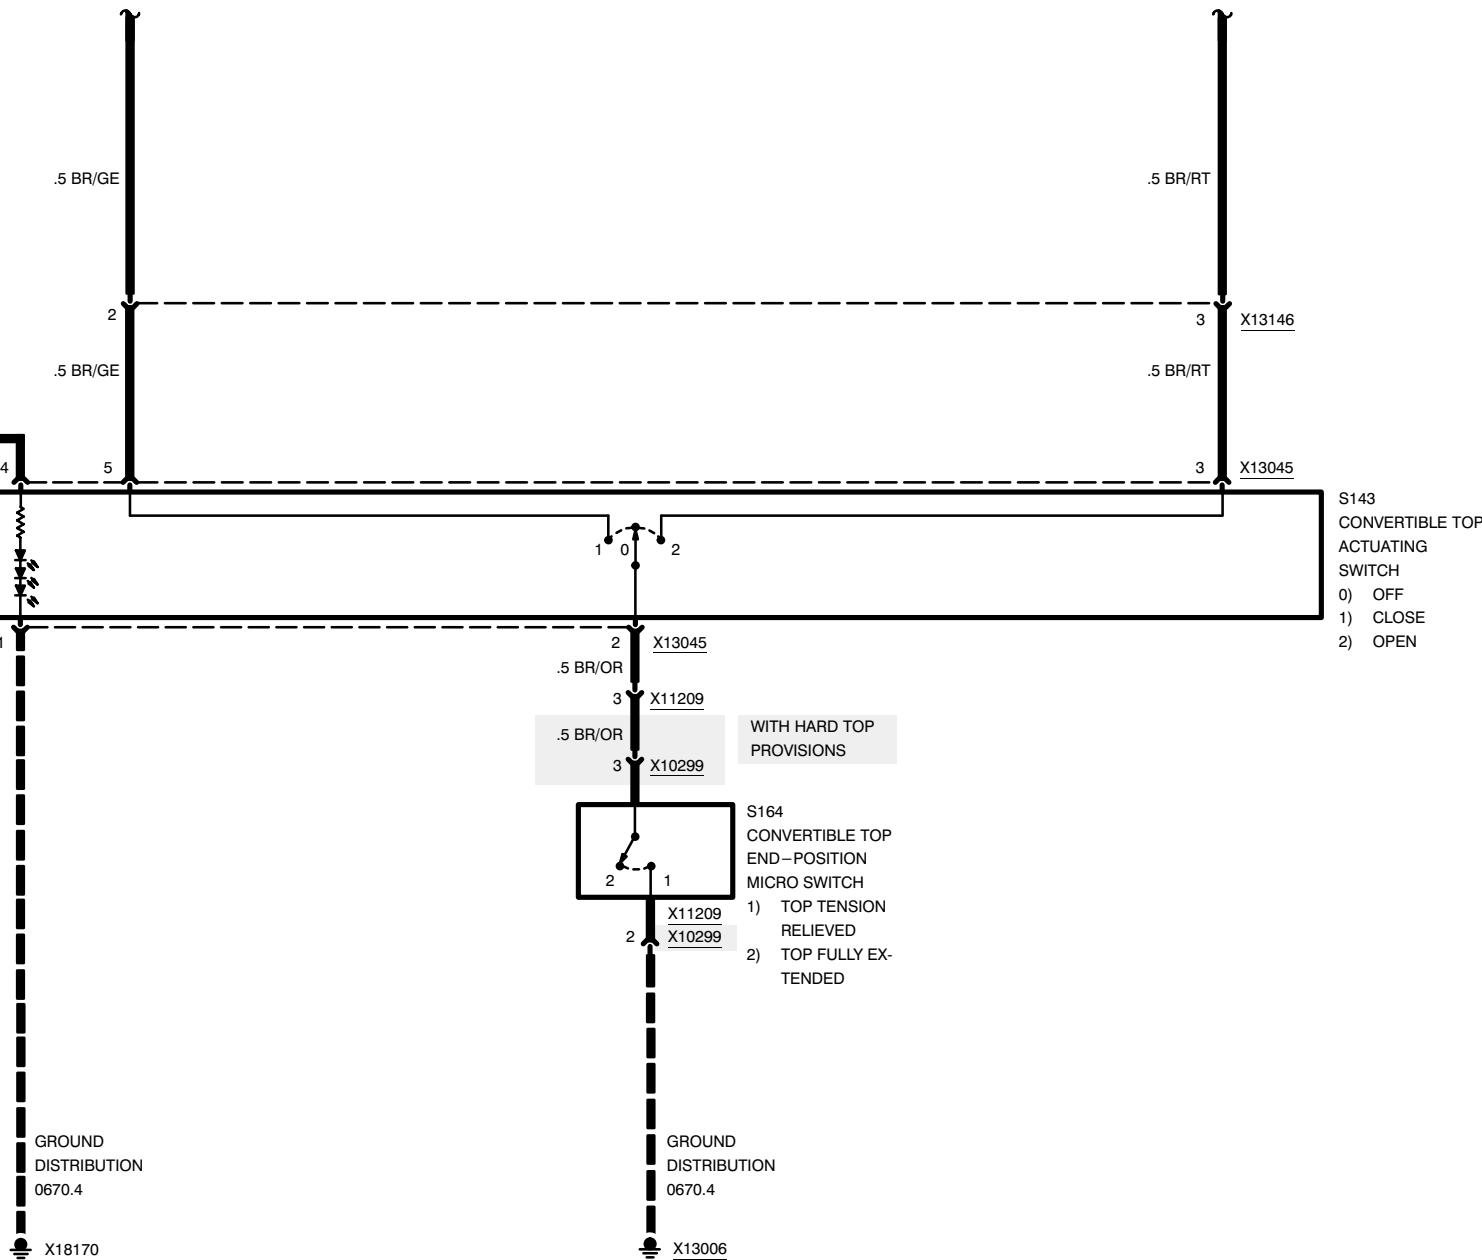

03/98

- 6100.0

— 1997


03/98

• 6100.0

— 199

6100.0

997

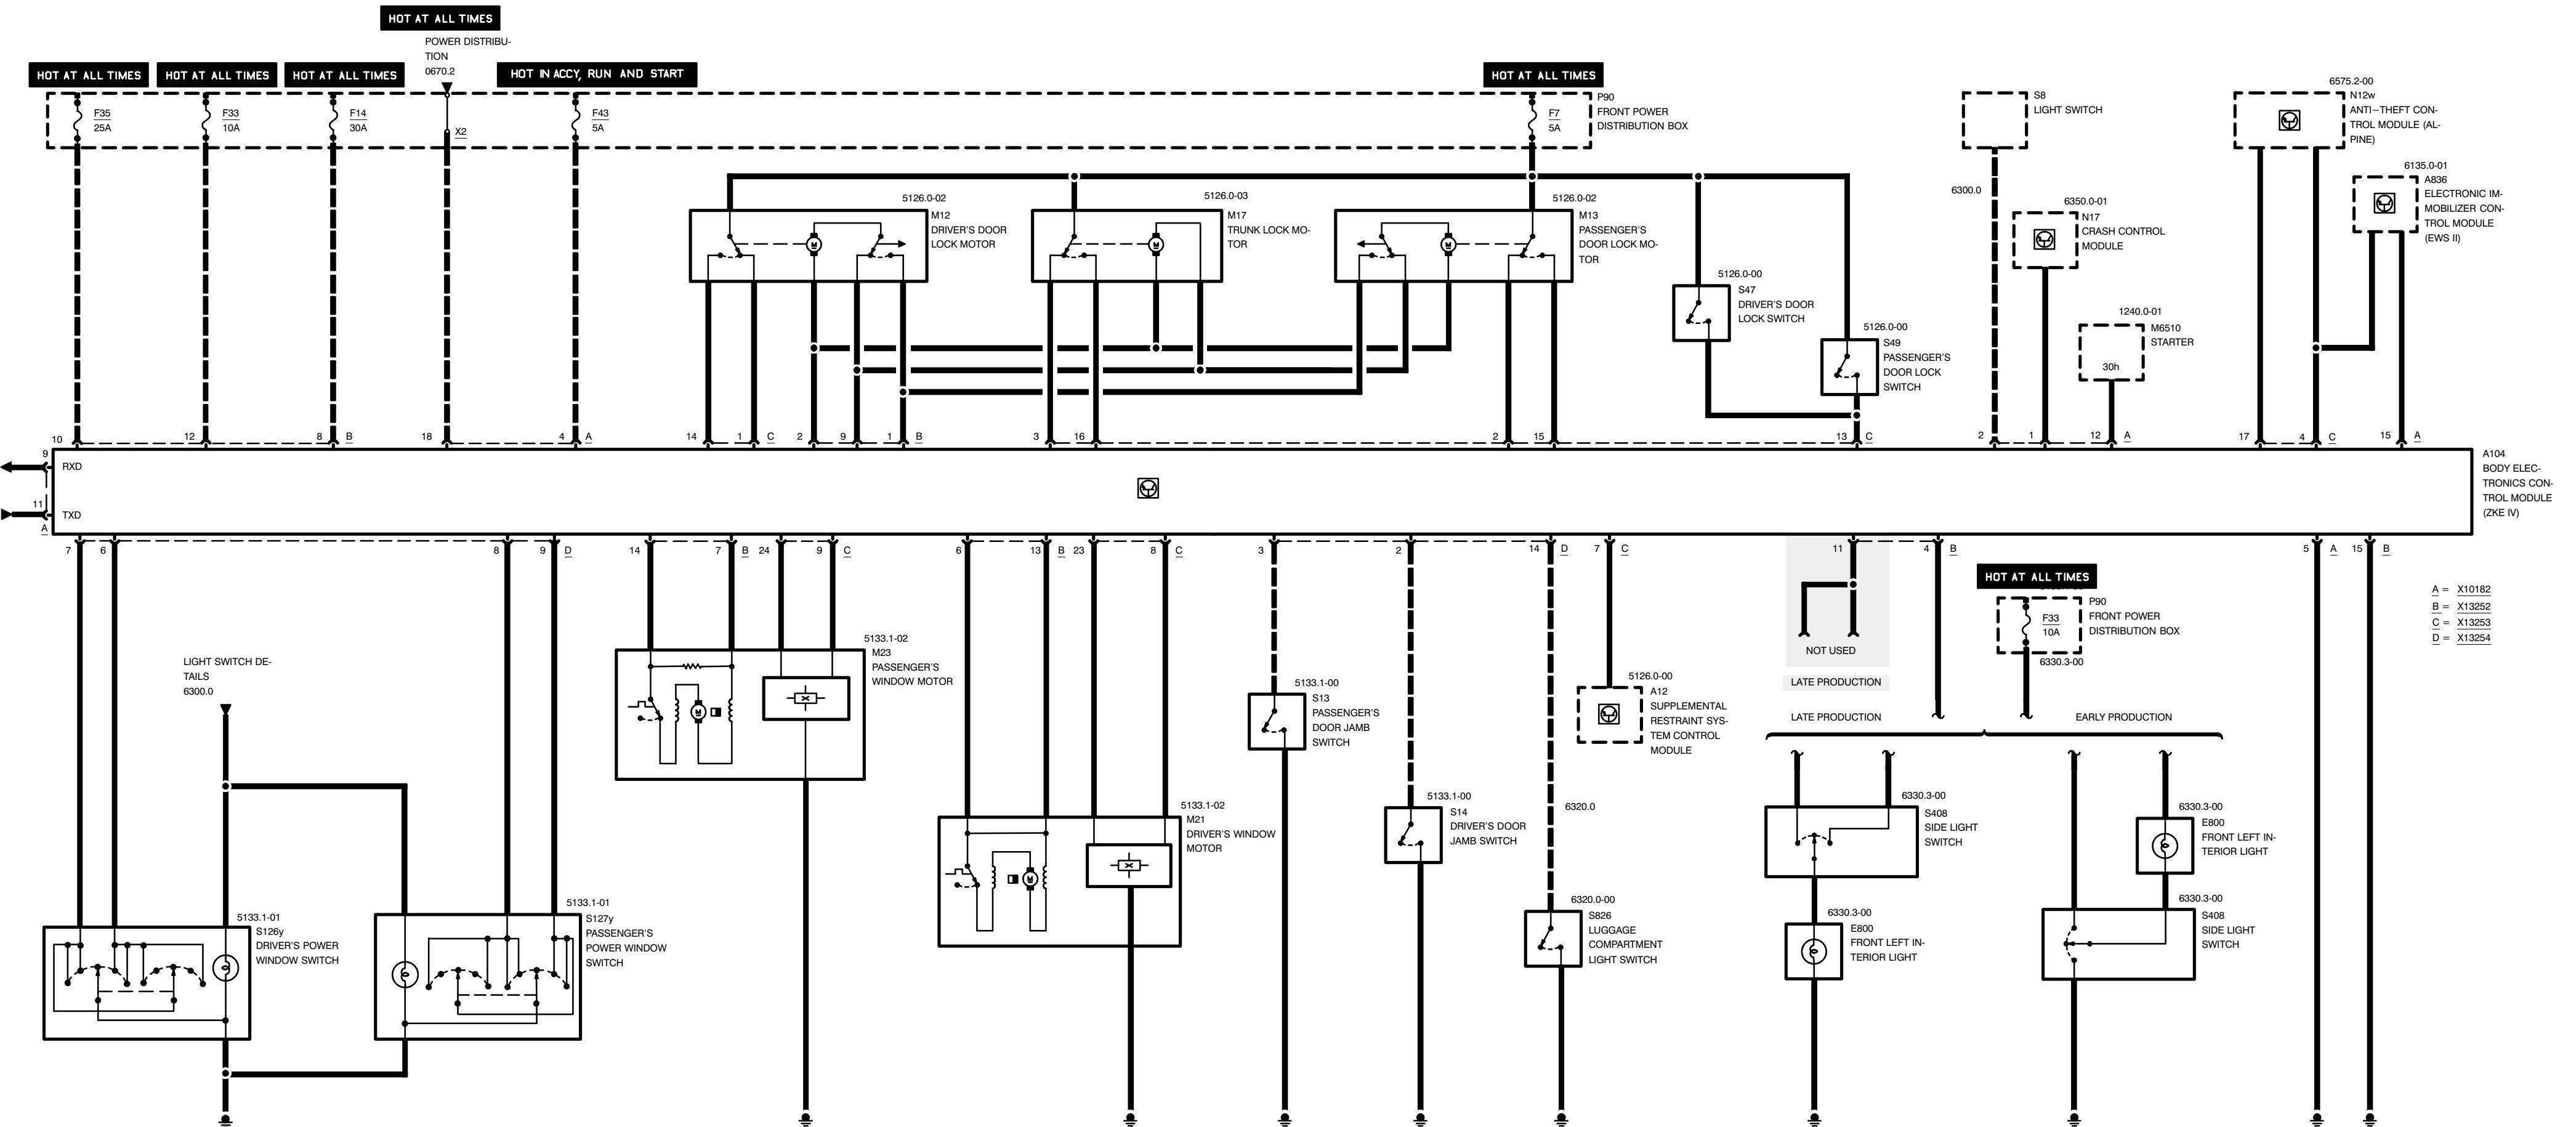




03/98

6100.0-a

1997

Z3

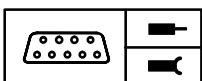

## Pin Assignments

---

A = X10182    18 Pins, black

---

B = X13252    15 Pins, black

---

C = X13253    26 Pins, yellow

---

D = X13254    26 Pins, green

---

### X10182

Pin	Type	Description/Function	Connection
1	E	Crash signal	Crash control module
2	E	Light signal	Light switch
3		Not used	
4	E	Power supply	Front power distribution box, fuse 43
5	M	Ground	Ground point
6		Not used	
7		Not used	
8		Not used	
9	A	Diagnosis RxD signal	Data link connector
10		Not used	
11	E/A	Diagnosis TxD signal	Data link connector
12	E	Start signal	Starter
13		Not used	
14		Not used	
15	A	Drive away protection	Electronic immobilizer control module (EWS II)
16		Not used	
17		Not used	
18	E	Power supply	Front power distribution box

E = Input, A = Output, M = Ground




03/98

6100.0-b

1997

Z3

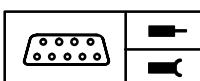

## Pin Assignments

### X13252

Pin	Type	Description/Function	Connection
1	A	Central arrest signal	Lock motors
2	A	Unlock signal	Lock motors
3		Not used	
4	A	Automatic interior light signal	Side light switch
5		Not used	
6	A	Voltage supply	Power window motor driver's door
7	A	Voltage supply	Power window motor passenger's door
8	E	Power supply	Front power distribution box, fuse 14
9	A	Lock signal	Lock motors
10	E	Power supply	Front power distribution box, fuse 35
11	A	Consumer cut-off signal (Late Production)	Not used
12	E	Power supply	Front power distribution box, fuse 33
13	E	Motor signal	Power window motor driver's door
14	E	Motor signal	Power window motor passenger's door
15	M	Ground	Ground point

### X13253

Pin	Type	Description/Function	Connection
1	E	Unlock signal	Door lock motor driver's door
2	E	Unlock signal	Door lock motor passenger's door
3	E	Unlock signal	Trunk lock motor
4	E	Data signal	Anti-theft system control module (Alpine)
5		Not used	
6		Not used	
7	E	Crash signal	Supplemental restraint system control module
8	E	Revolution signal	Power window motor driver's door
9	E	Revolution signal	Power window motor passenger's door
10		Not used	

E = Input, A = Output, M = Ground




03/98

6100.0-c

1997

Z3

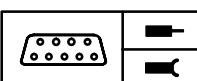

## Pin Assignments

Pin	Type	Description/Function	Connection
11		Not used	
12		Not used	
13	E	Central arrest signal	Door lock switches
14	E	Lock signal driver's door	Door lock motor driver's door
15	E	Lock signal passenger's door	Door lock motor passenger's door
16	E	Lock signal trunk lid	Trunk lock motor
17	E	Data signal	Anti-theft system control module (Alpine)
18		Not used	
19		Not used	
20		Not used	
21		Not used	
22		Not used	
23	A	Plus supply (revolution)	Power window's motor driver's side
24	A	Voltage supply (revolution)	Power window's motor passenger's side
25		Not used	
26		Not used	

## X13254

Pin	Type	Description/Function	Connection
1		Not used	
2	E	Door signal	Door jamb switch driver's door
3	E	Door signal	Door jamb switch passenger's door
4		Not used	
5		Not used	
6	E	OPEN-signal	Power window switch driver's door
7	E	CLOSE-signal	Power window switch driver's door
8	E	OPEN-signal	Power window switch passenger's door
9	E	CLOSE-signal	Power window switch passenger's door
10		Not used	
11		Not used	
12		Not used	

E = Input, A = Output, M = Ground




03/98

6100.0-d

1997

Z3

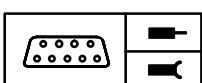


## Pin Assignments

Pin	Type	Description/Function	Connection
13		Not used	
14	E	Luggage compartment signal	Luggage compartment light switch
15		Not used	
16		Not used	
17		Not used	
18		Not used	
19		Not used	
20		Not used	
21		Not used	
22		Not used	
23		Not used	
24		Not used	
25		Not used	
26		Not used	

E = Input, A = Output, M = Ground

## CENTRAL BODY ELECTRONICS (ZKE IV)


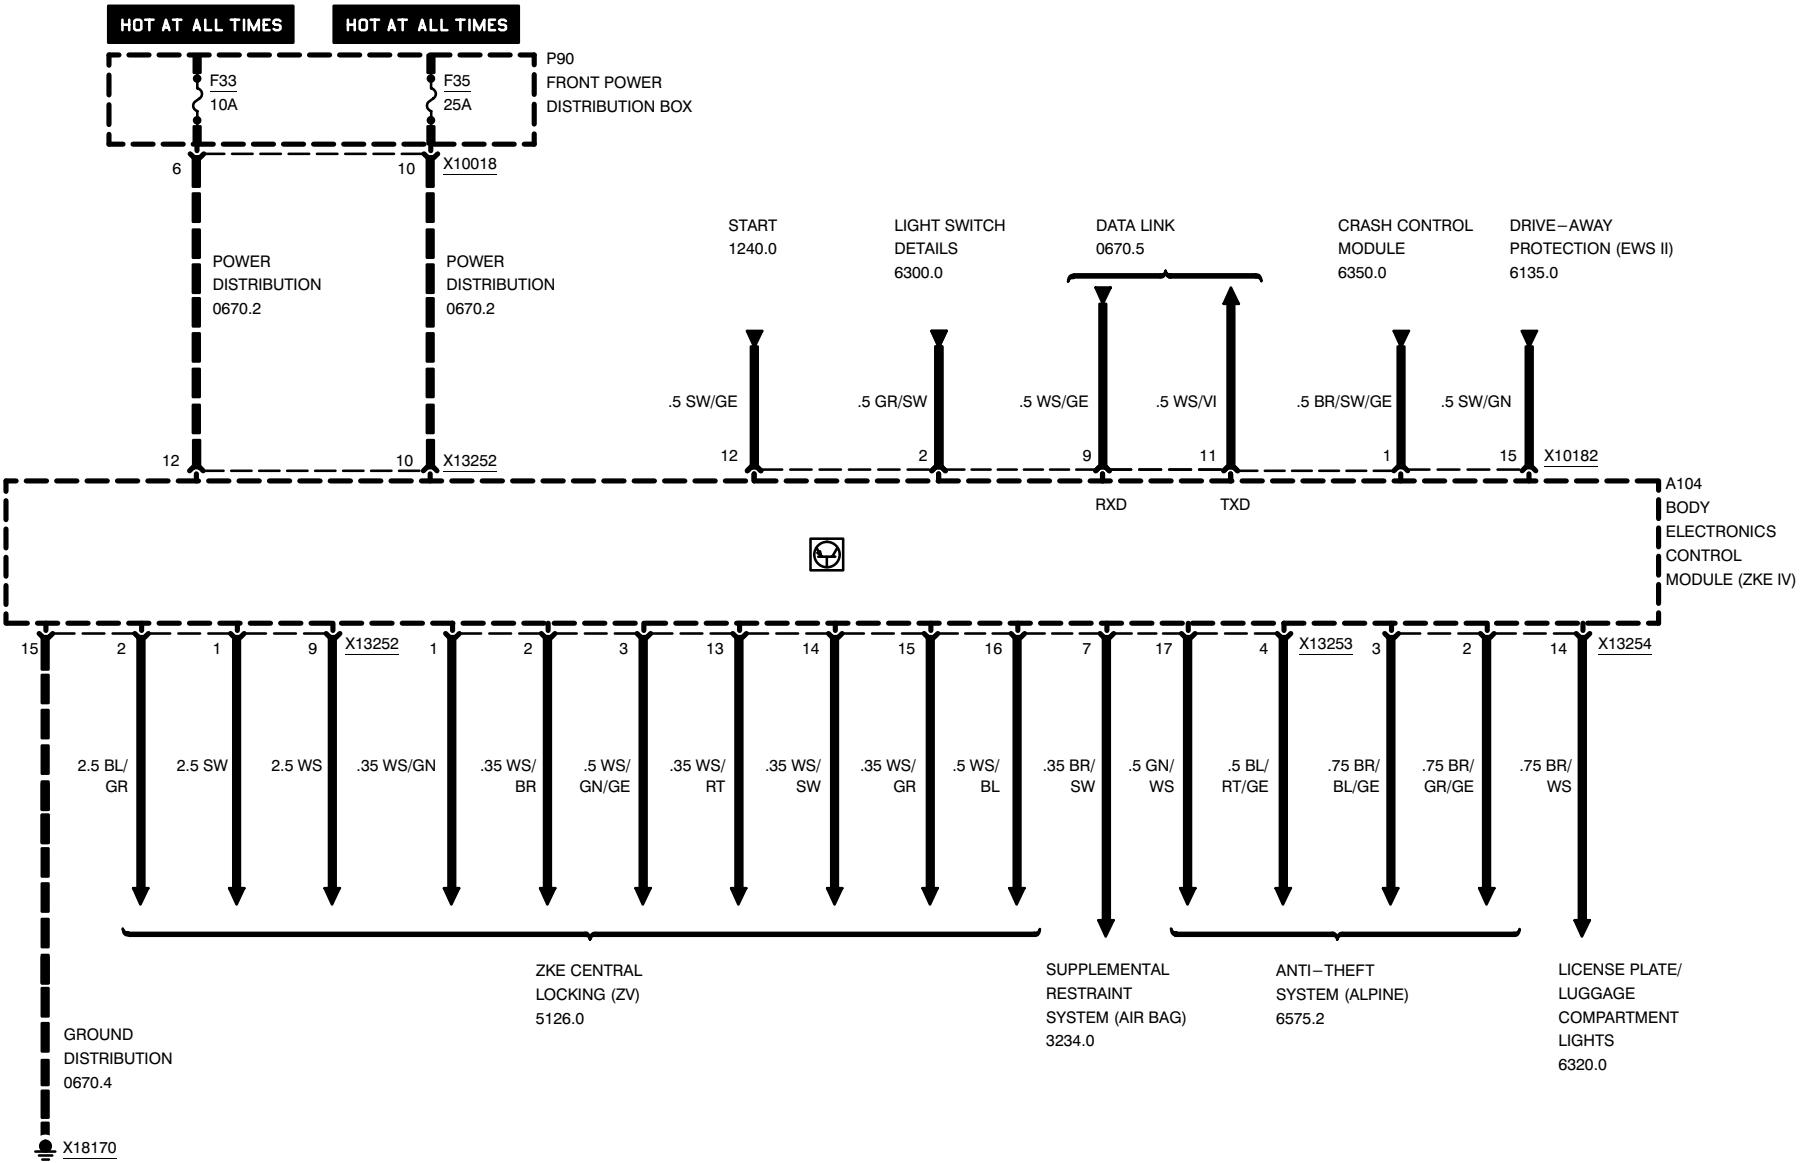



## CENTRAL BODY ELECTRONICS (ZKE IV)

03/98

6100.0-01

1997

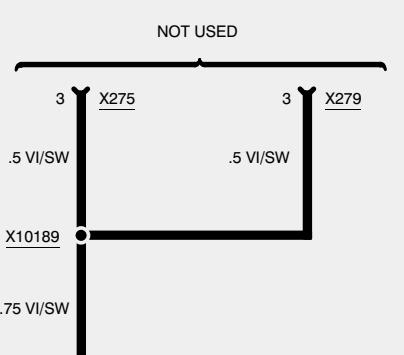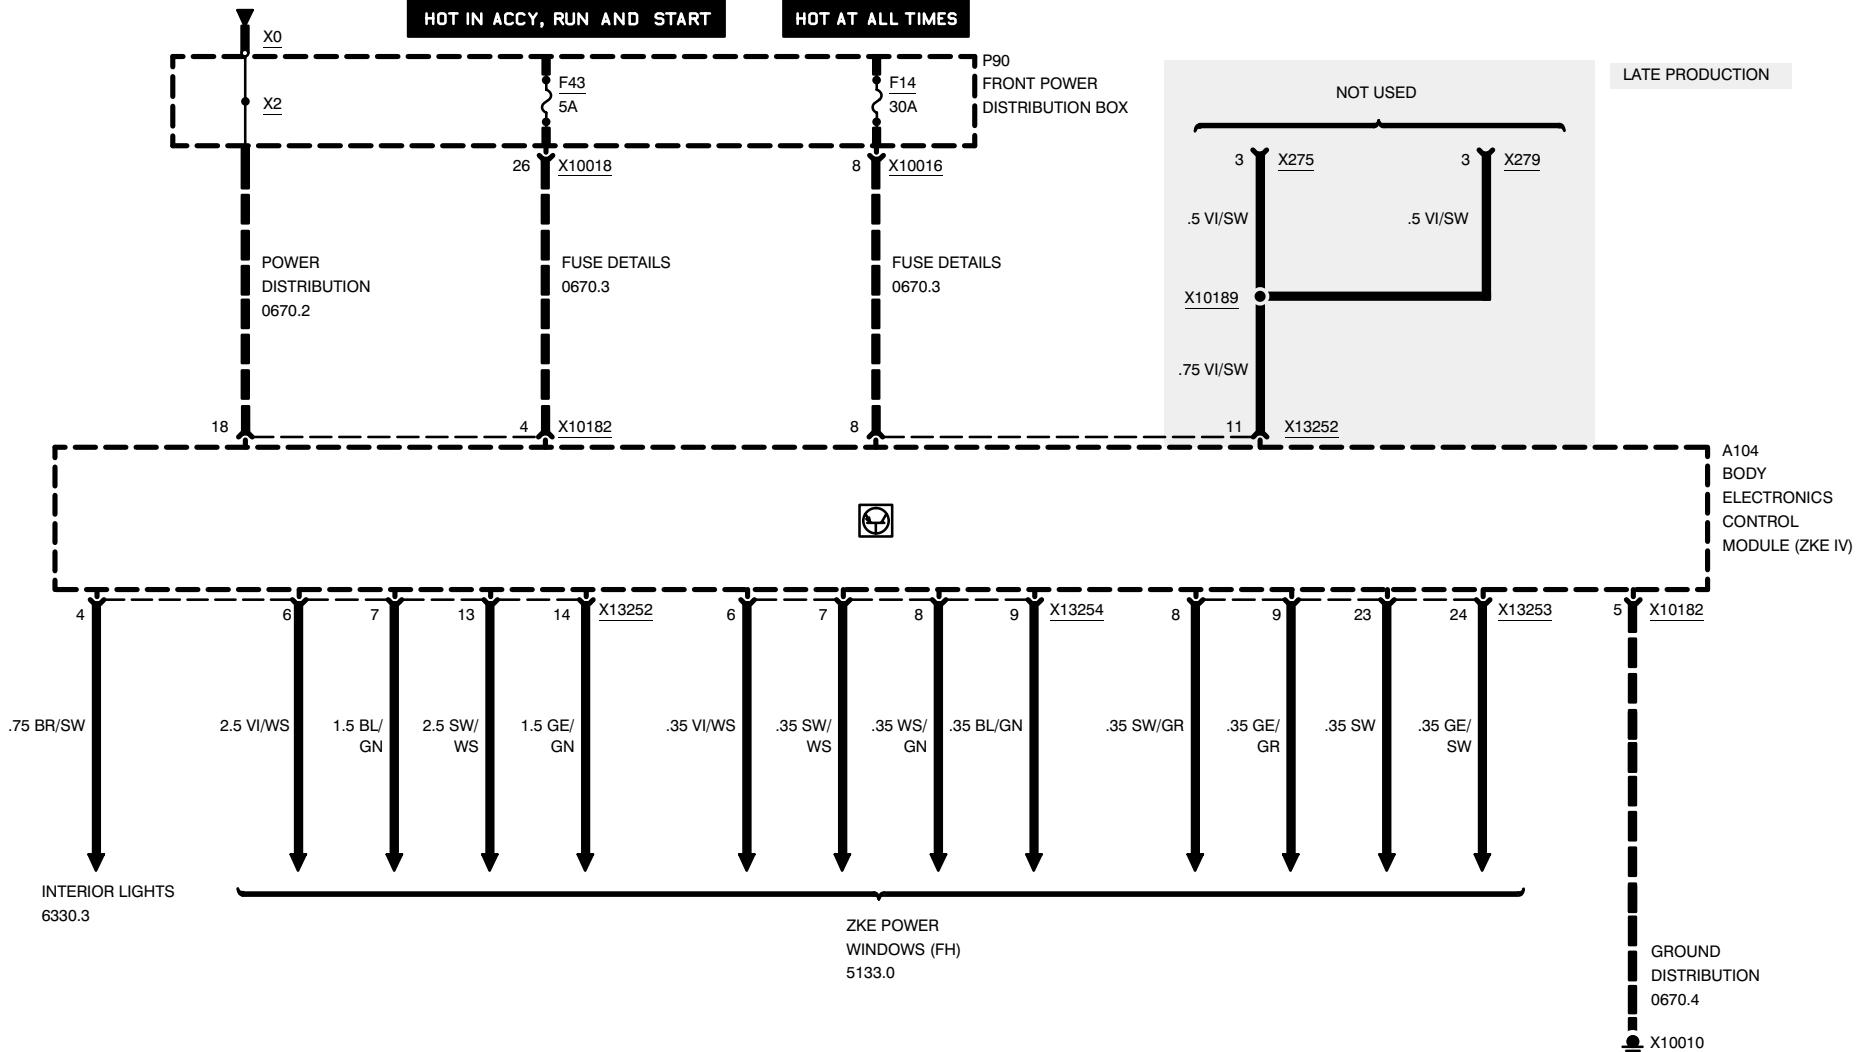
**HOT AT ALL TIMES**POWER  
DISTRIBUTION  
0670.2**HOT IN ACCY, RUN AND START****HOT AT ALL TIMES**P90  
FRONT POWER  
DISTRIBUTION BOX**LATE PRODUCTION**A104  
BODY  
ELECTRONICS  
CONTROL  
MODULE (ZKE IV)

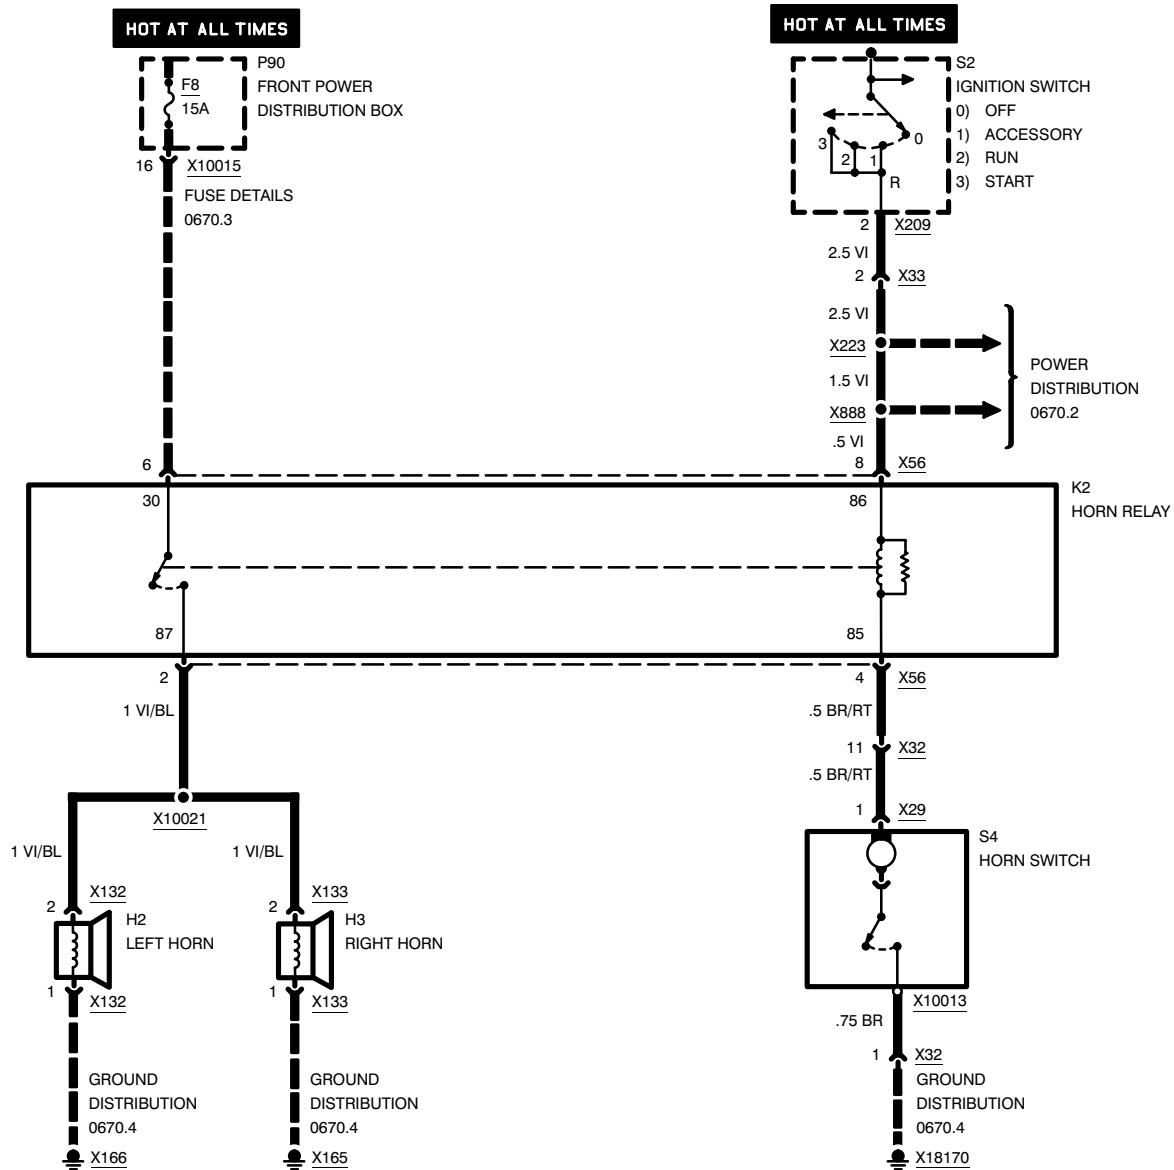

## DRIVE-AWAY PROTECTION (EWS II)

03/98

6135.0-00

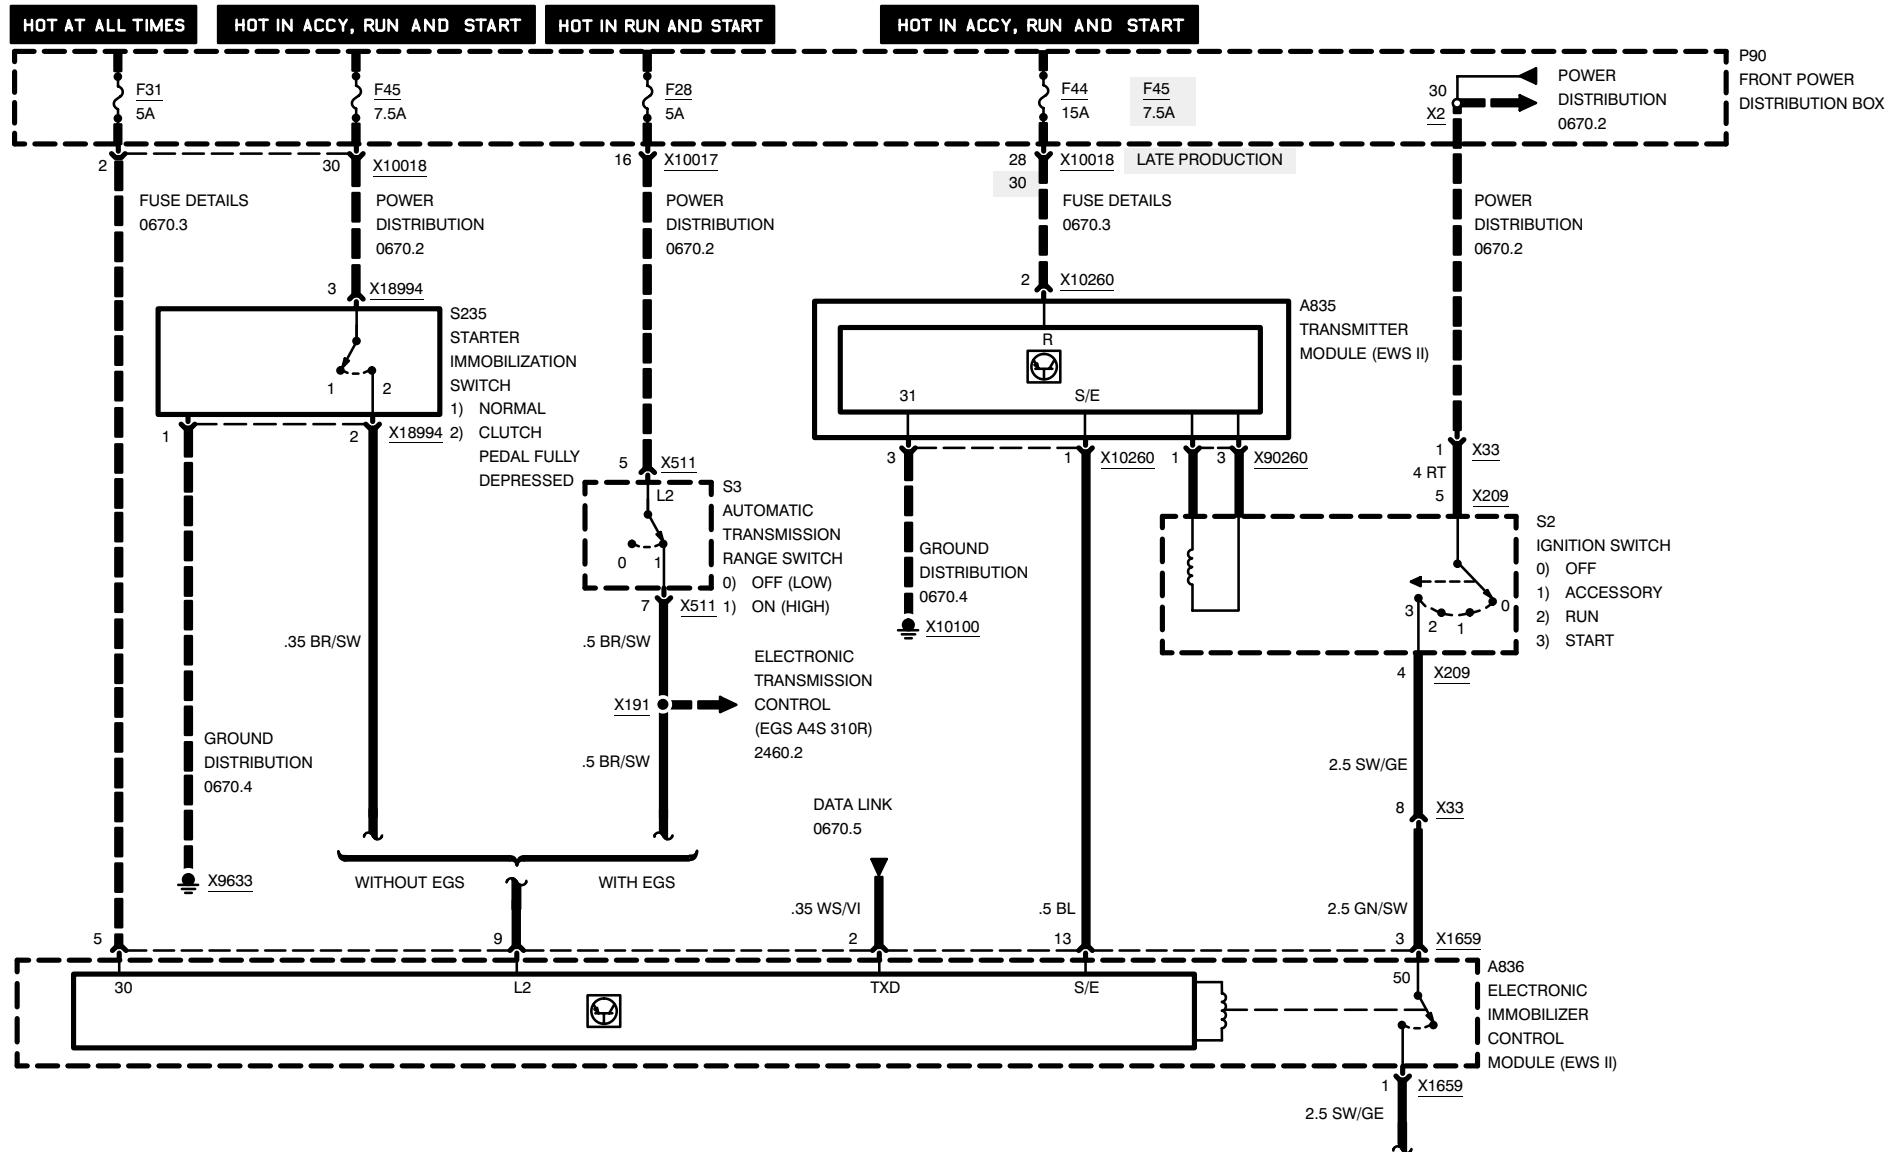


1997

03/98


6135.0-01

1997

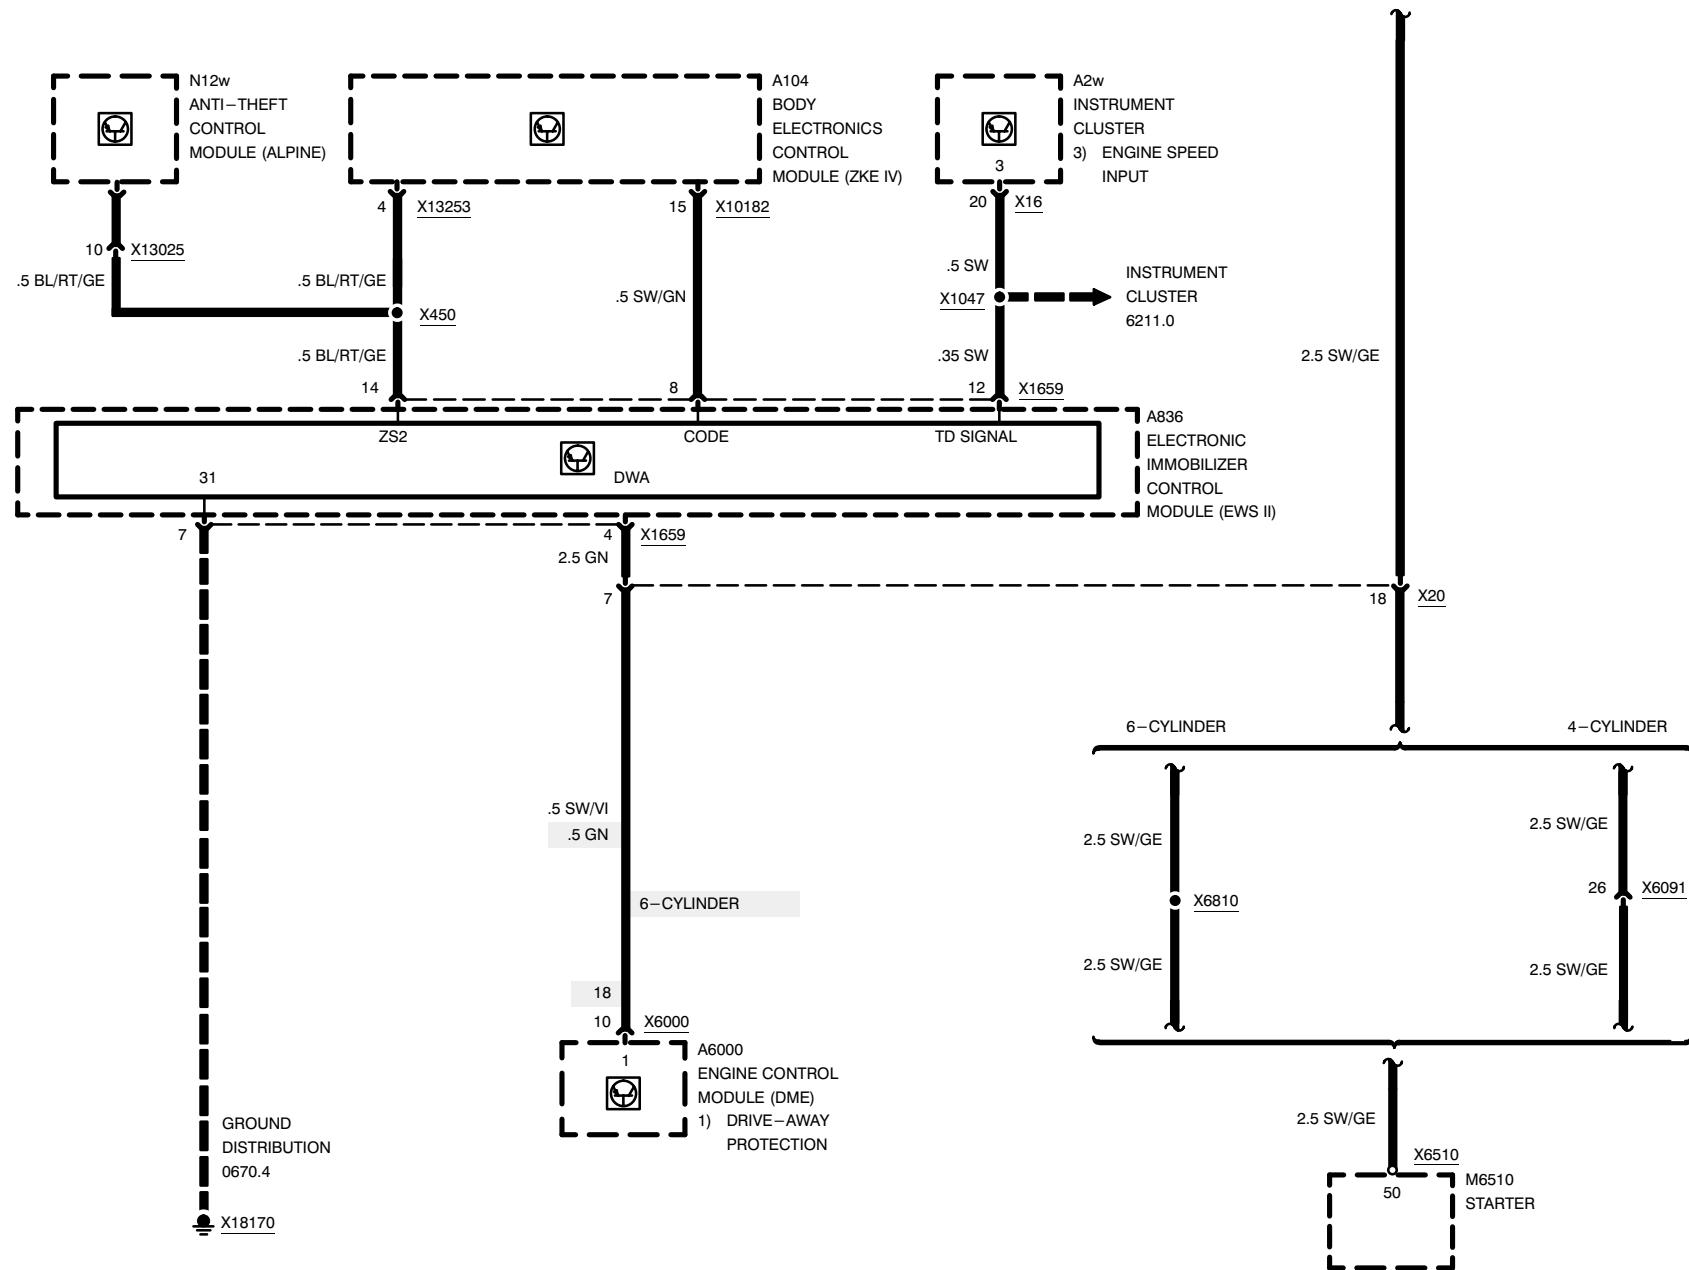

## WIPER/WASHER MODULE (WWM)

## WIPER - HIGH

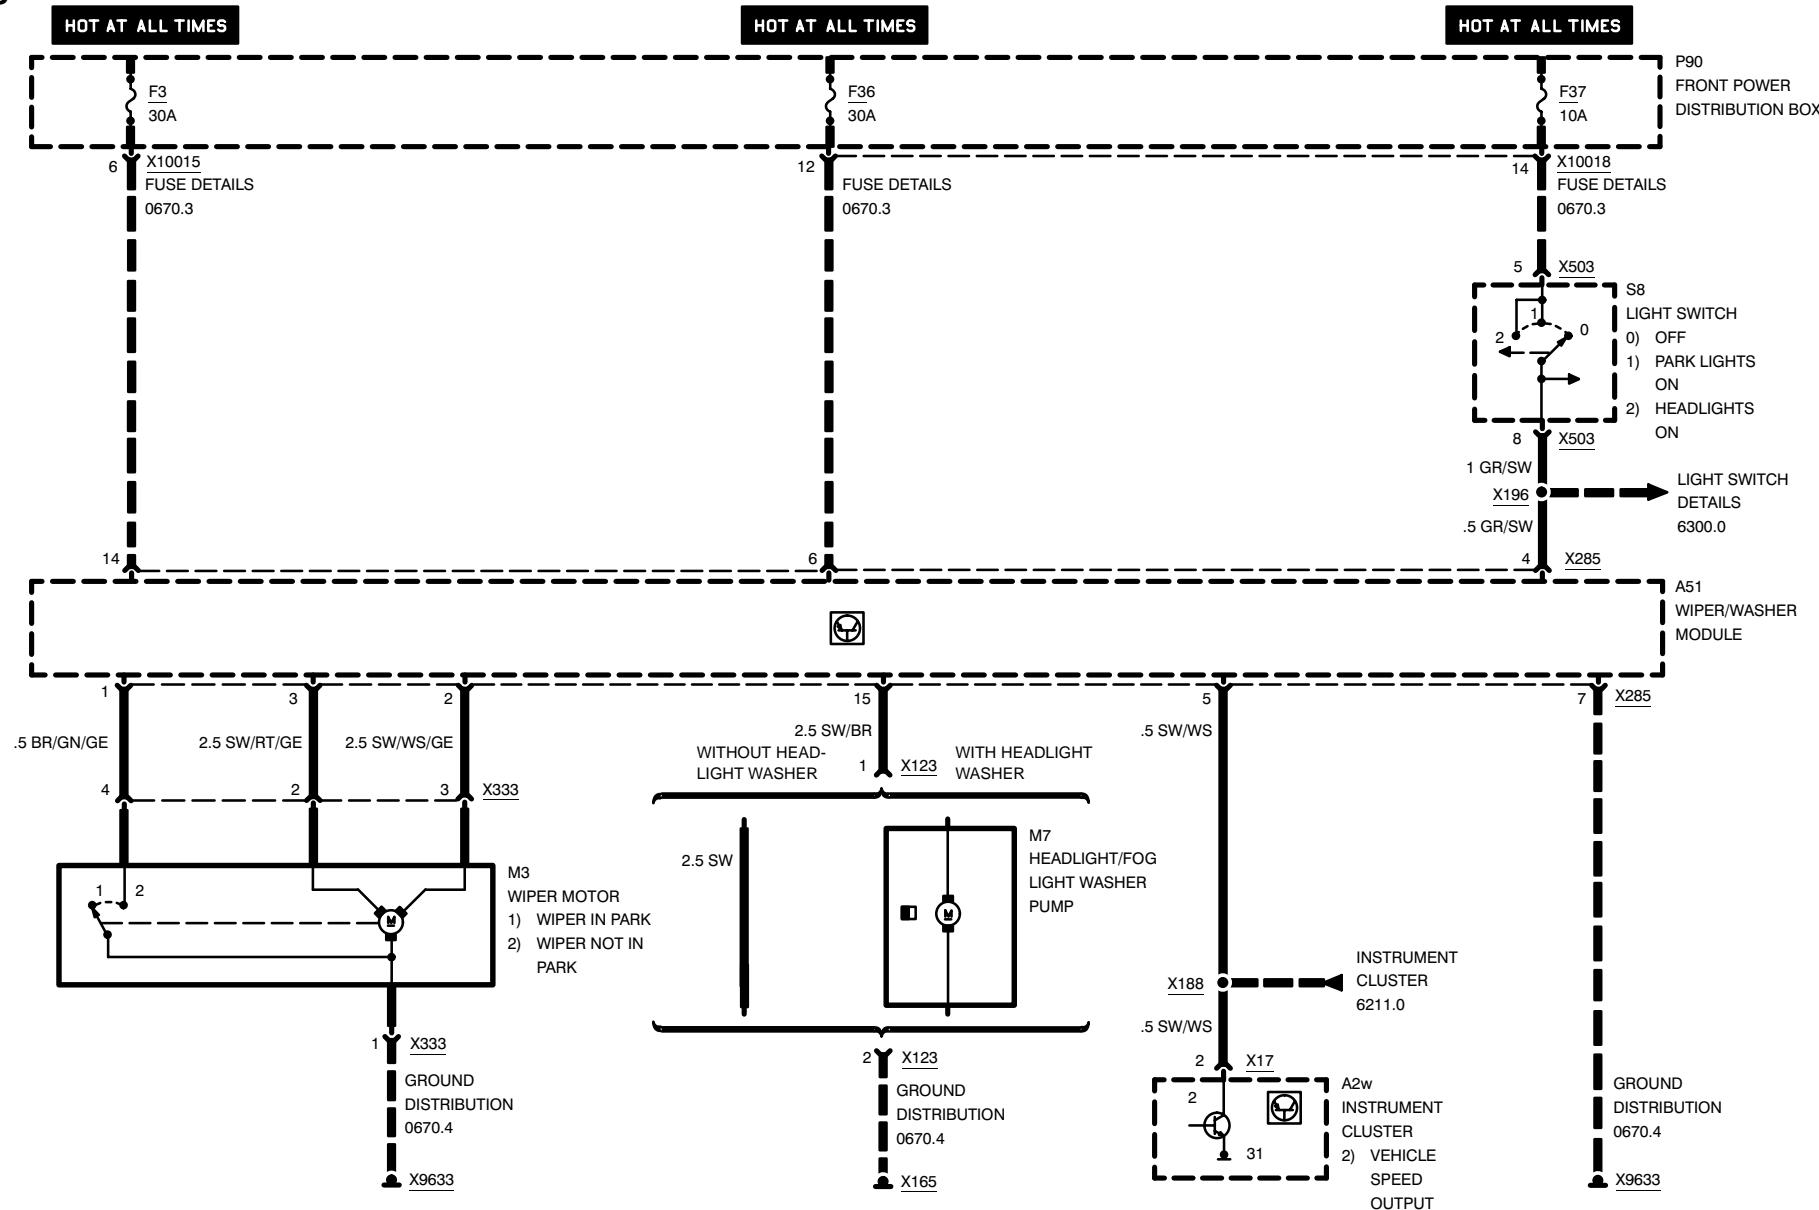

## WIPER/WASHER MODULE (WWM)



HIGH

03/98


6160.1-01

1997


HOT IN ACCY, RUN AND START

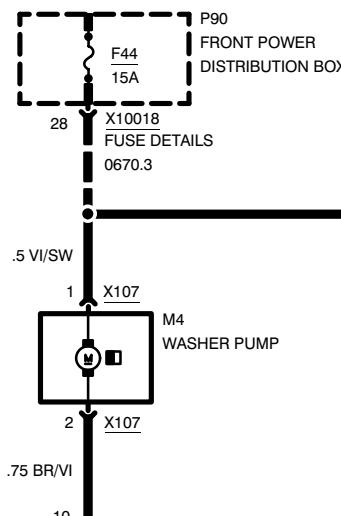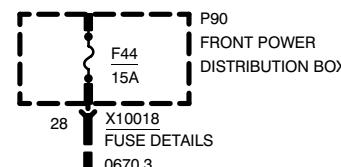

.5 VI/SW

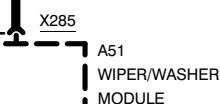

NOT USED

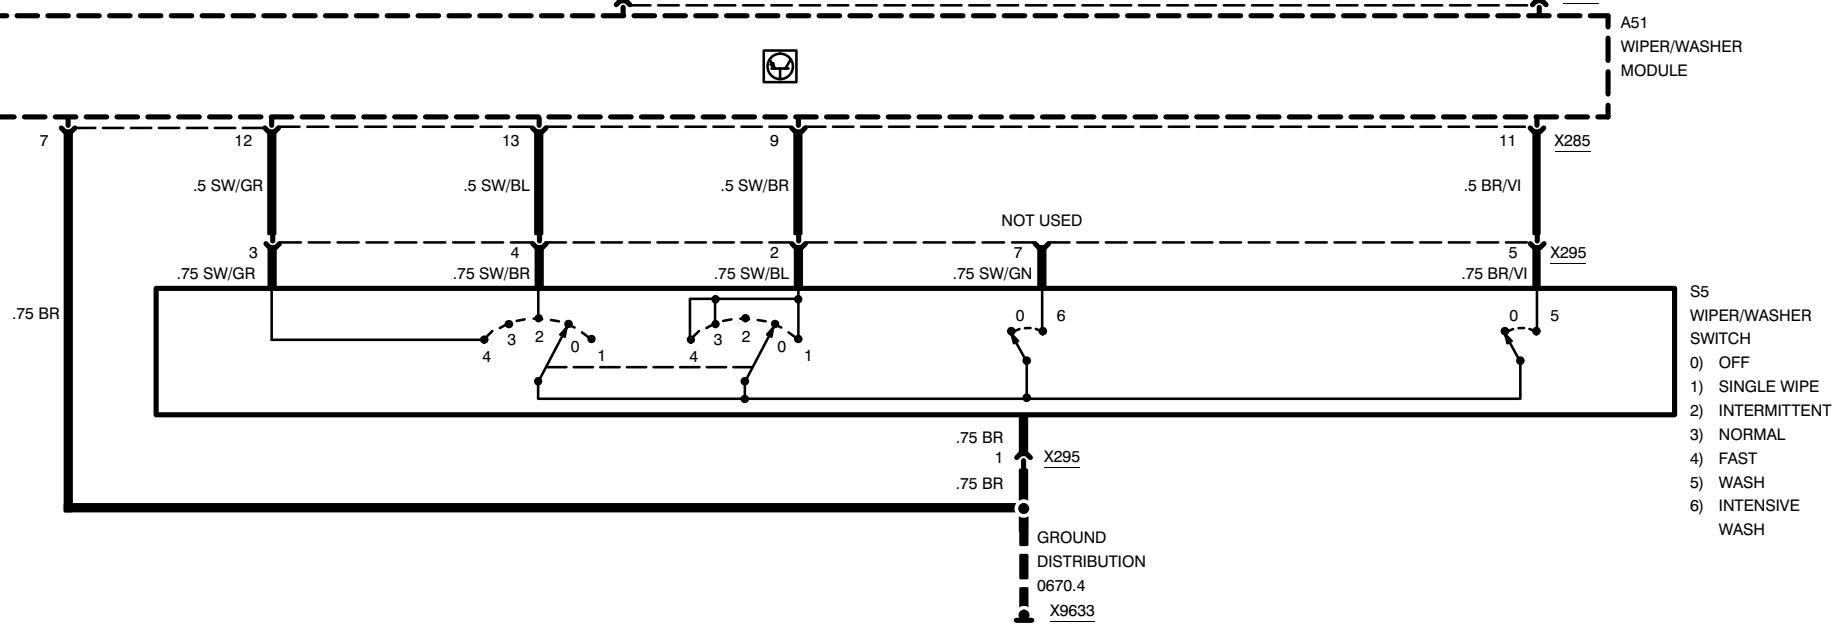

## WIPER/WASHER MODULE (WWM)


LOW

Z3

03/98

6160.1-02

1997

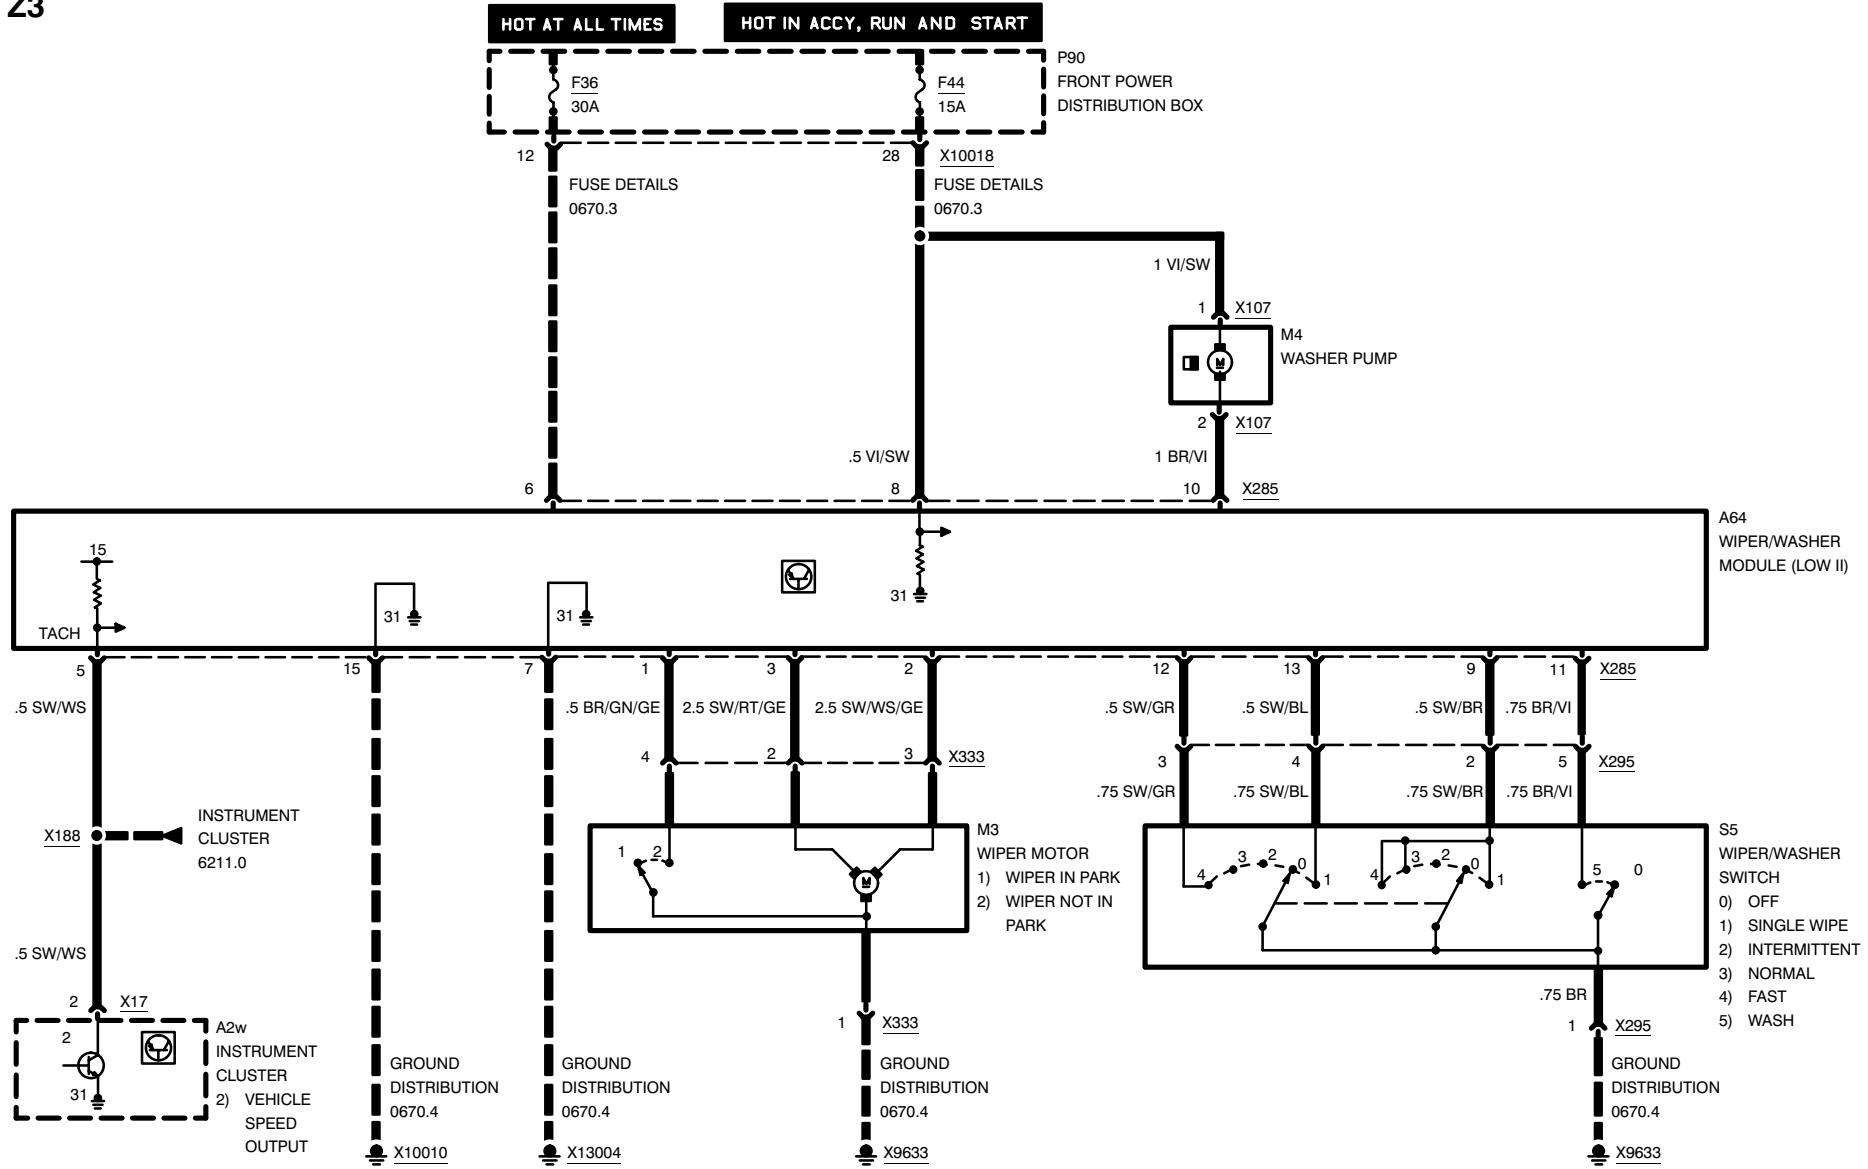


## HEADLIGHT WASHER (SRA)


03/98

6167.1-00

1997

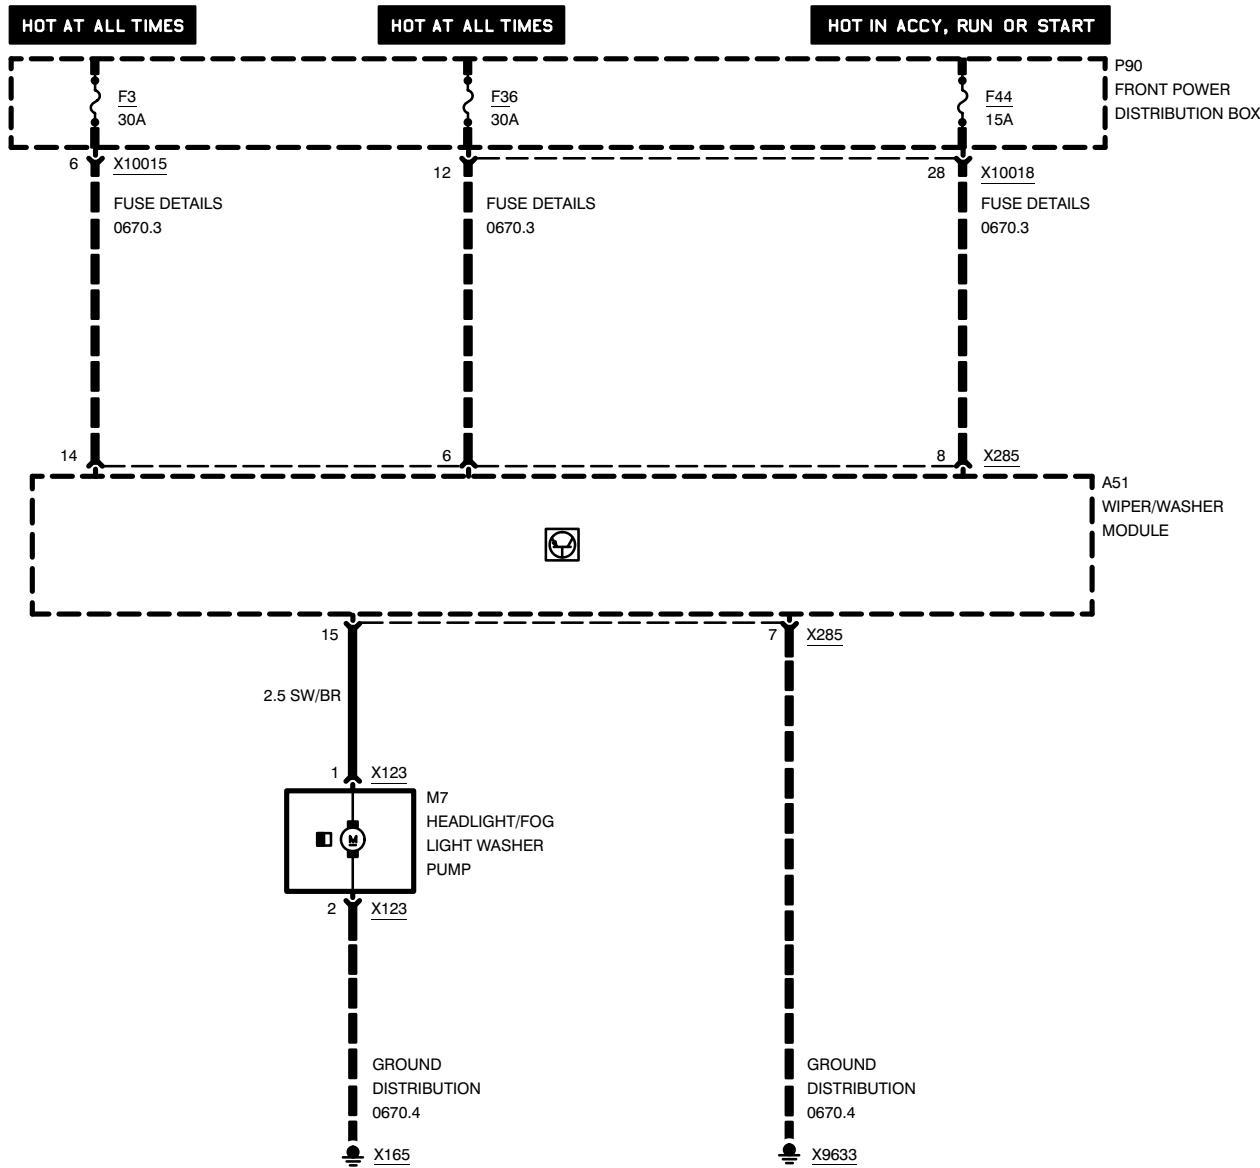



## WINDSHIELD WASHER JET HEATERS

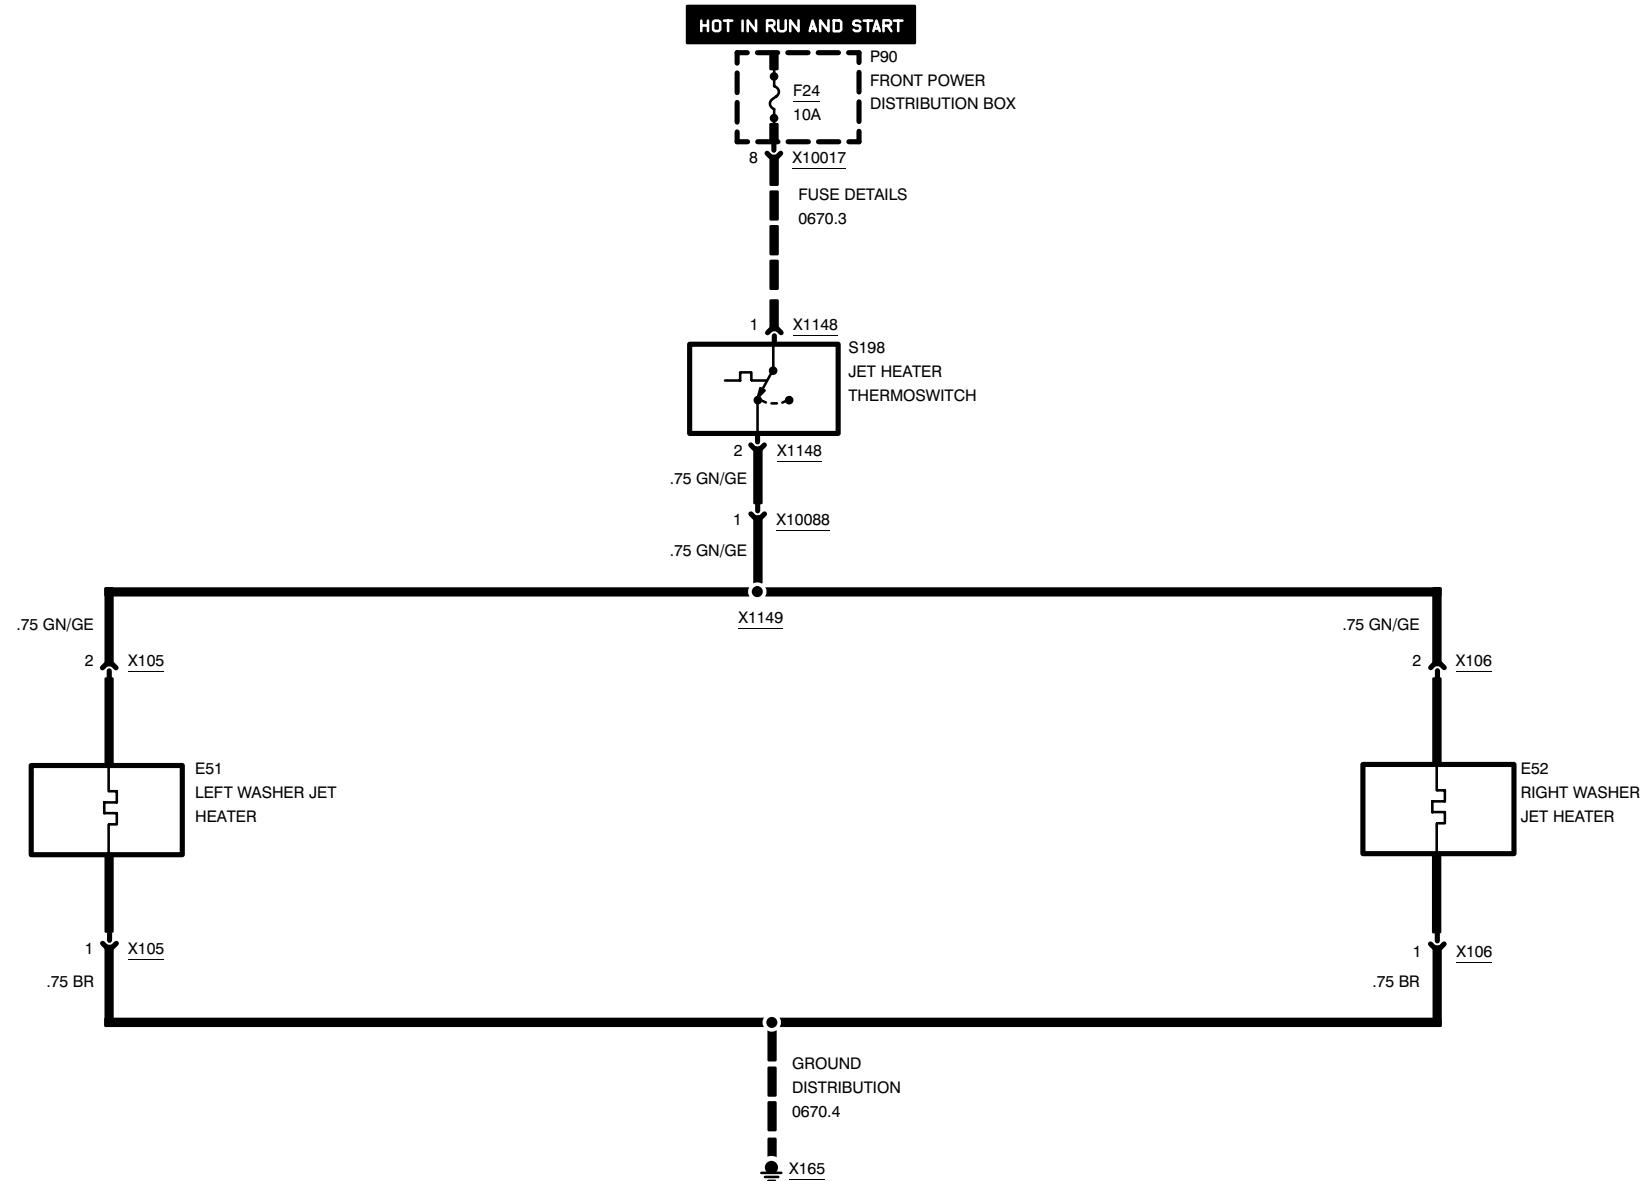

03/98

6211.0

1997

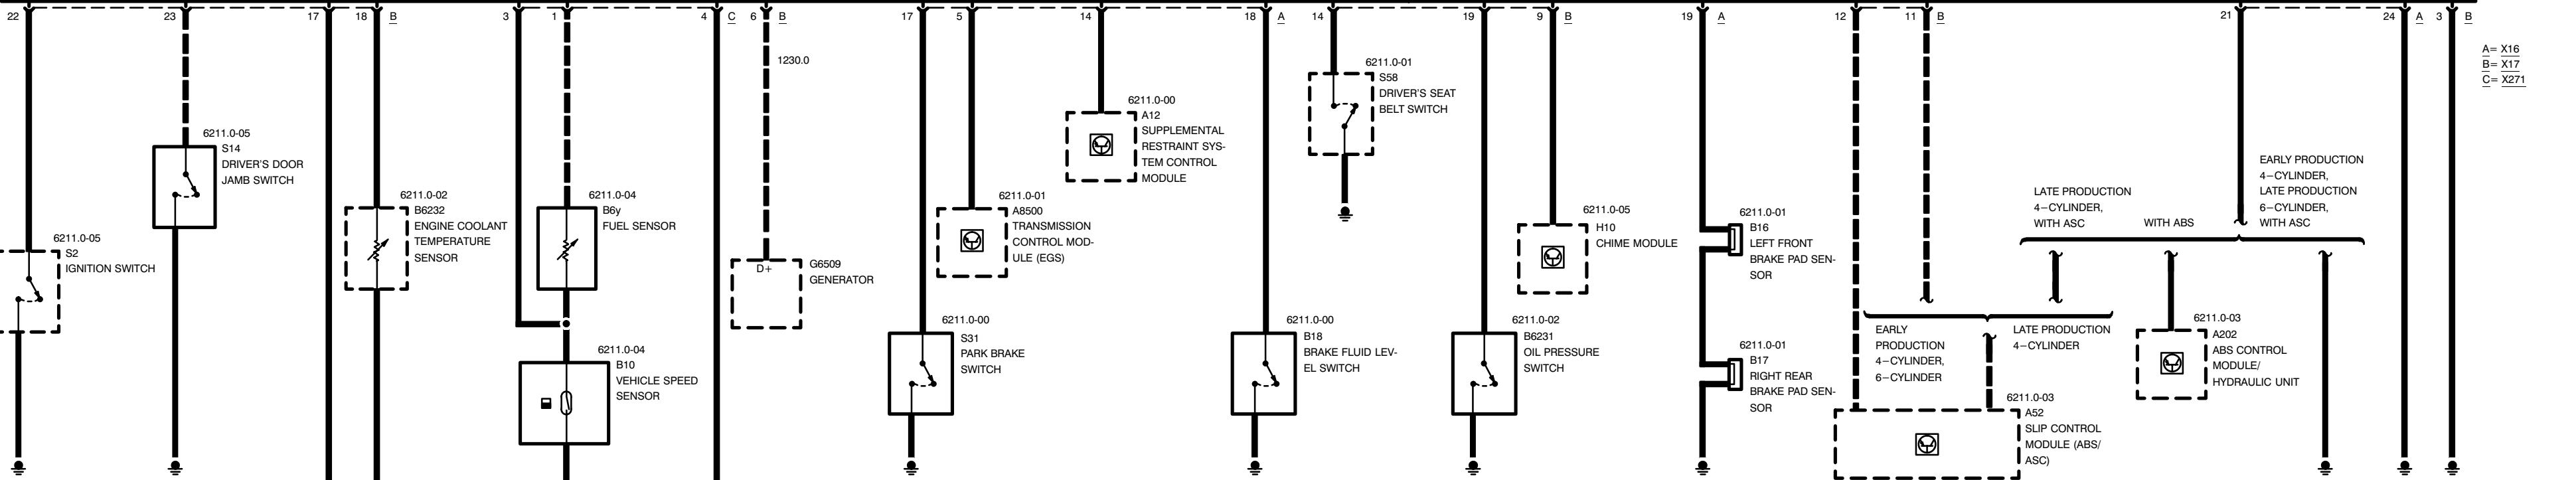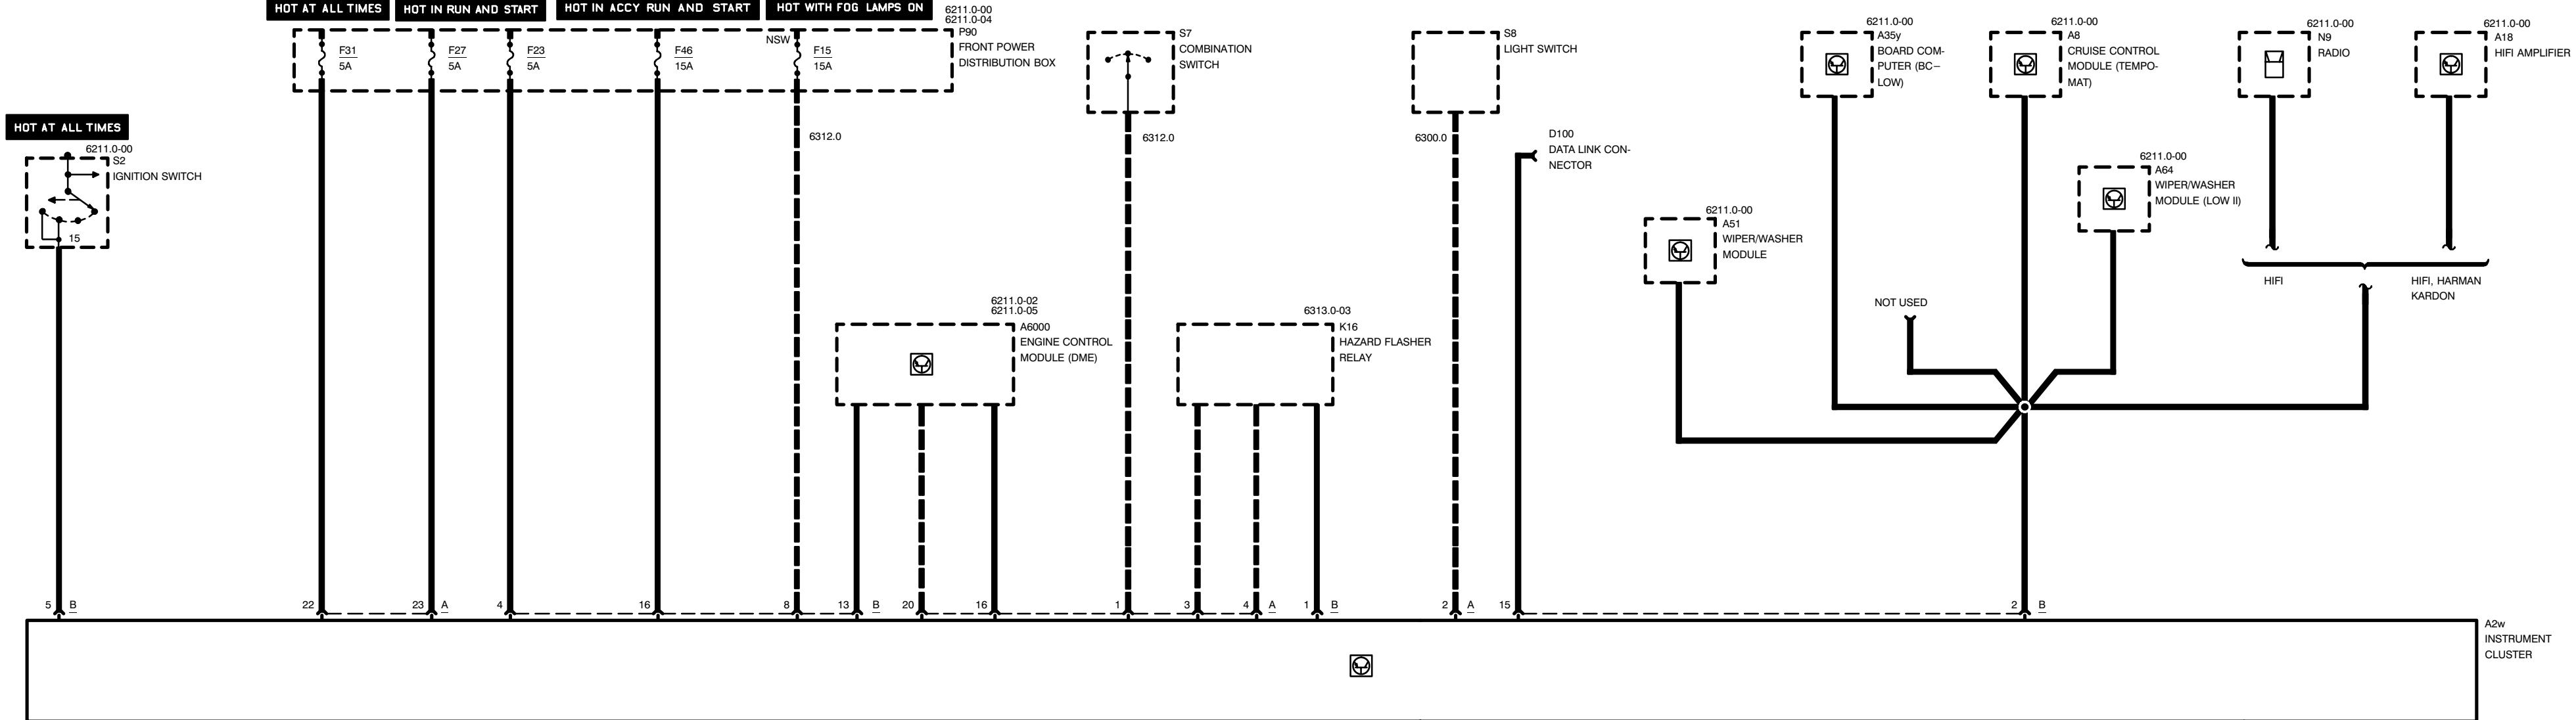

1997

03/98


6211.0

1997

6211.0

1997

Z3

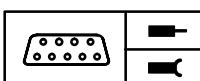


## Pin Assignments

### X16

Pin	Type	Description/Function	Connection
1	E	High beam indicator control	Combination switch
2	E	Terminal 58g, instrument illumination power	Light switch (dimmer)
3	E	Right turn signal indicator control	Hazard flasher relay
4	E	Left turn signal indicator control	Hazard flasher relay
5	E	Warning lamp for EGS fault (information signal transmission oil temperature)	Transmission control module (EGS)
6		Not used	
7		Not used	
8		Not used	
9		Not used	
10		Not used	
11		Not used	
12		Not used	
13		Not used	
14	E	Airbag warning lamp (SRS) control	Supplemental restraint system control module
15		Not used	
16	E	"Check engine" indicator control	Engine control module (DME)
17	E	Park brake warning lamp control	Park brake switch
18	E	Brake fluid warning lamp control	Brake fluid level switch
19	E	Brake pad wear warning lamp control	Brake pad sensors
20	E	Crankshaft RPM speed signal TD	Engine control module (DME)
21		Not used	
22	E	Voltage supply, terminal 30	Front power distribution box, fuse 31
23	E	Voltage supply, terminal 15 for indicator and warning lamps	Front power distribution box, fuse 27
24	M	Ground supply, terminal 31 for instrument cluster electronics	Ground point
25		Not used	
26		Not used	

E = Input, A = Output, M = Ground

Z3

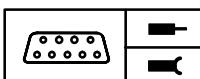

## Pin Assignments

### X17

Pin	Type	Description/Function	Connection
1	E	Trailer turn signal indicator control	Hazard flasher relay
2	A	Vehicle speed signal	Various control modules
3	M	Ground supply, terminal 31 for indicator and warning lamps	Ground point
4	E	Voltage supply, terminal 15 for instrument cluster electronics	Front power distribution box, fuse 23
5	E	Voltage supply, terminal 15 for battery charge indicator	Ignition switch, terminal 15
6	E	Ground supply, terminal 61 for battery charge indicator	Generator
7		Not used	
8	E	Fog light indicator control	Front power distribution box, fuse 15
9	A	Sound tone signal	Chime module
10		Not used	
11	E	Slip control system warning lamp (ABS) control	Slip control module (ABS/ASC) (with ASC, 6-Cylinder and 4-Cylinder Early Production)
12	E	ASC signal	ASC control module
13	A	TI-measurement signal (fuel consumption)	Engine control module (DME)
14	E	Seat belt warning lamp control	Driver's seat belt switch
15	E	SIA reset/service interval indicator reset	Data link connector
16	E	Voltage supply, terminal R	Front power distribution box, fuse 46
17	A	Coolant temperature sensor (-)	Coolant temperature sensor
18	E	Coolant temperature sensor (+)	Coolant temperature sensor
19	E	Oil pressure warning lamp control	Oil pressure switch
20		Not used	
21	M	Ground (ASC) (6-Cylinder and 4-Cylinder Early Production)	Ground point
21	E	ABS warning lamp (ABS)	ABS control module/hydraulic unit Slip control module (ABS/ASC) (4-Cylinder Late Production)

E = Input, A = Output, M = Ground




03/98

6211.0-c

1997

Z3

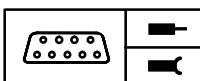

## Pin Assignments

Pin	Type	Description/Function	Connection
22	E	Ignition key warning/audible ignition key warning	Ignition switch
23	E	Driver's door open	Driver's door jamb switch
24		Not used	
25		Not used	
26		Not used	

## X271

Pin	Type	Description/Function	Connection
1	A	Fuel level sensor	Fuel tank sensors
2		Not used	
3	A	Ground supply for fuel tank sensor and vehicle speed sensor	Fuel tank sensor and vehicle speed sensor
4	E	Position signal TW	Vehicle speed sensor
5		Not used	
6		Not used	
7		Not used	
8		Not used	
9		Not used	
10		Not used	
11		Not used	
12		Not used	

E = Input, A = Output, M = Ground


## INSTRUMENT CLUSTER

## INDICATORS

03/98

6211.0-00

1997

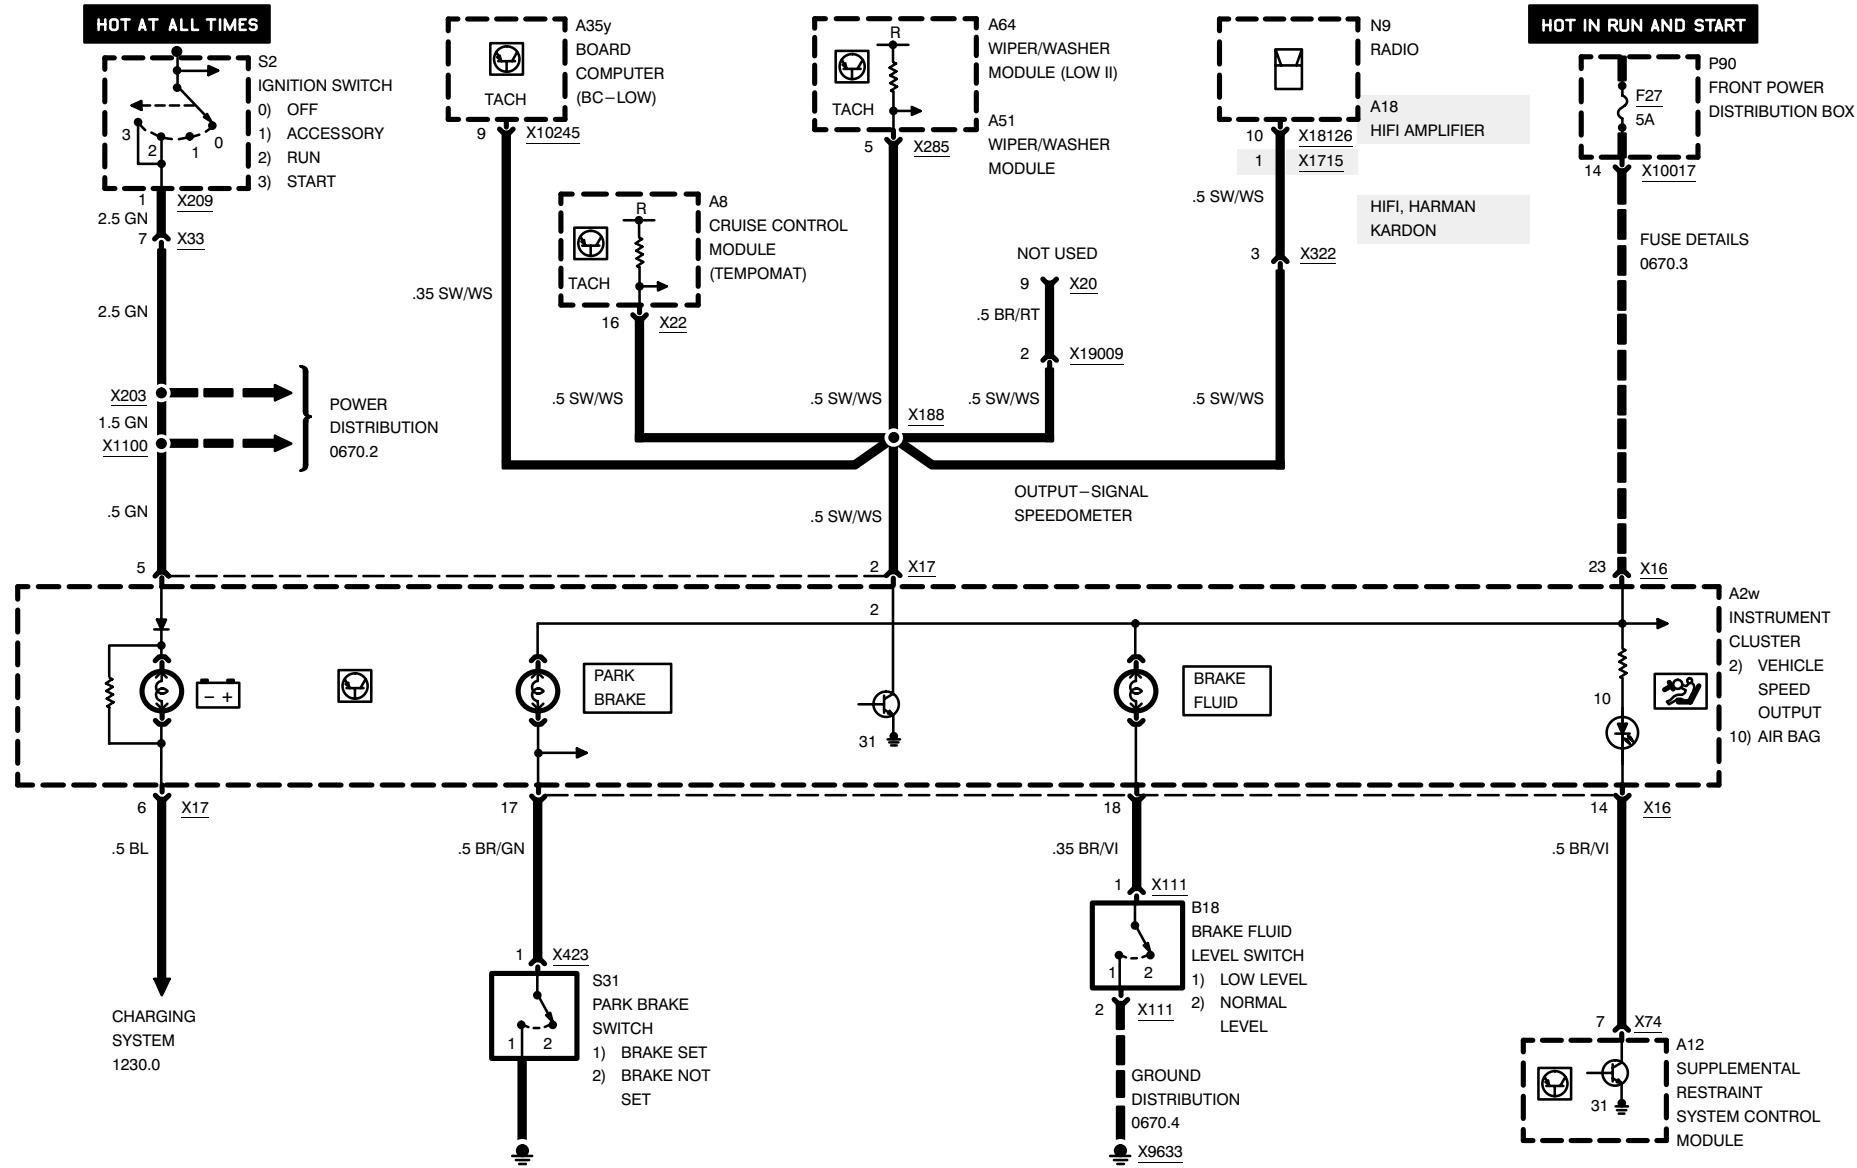


**INSTRUMENT CLUSTER****INDICATORS**

03/98

6211.0-01

1997

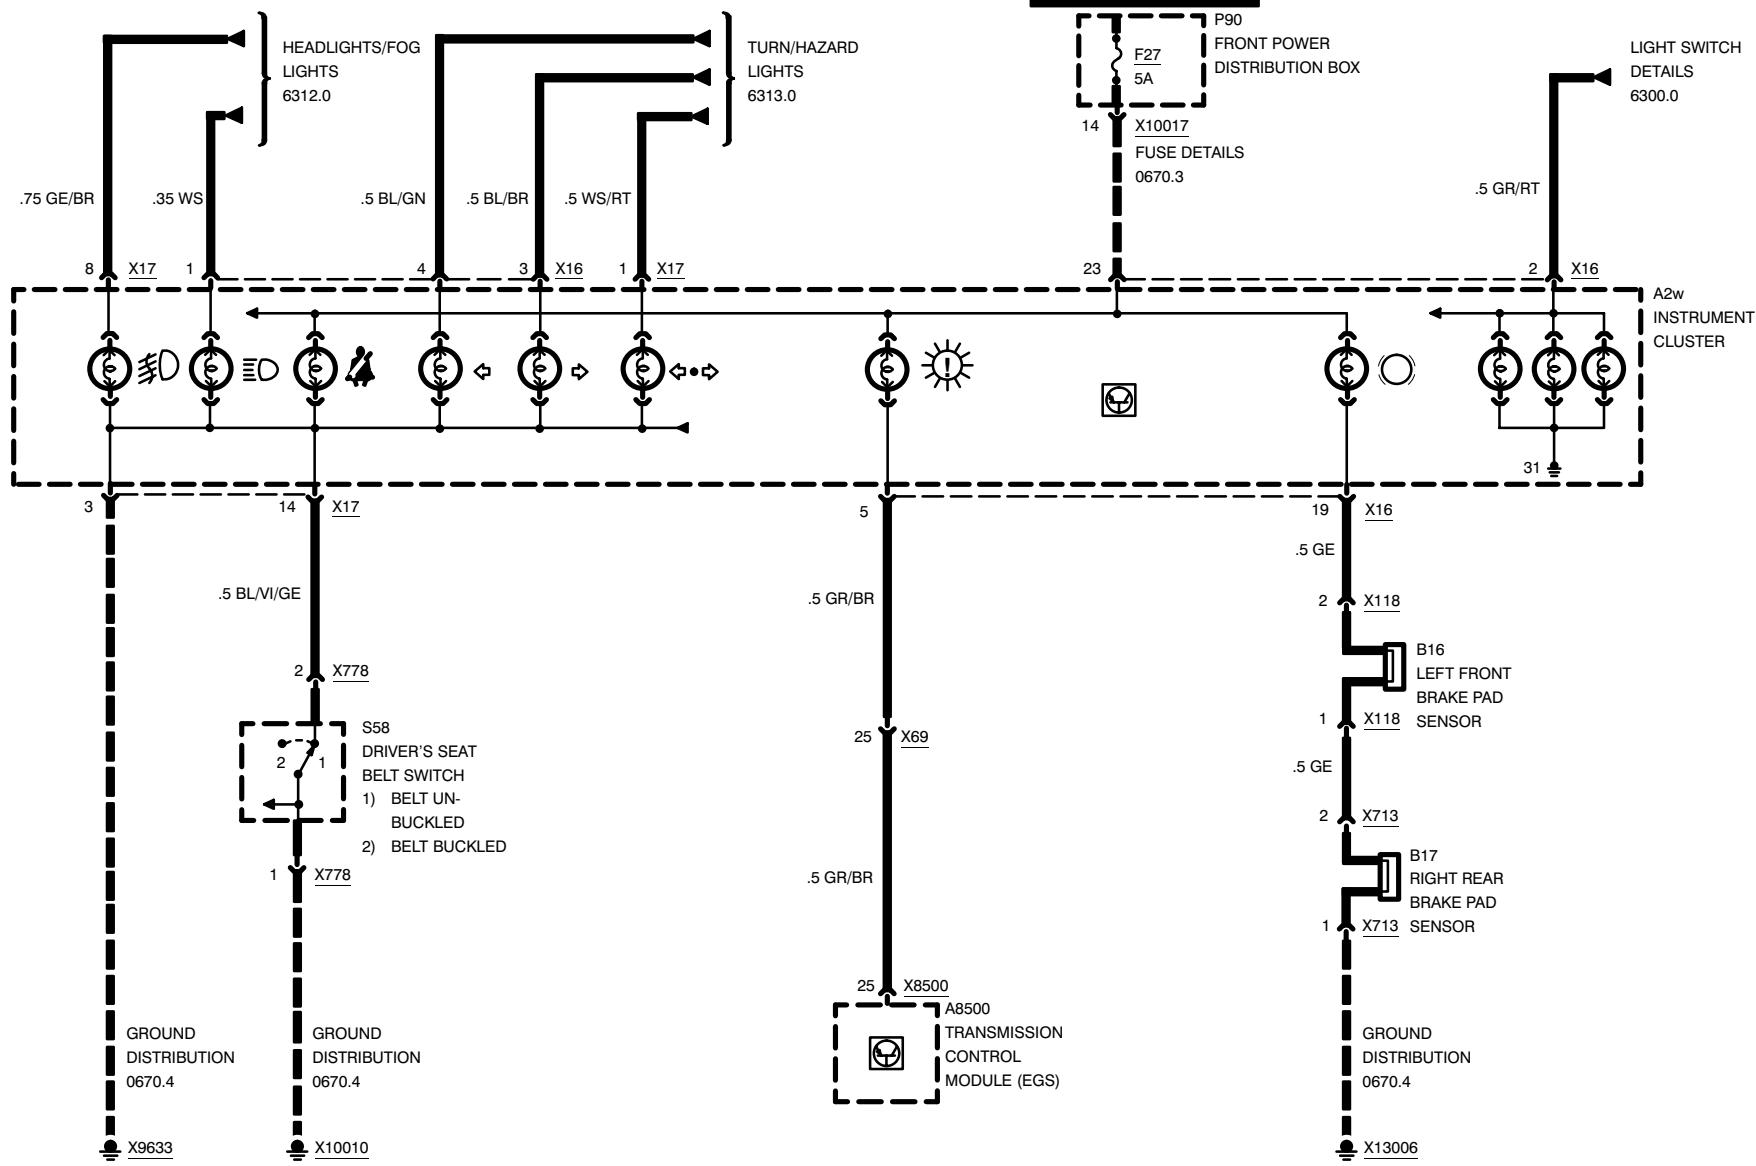


# INSTRUMENT CLUSTER

## INDICATORS

03/98

6211.0-02

1997


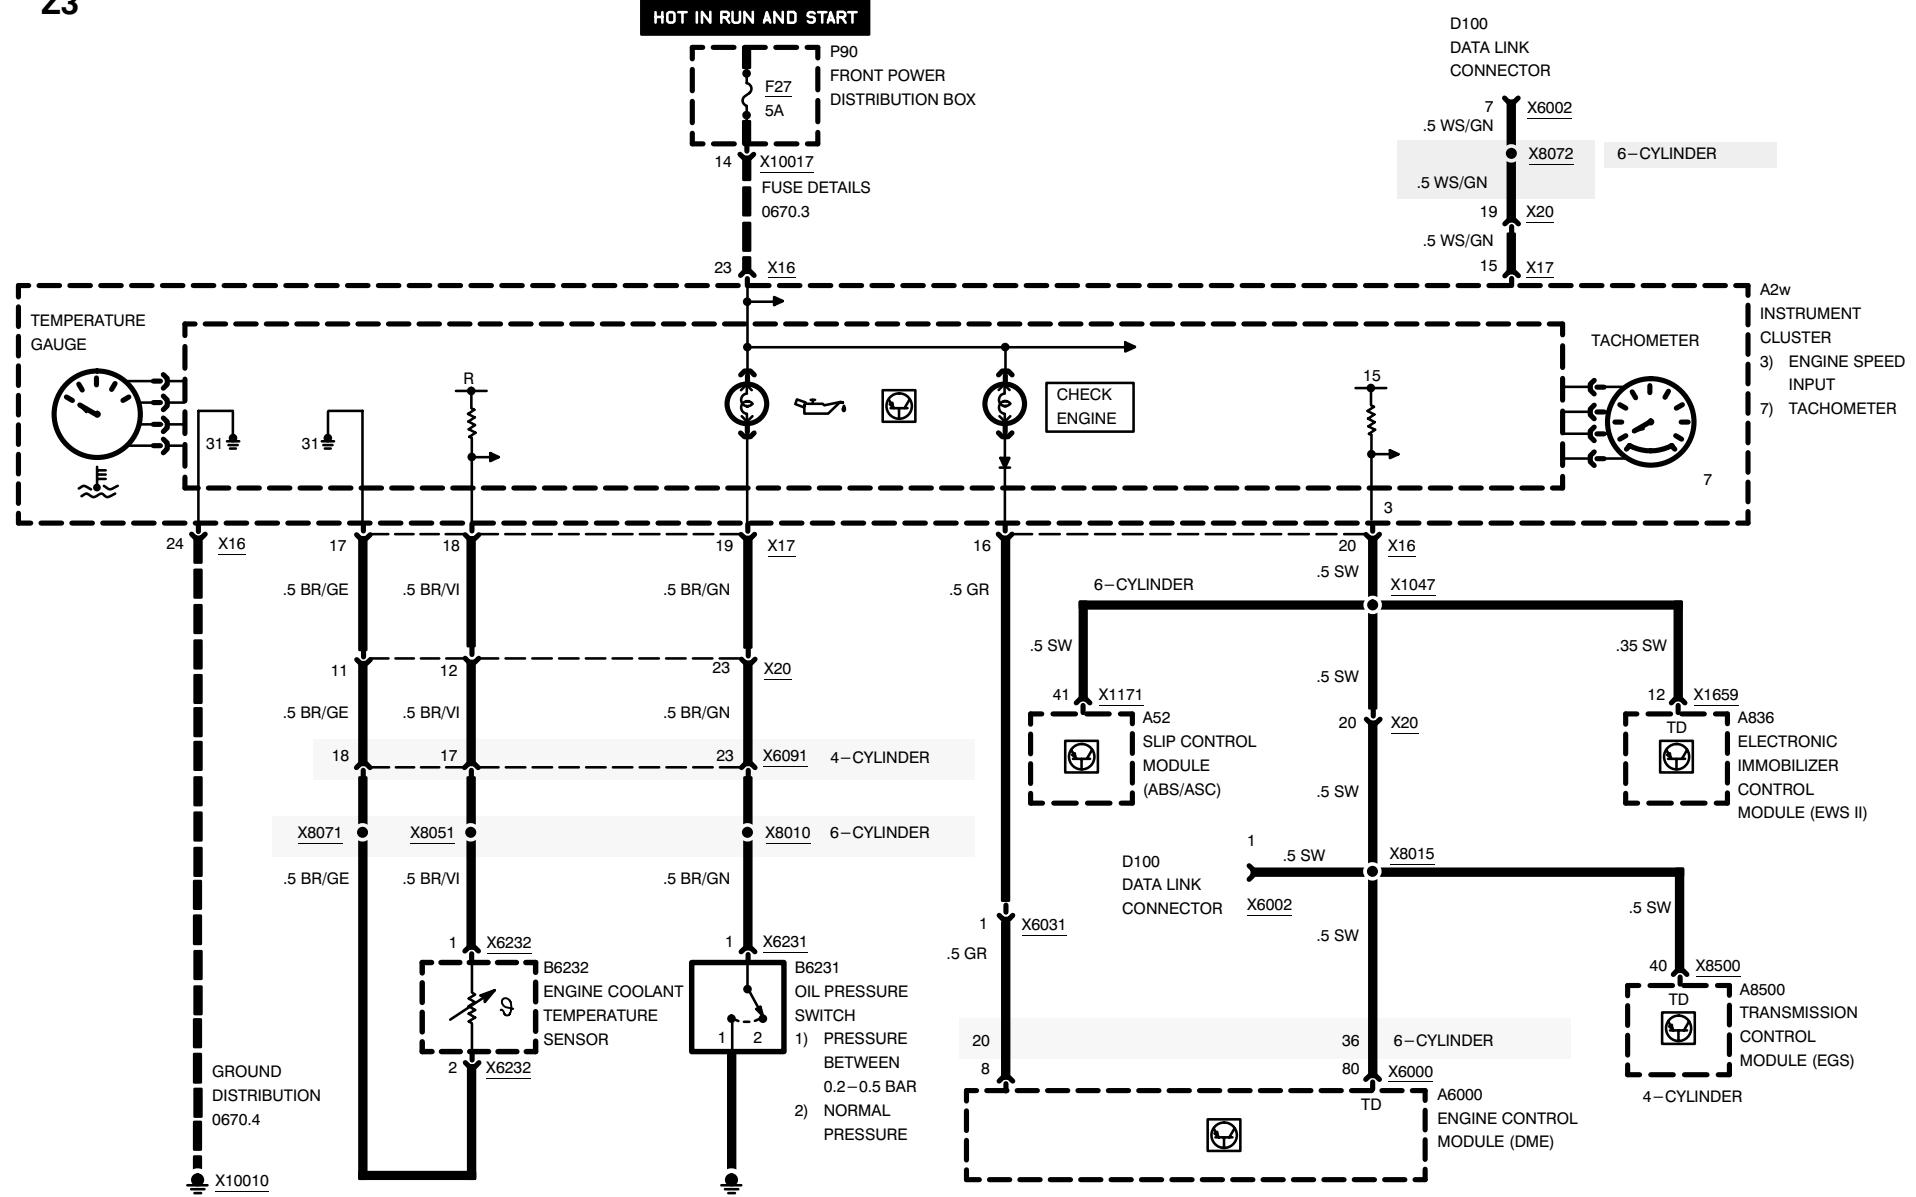


**INSTRUMENT CLUSTER****INSTRUMENT CLUSTER – ABS AND ASC INDICATORS**


03/98

6211.0-03

1997

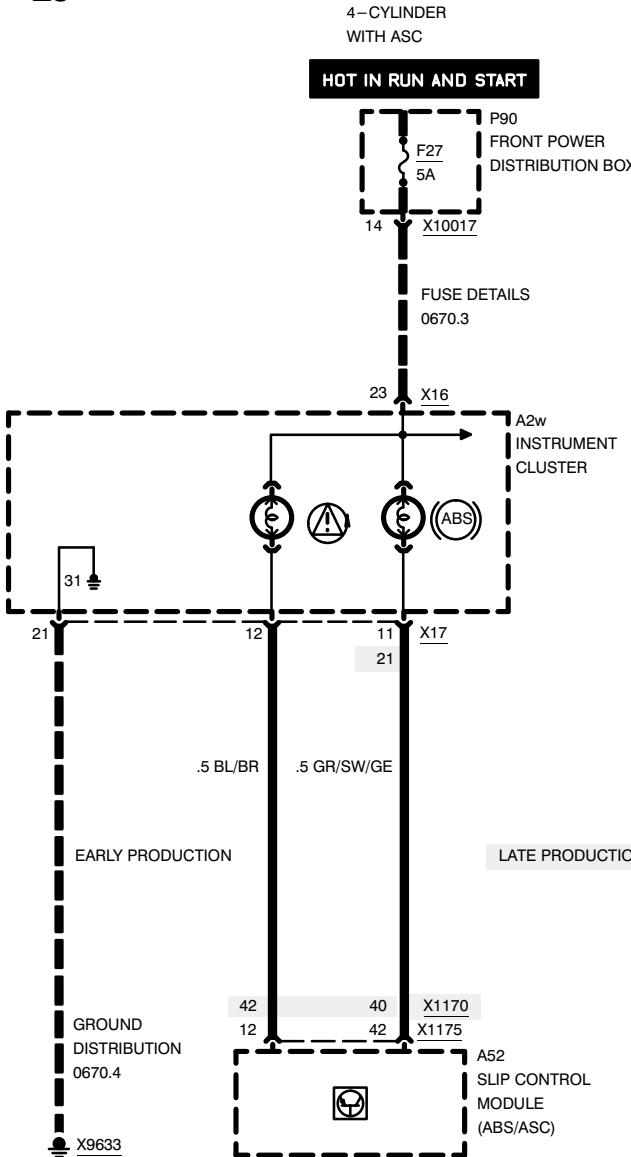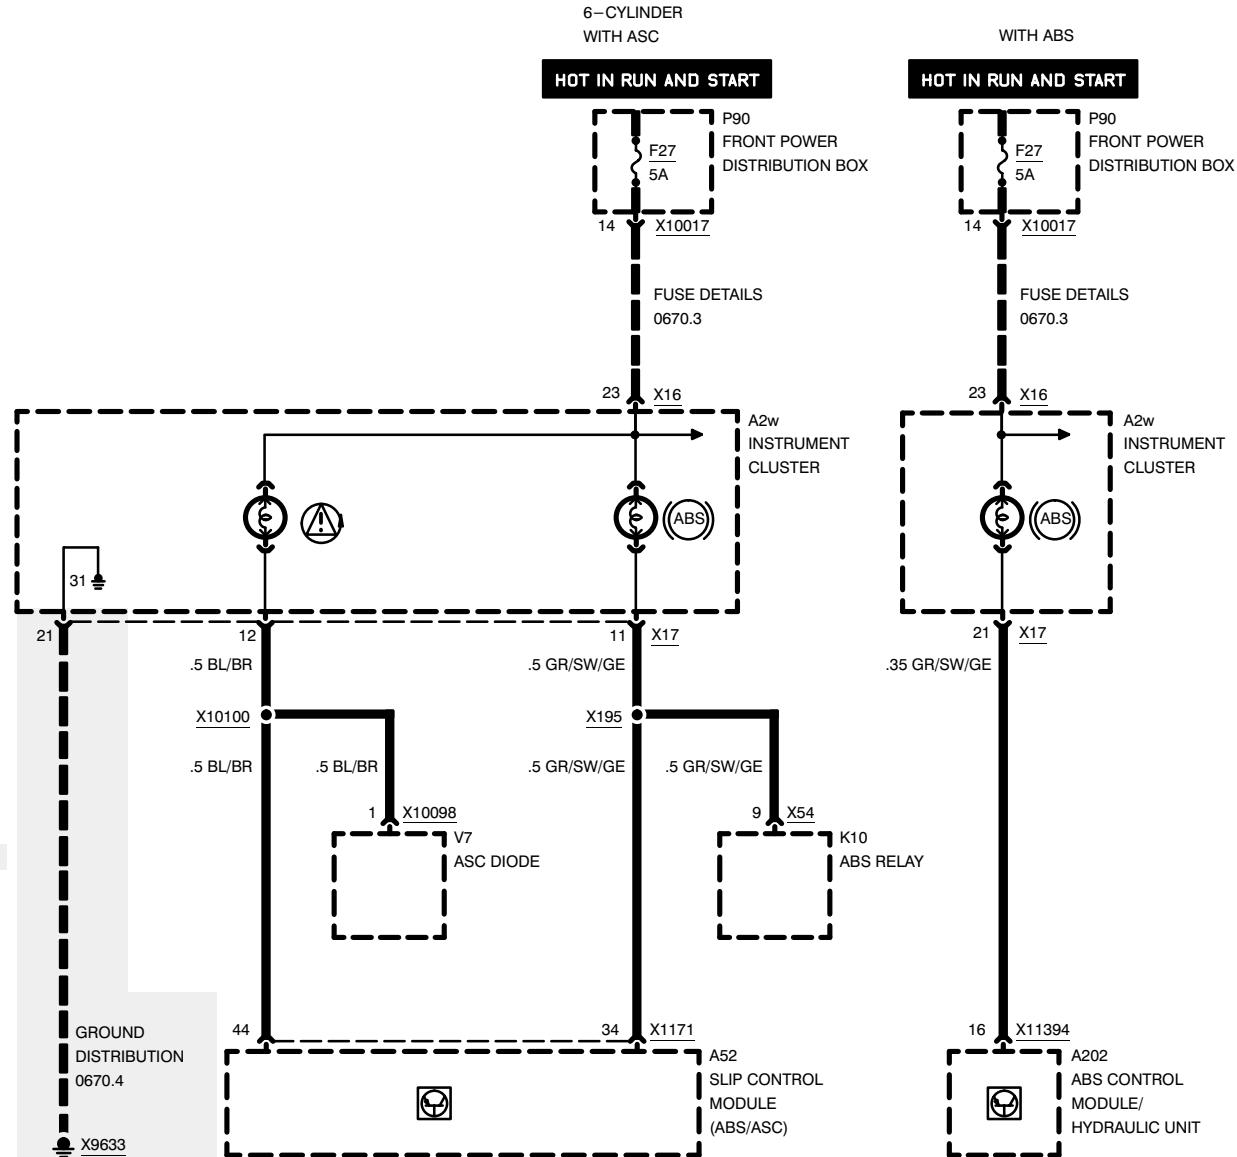
4-CYLINDER  
WITH ASC**HOT IN RUN AND START**6-CYLINDER  
WITH ASC**HOT IN RUN AND START**

WITH ABS

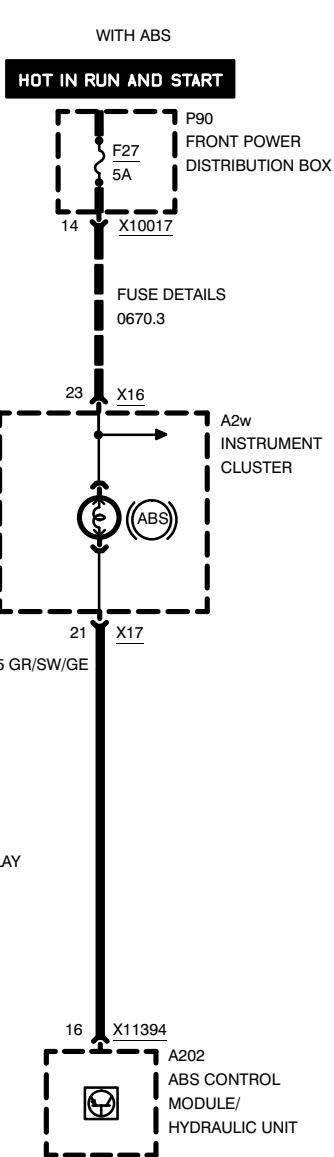**HOT IN RUN AND START**

# INSTRUMENT CLUSTER

## INDICATORS

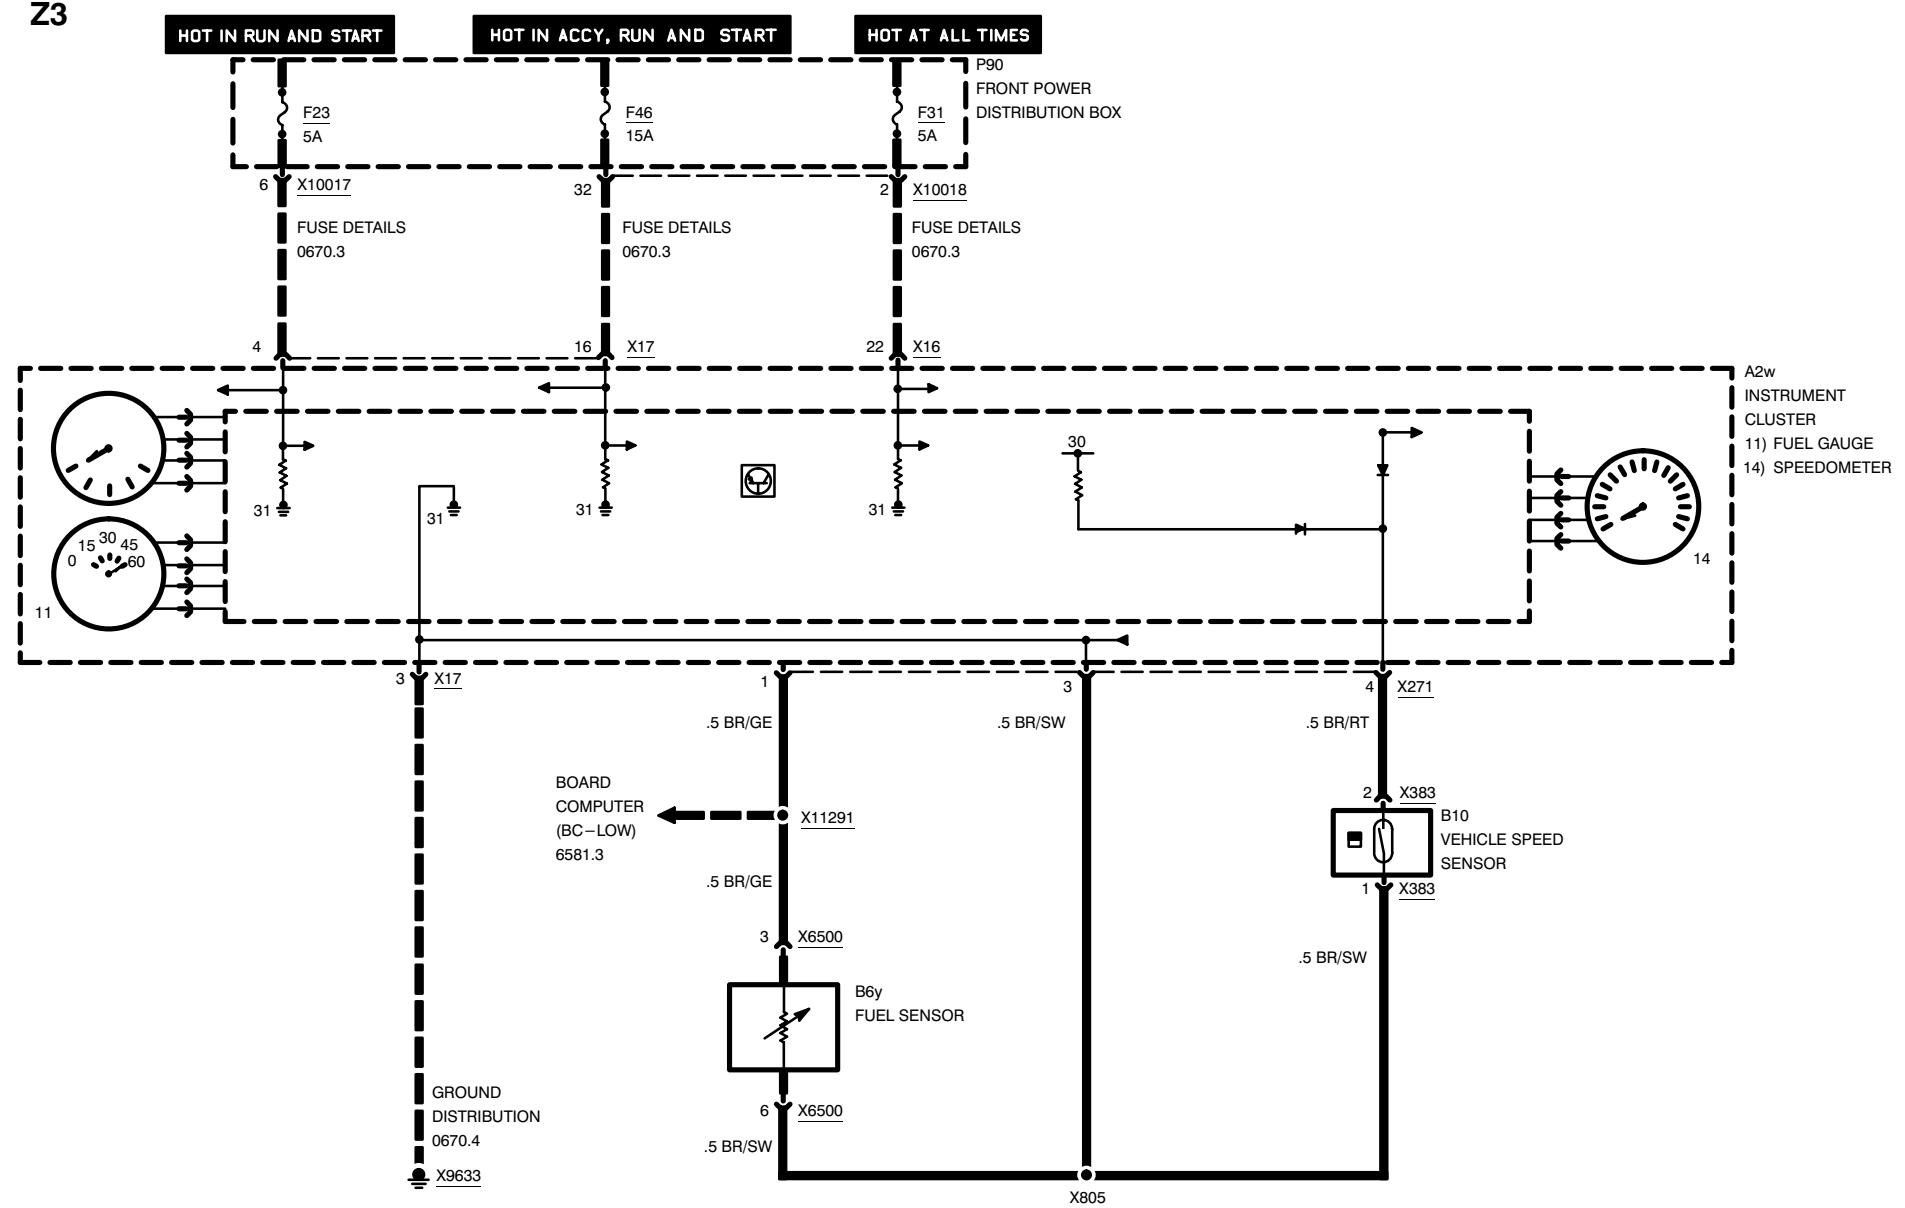


## INSTRUMENT CLUSTER

03/98

6211.0-05

1997

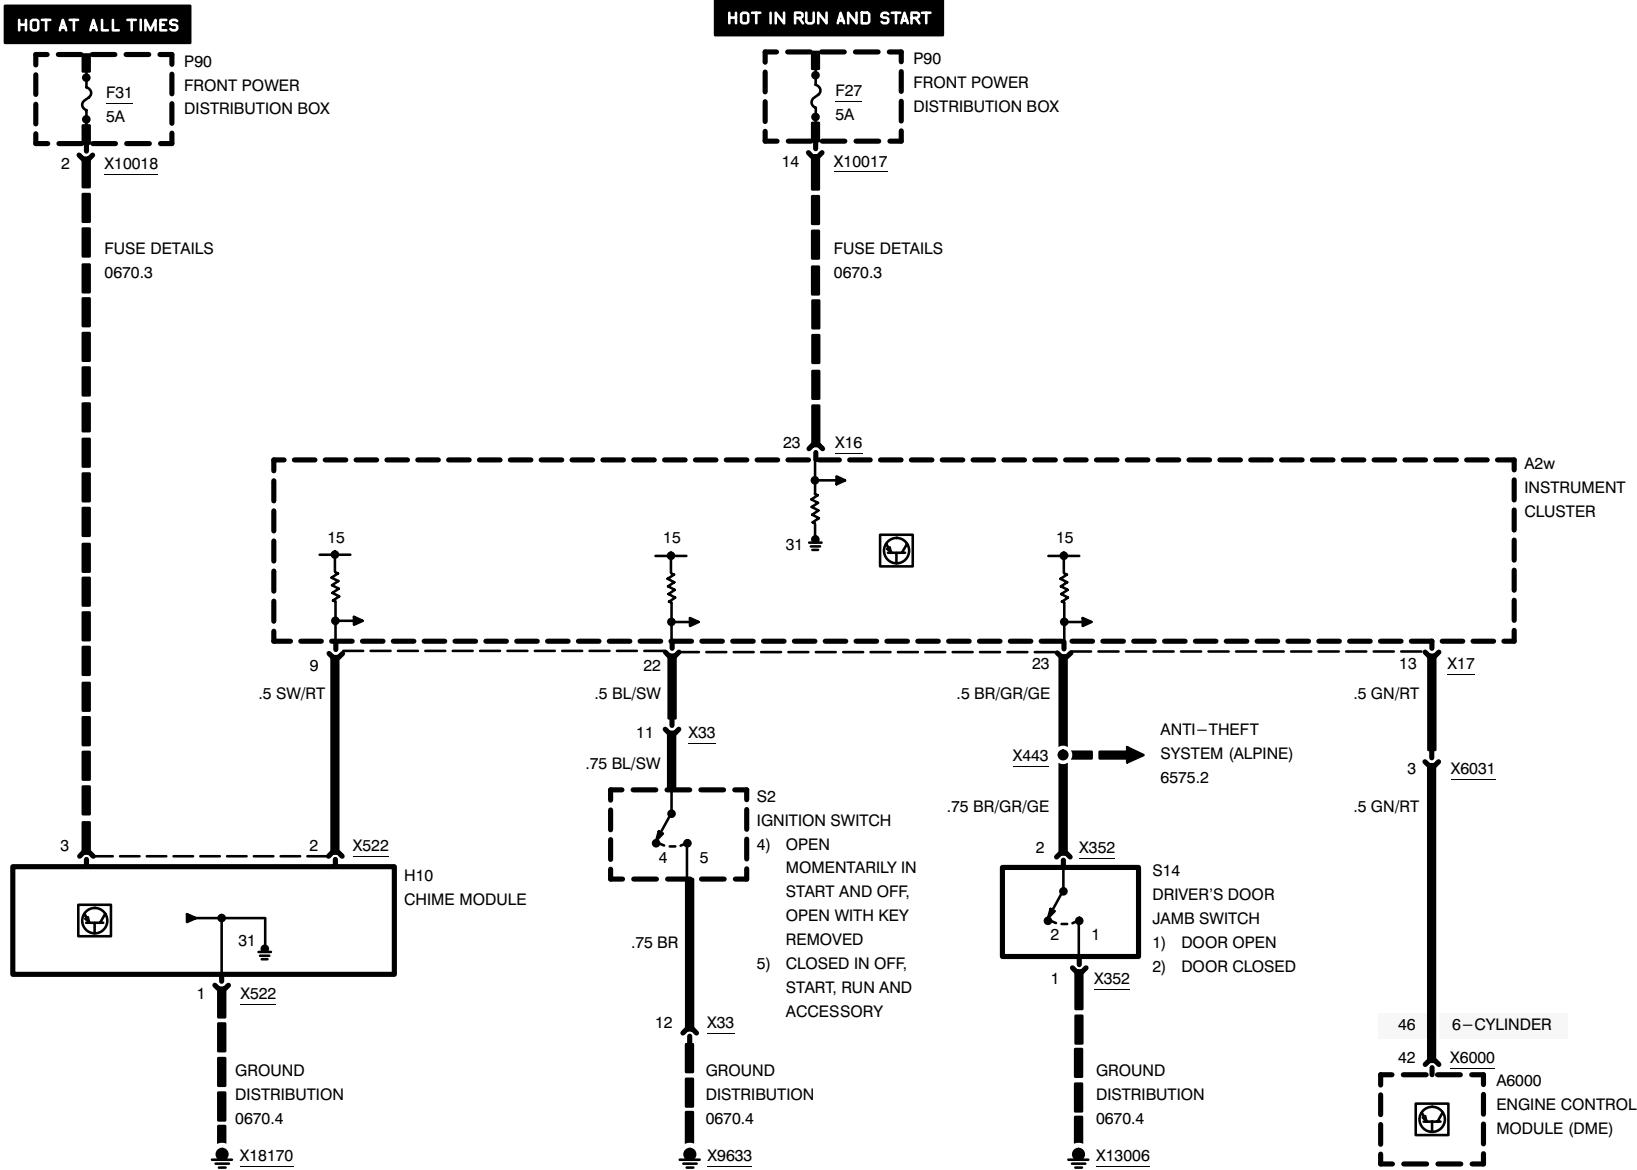


## DIGITAL CLOCK

03/98

6213.3 00

1997

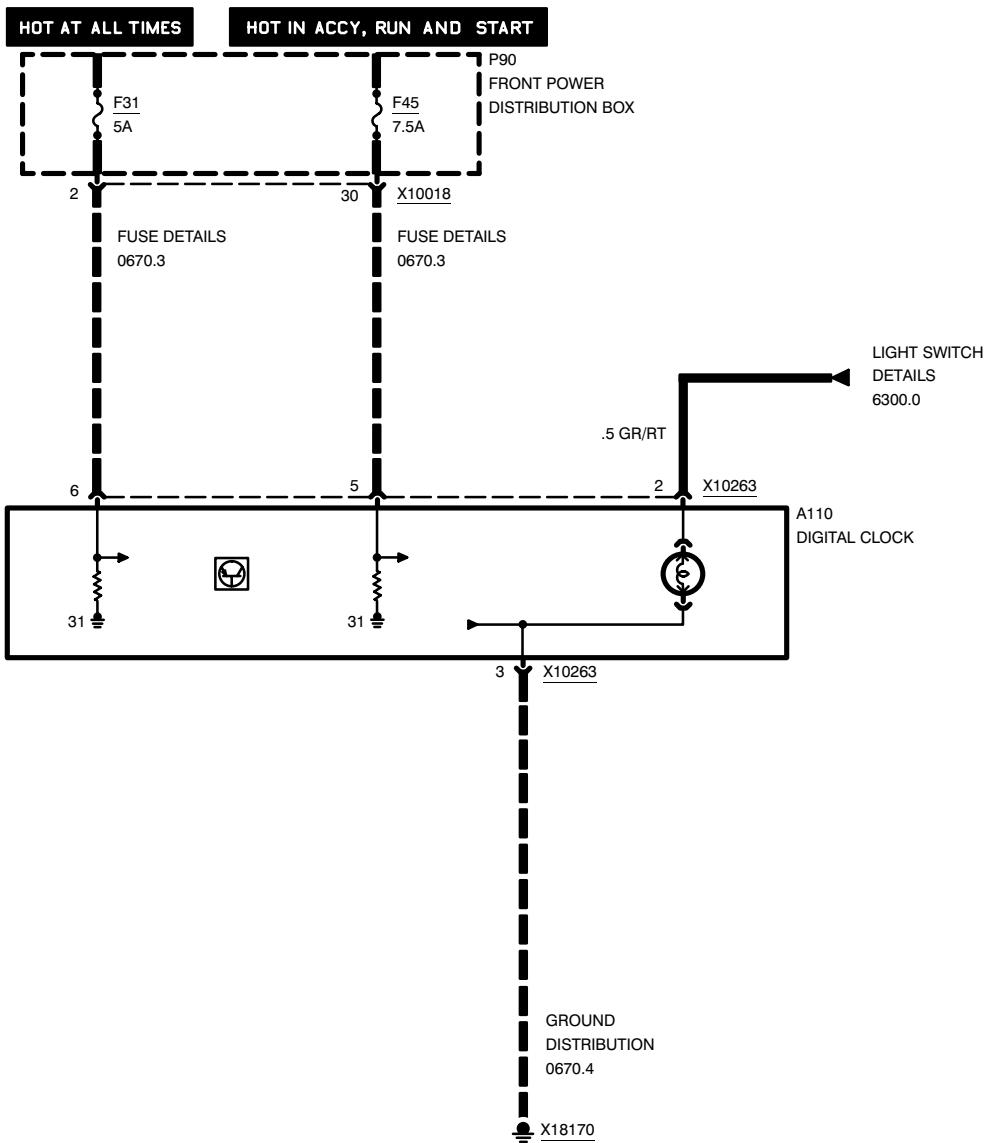


**LIGHT SWITCH DETAILS**


Z3


03/98

6300.0-00

1997

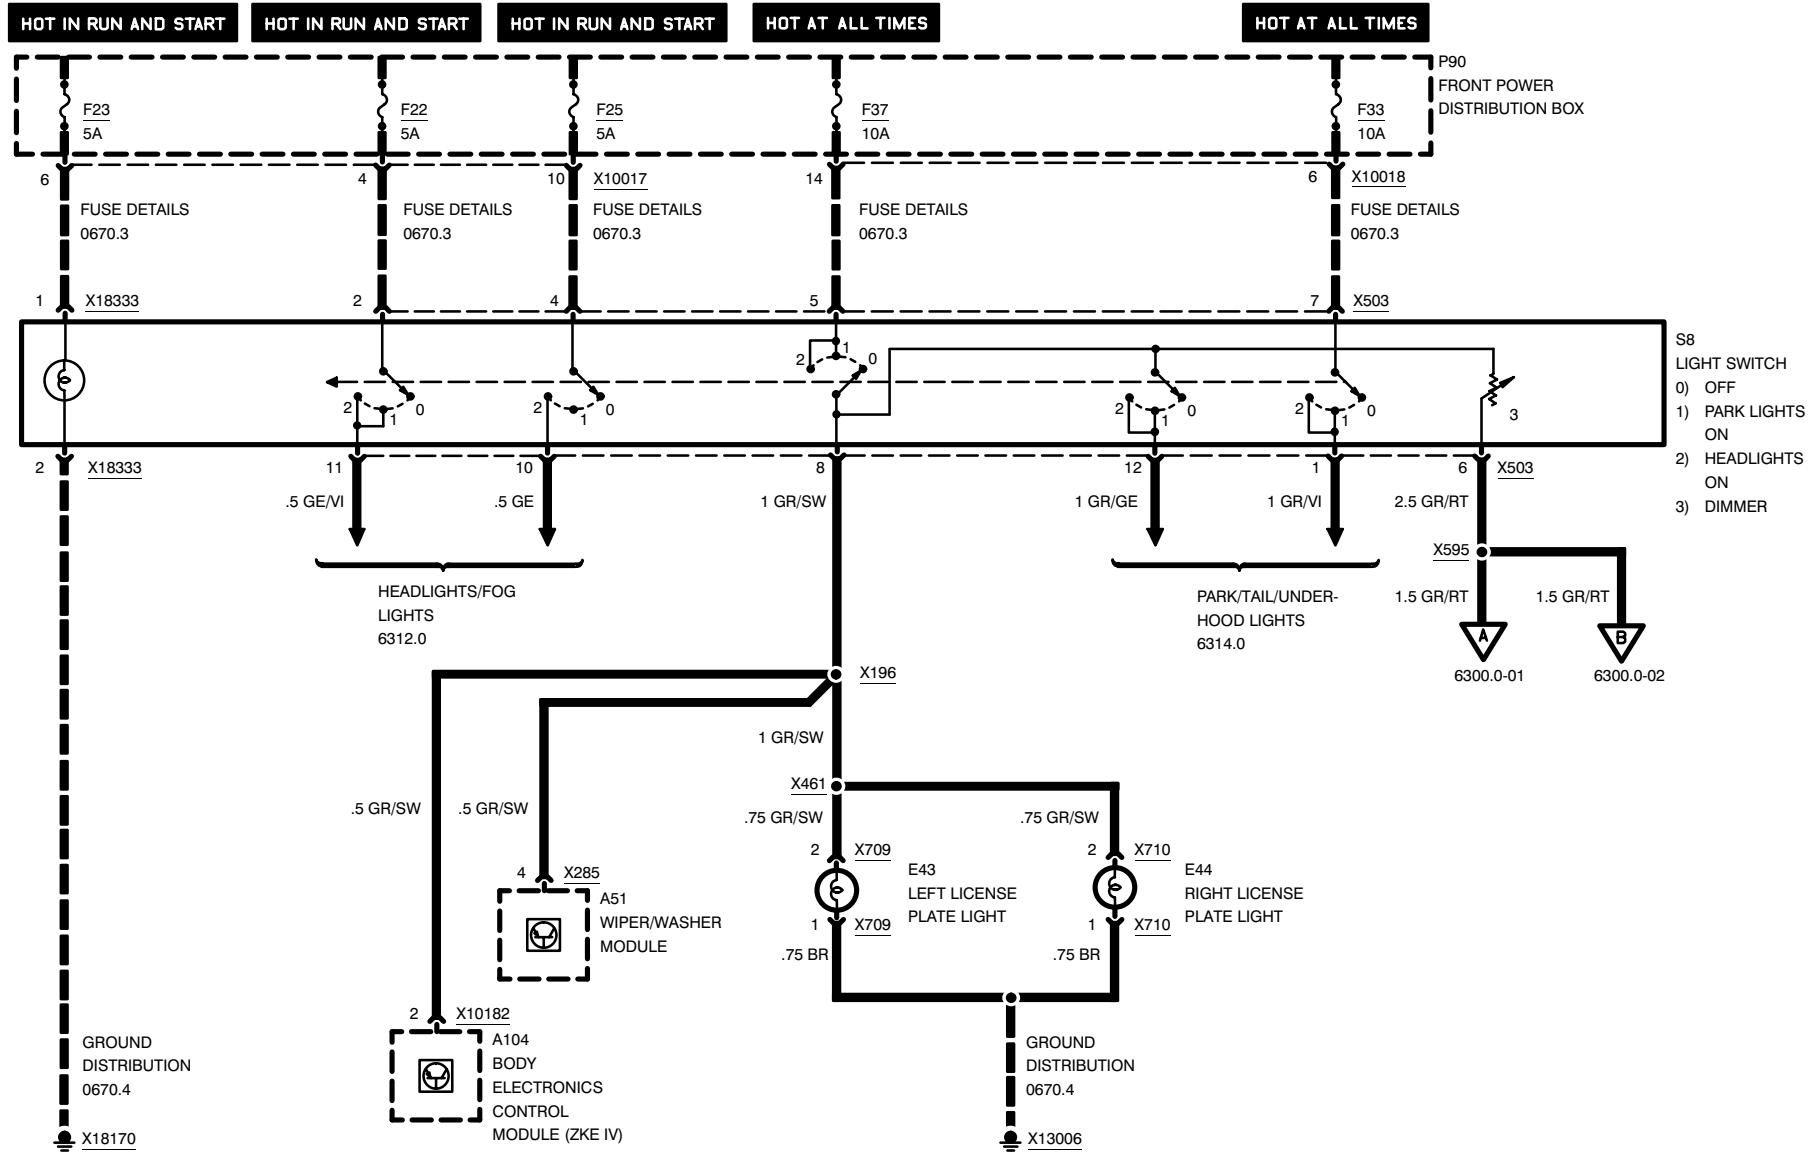


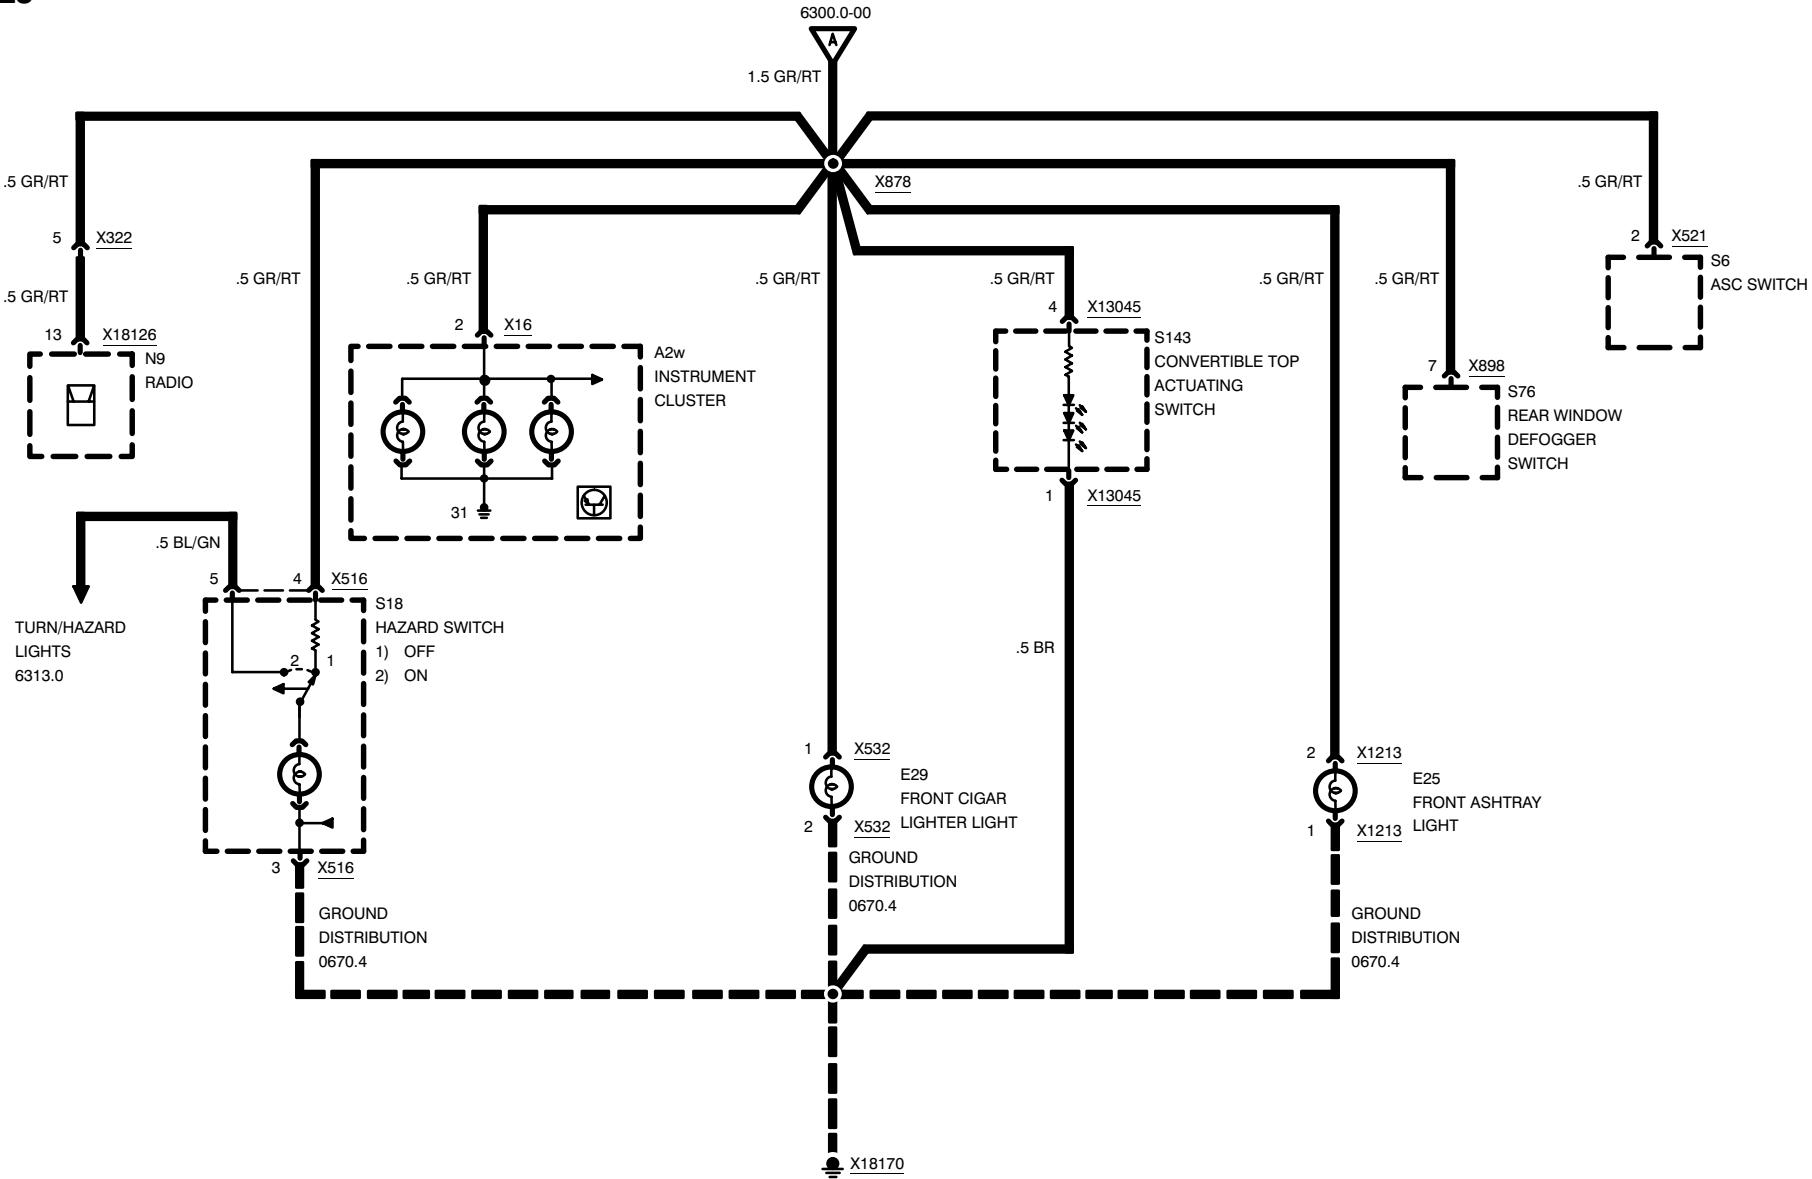

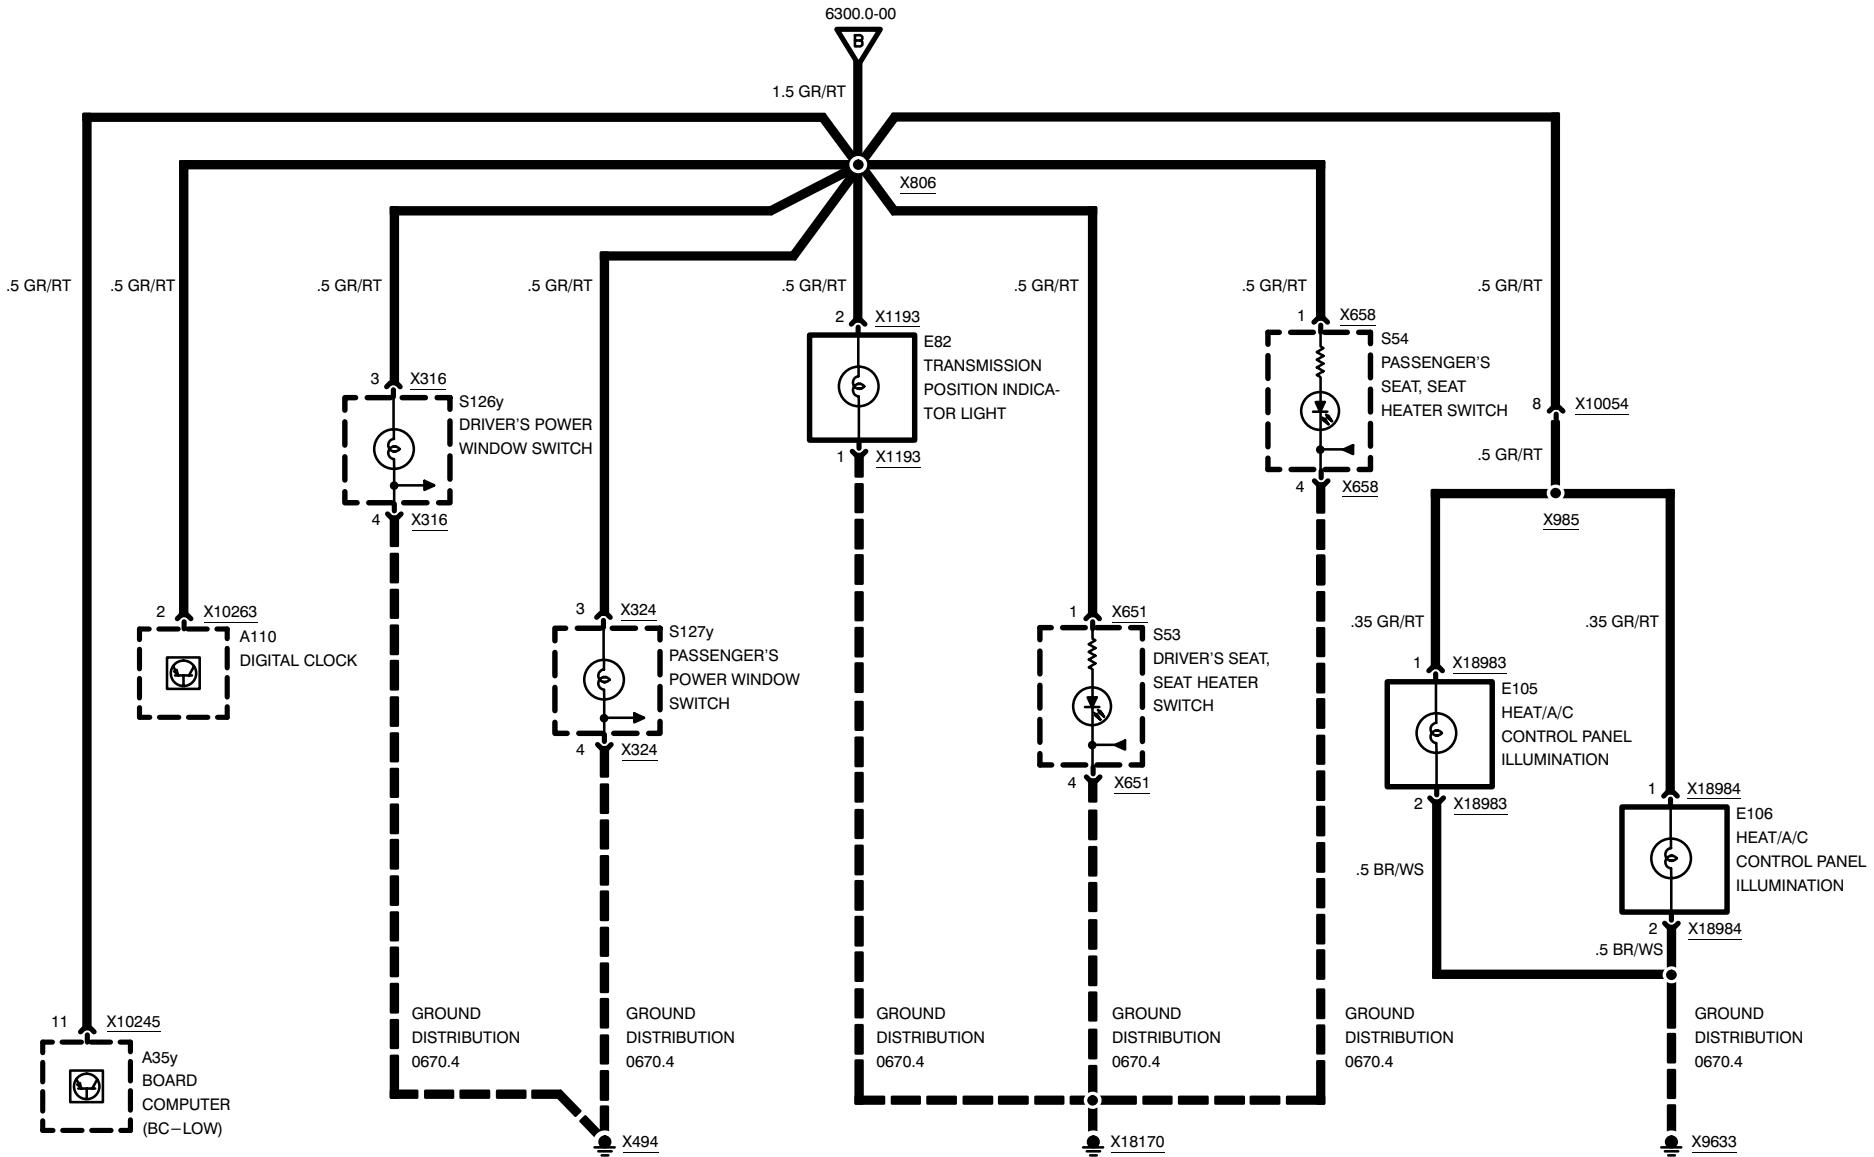

## HEADLIGHTS/FOG LIGHTS

Z3

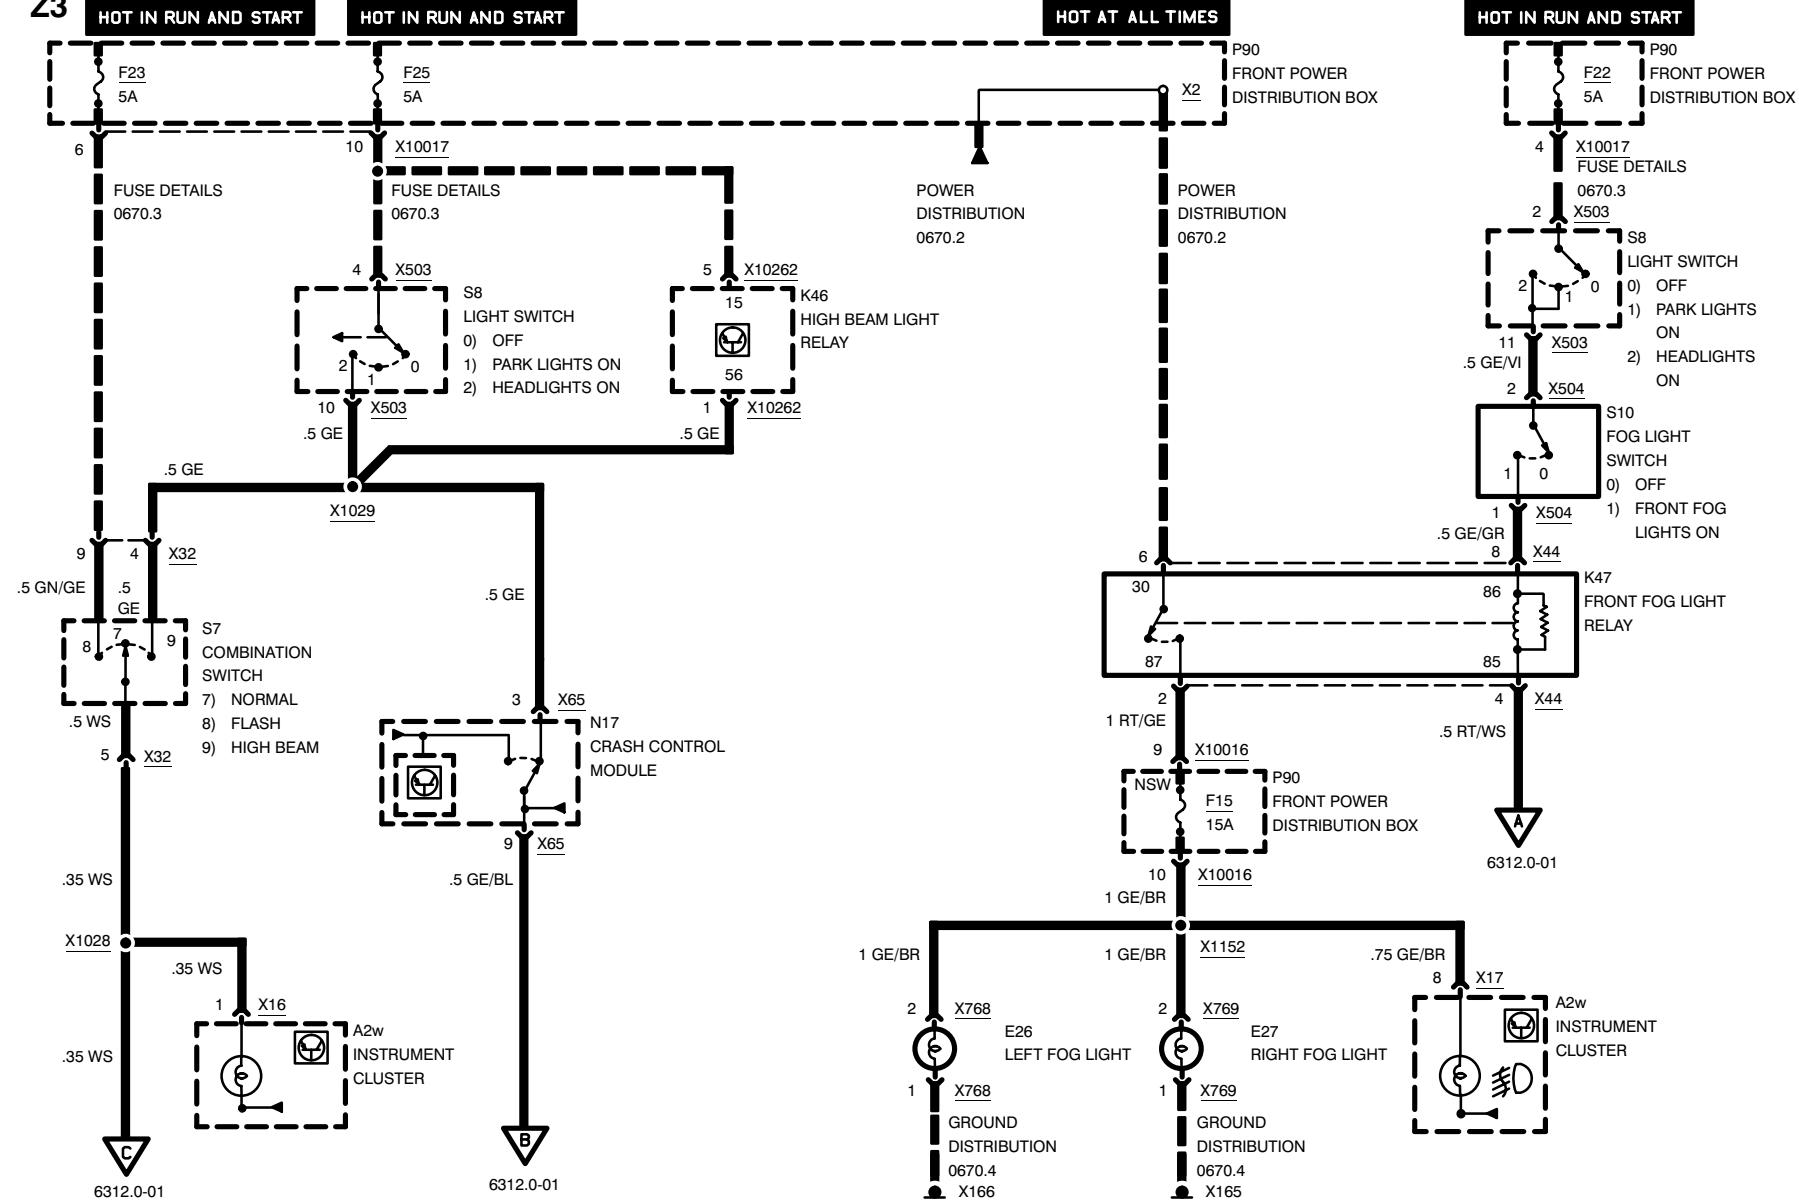


## HEADLIGHTS/FOG LIGHTS

03/98

6312.0-01

1997

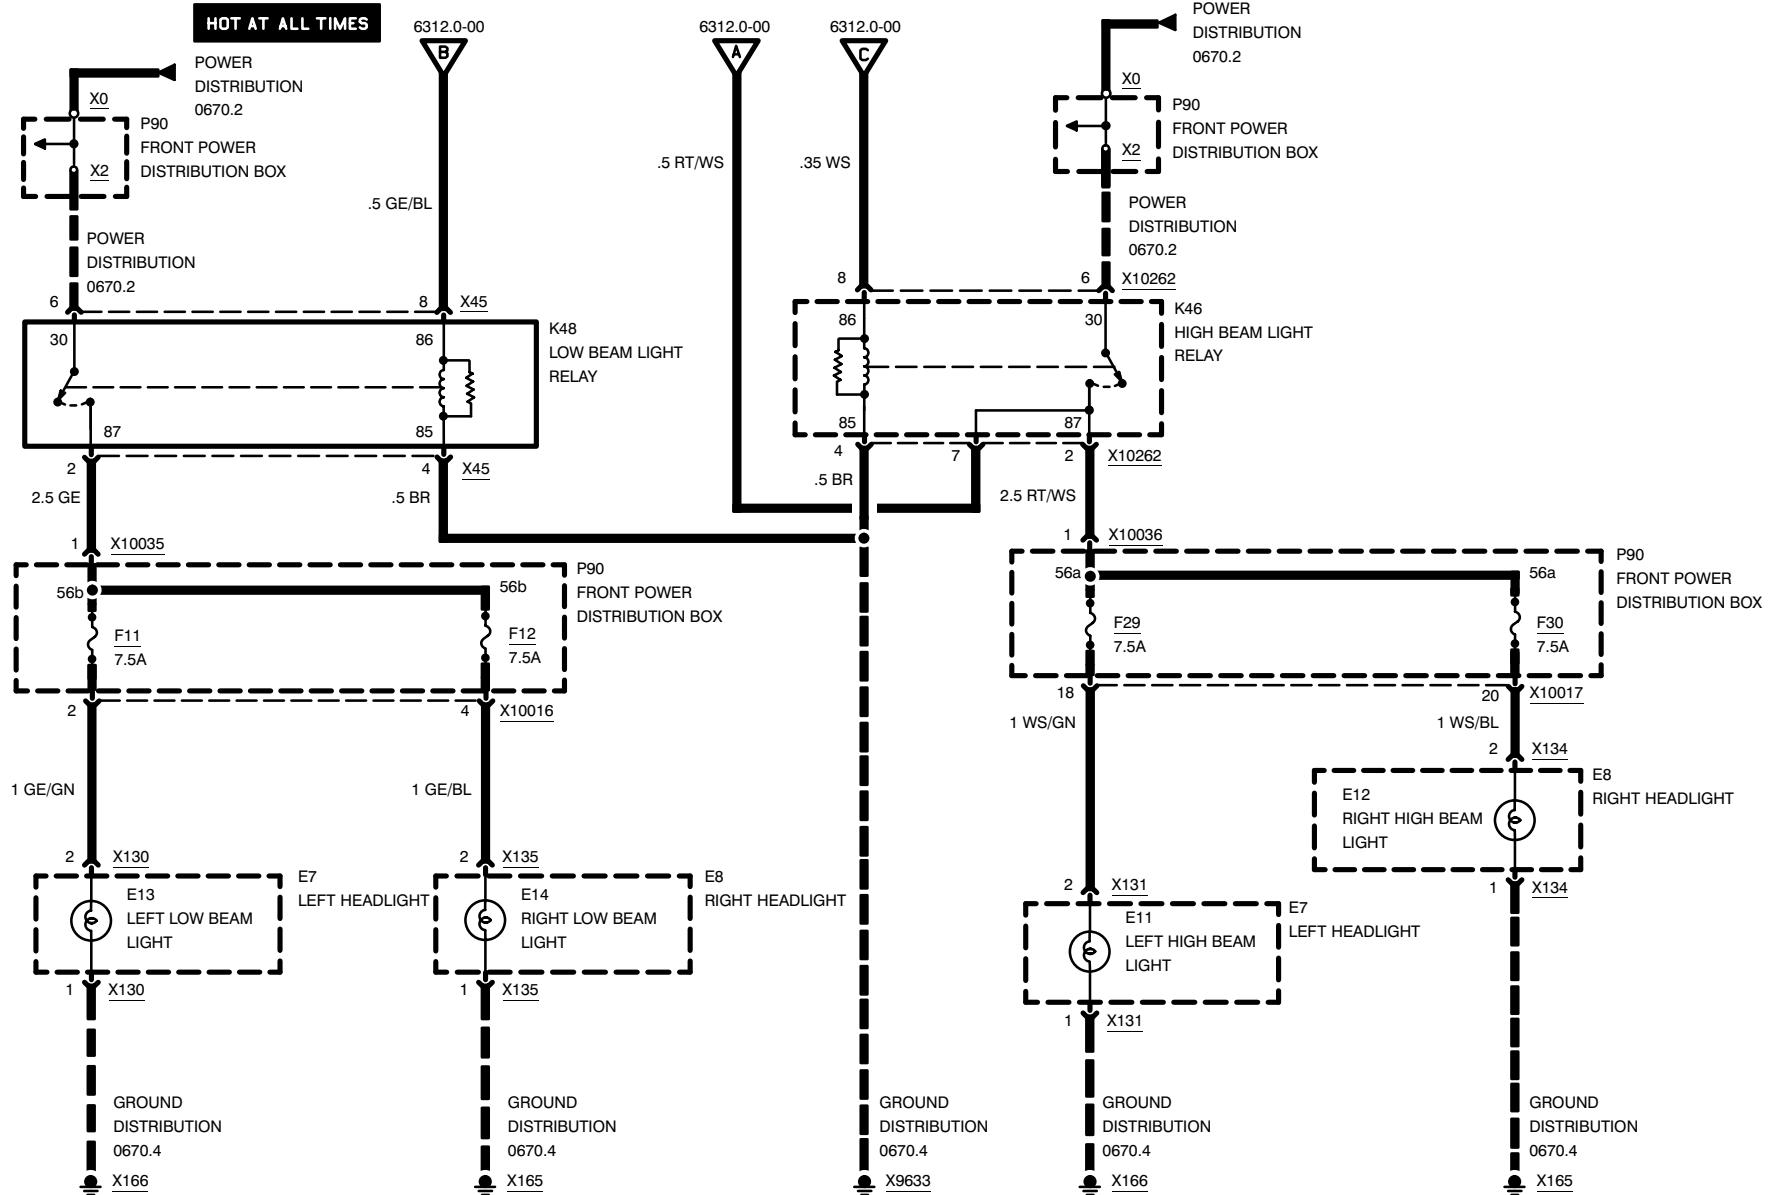



## TURN/HAZARD LIGHTS

03/98

6313.0-00

1997

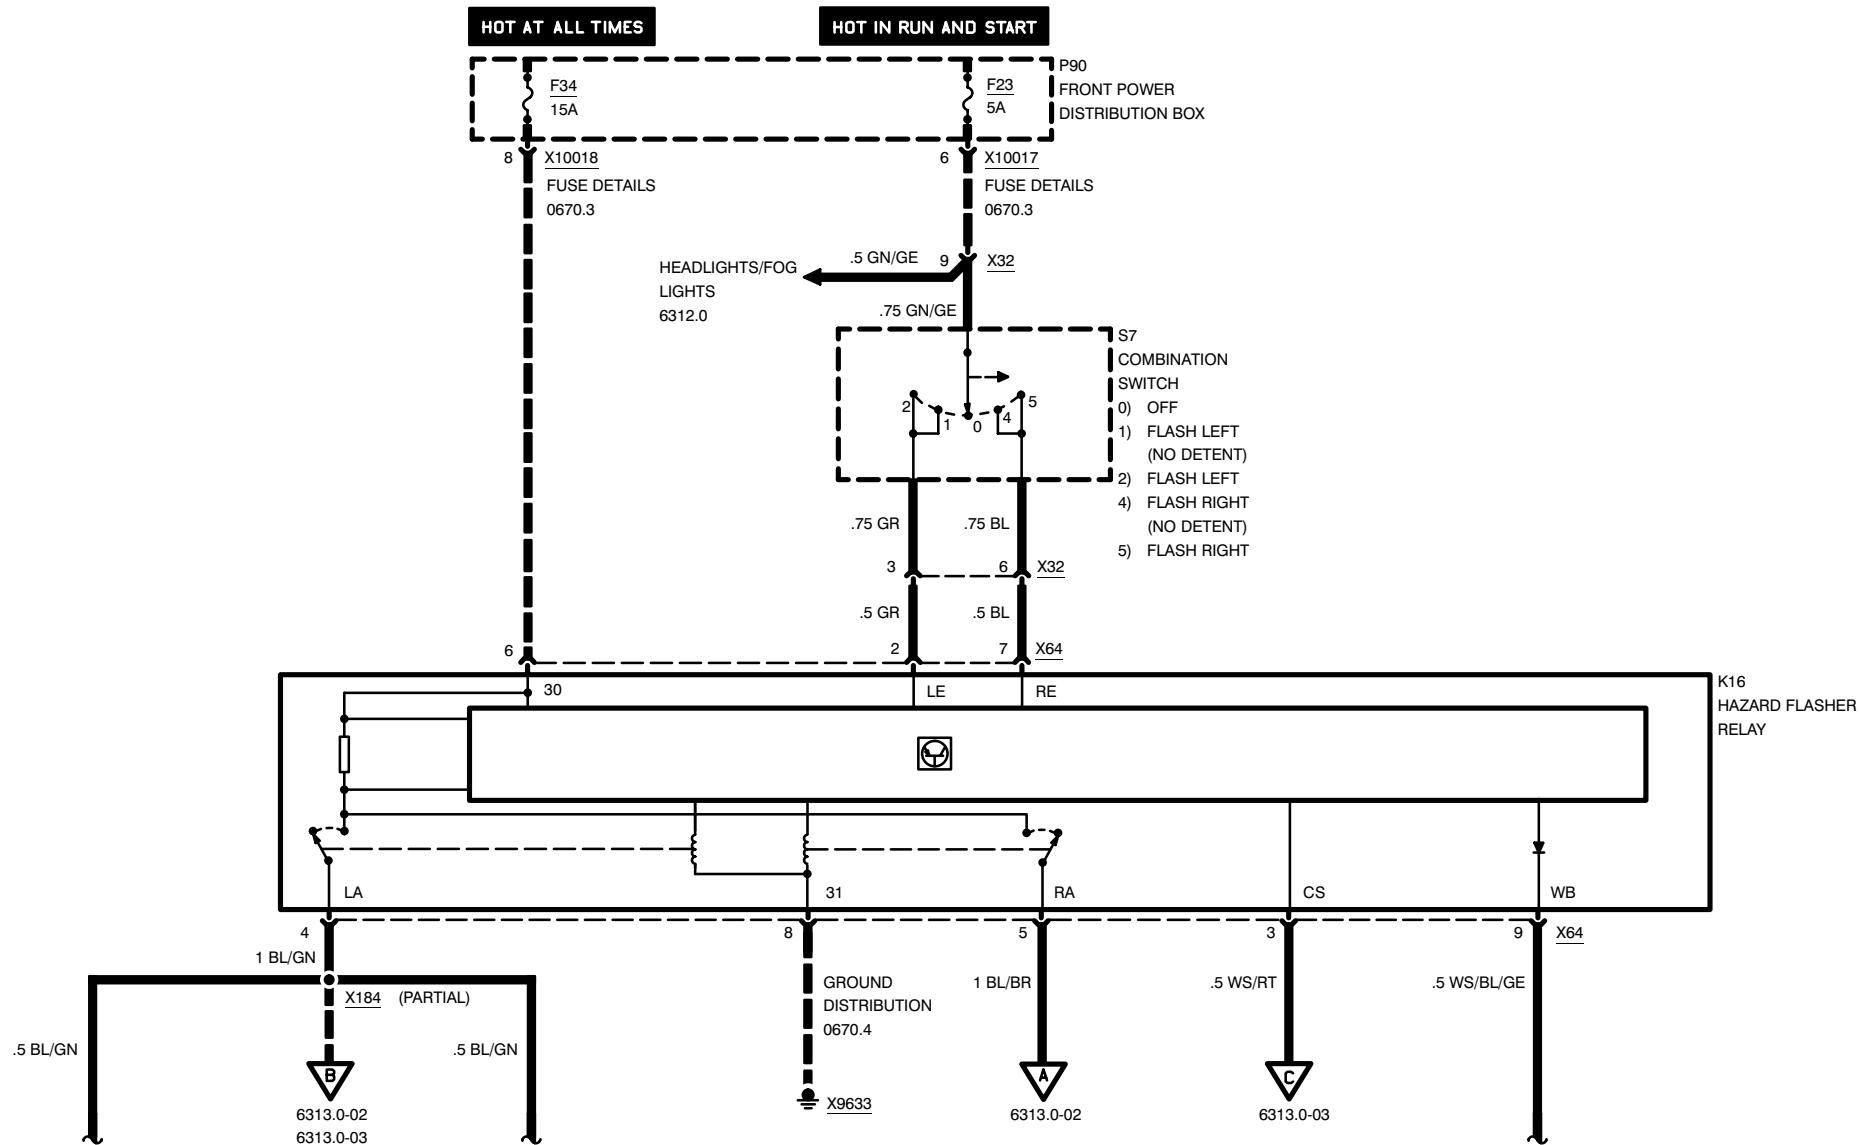

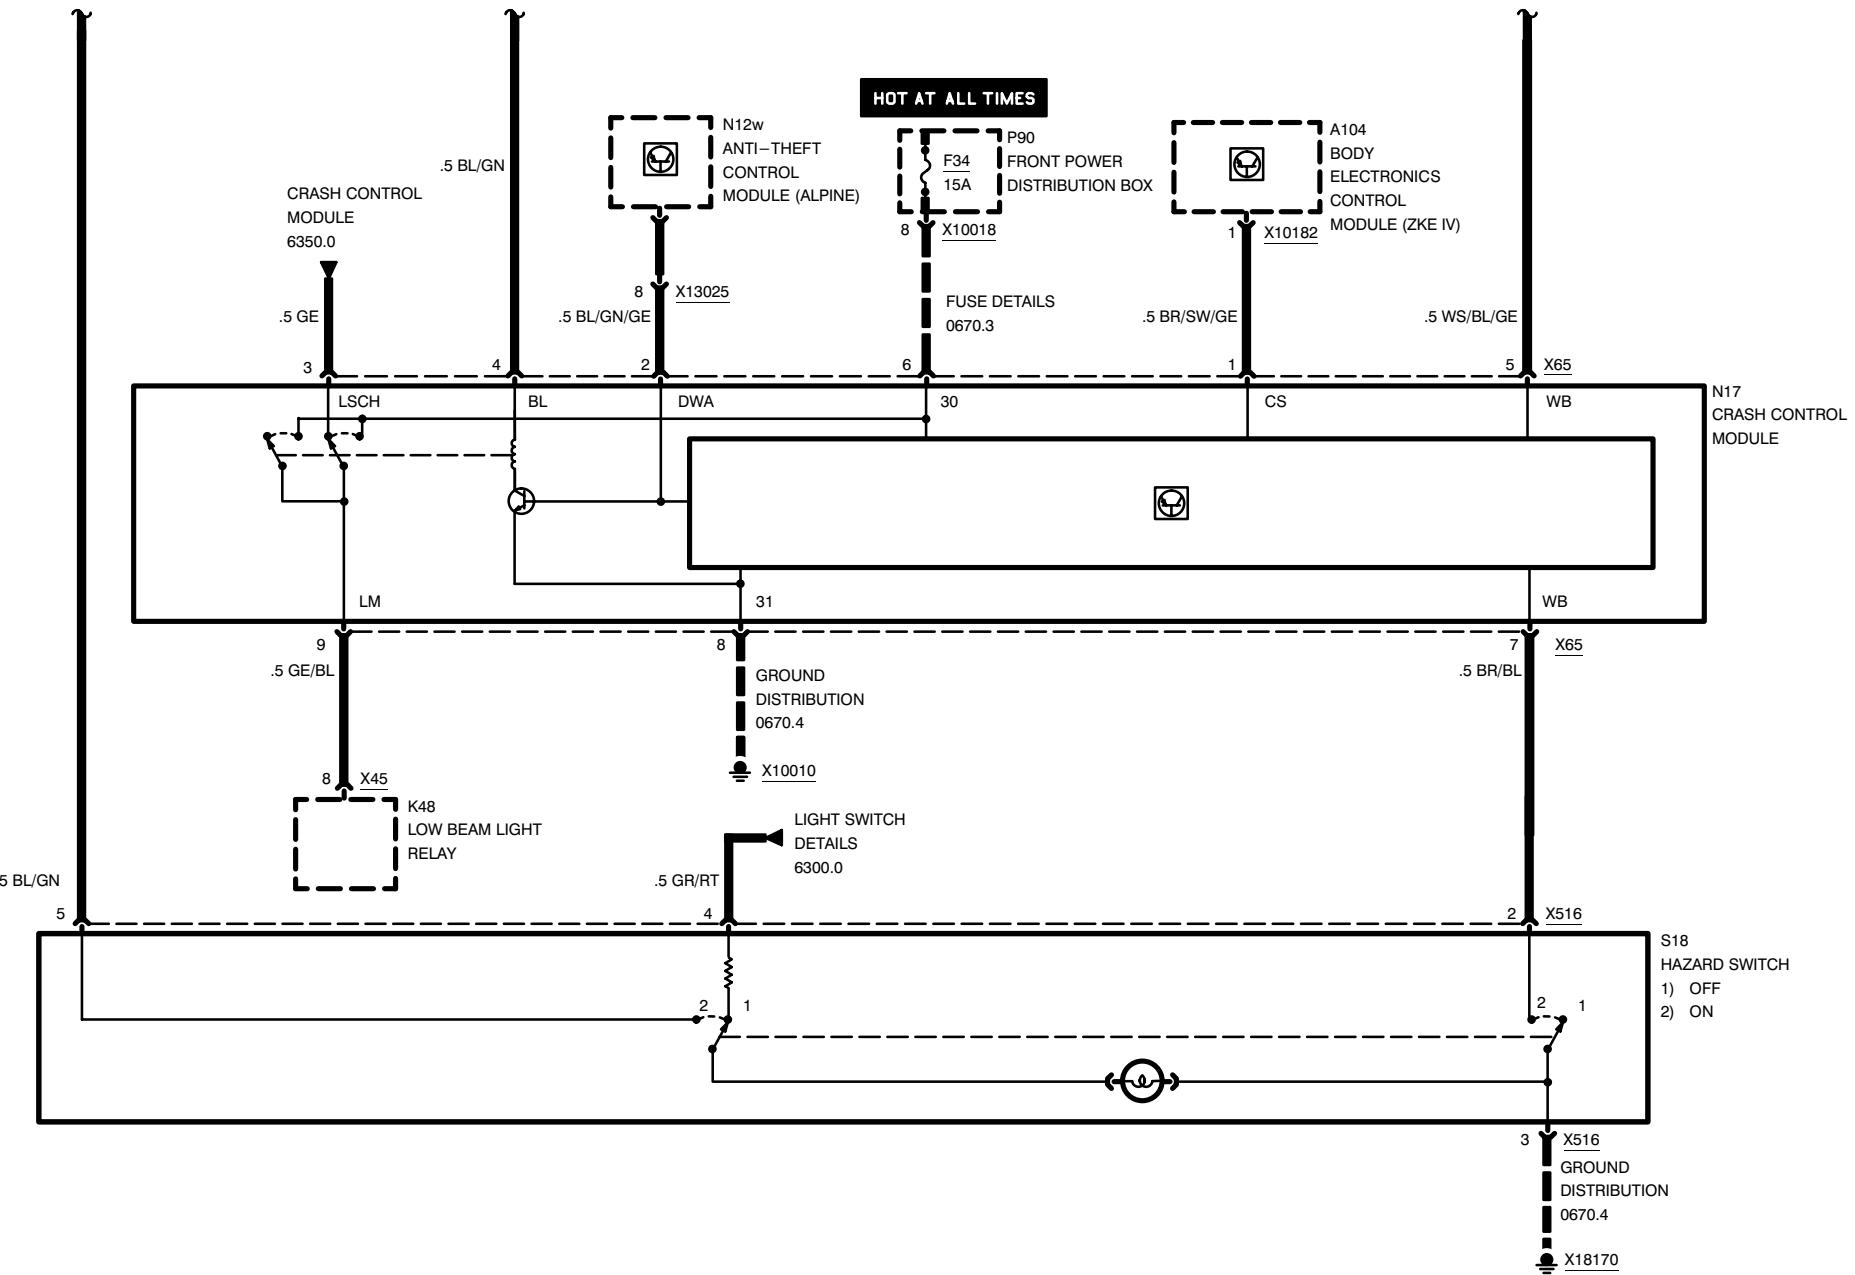


## TURN/HAZARD LIGHTS

03/98

6313.0-02

1997

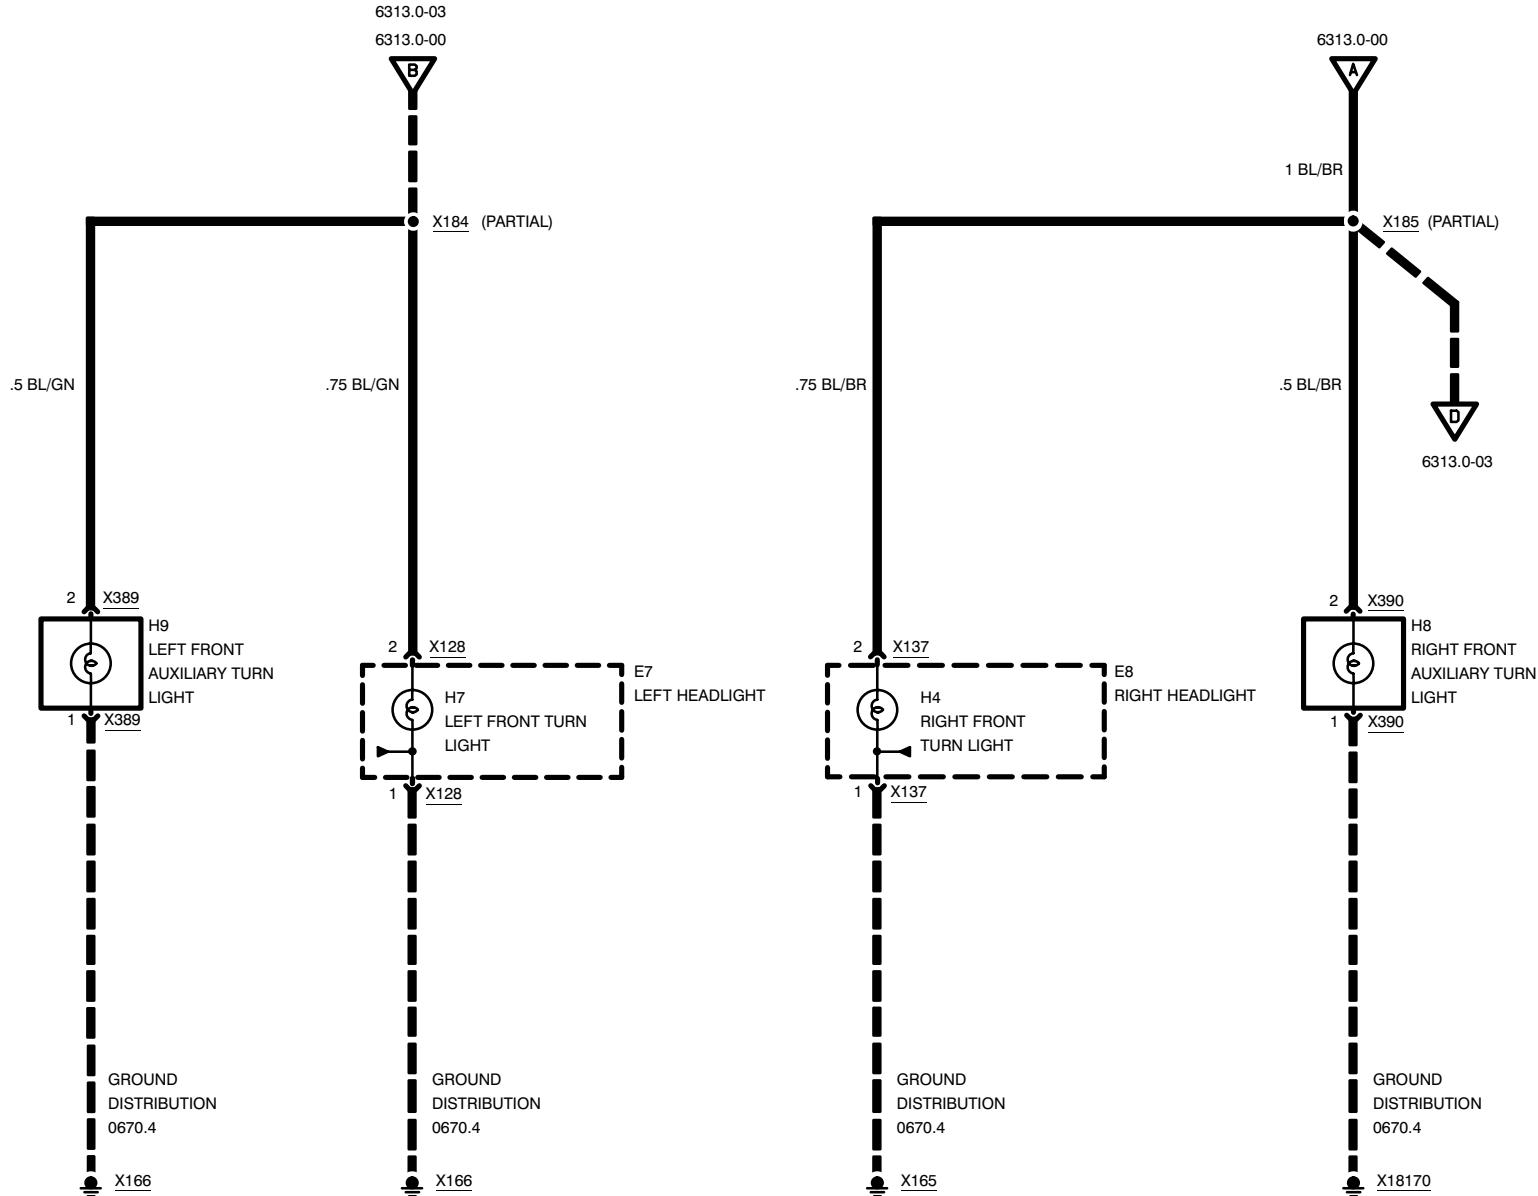


## TURN/HAZARD LIGHTS

03/98

**6313.0-03**

1997

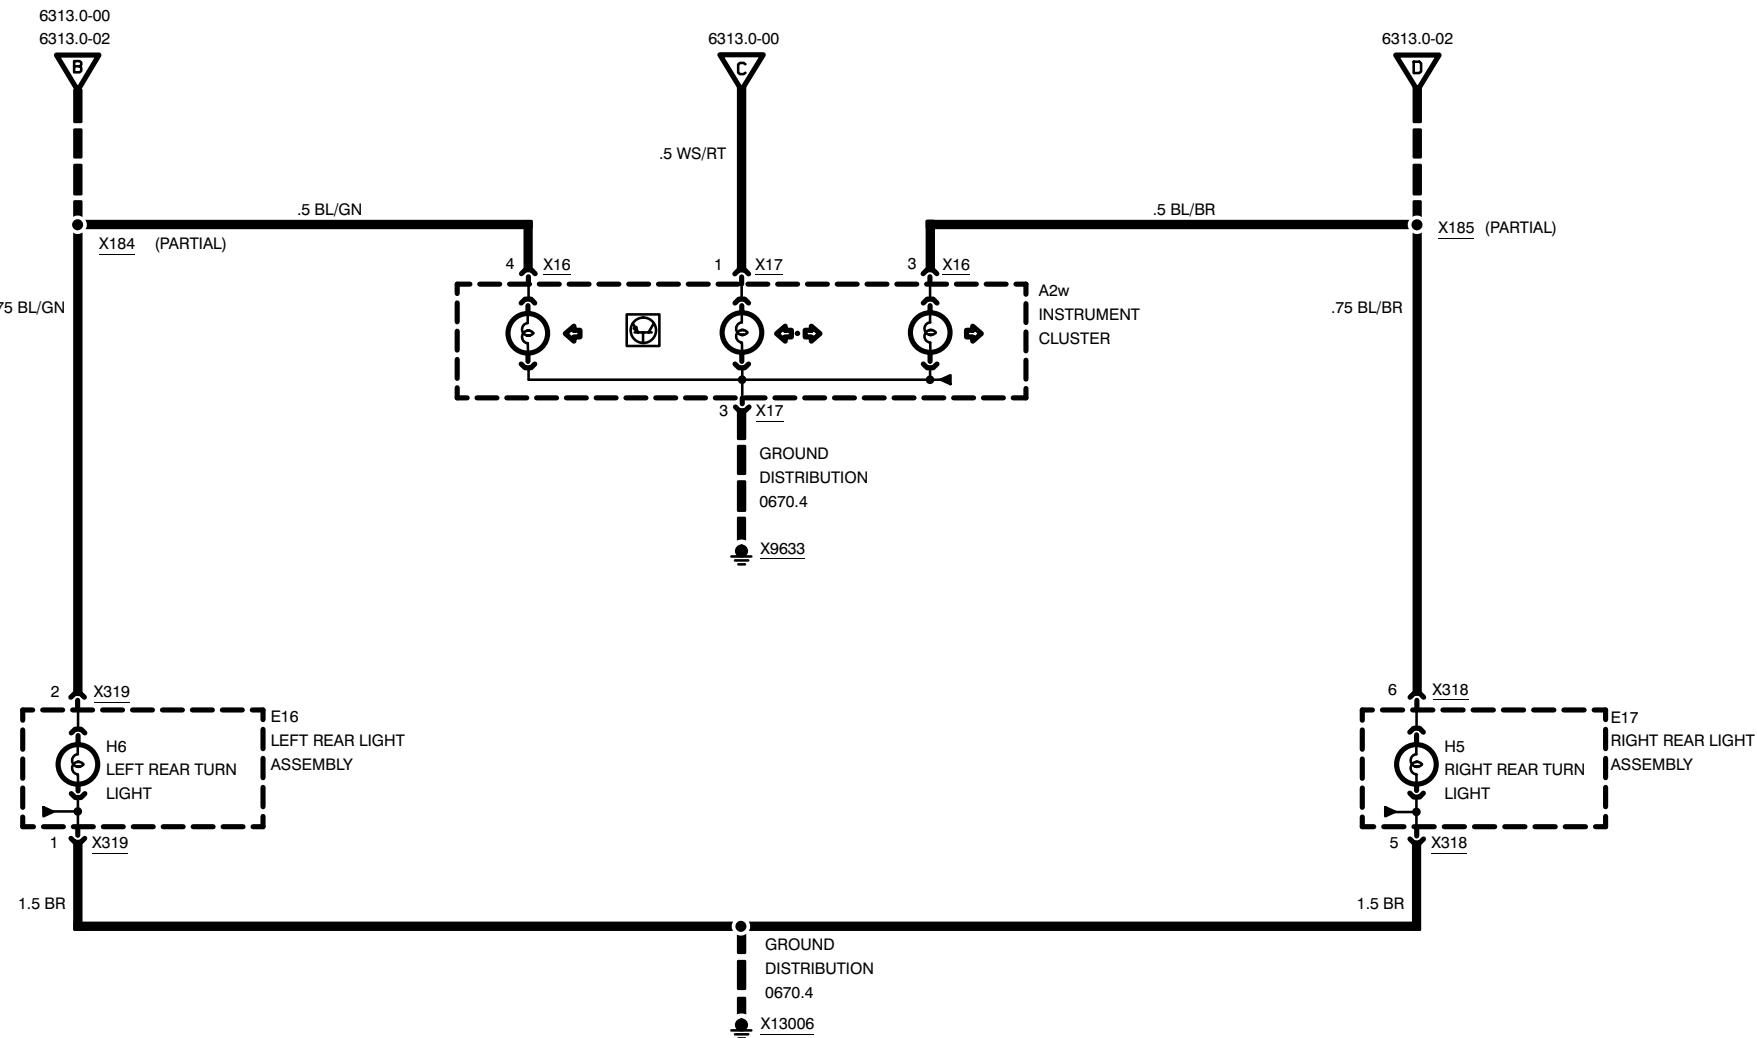


## PARK/TAIL/UNDERHOOD LIGHTS

Z3

03/98

6314.0-00


1997

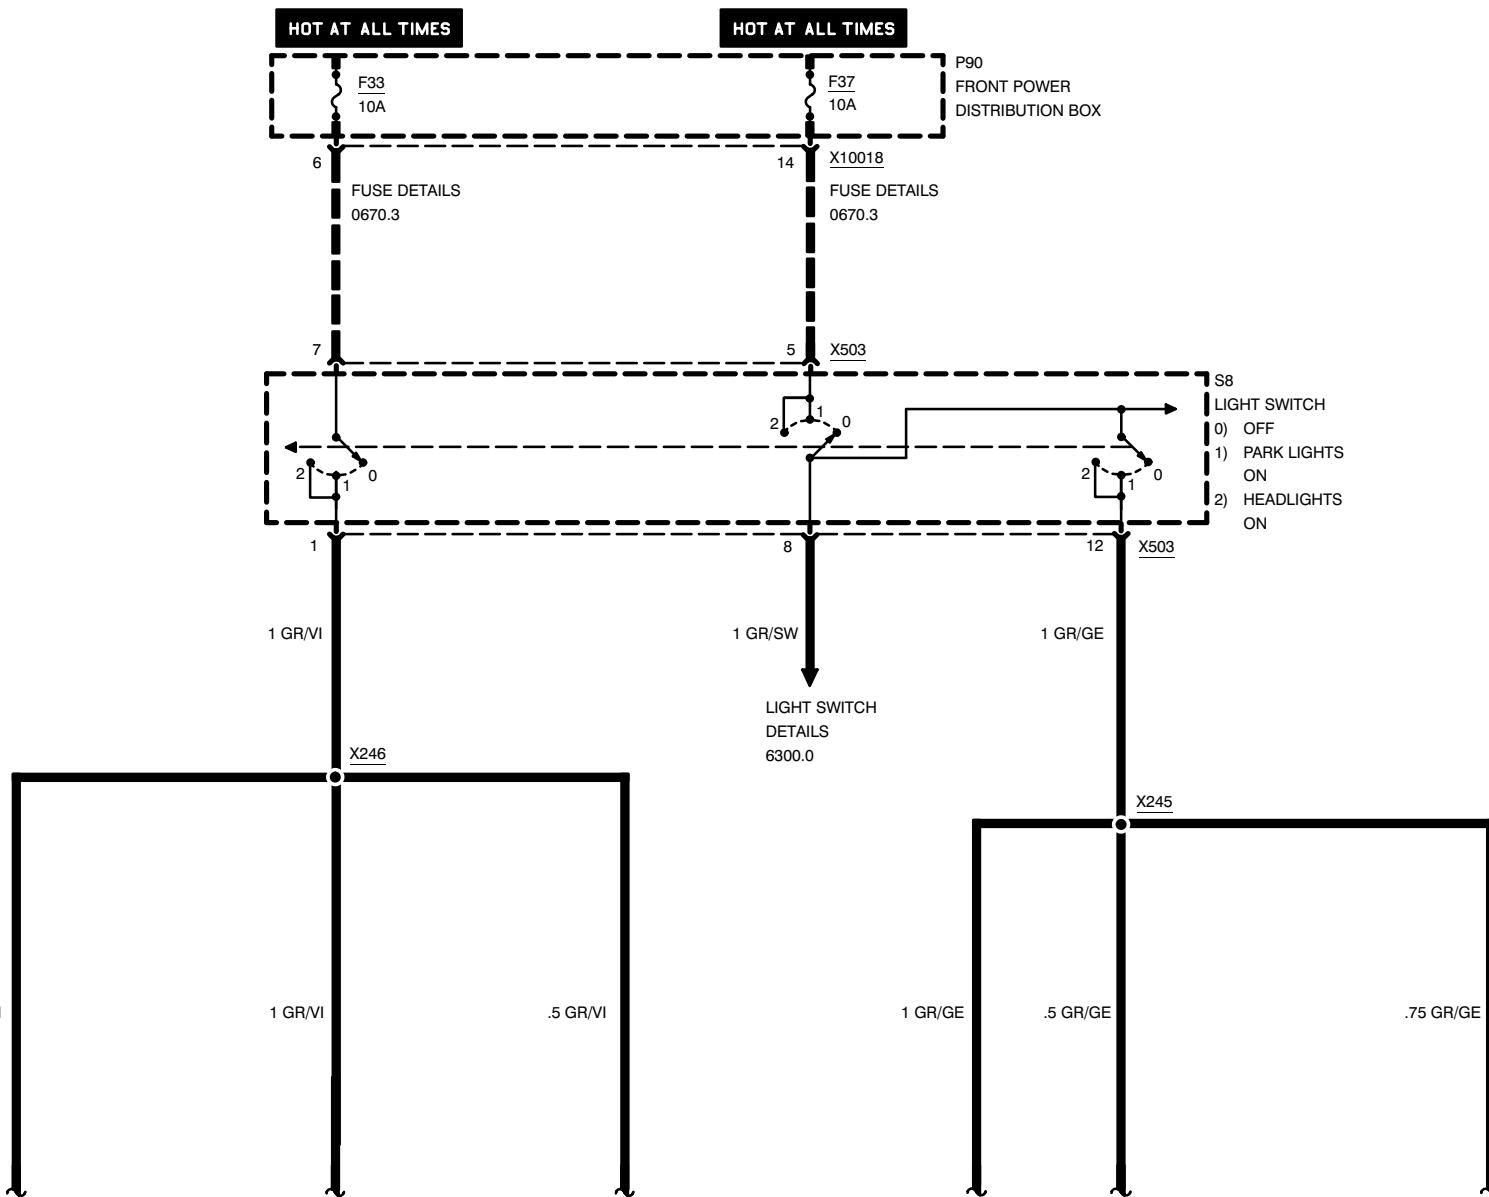

03/98

6314.0-01

1997

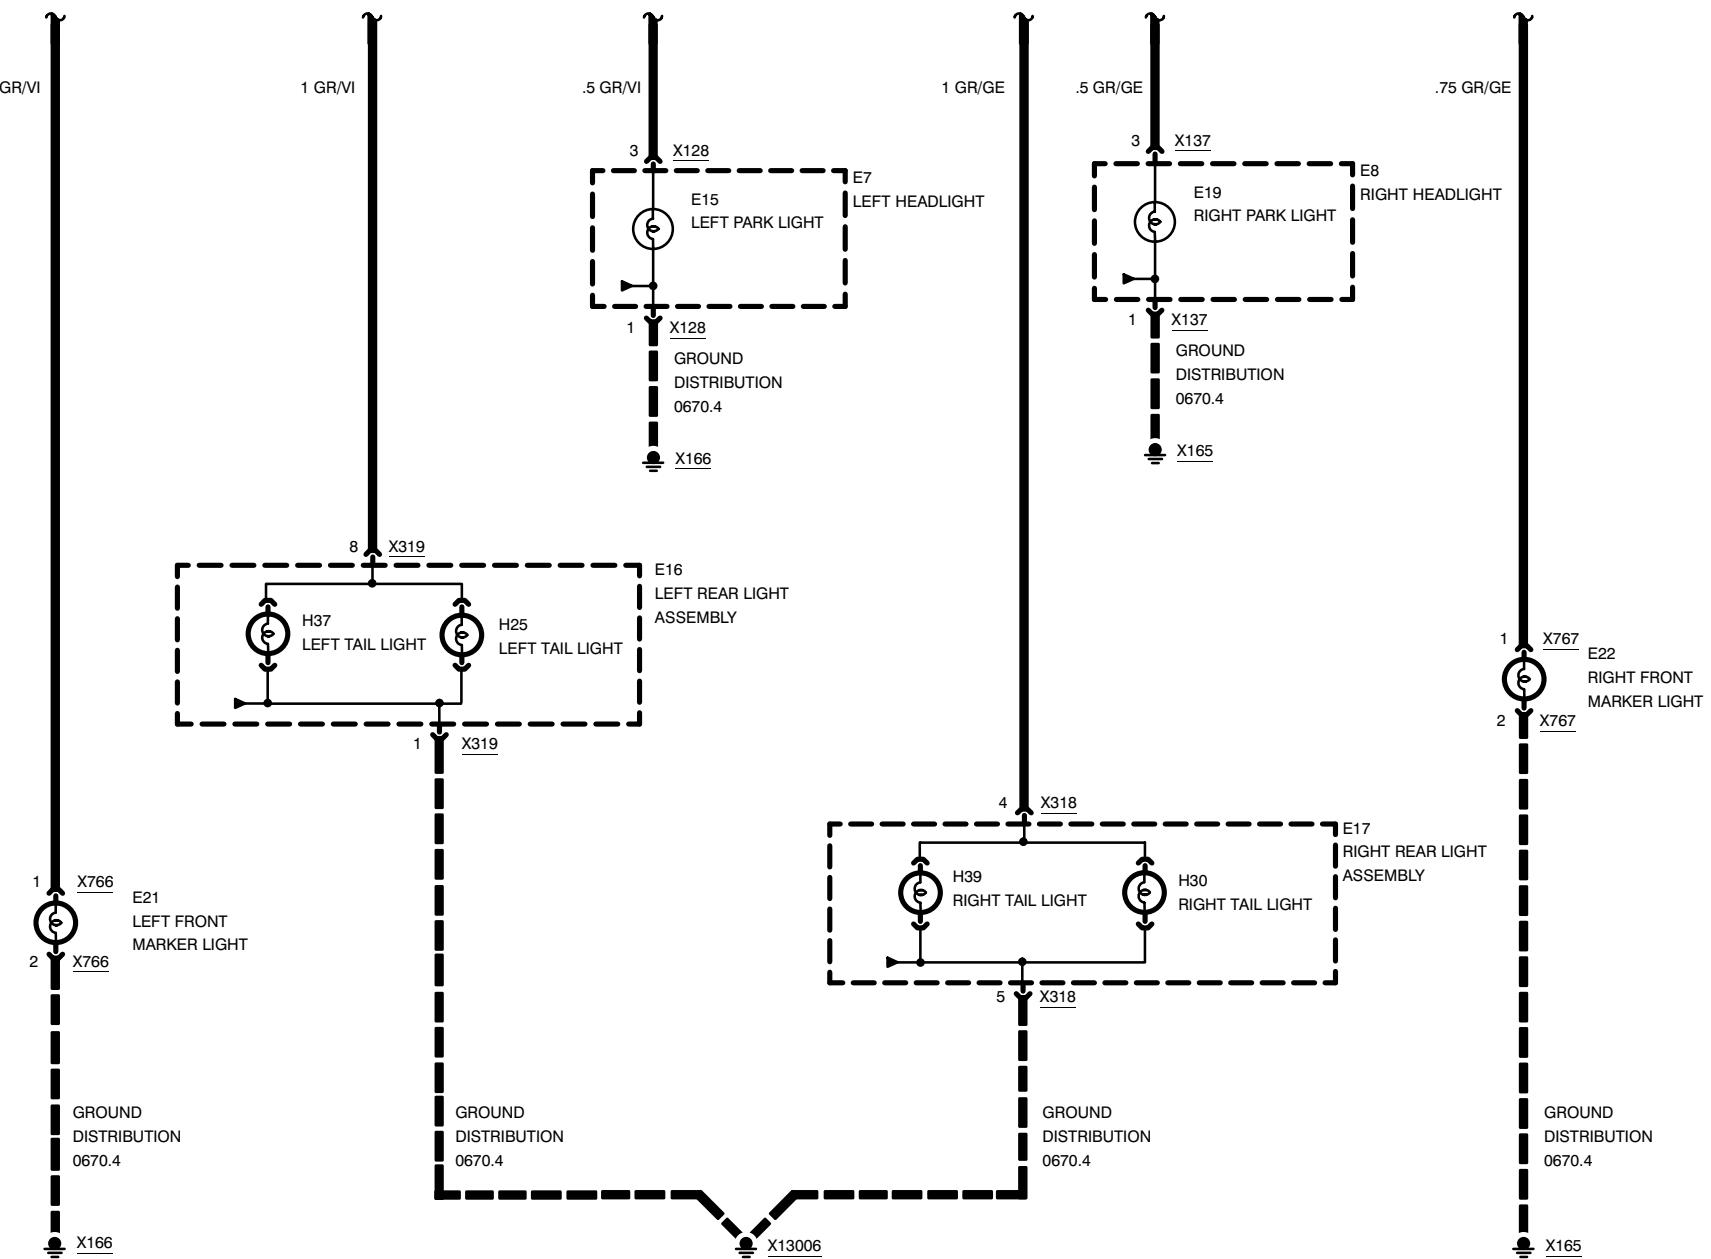


# LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS

03/98

6320.0-00

1997

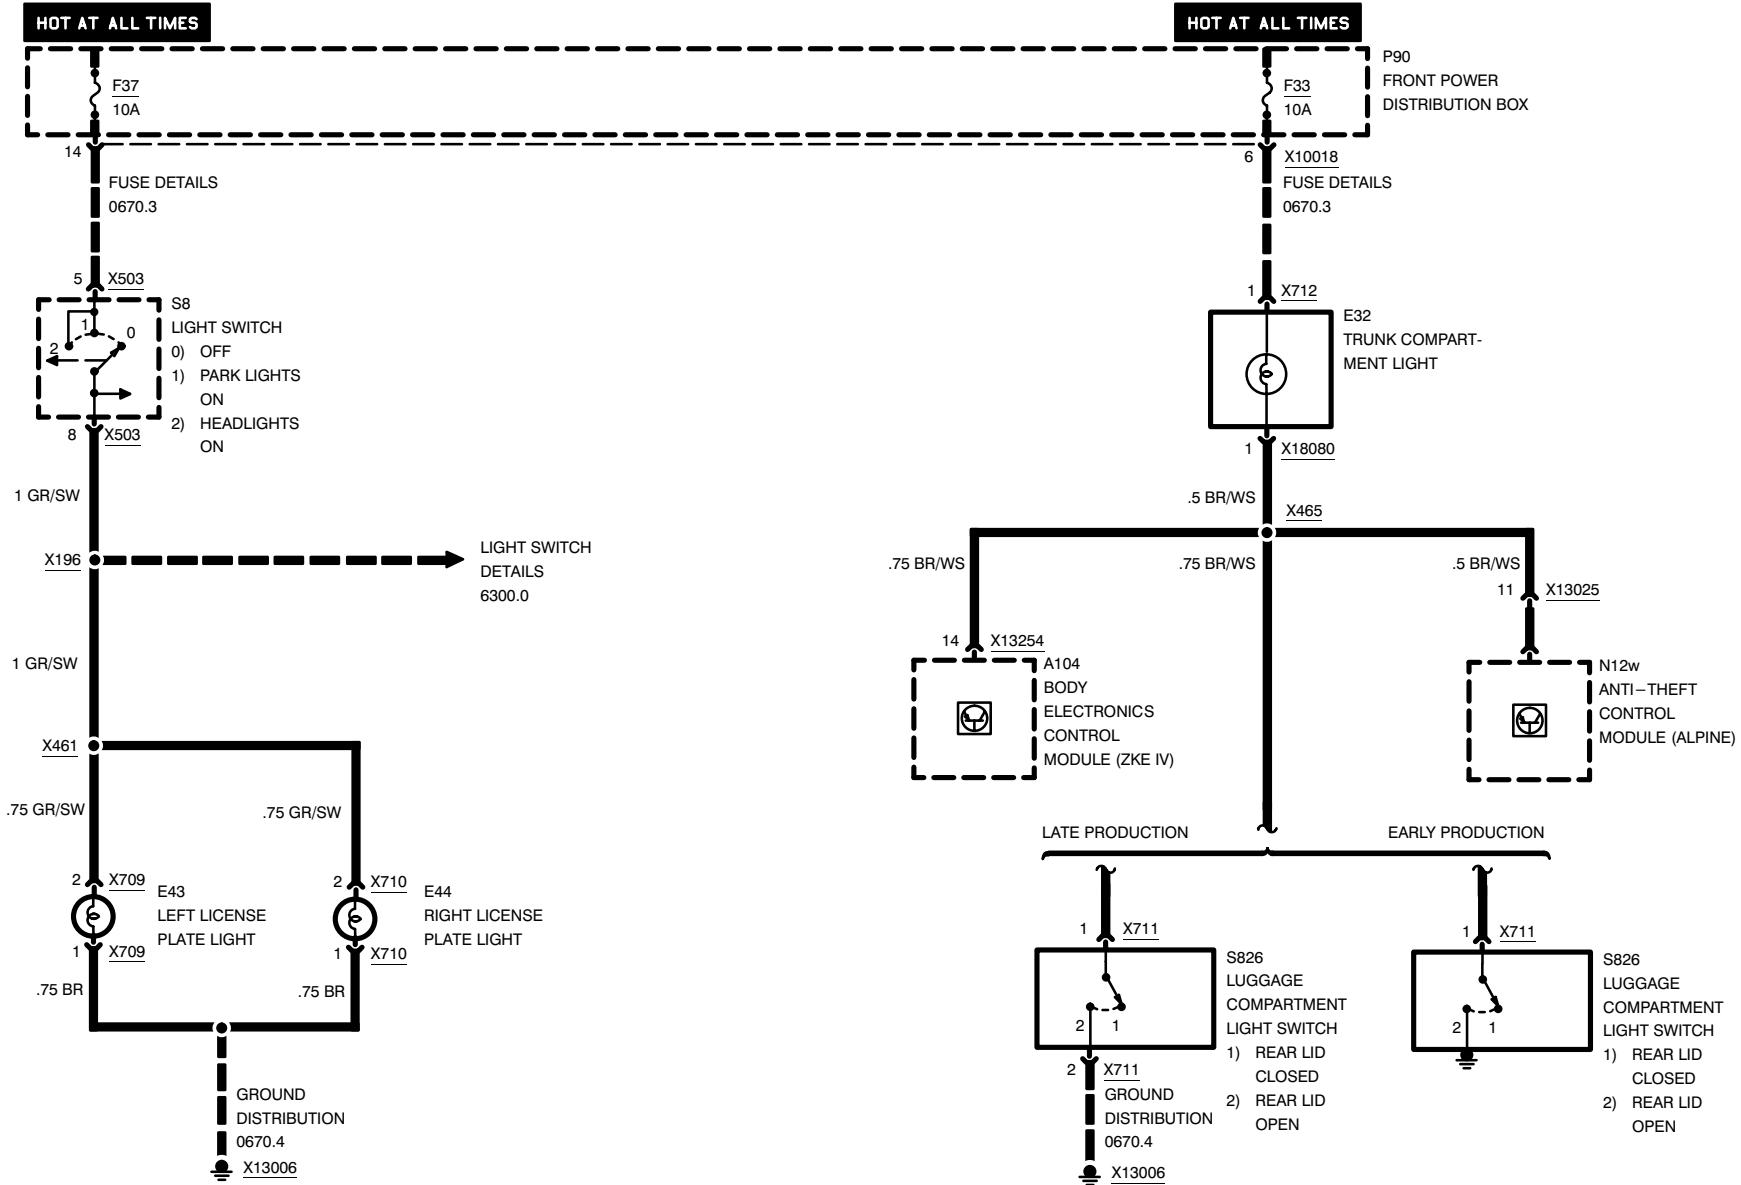


## BACK UP LIGHTS

03/98

6322.0-00

1997

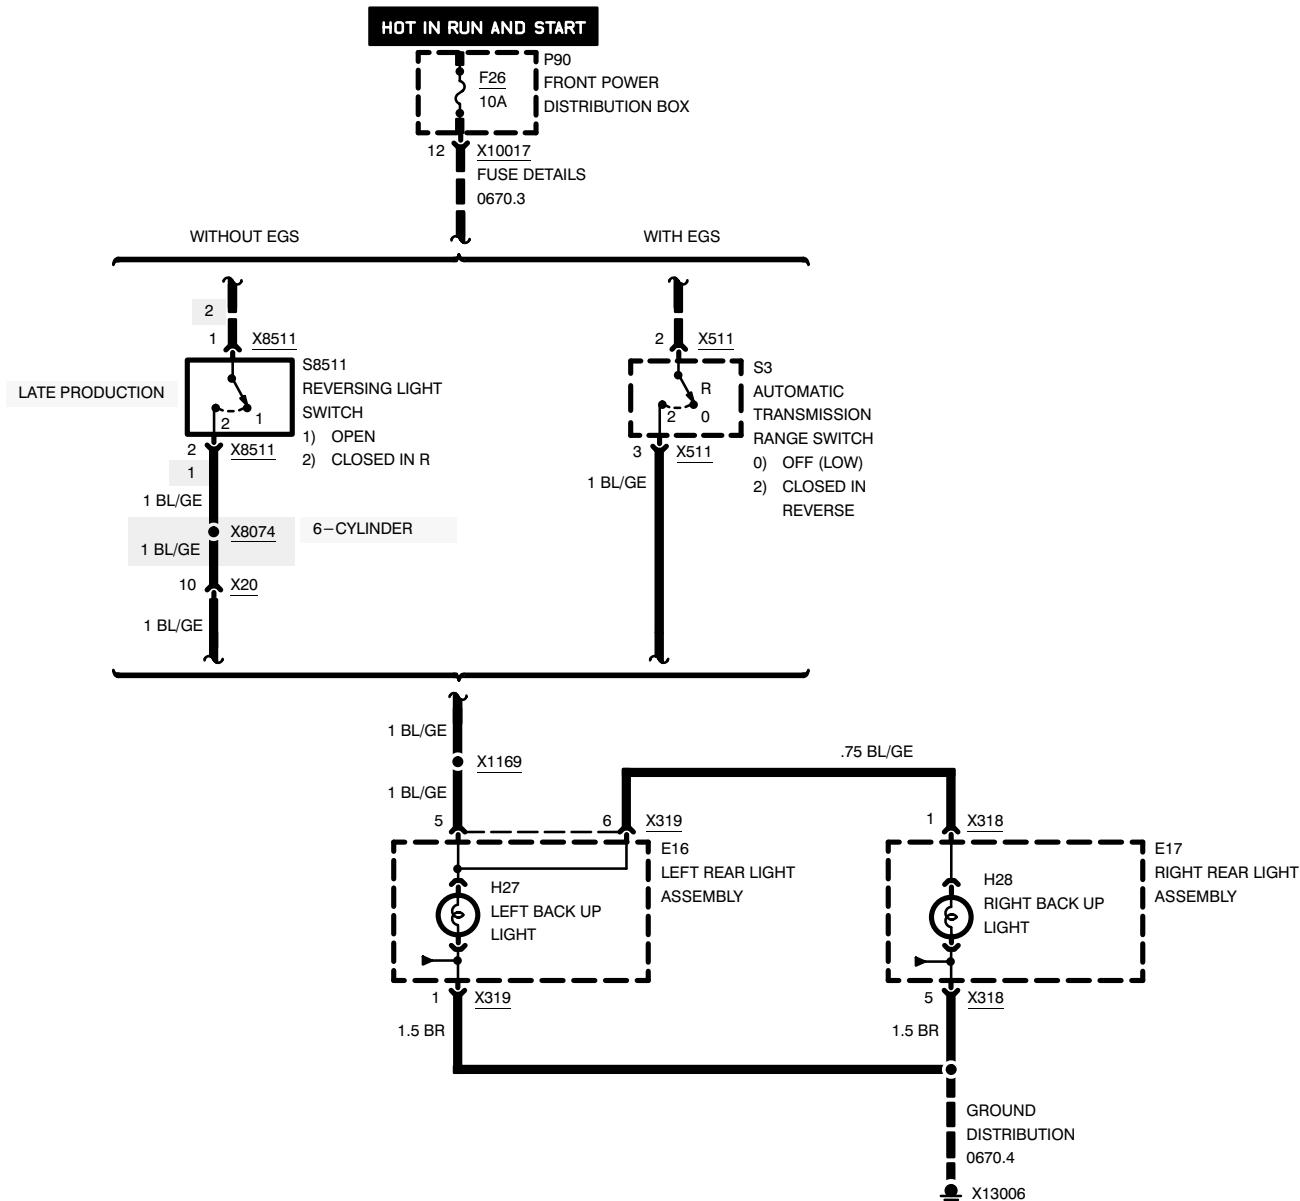


## BRAKE LIGHTS

Z3


03/98


6325.0-00

1997

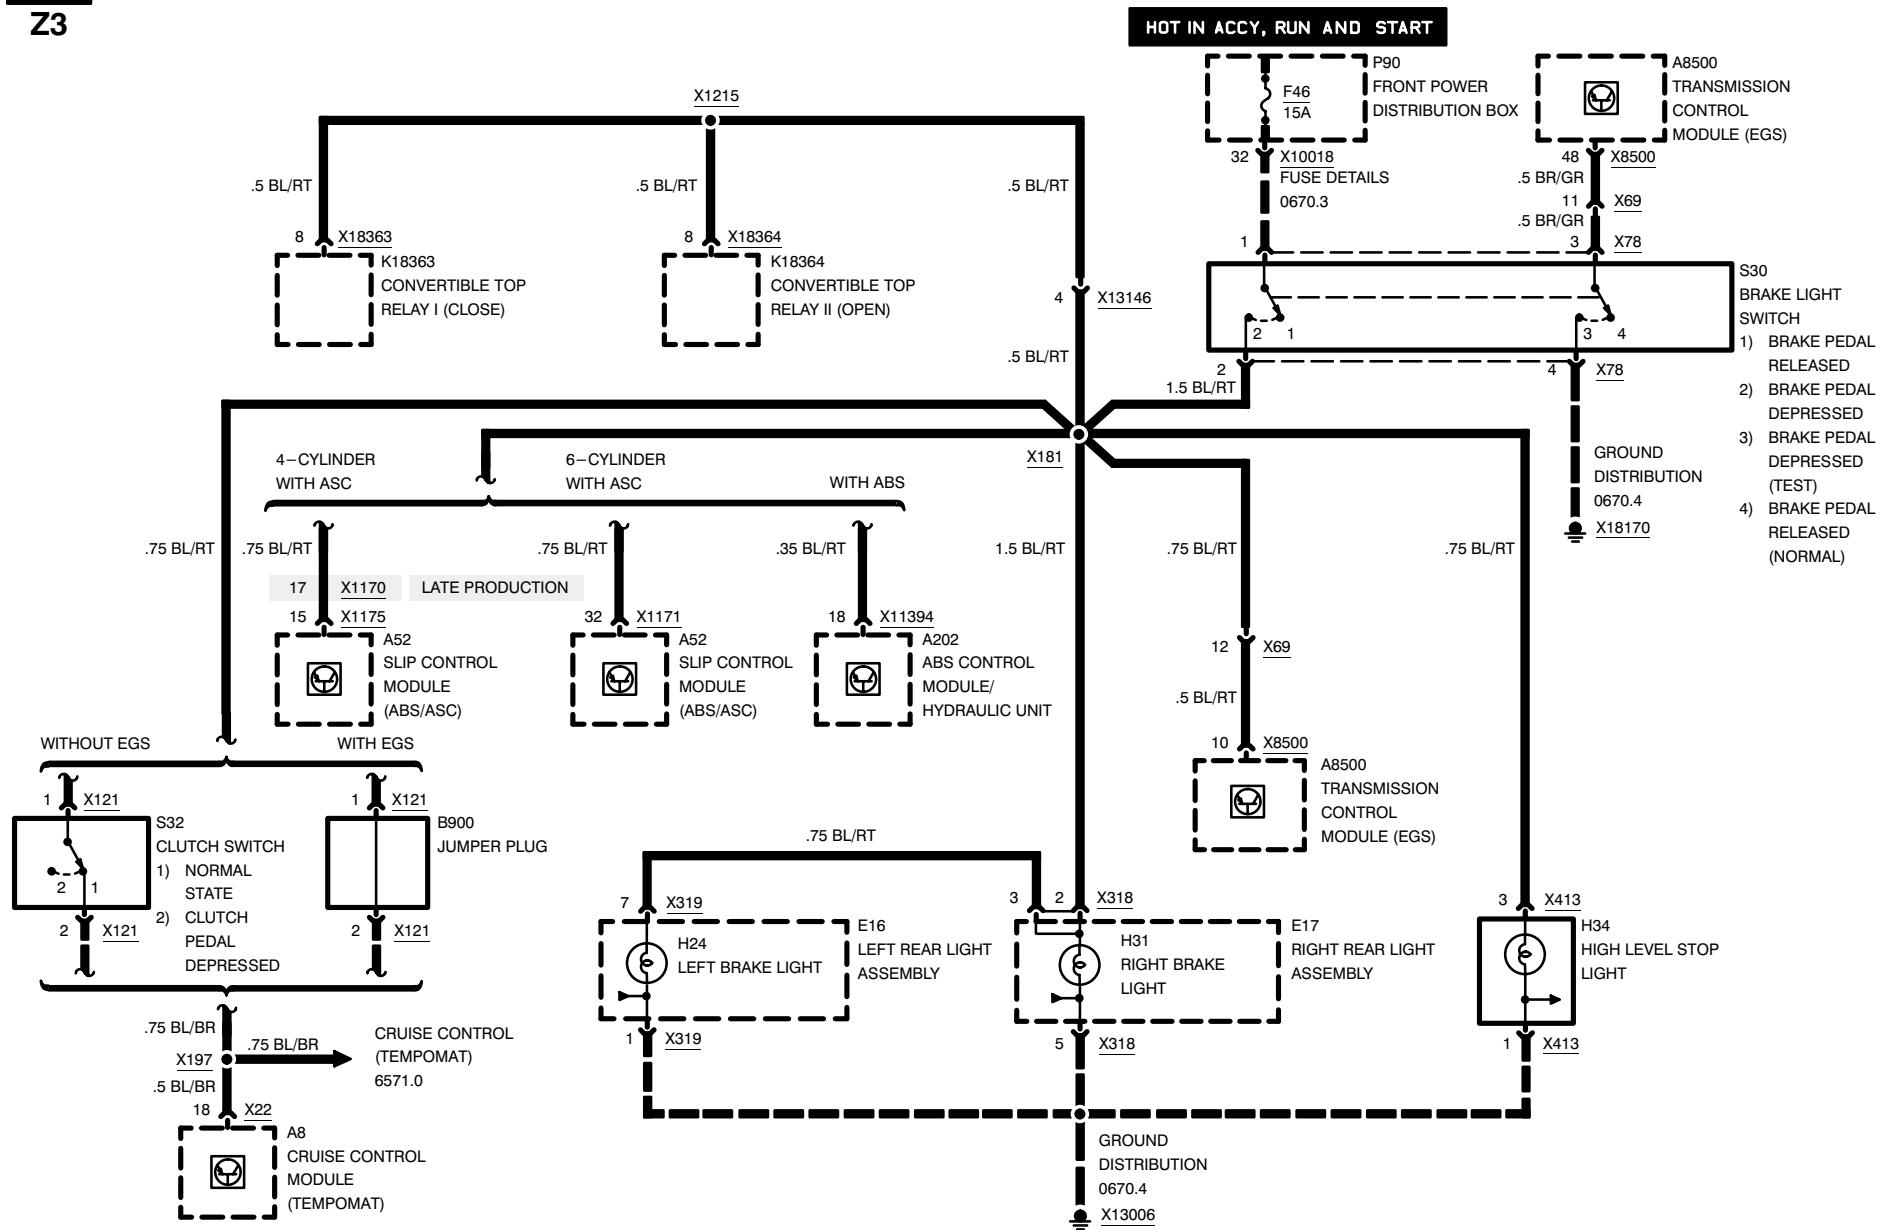

## INTERIOR LIGHTS

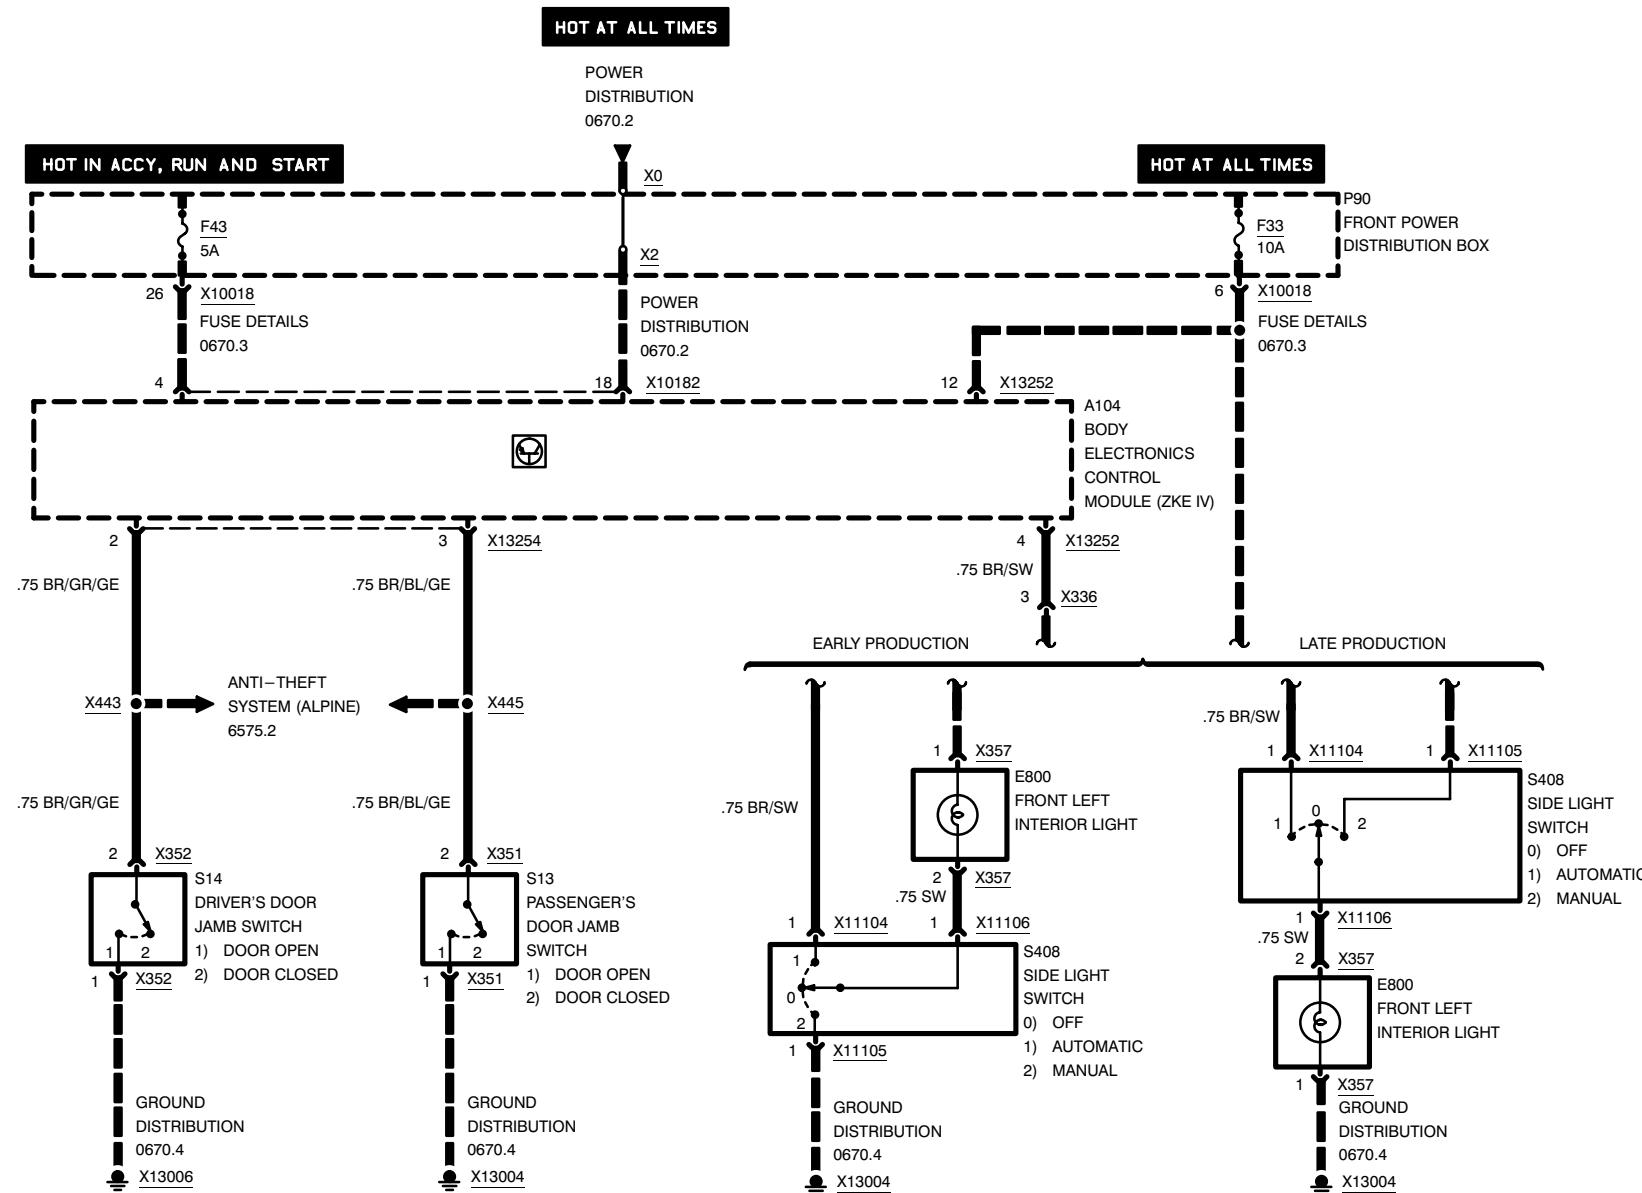

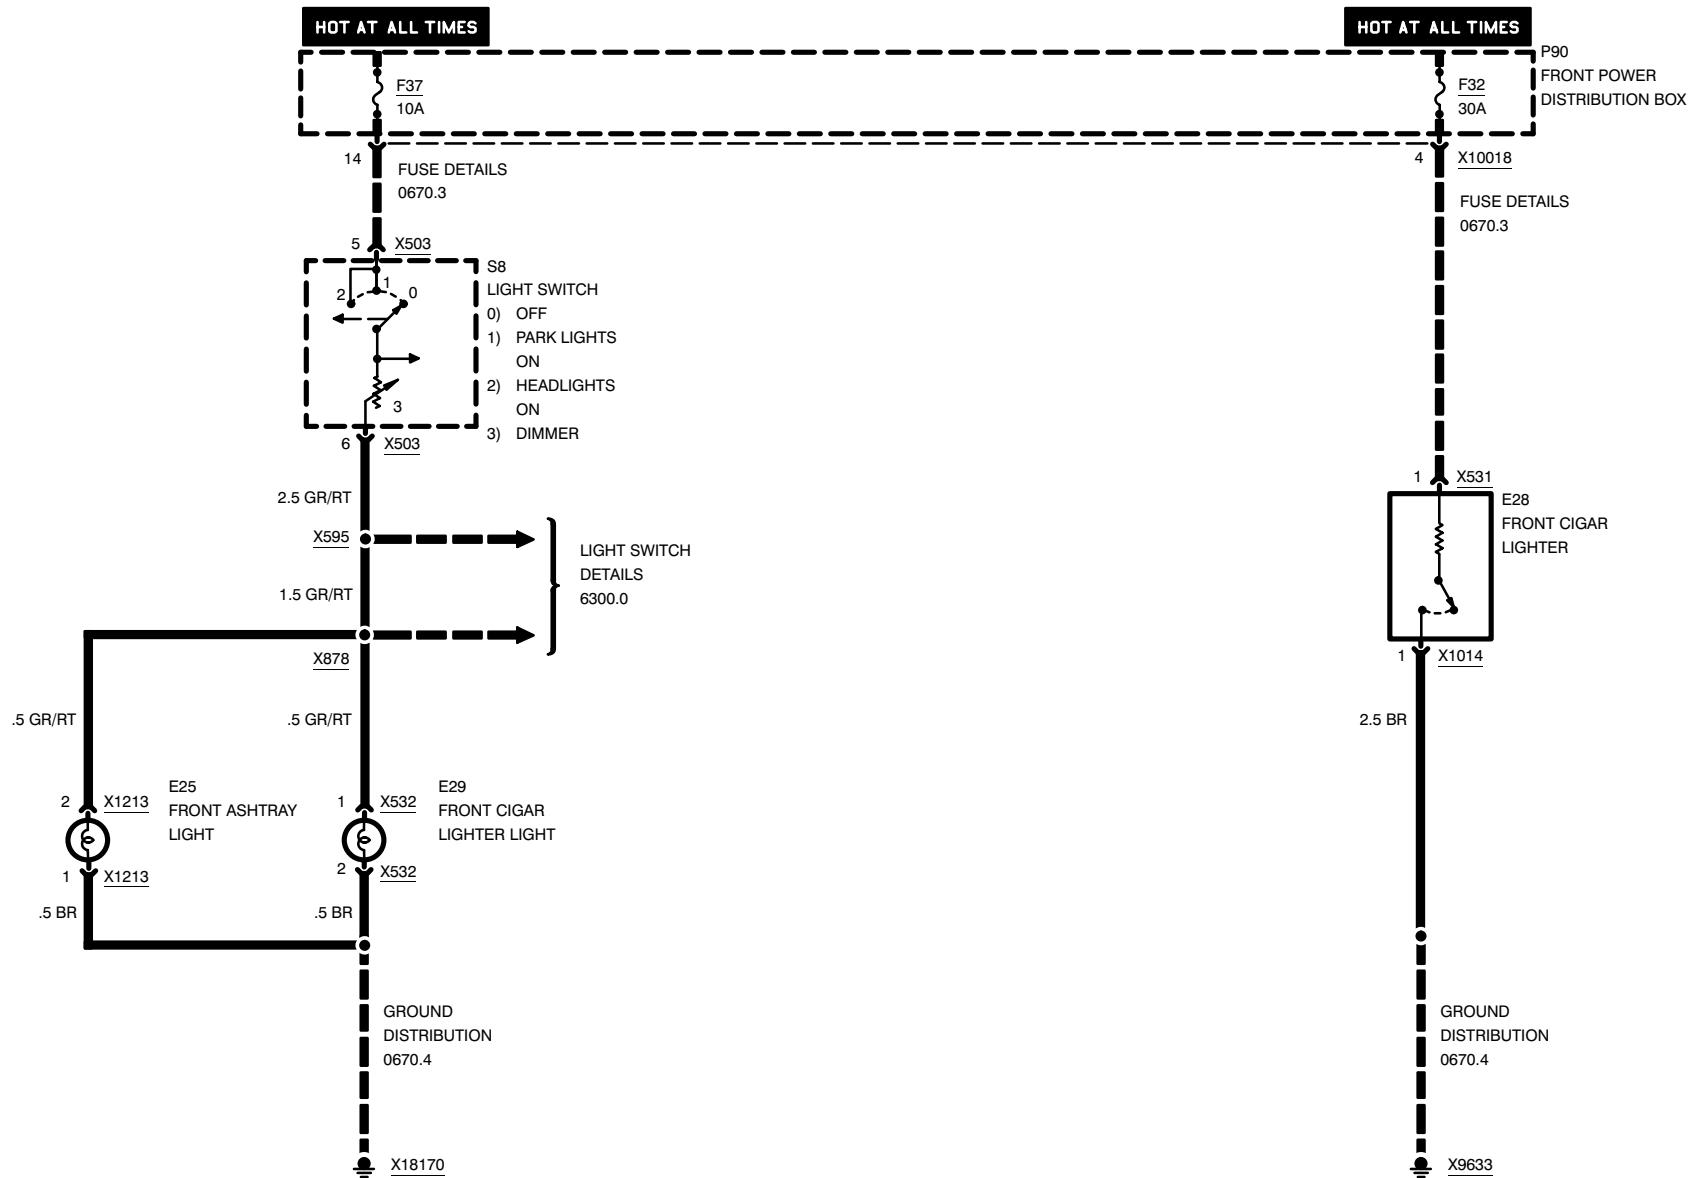


## CRASH CONTROL MODULE

Z3

03/98

6350.0-00


1997

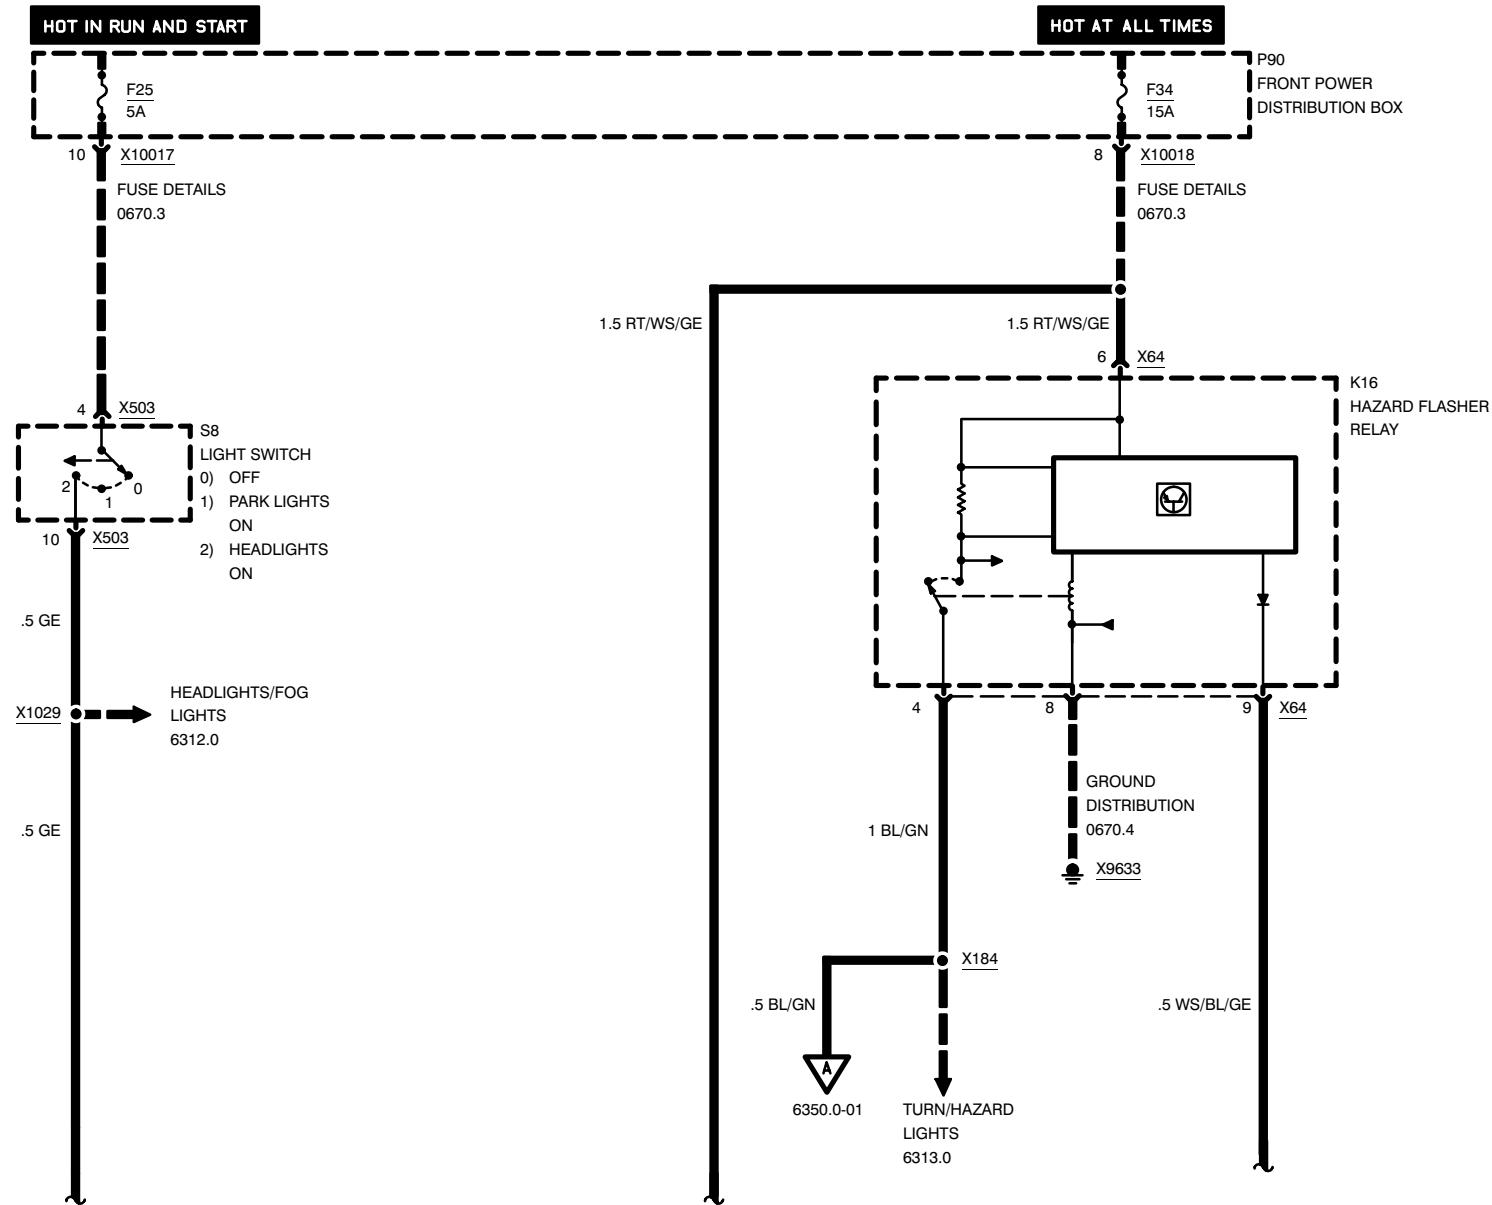

03/98

6350.0-01

1997

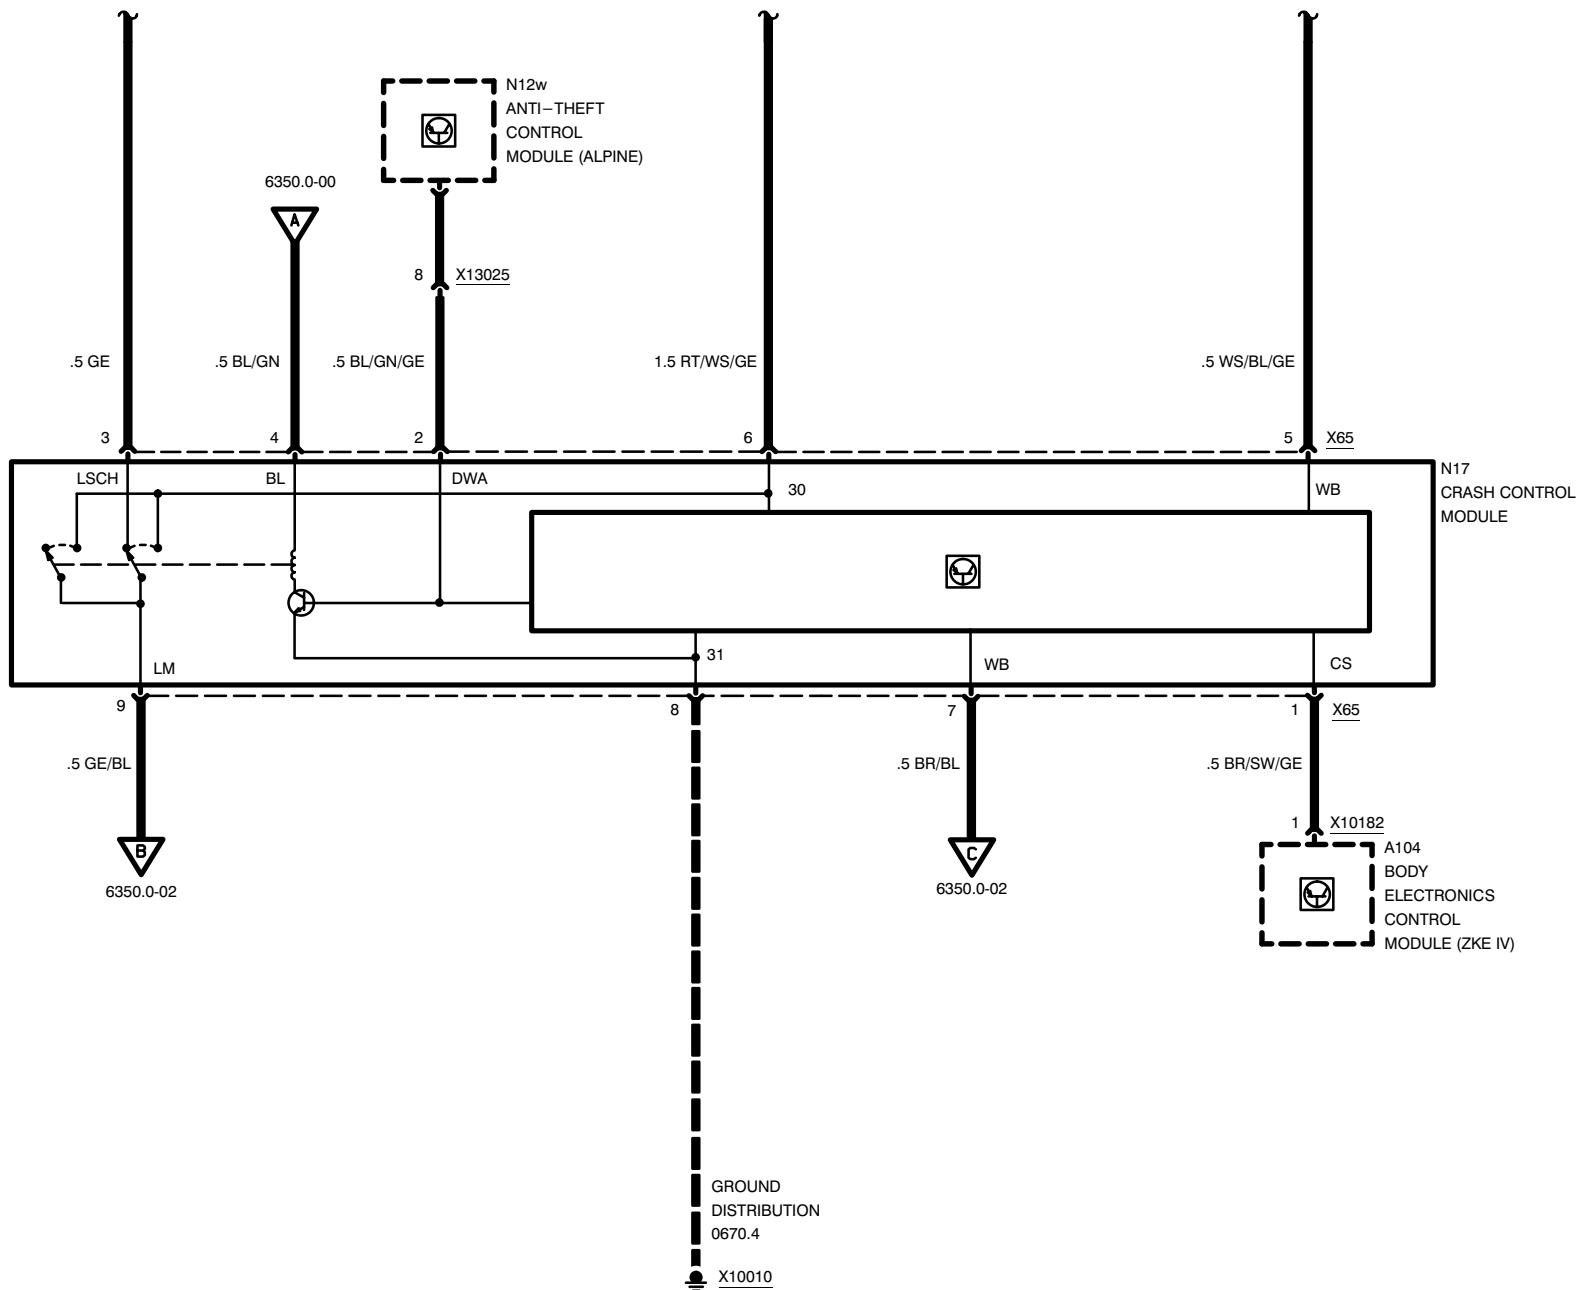


## CRASH CONTROL MODULE

03/98

6350.0-02

1997

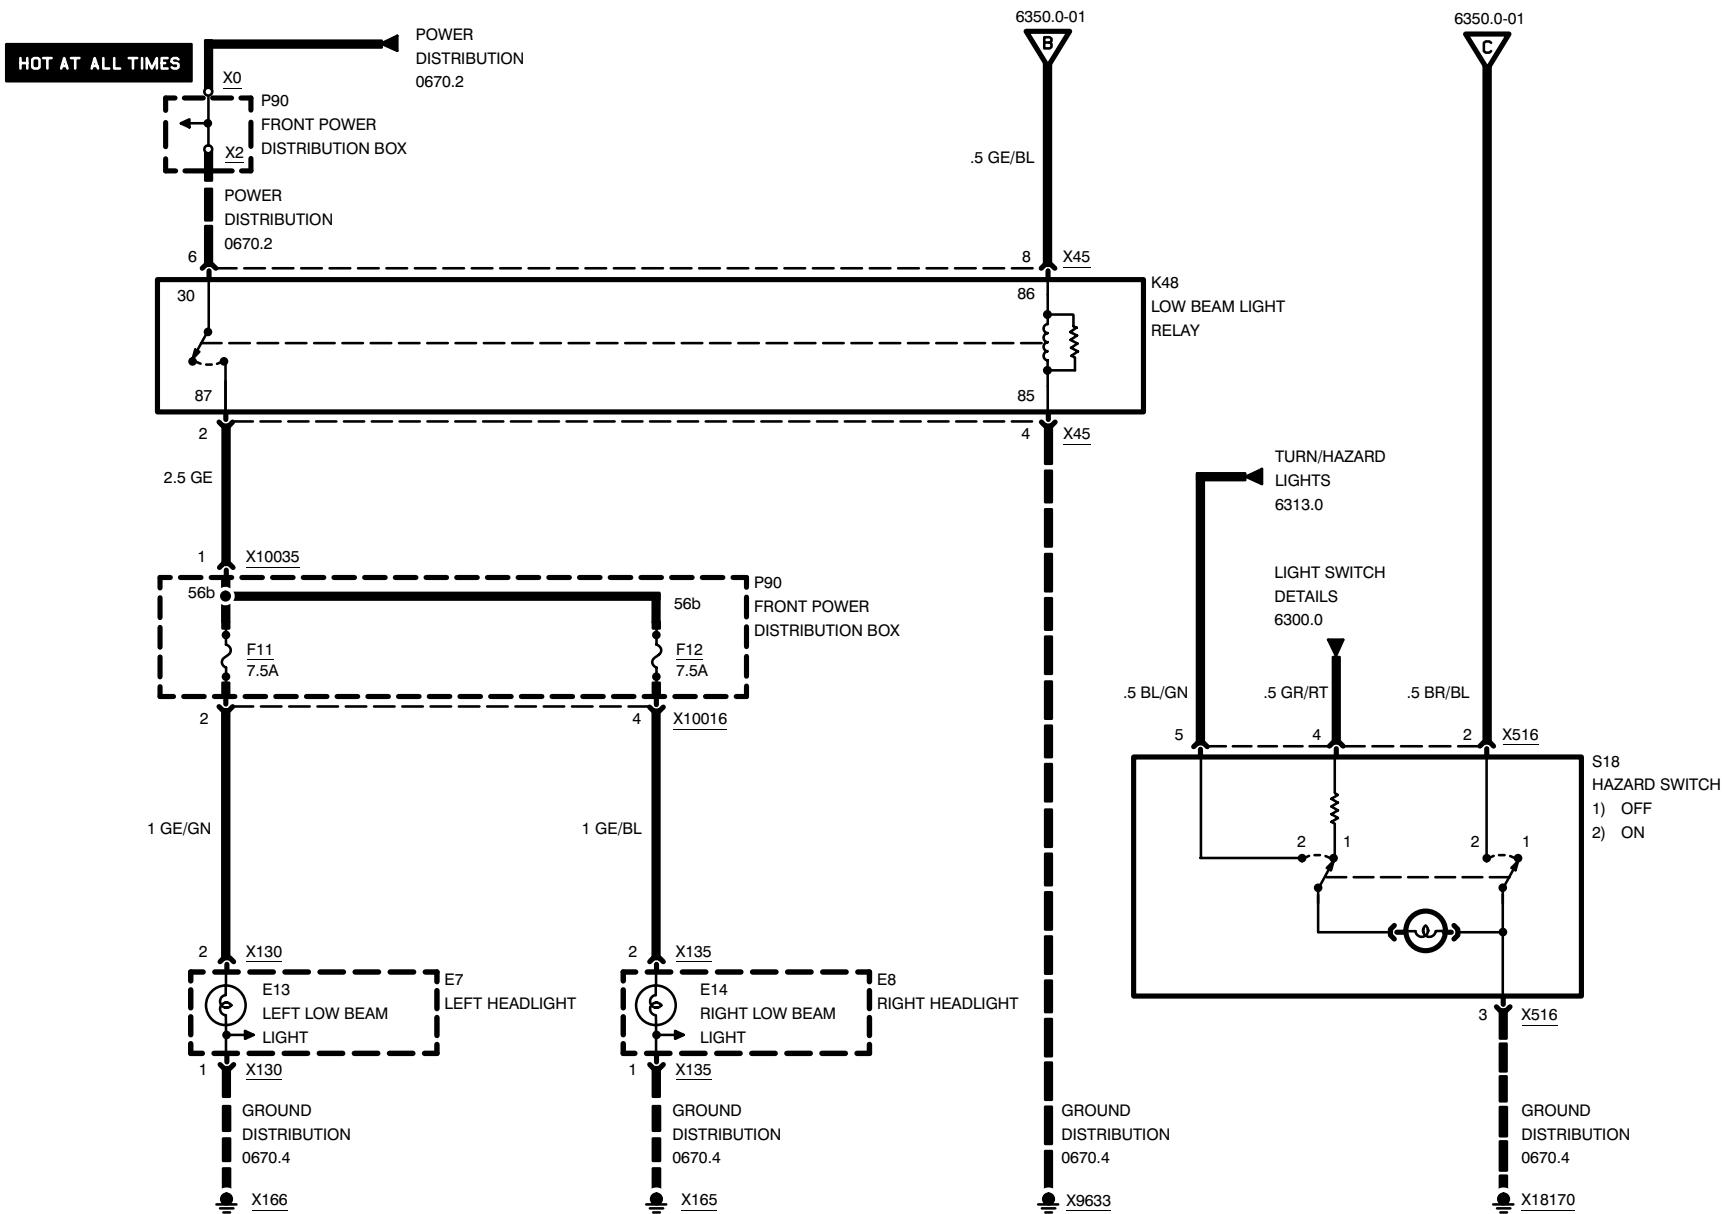


## REAR WINDOW DEFOGGER


03/98

6424.0-00


1997

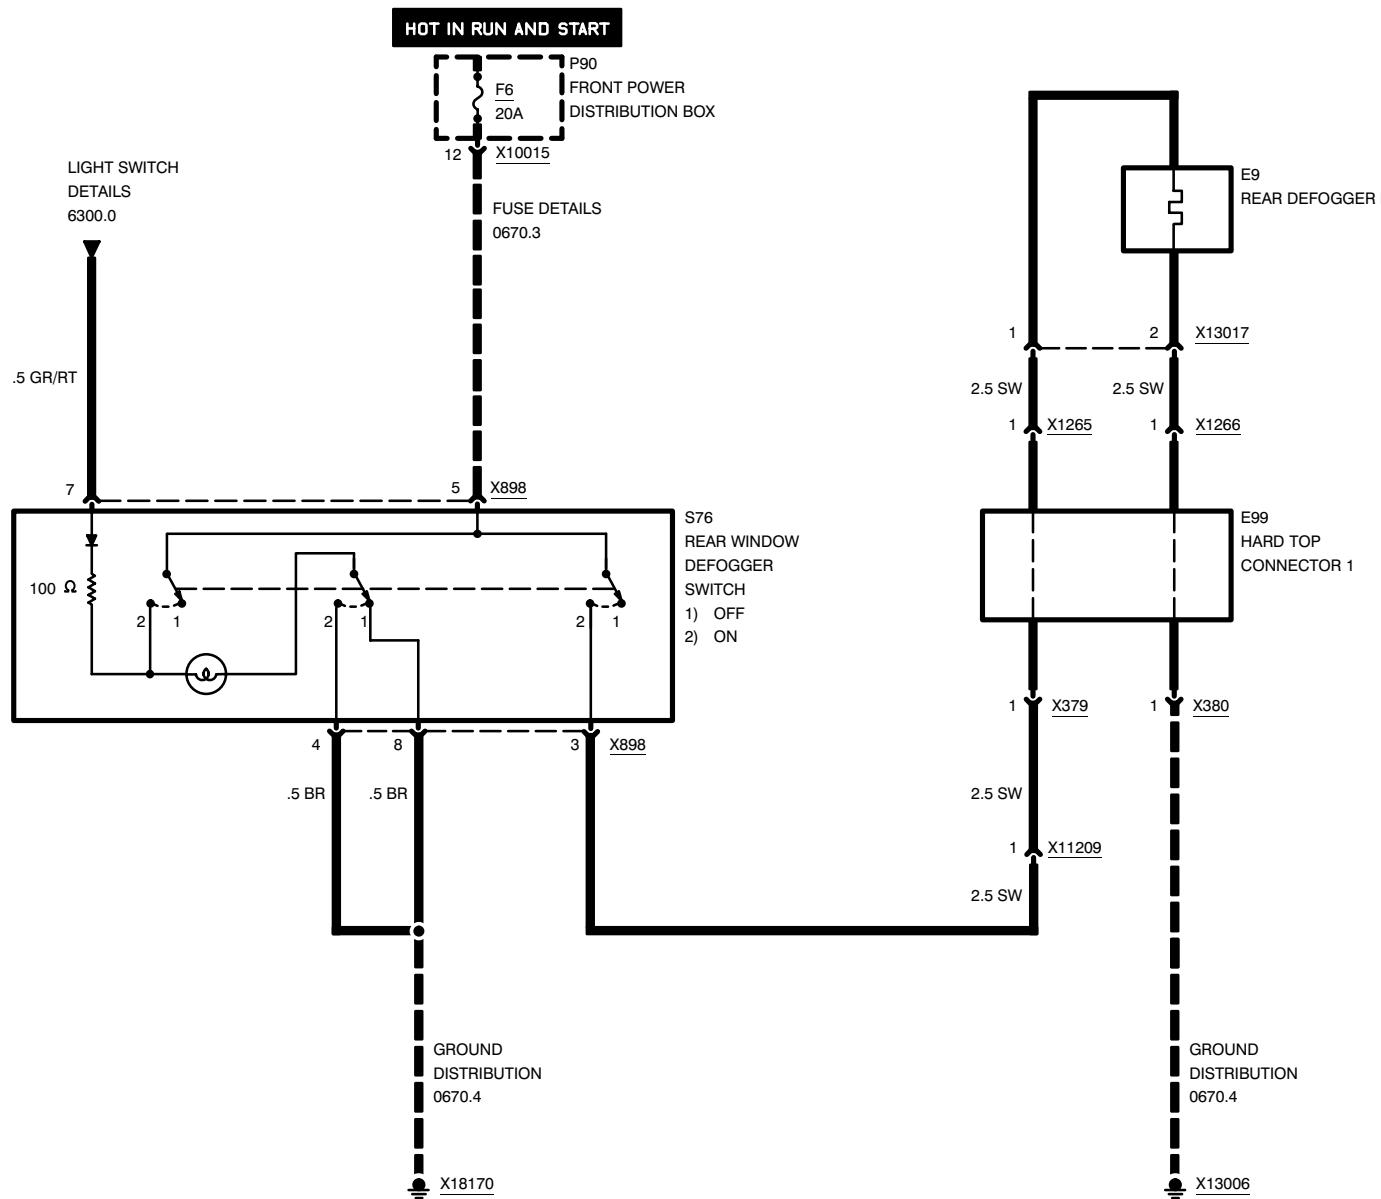


03/98 ————— 6450.6 ————— 1997

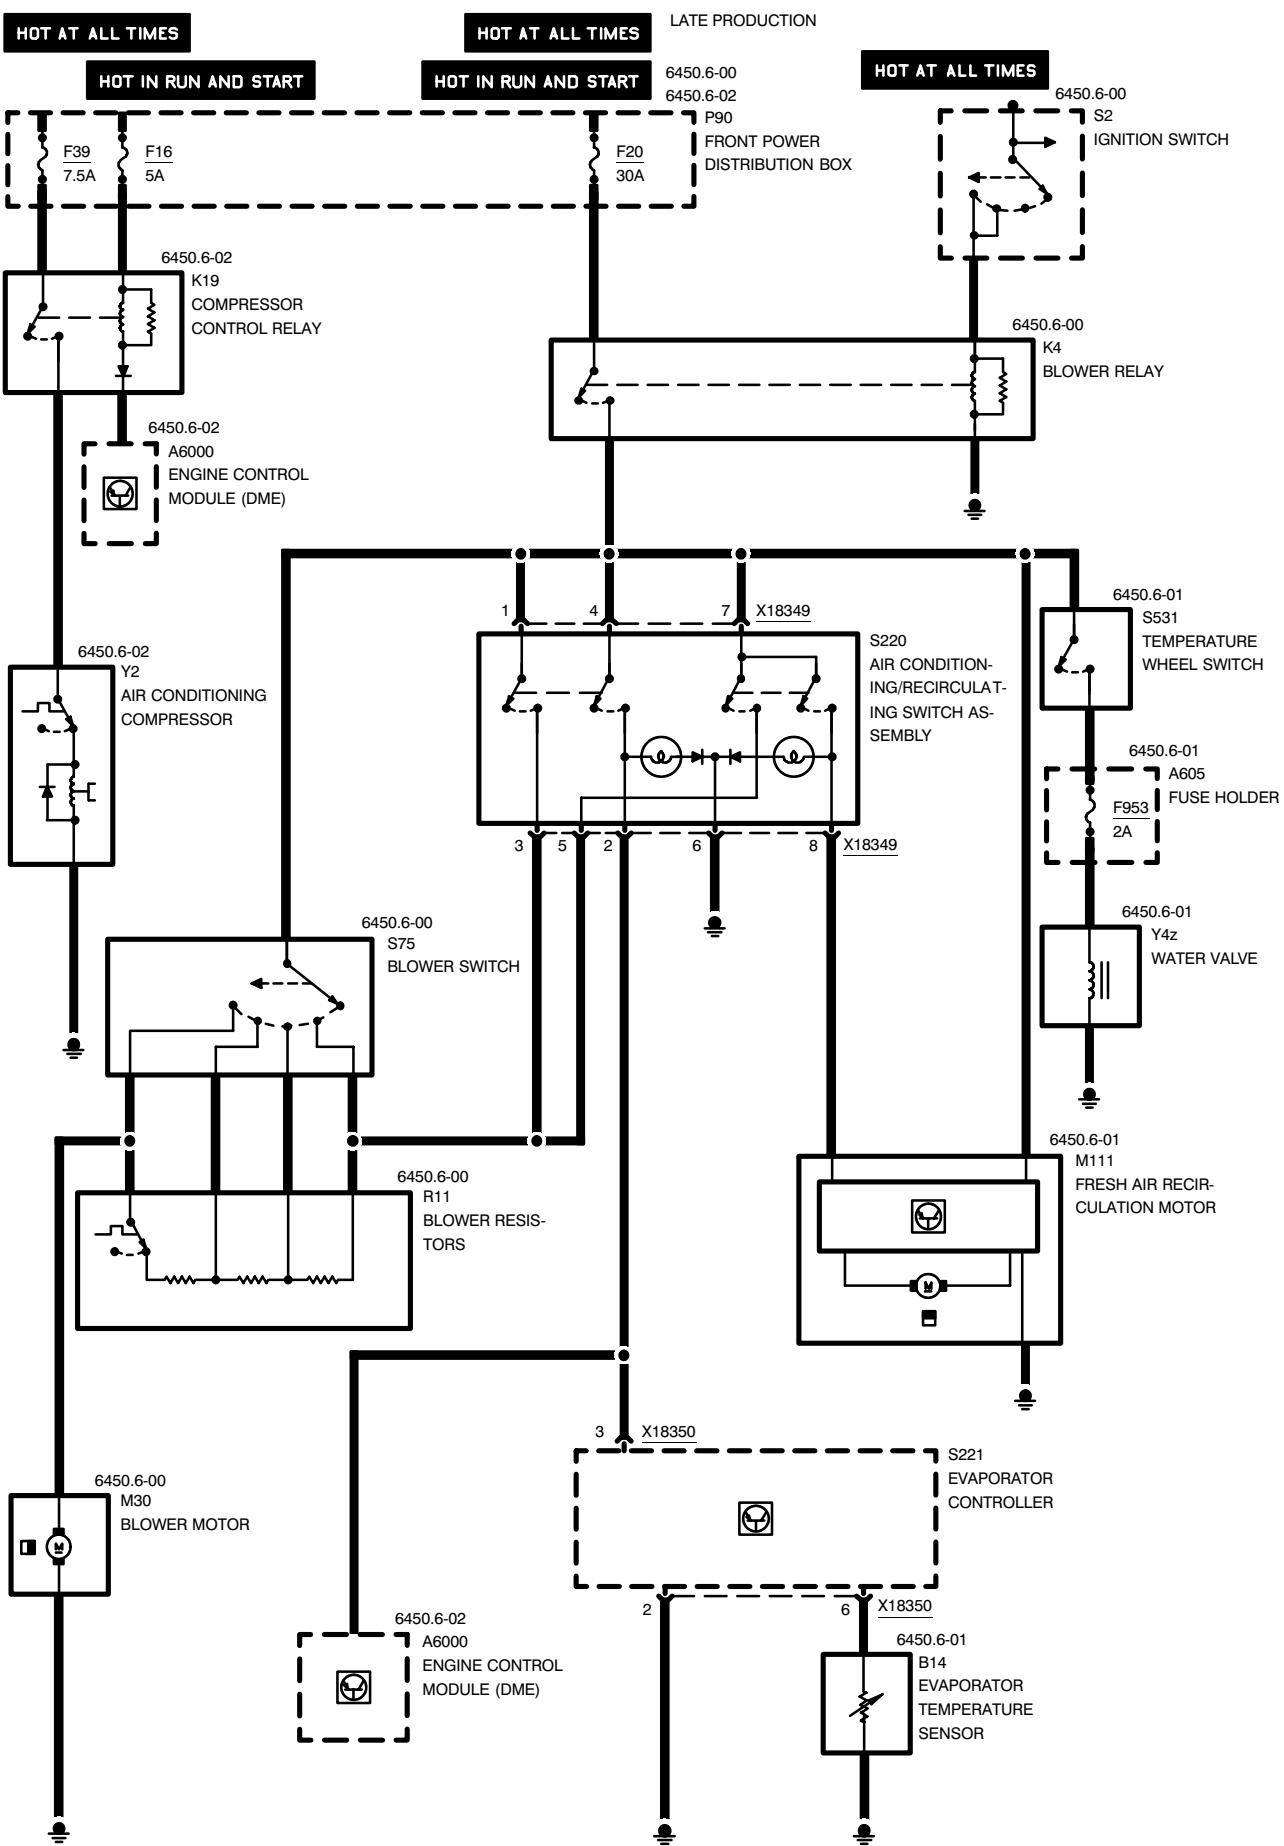

03/98 ————— 6450.6 ————— 1997

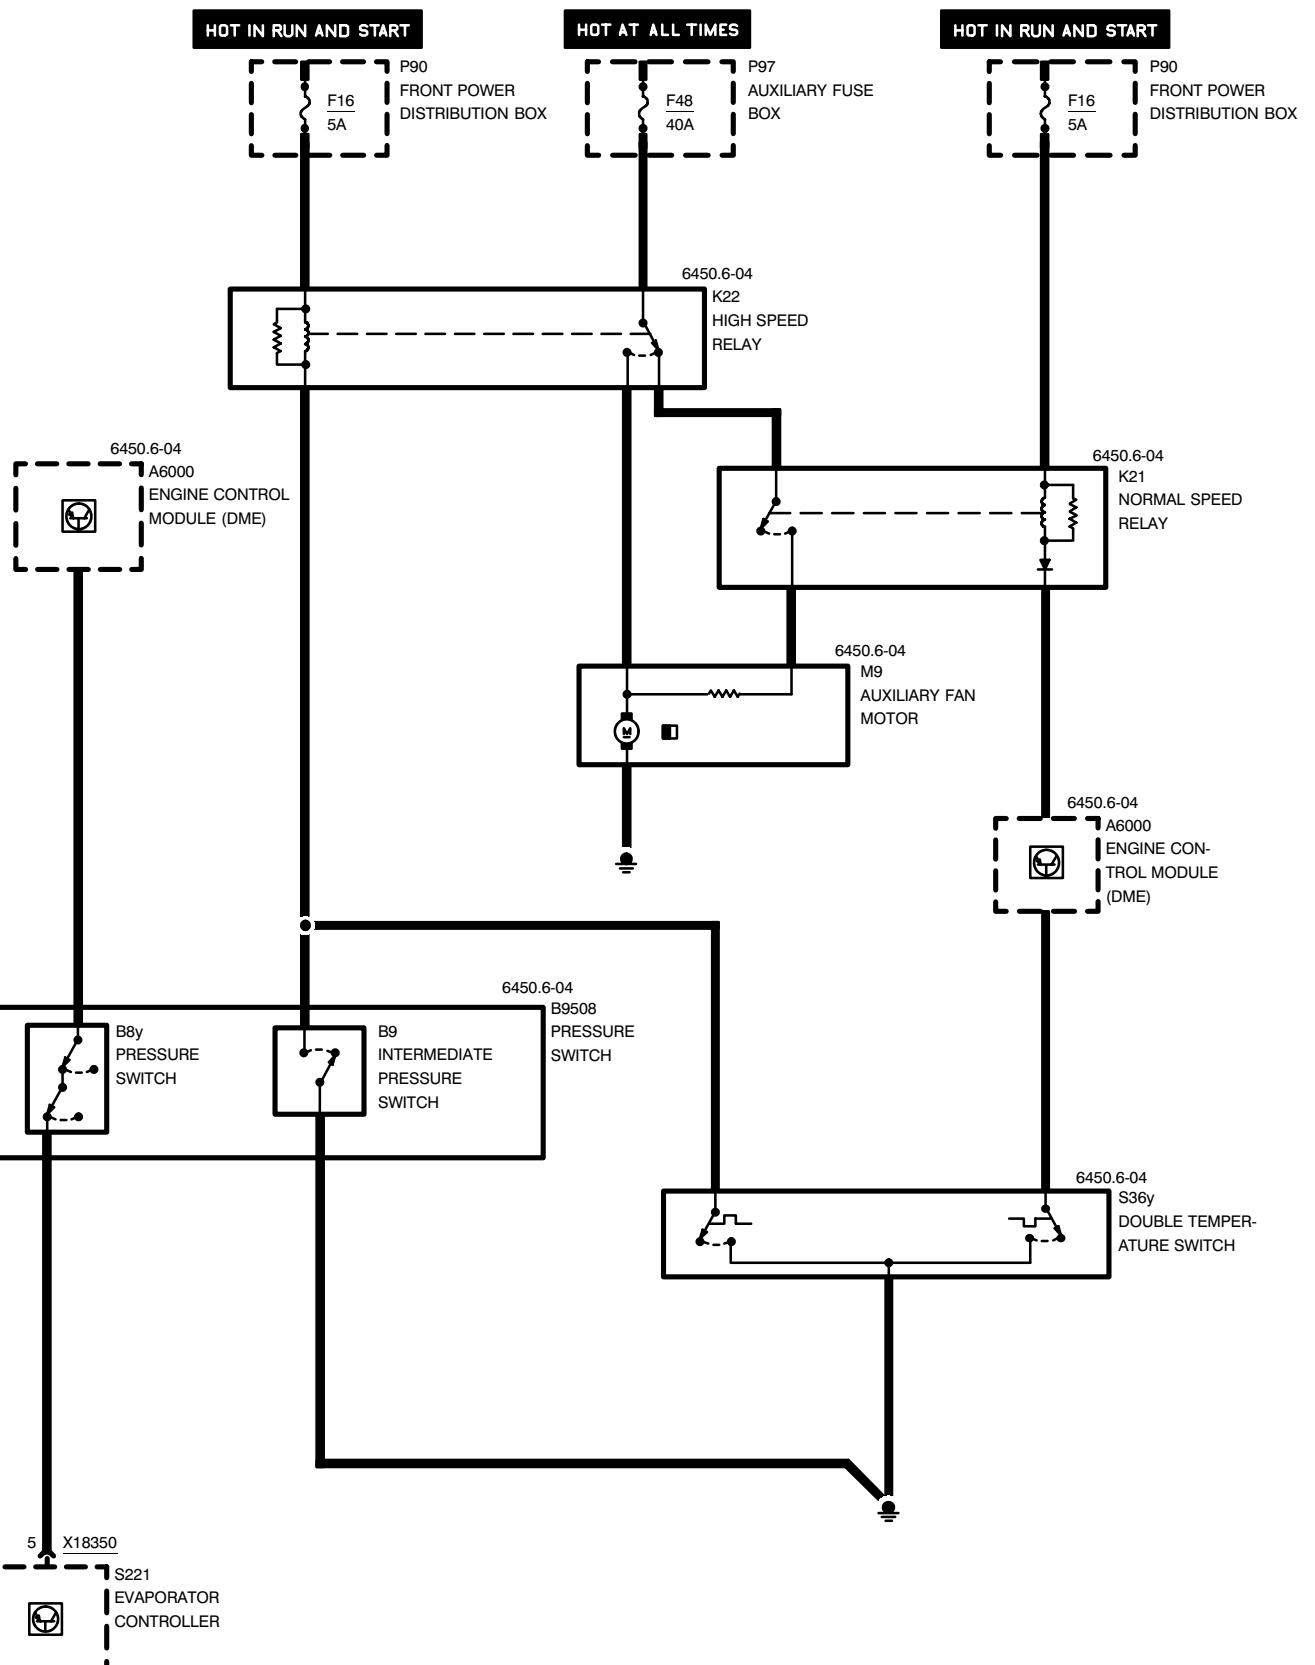**AUXILIARY FAN – 4-CYLINDER**

03/98 ————— 6450.6 ————— .0

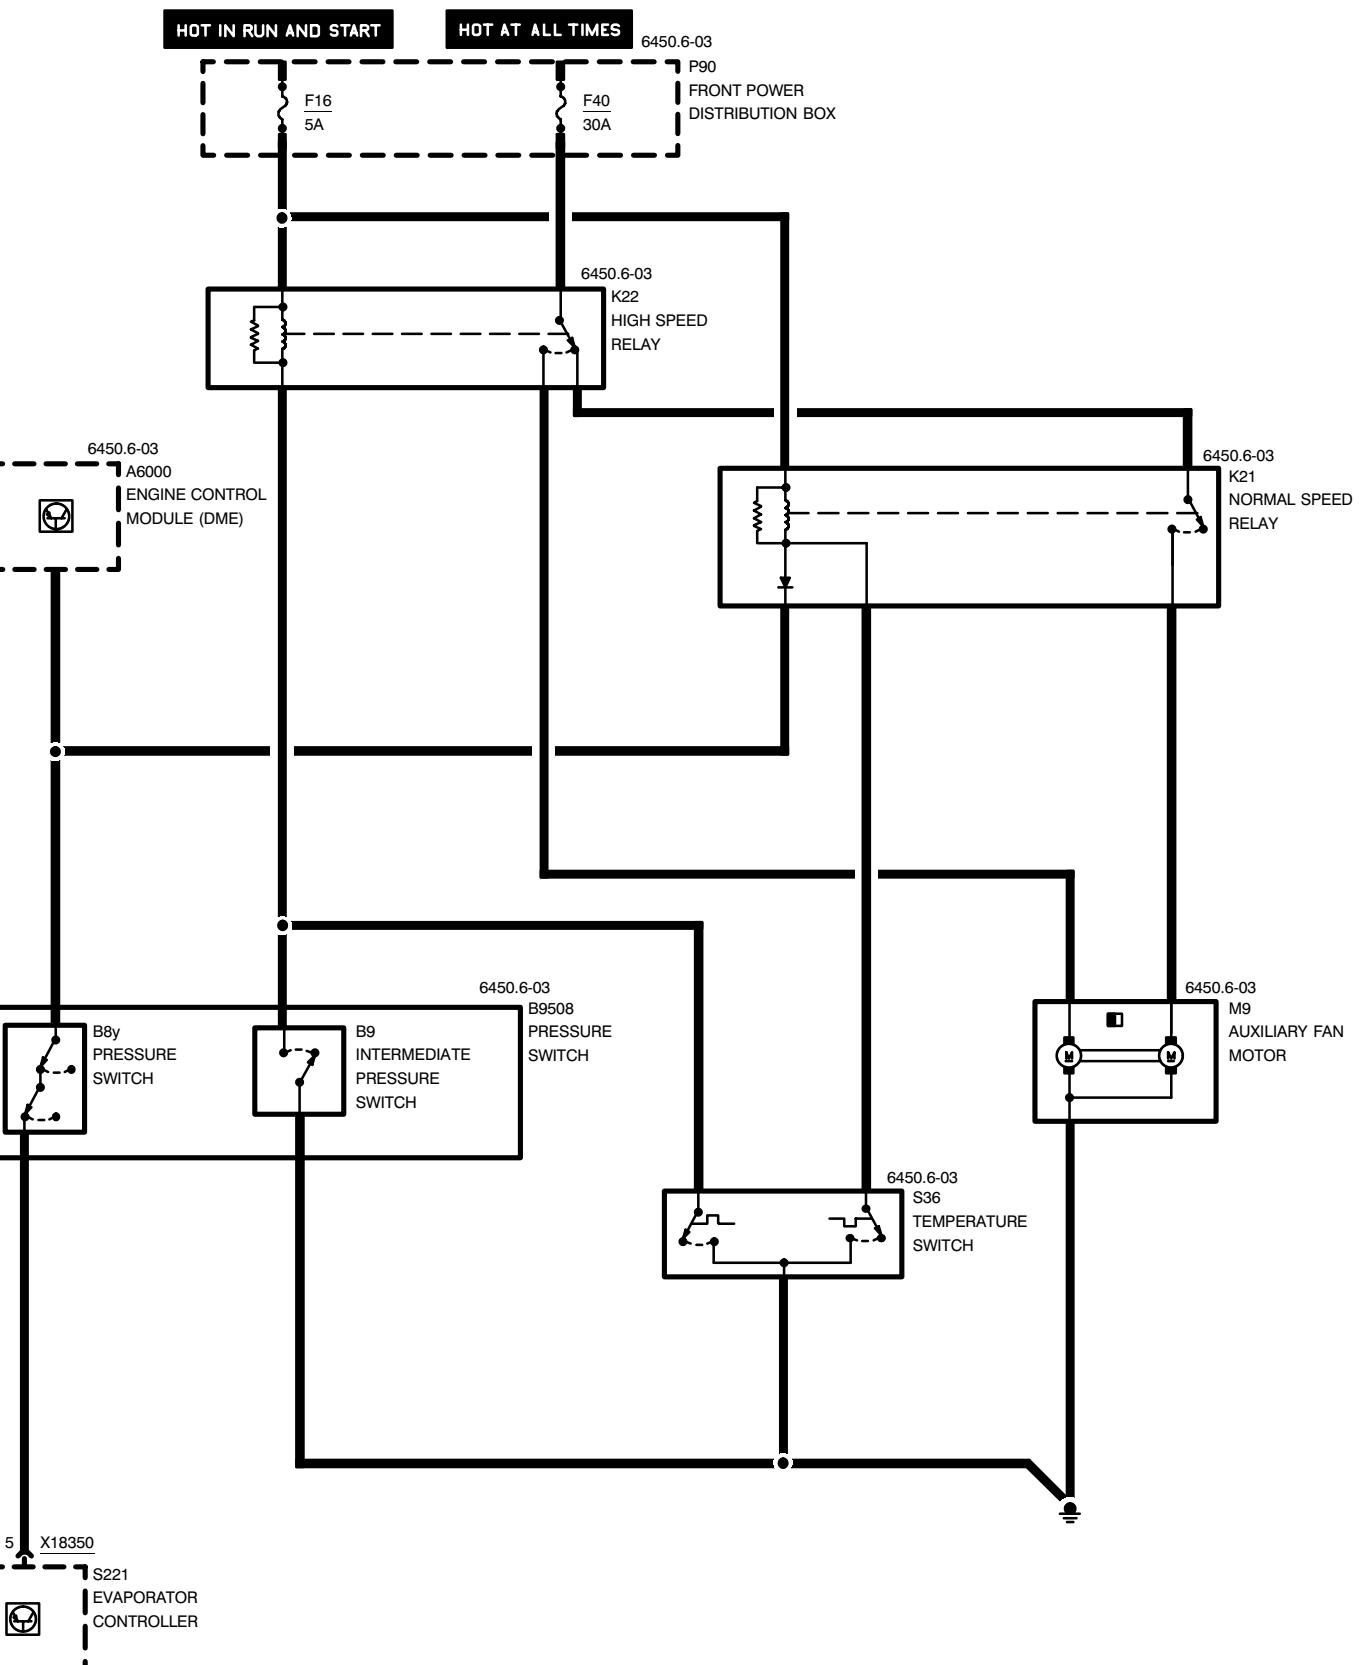**AUXILIARY FAN – 6-CYLINDER**

1997




03/98

6450.6-a

1997

Z3

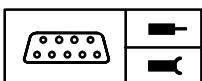

## Pin Assignments

X18349 8 Pins, black

X18350 6 Pins, black

### X18349

Pin	Type	Description/Function	Connection
1	E	Terminal 15	Heating blower relay
2	A	Activate compressor clutch	Engine control module (DME)
3	A	Blower level 1 (air conditioning)	Blower resistor
4	E	Terminal 15	Heating blower relay
5	A	Blower level 1 (air recirculation)	Blower resistor
6	M	Ground for function lights	Ground point
7	E	Terminal 15	Heating blower relay
8	A	Activate fresh air recirculation	Fresh air recirculation motor


### X18350

Pin	Type	Description/Function	Connection
1		Not used	
2	M	Ground	Ground point
3	E	Climate-ON-signal	Air conditioning/recirculated air operating unit
4		Not used	
5	A	Activate A/C compressor	Pressure switch
6	E	Evaporator temperature	Evaporator temperature sensor


E = Input, A = Output, M = Ground

# INTEGRATED HEATING – AND CLIMATE CONTROL

## POWER, AIR FLOW CONTROL

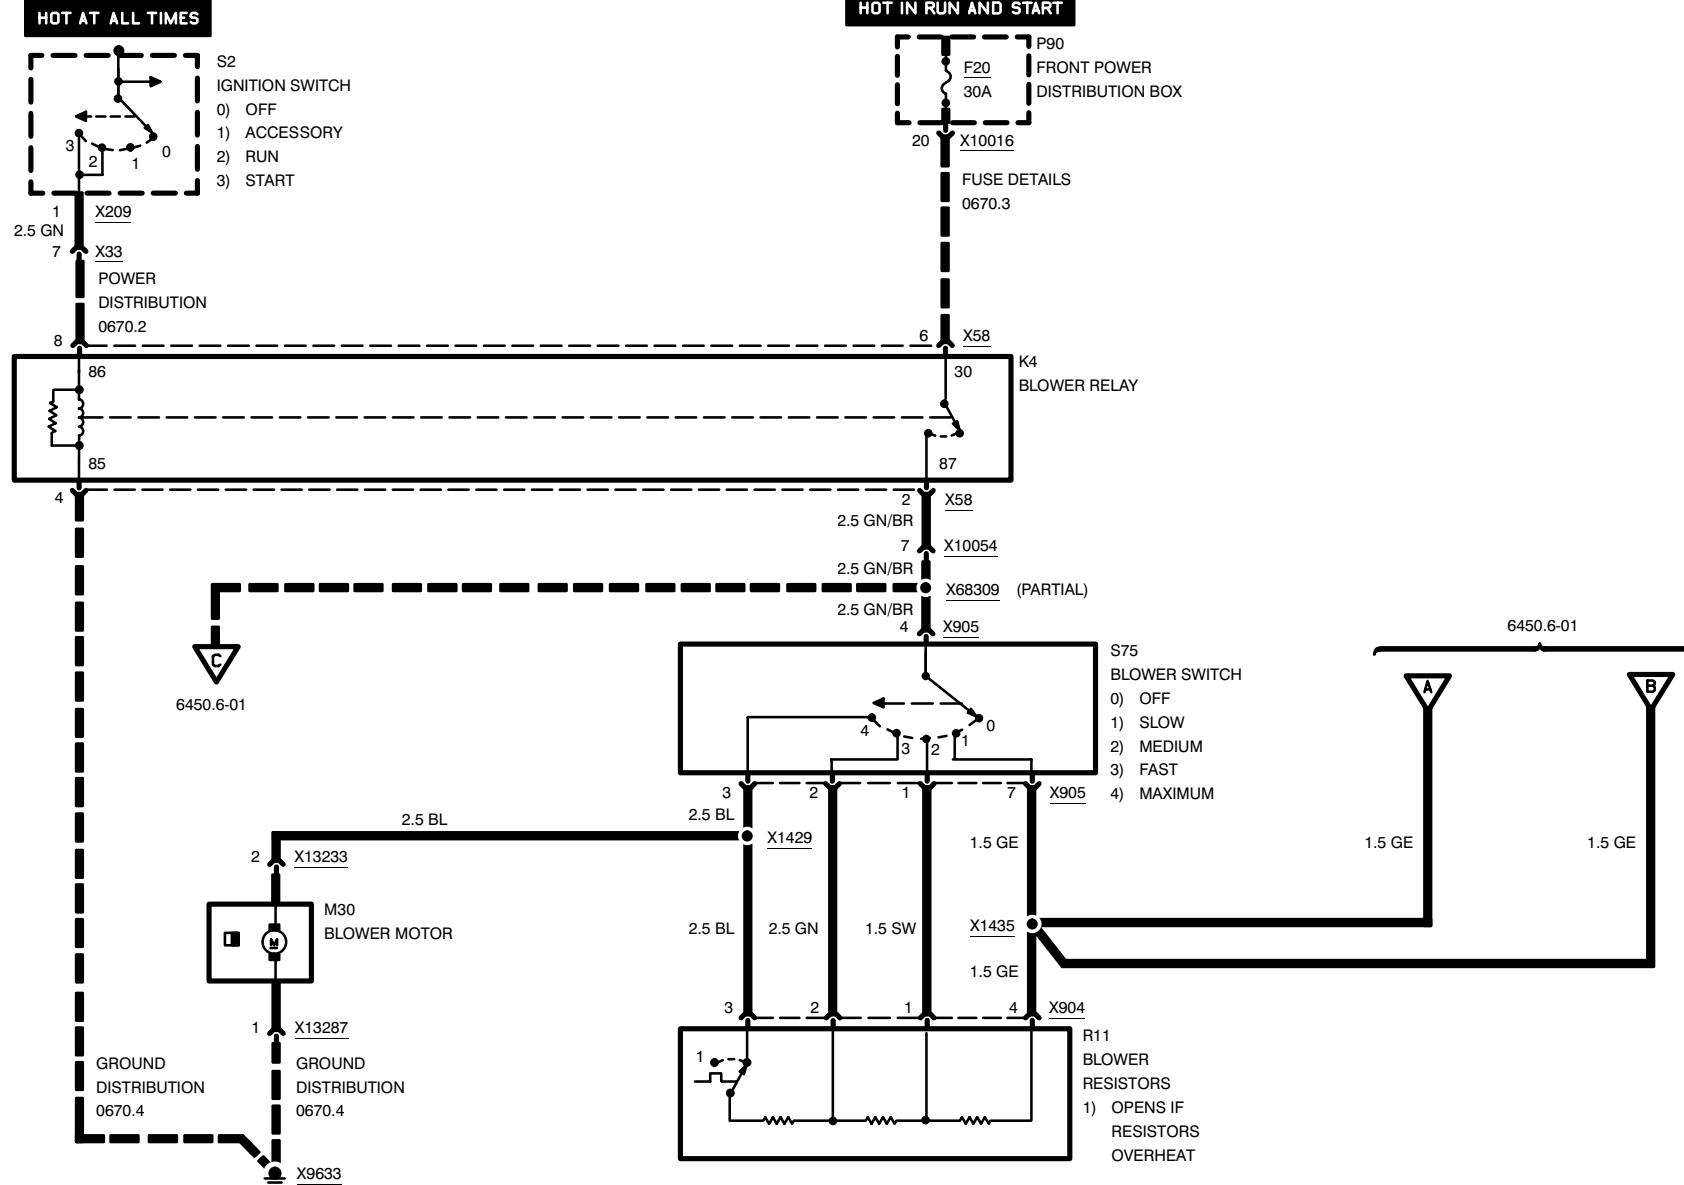

## INTEGRATED HEATING – AND CLIMATE CONTROL

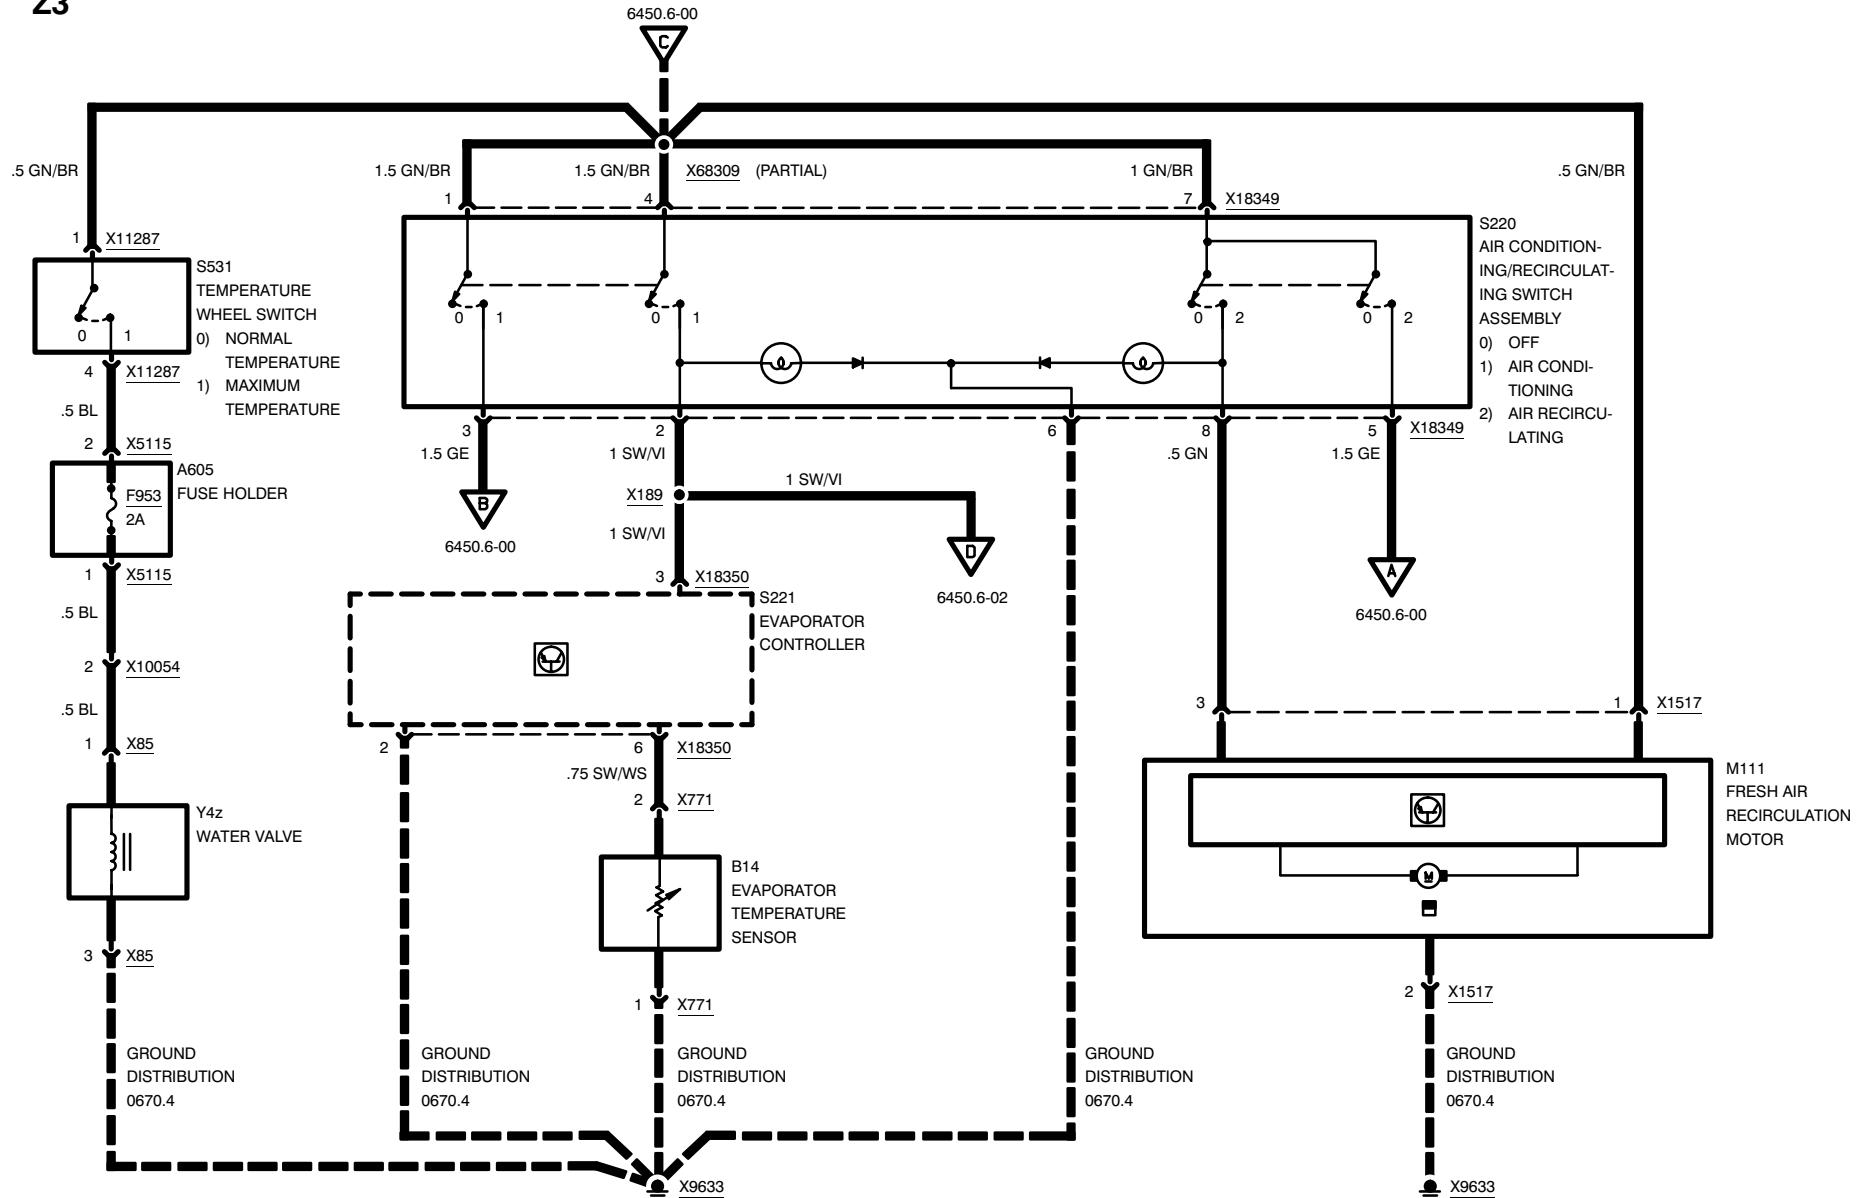


# INTEGRATED HEATING – AND CLIMATE CONTROL

## COMPRESSOR CONTROLS

03/98

6450.6-02

1997

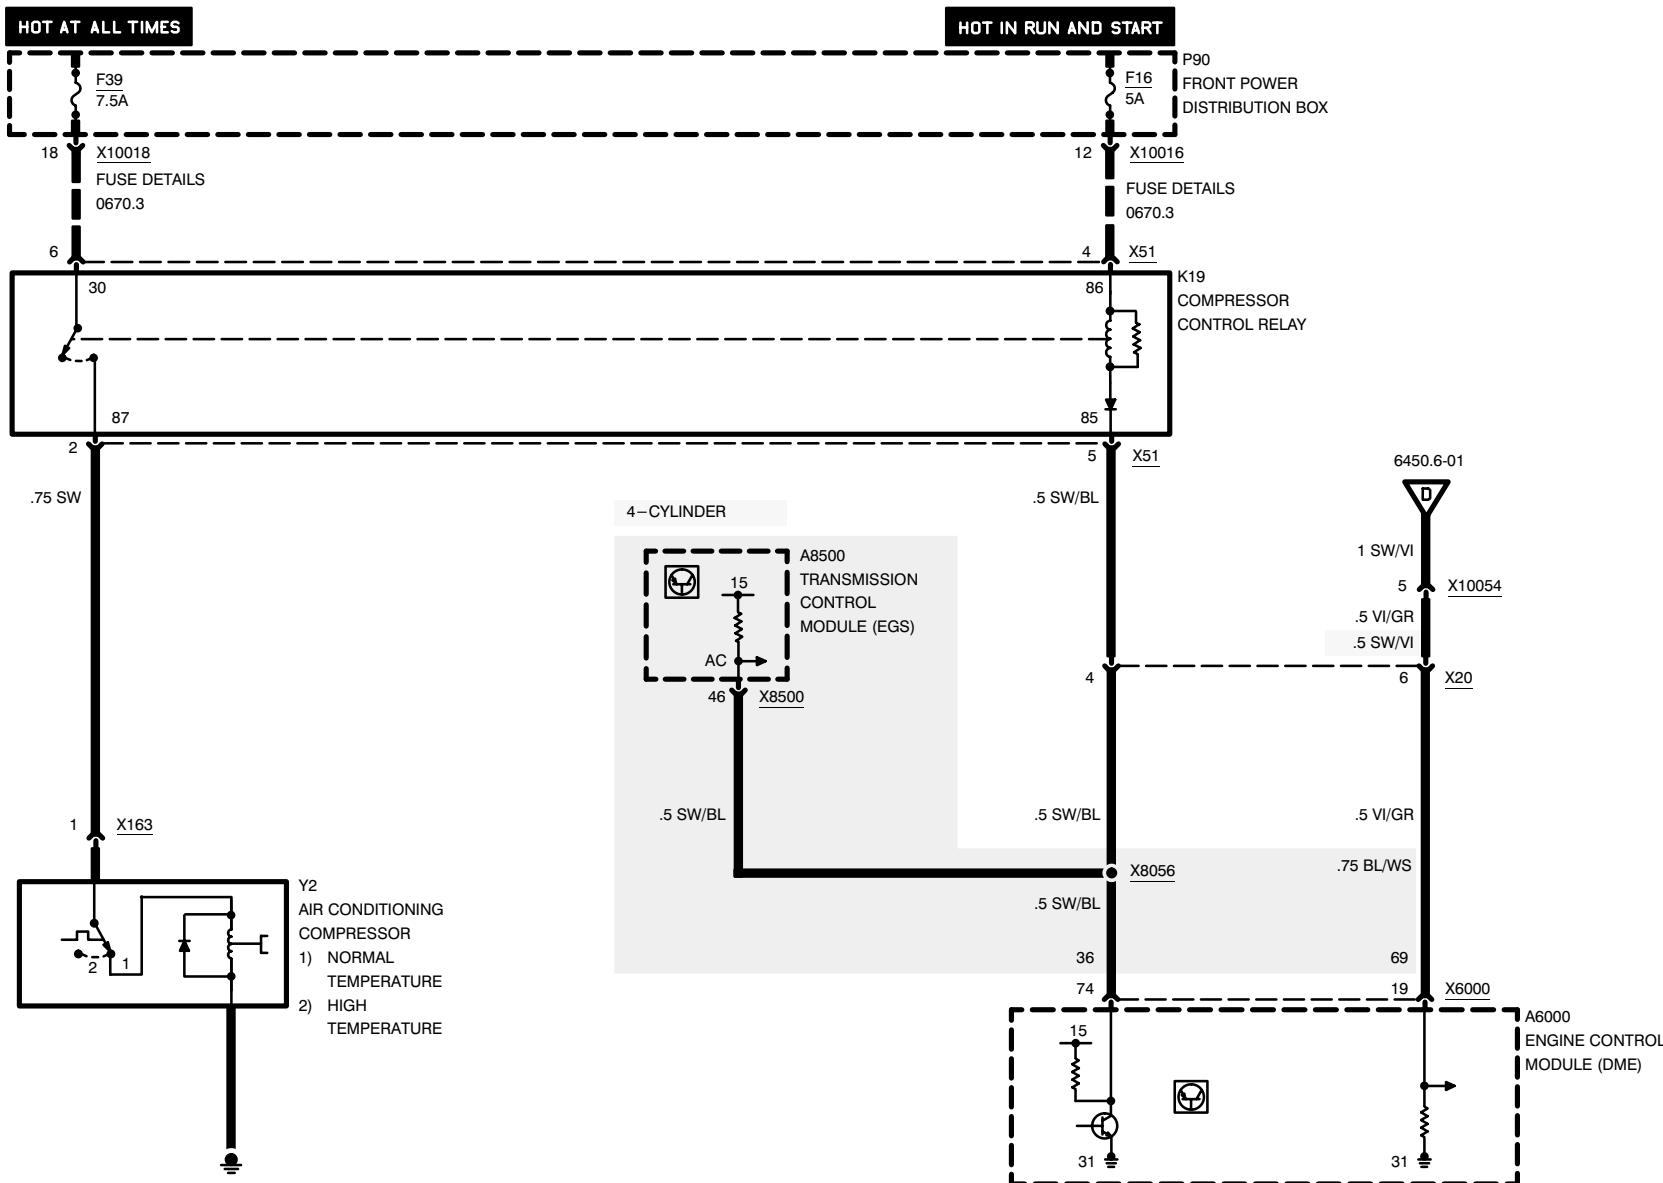


## INTEGRATED HEATING – AND CLIMATE CONTROL

6-CYLINDER

Z3

## AUXILIARY FAN

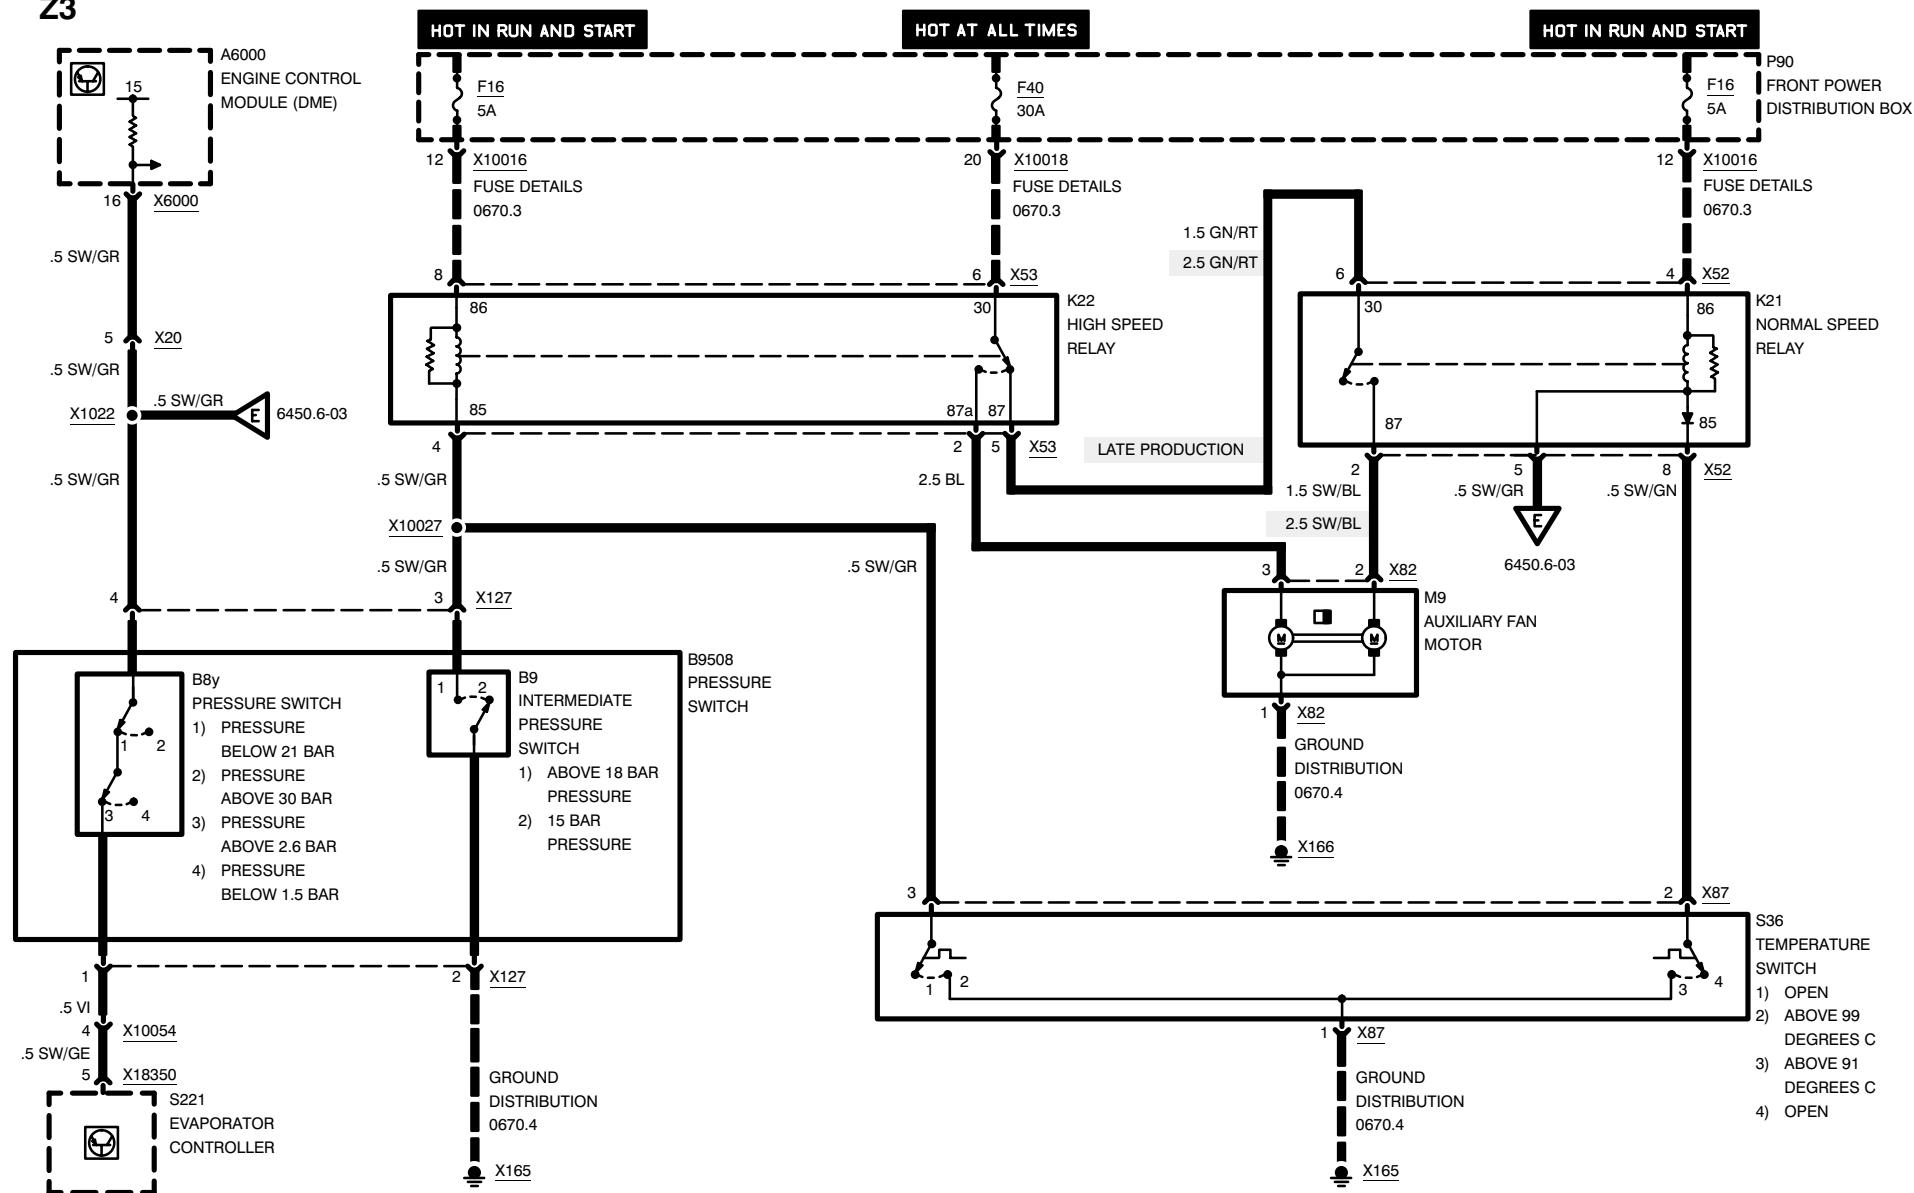

03/98

6450.6-03

1997



# INTEGRATED HEATING – AND CLIMATE CONTROL


4-CYLINDER

## AUXILIARY FAN


Z3


86/98

6450.6-04

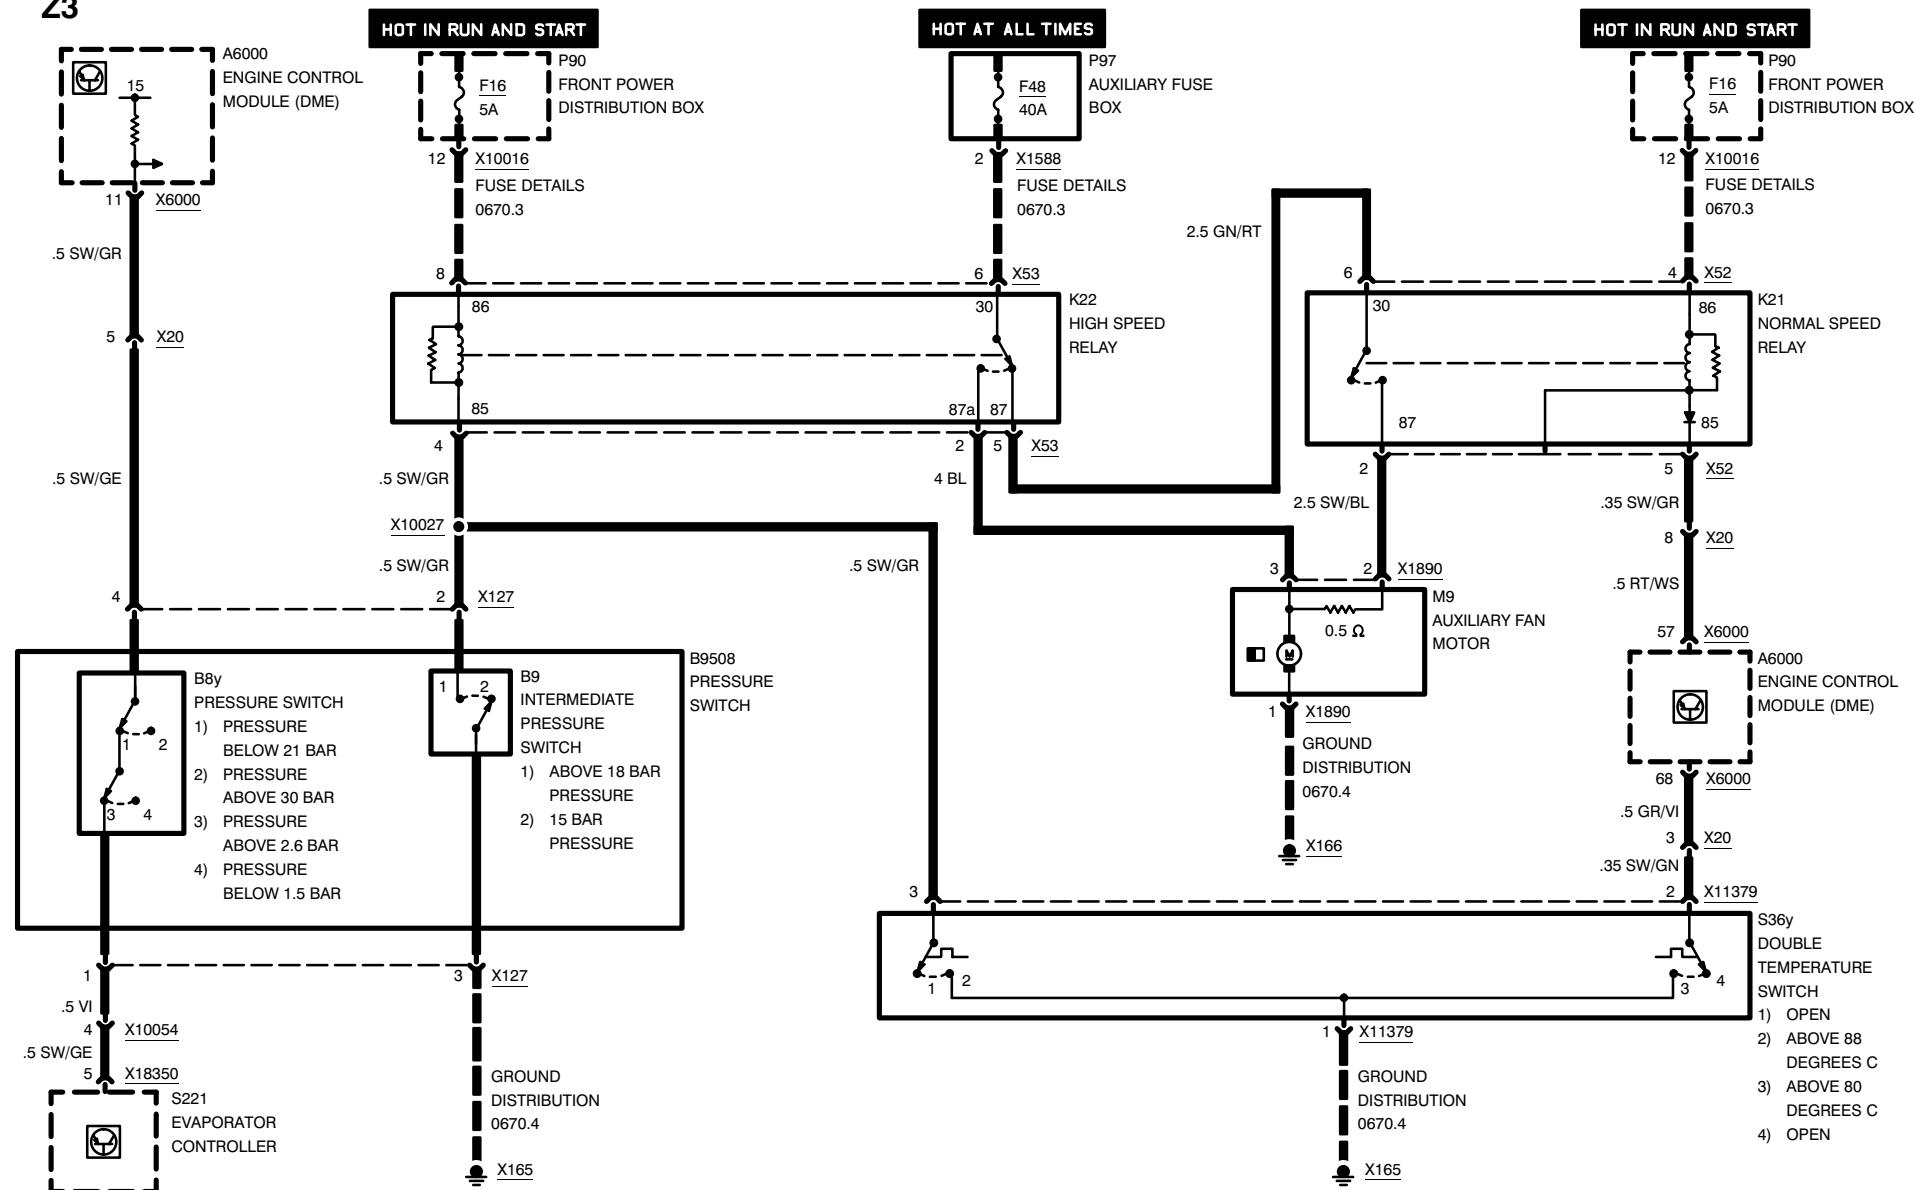

1997

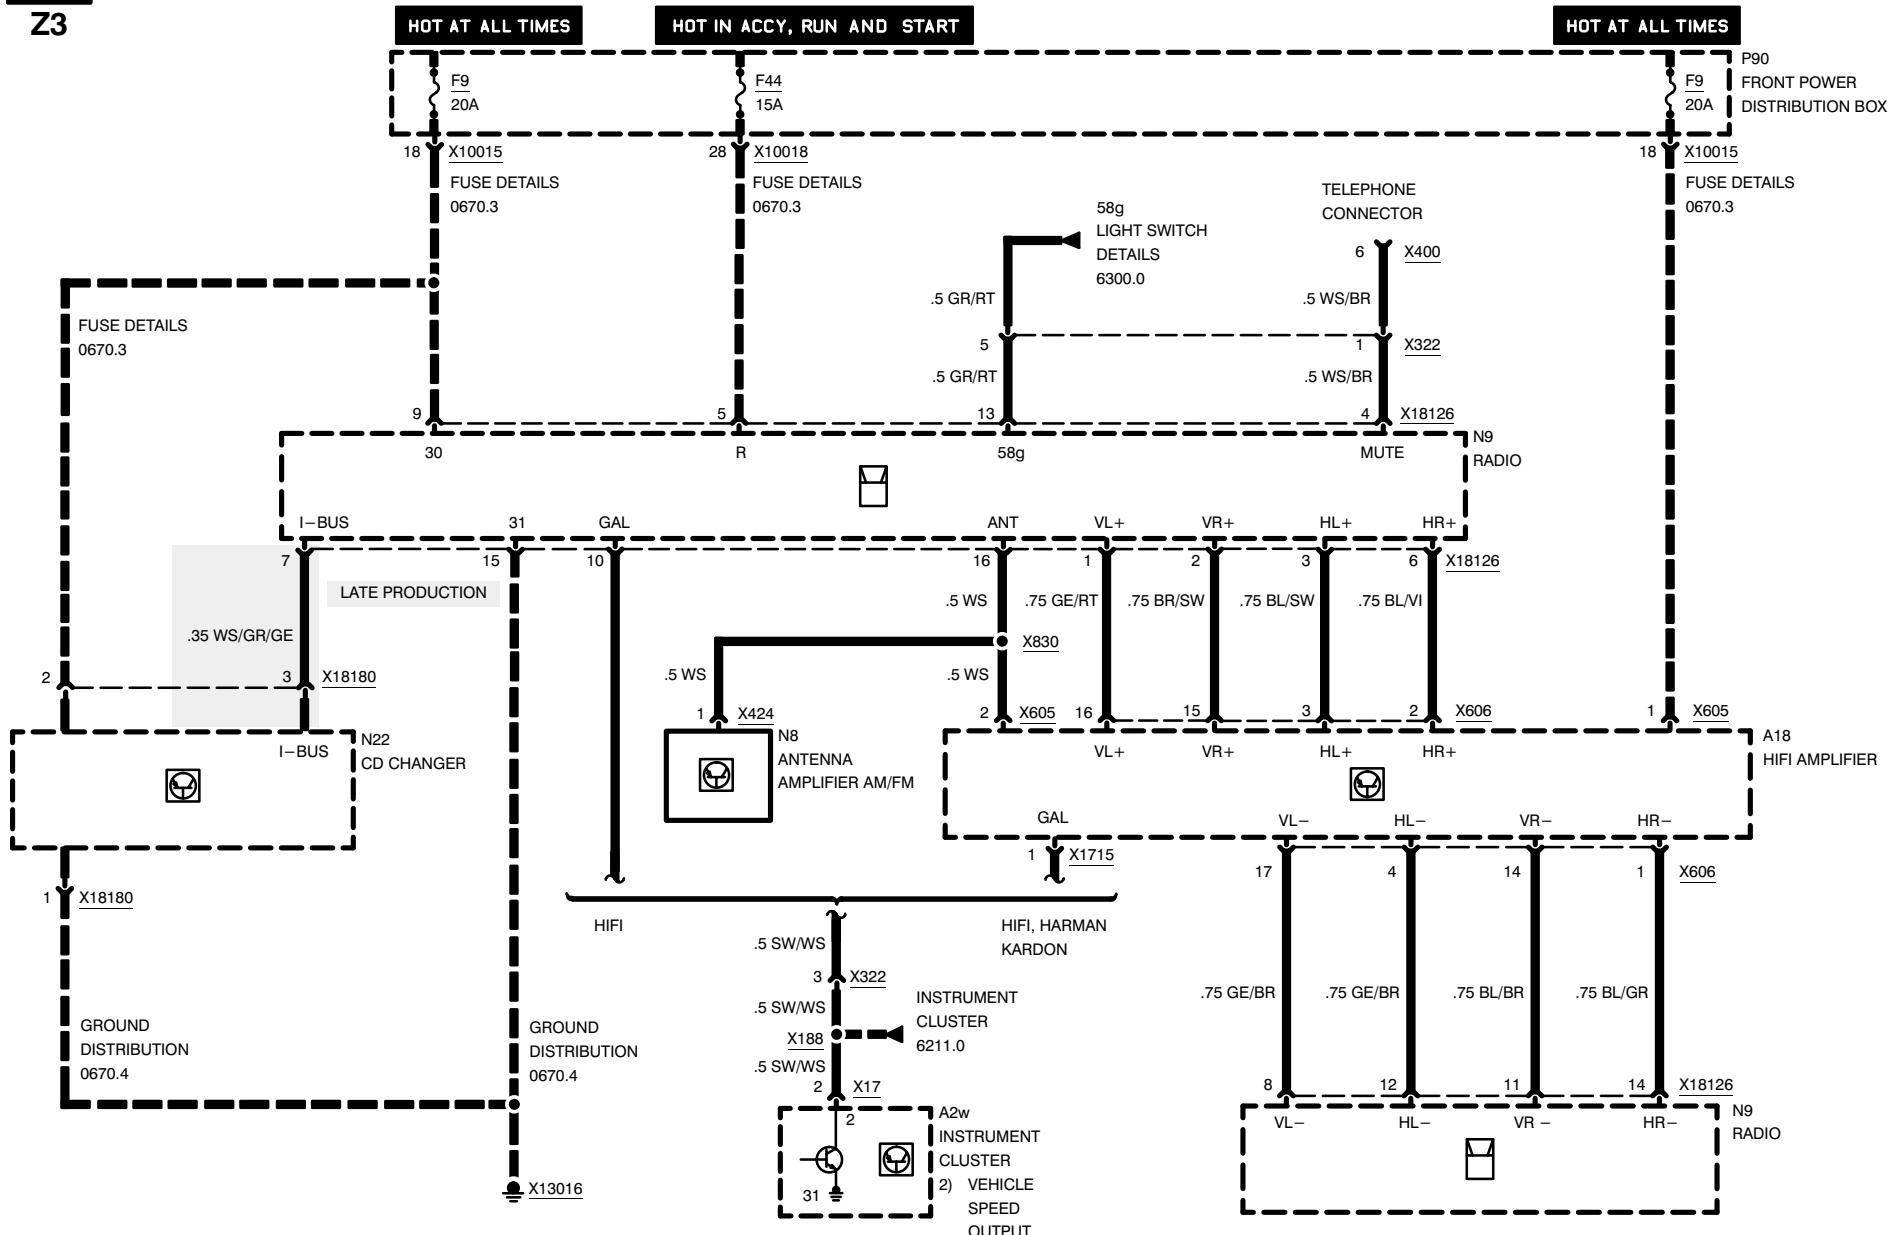

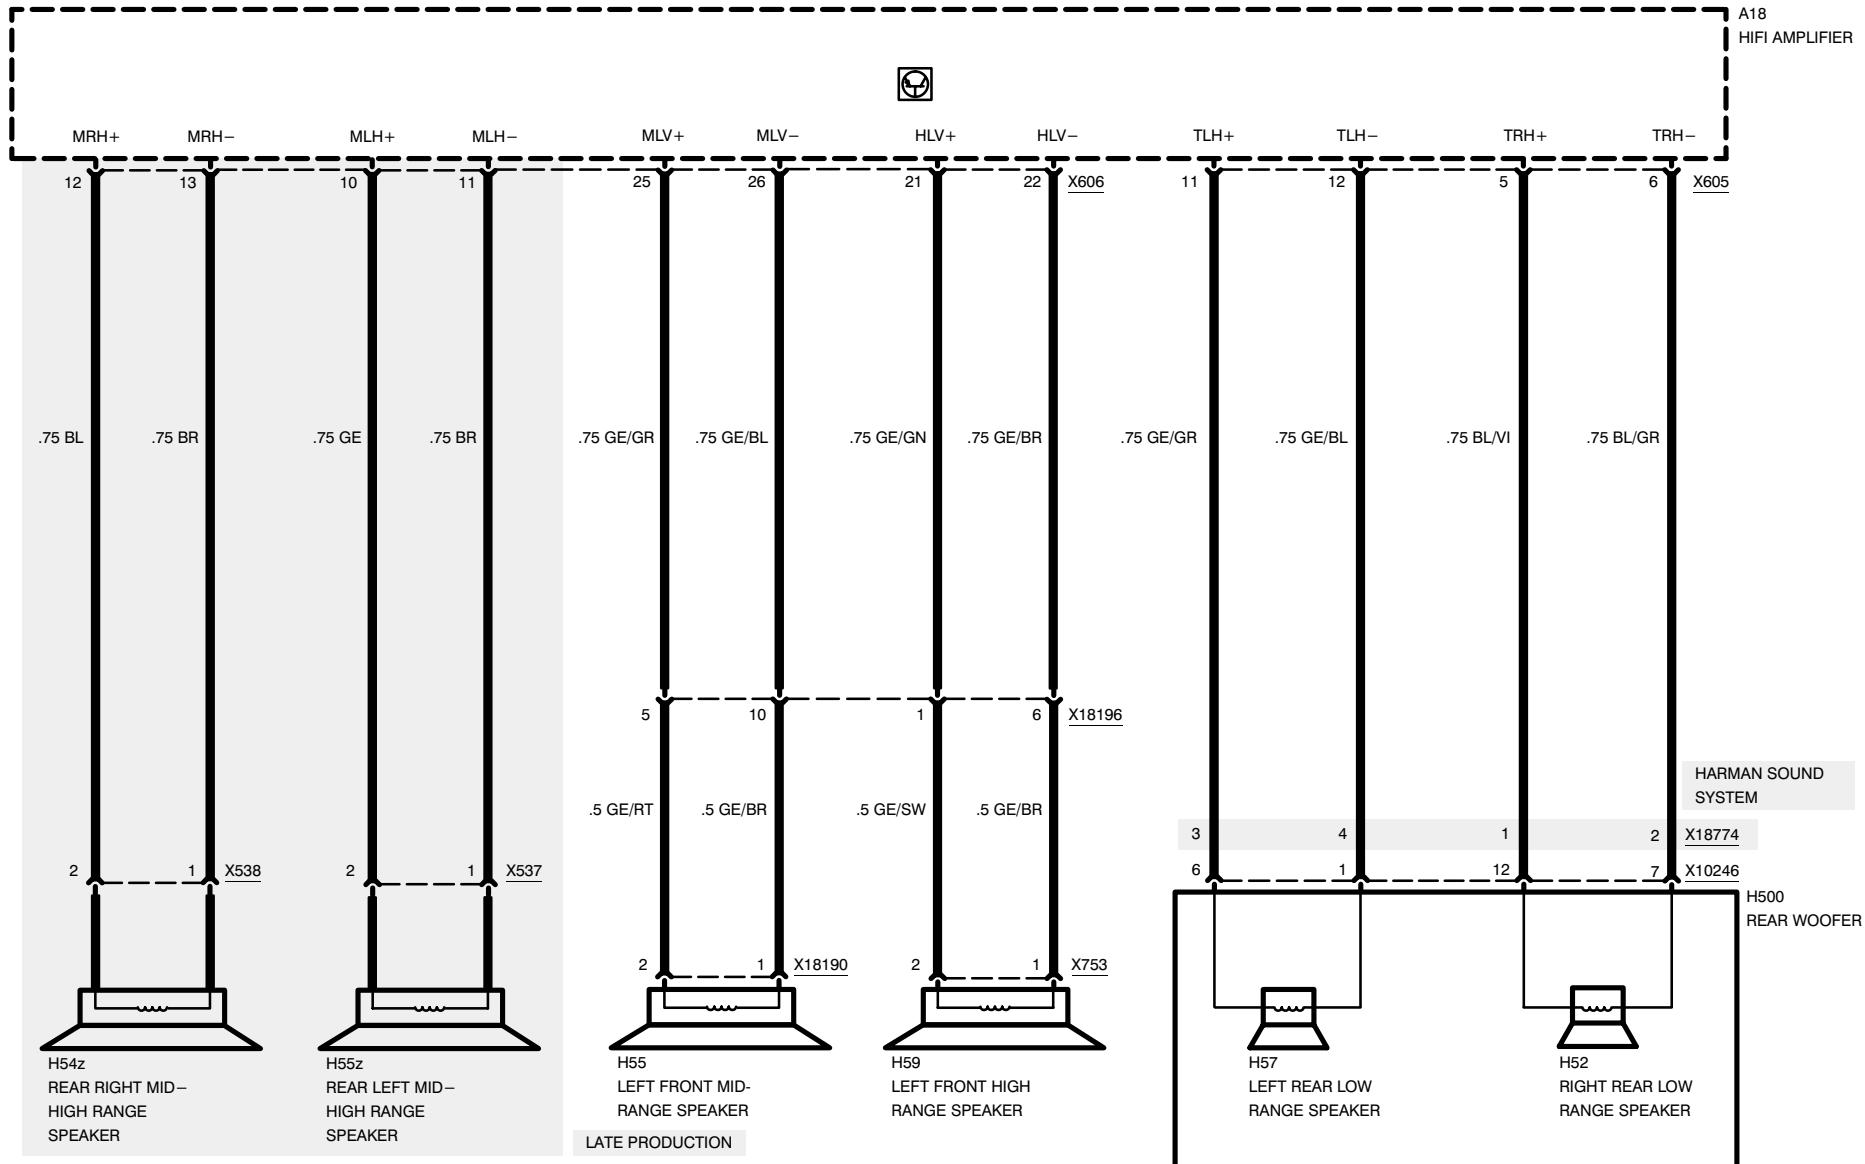




# RADIO/HIFI

Z3

03/98

6510.1-02

1997

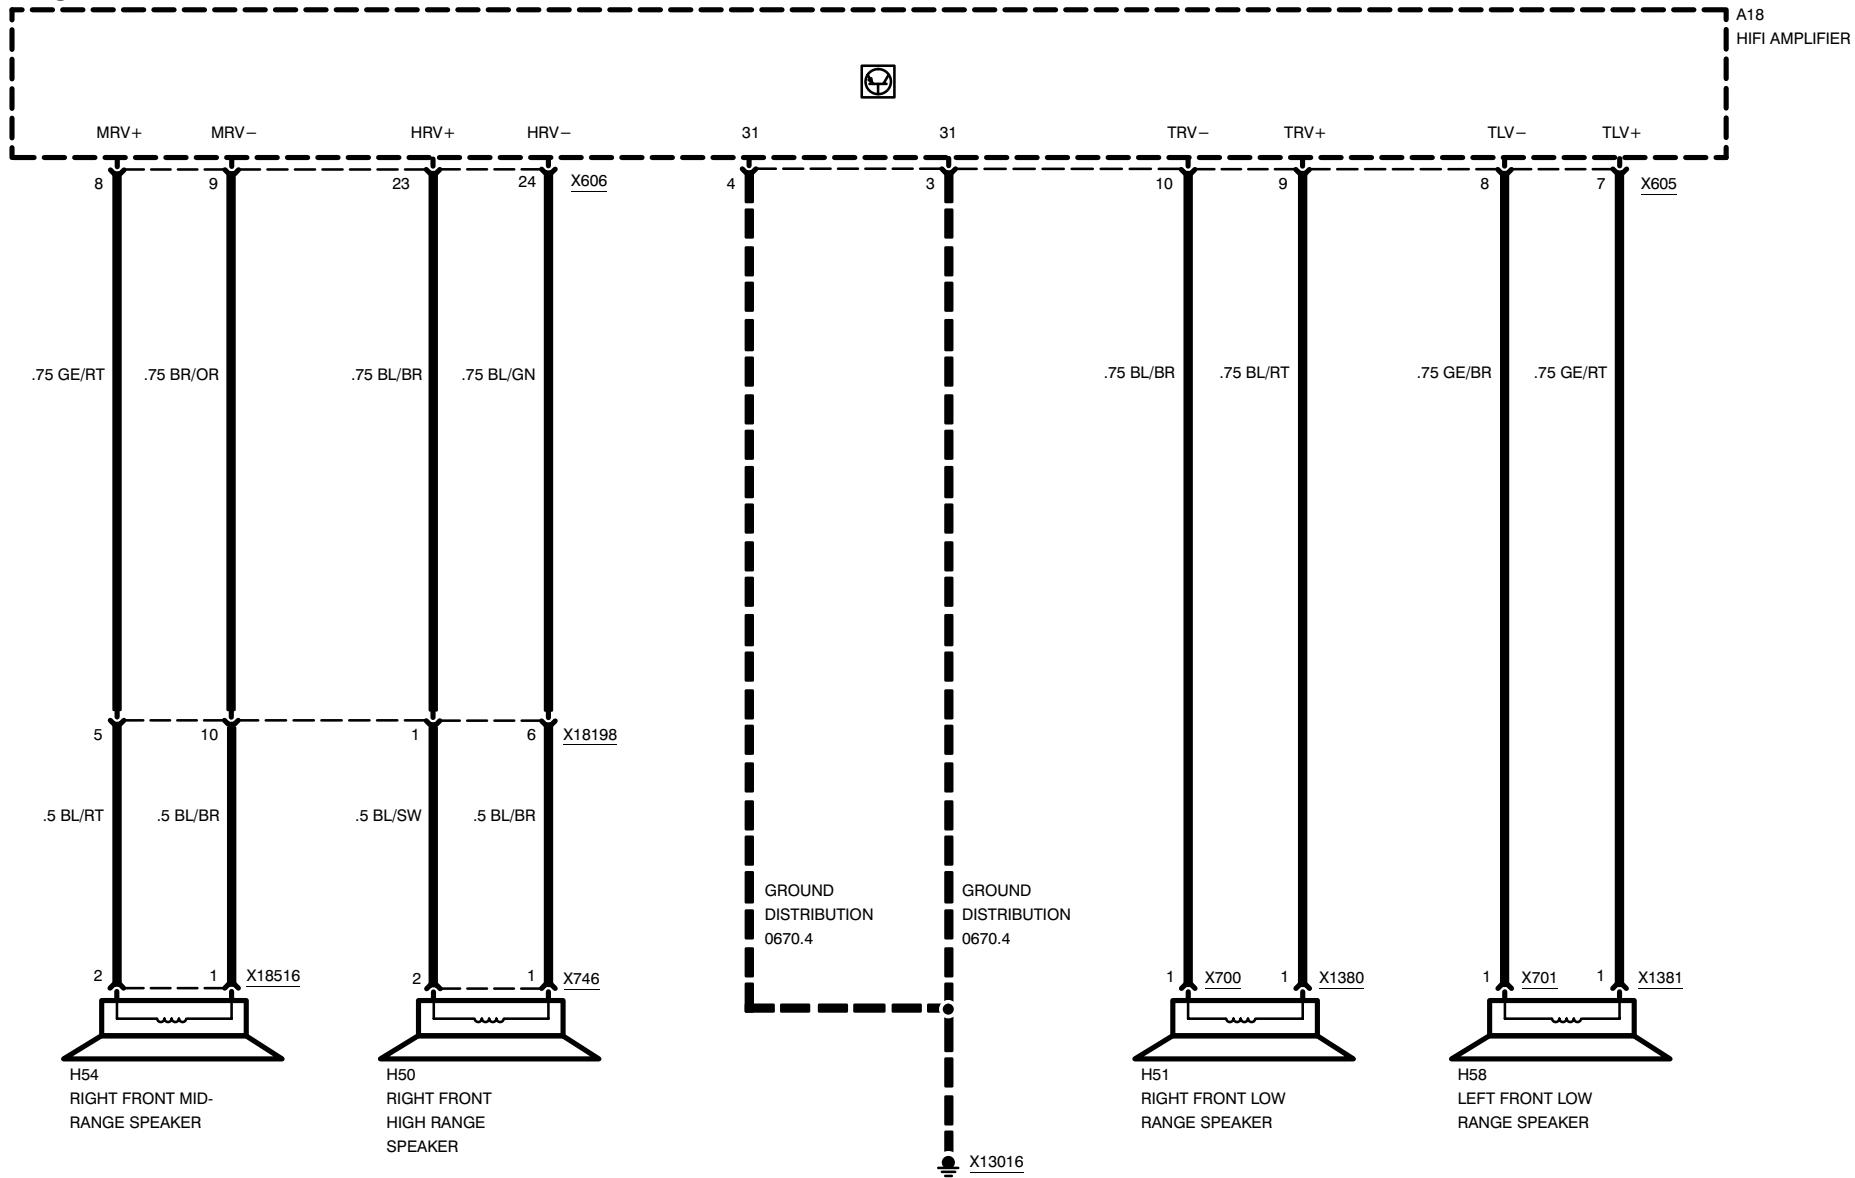




## RADIO/HIFI

03/98

6510.1-03

1997

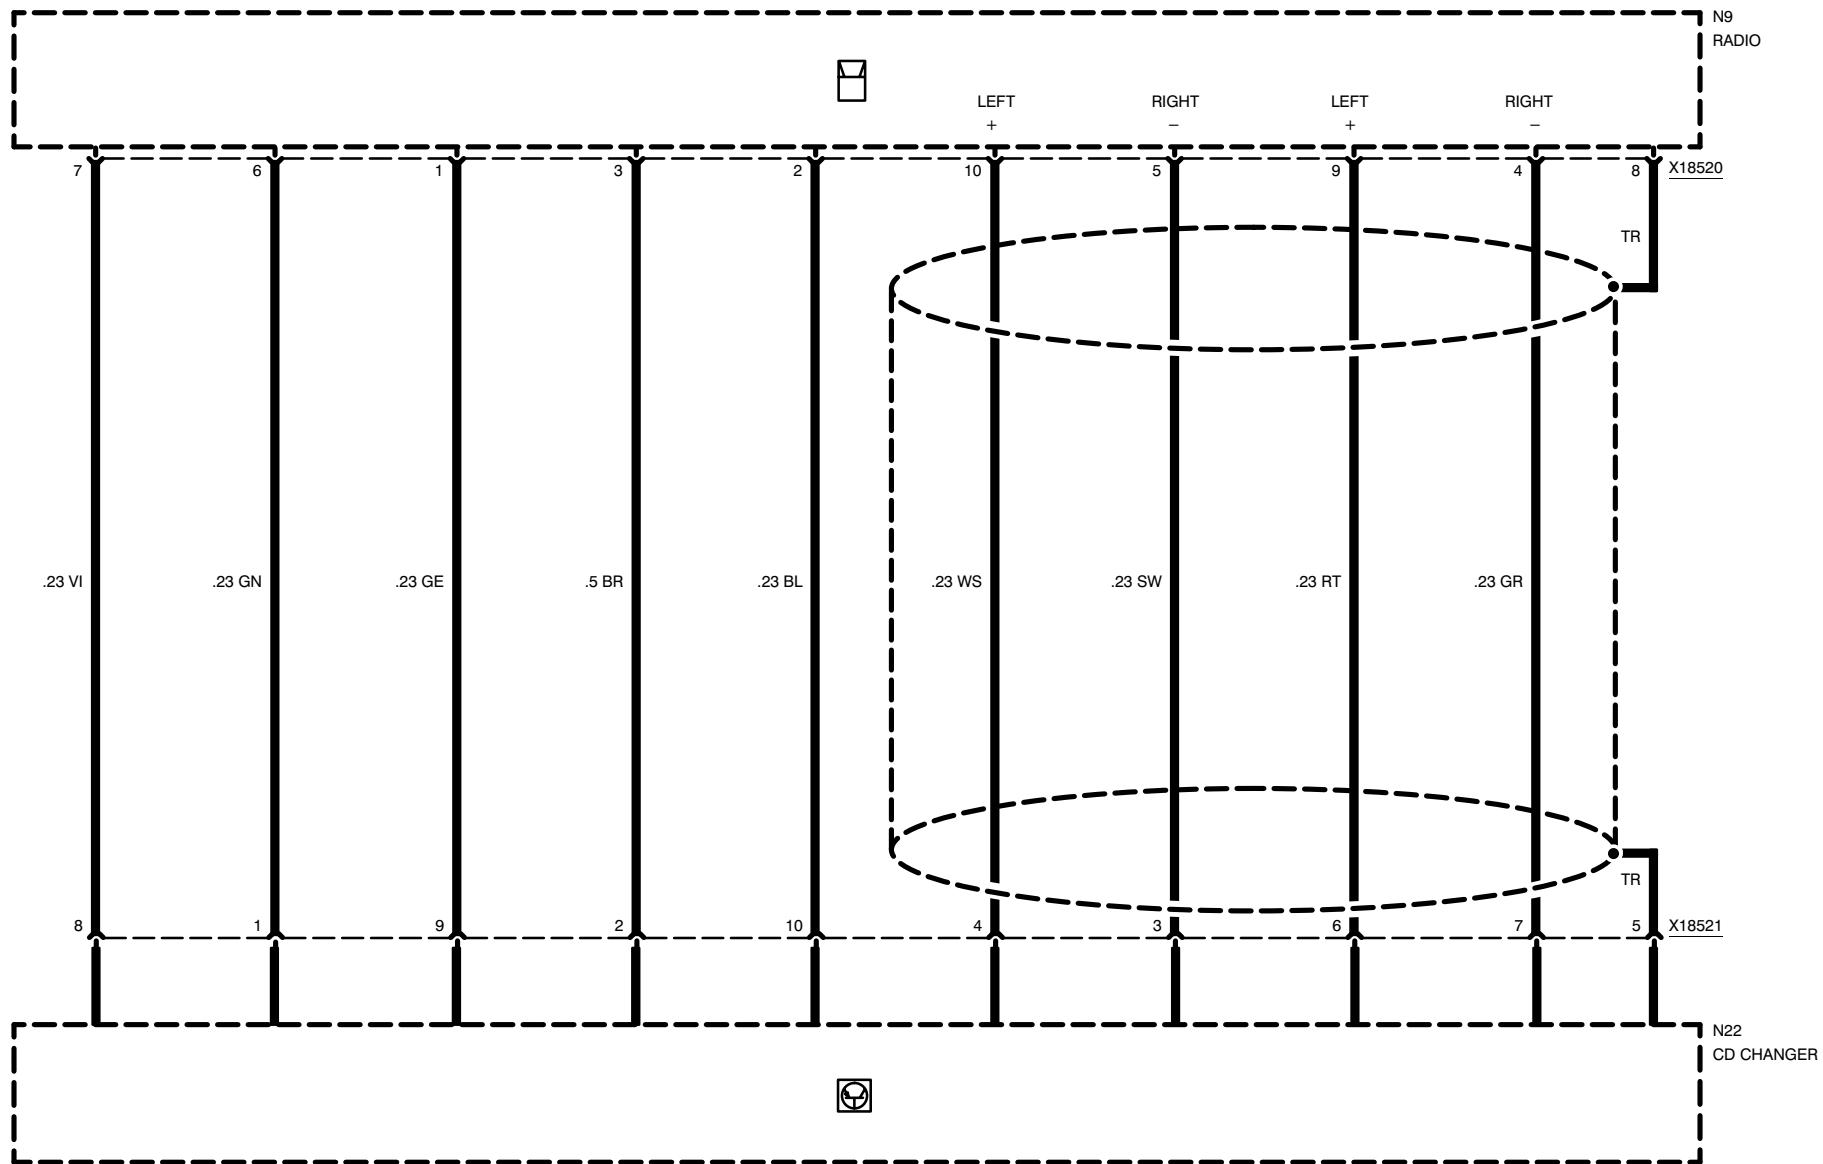


## CELLULAR TELEPHONE (PROVISIONS)

## PROVISIONS


03/98

6561.0-00

1997

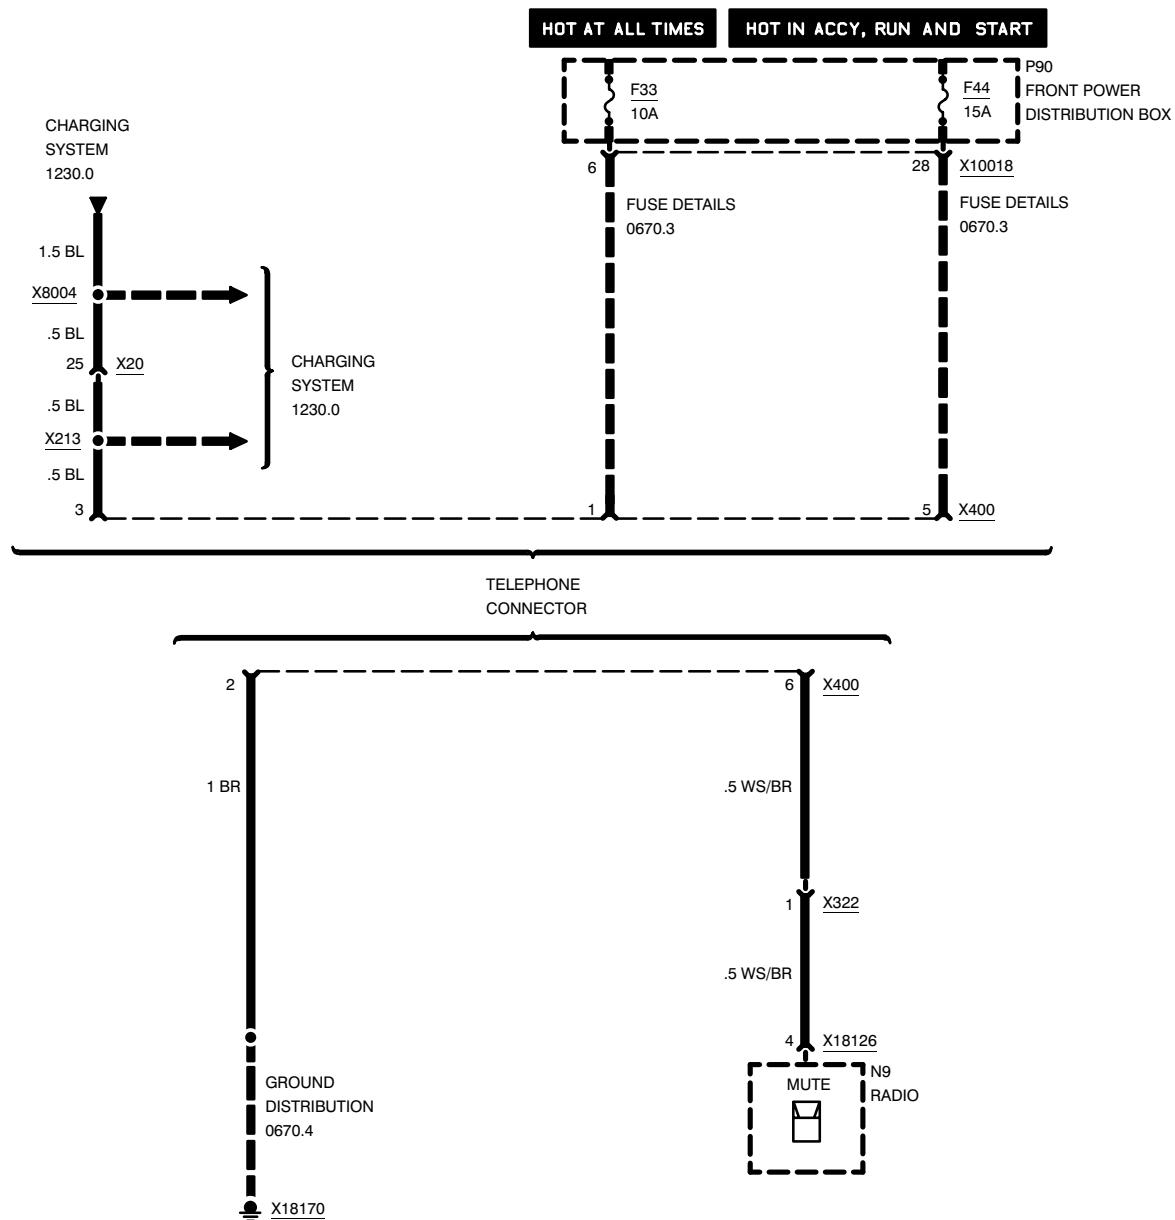


## CRUISE CONTROL (TEMPOMAT)

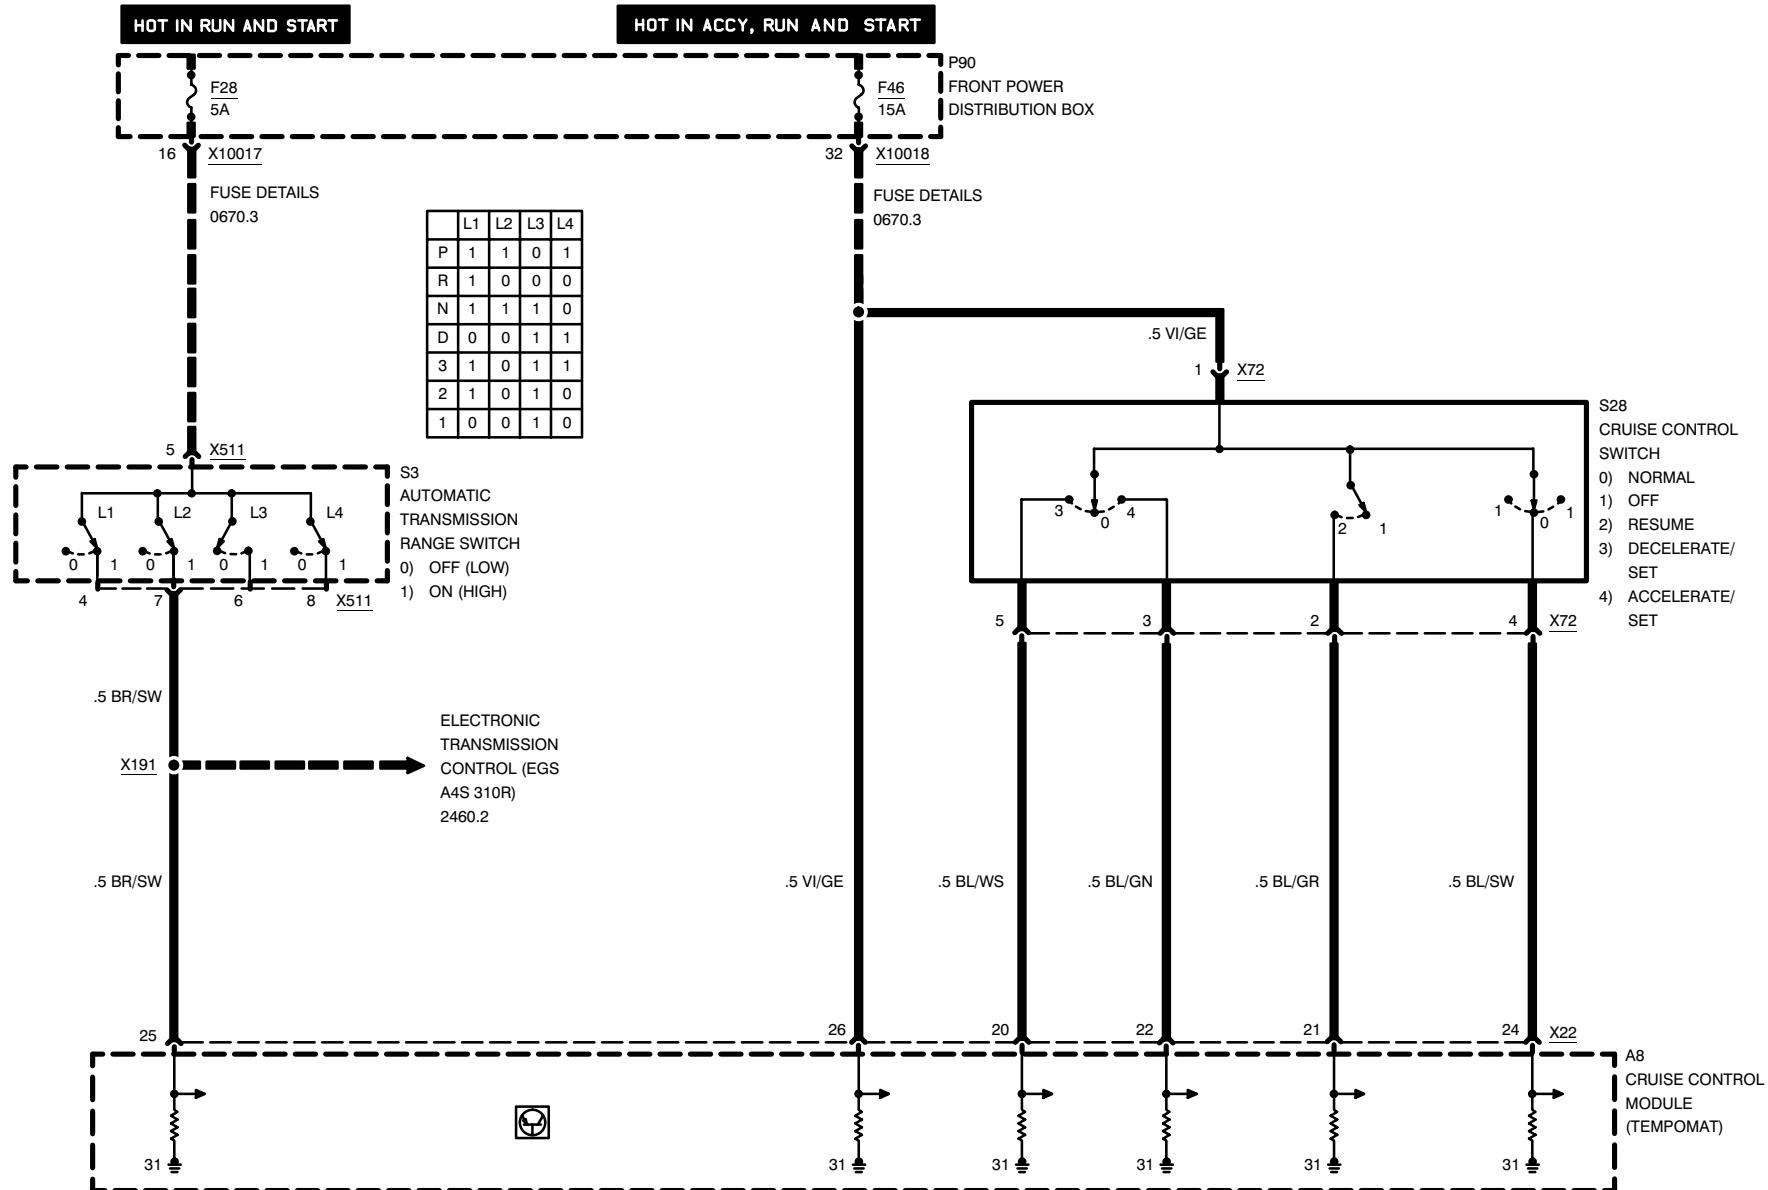



## CRUISE CONTROL (TEMPOMAT)

Z3

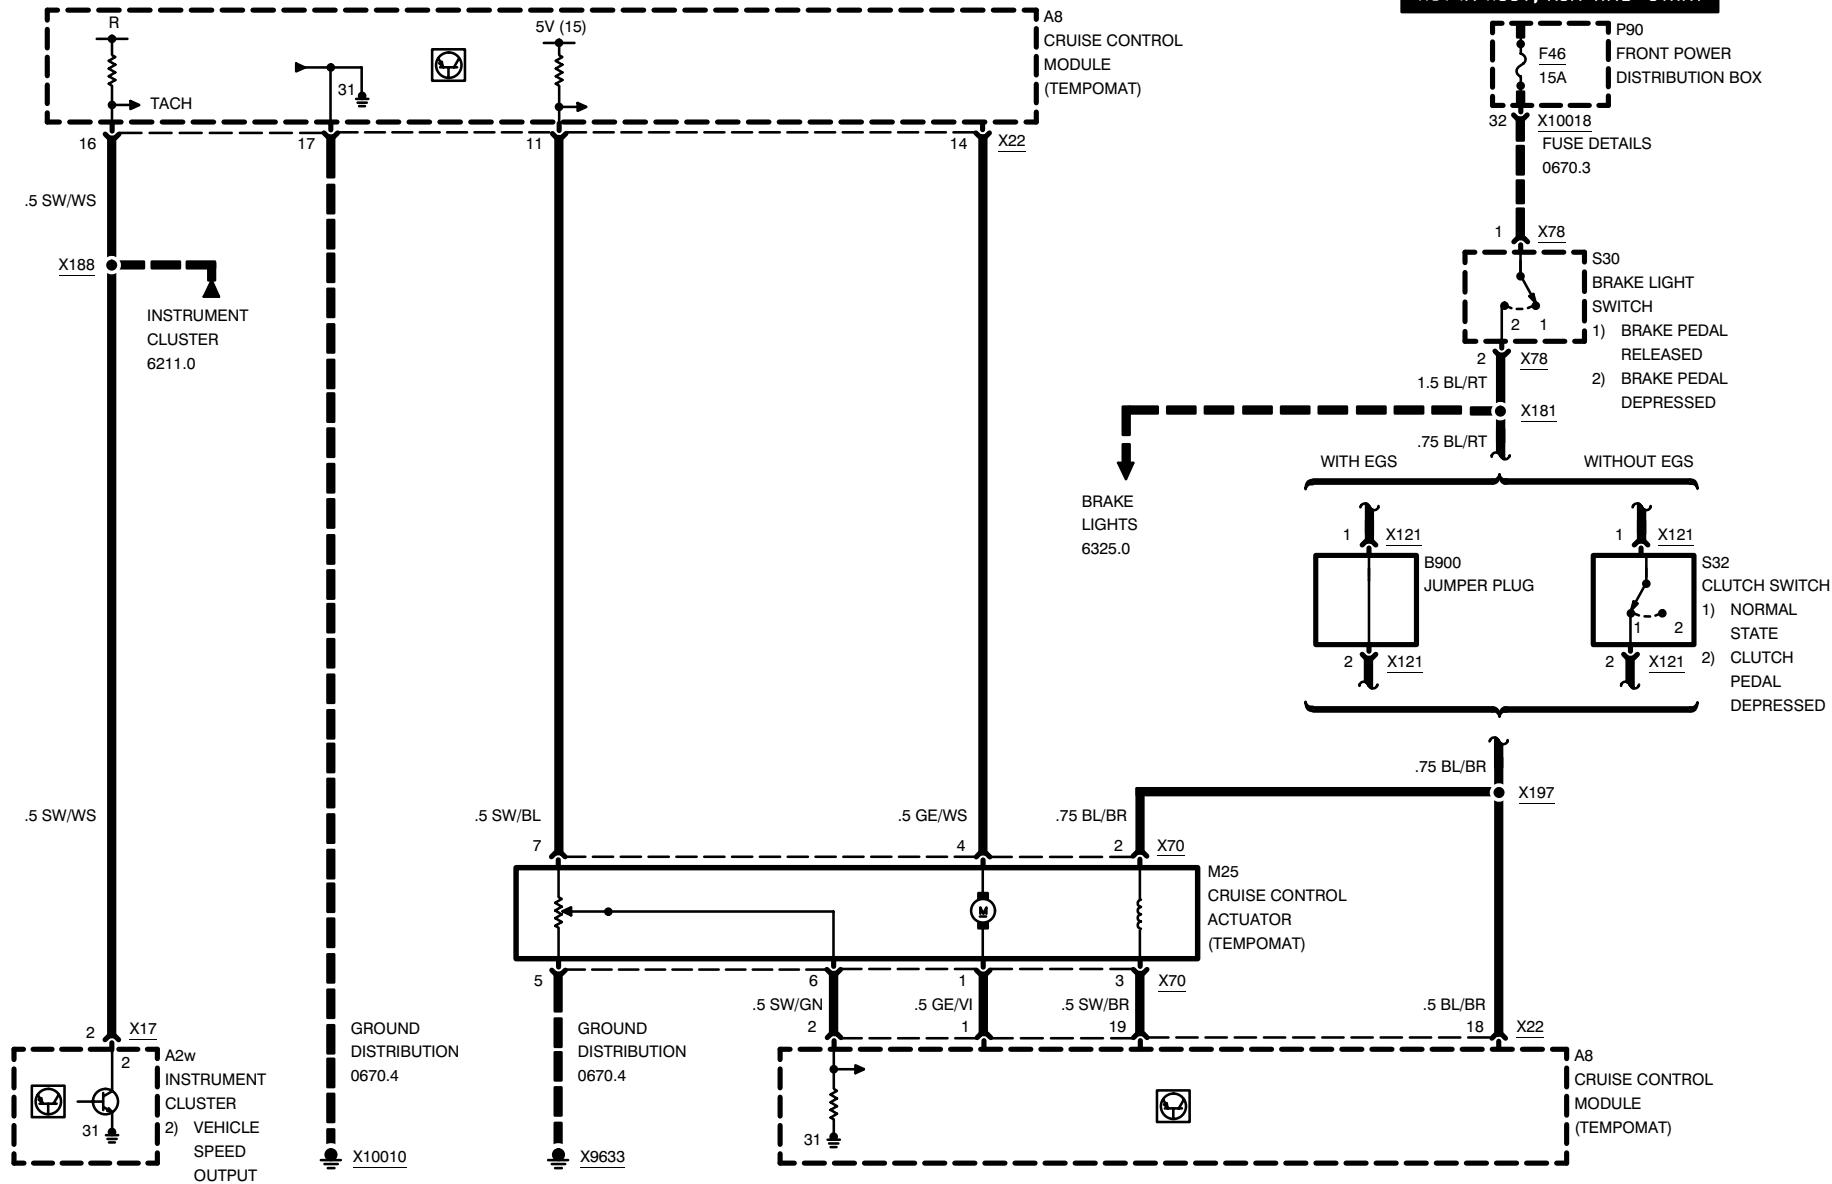

## ANTI-THEFT SYSTEM (ALPINE)

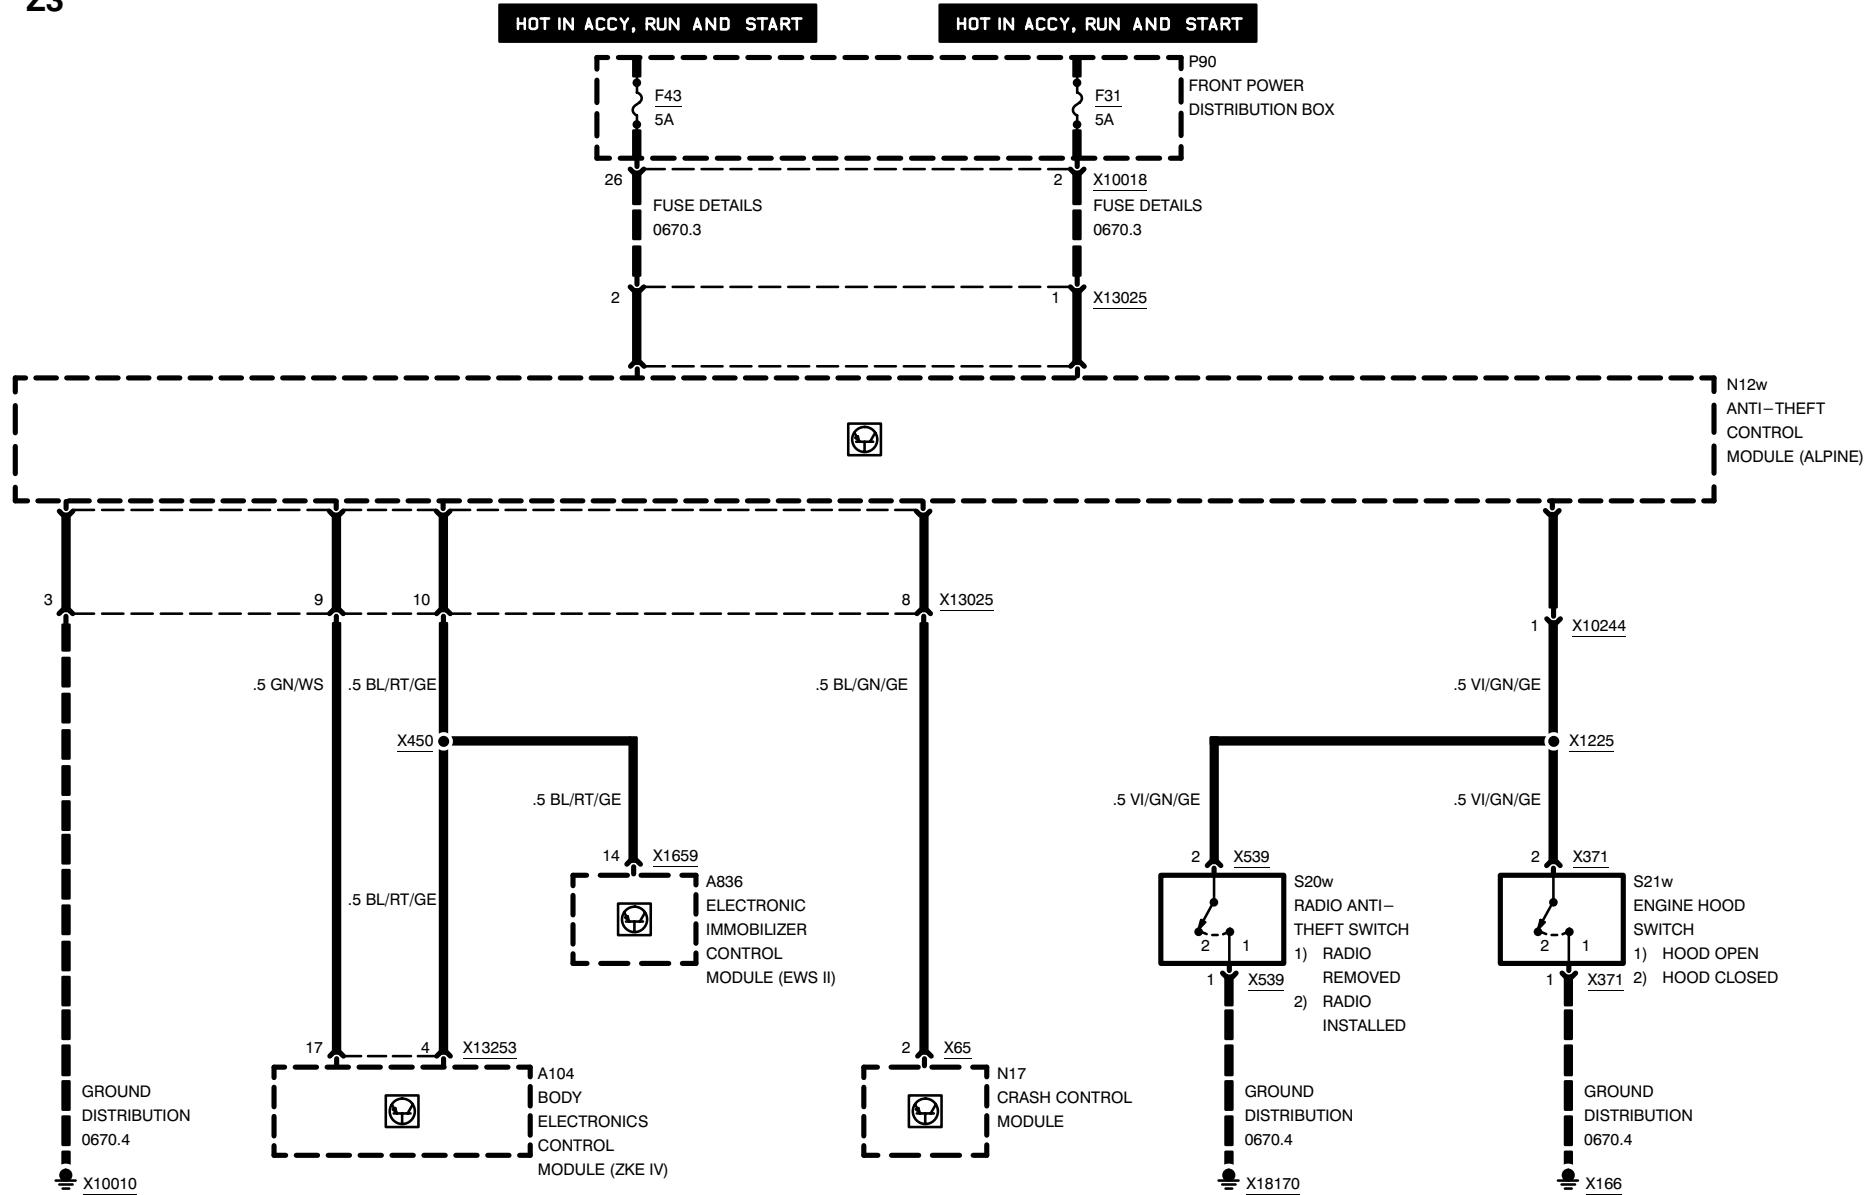

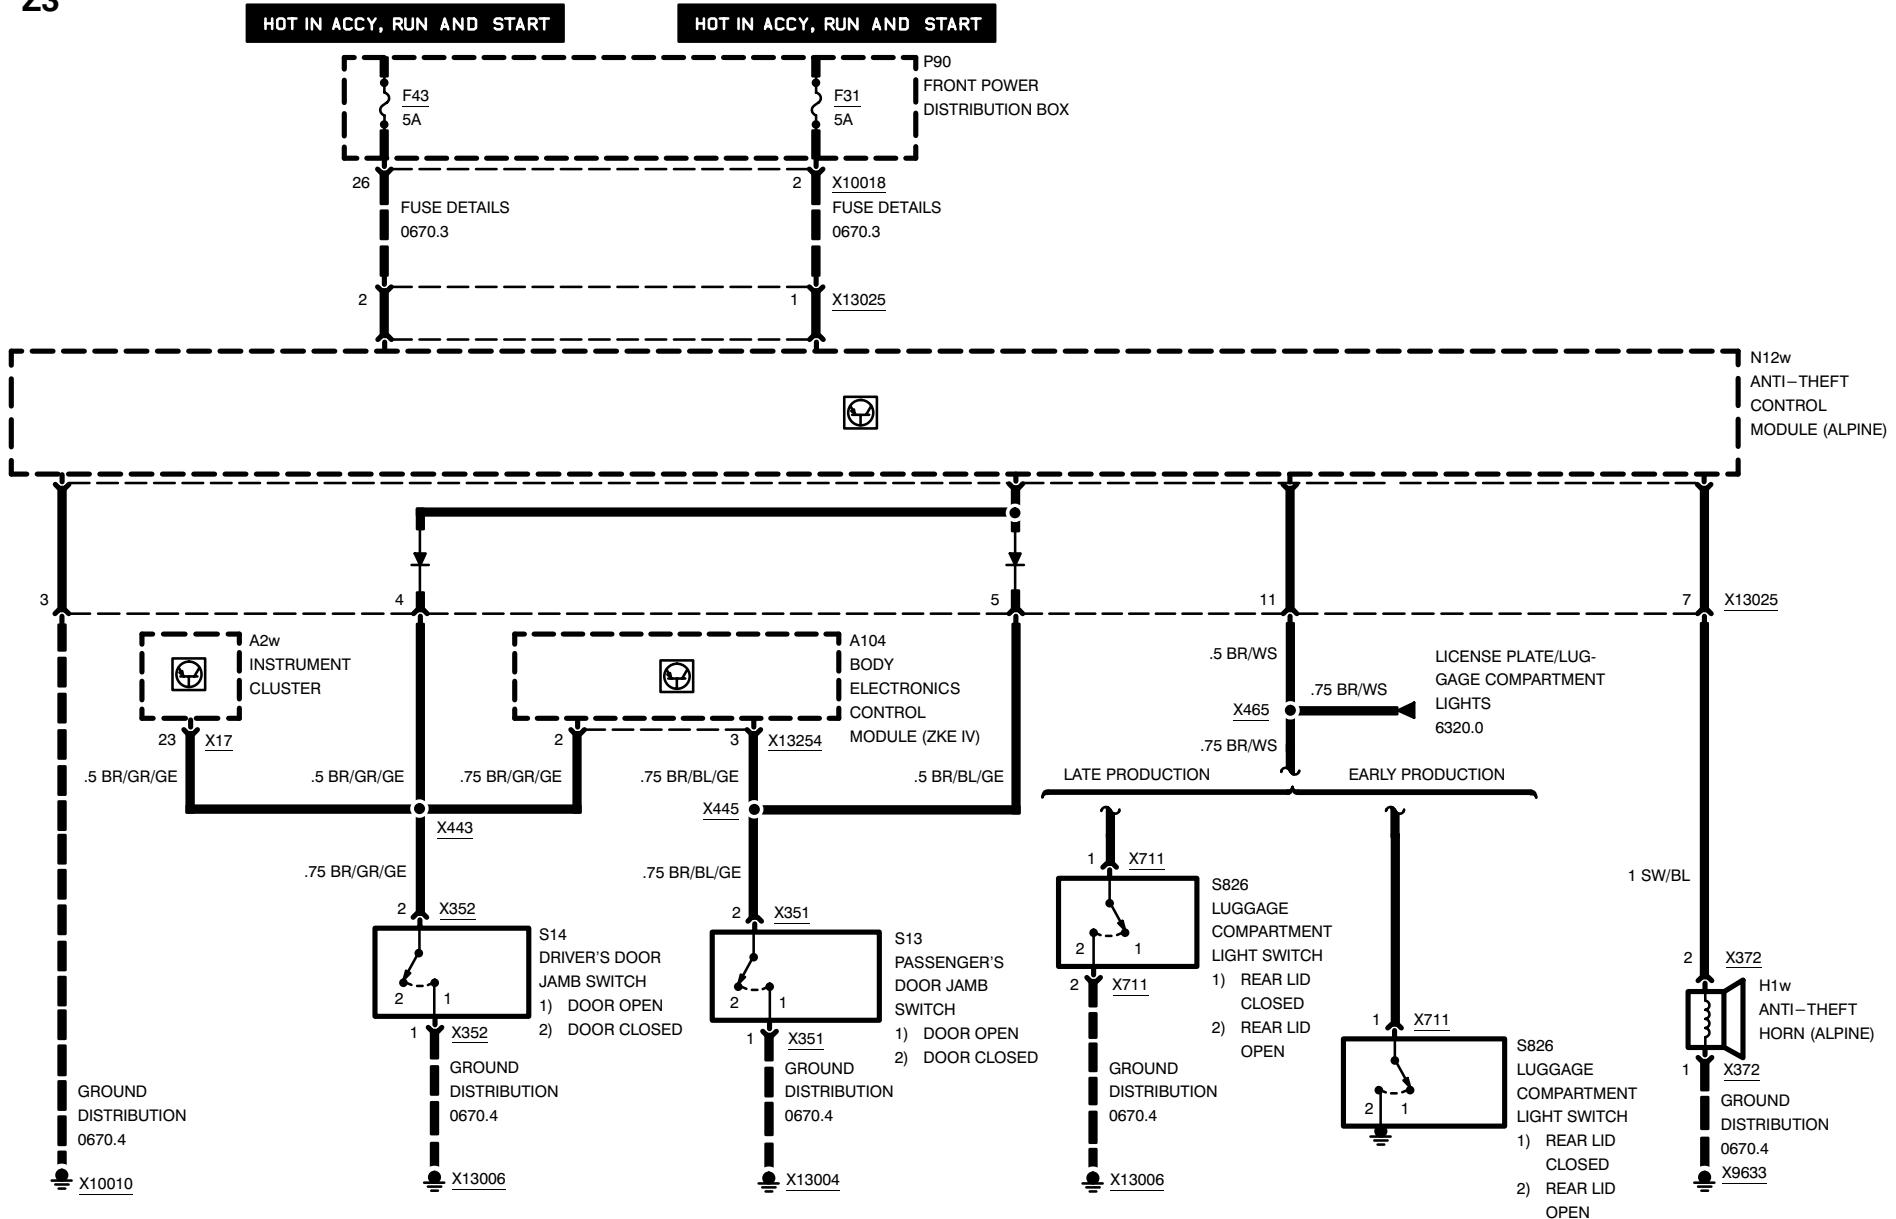


## **BOARD COMPUTER (BC–LOW)**

Z3

03/98

6581.3-00

1997

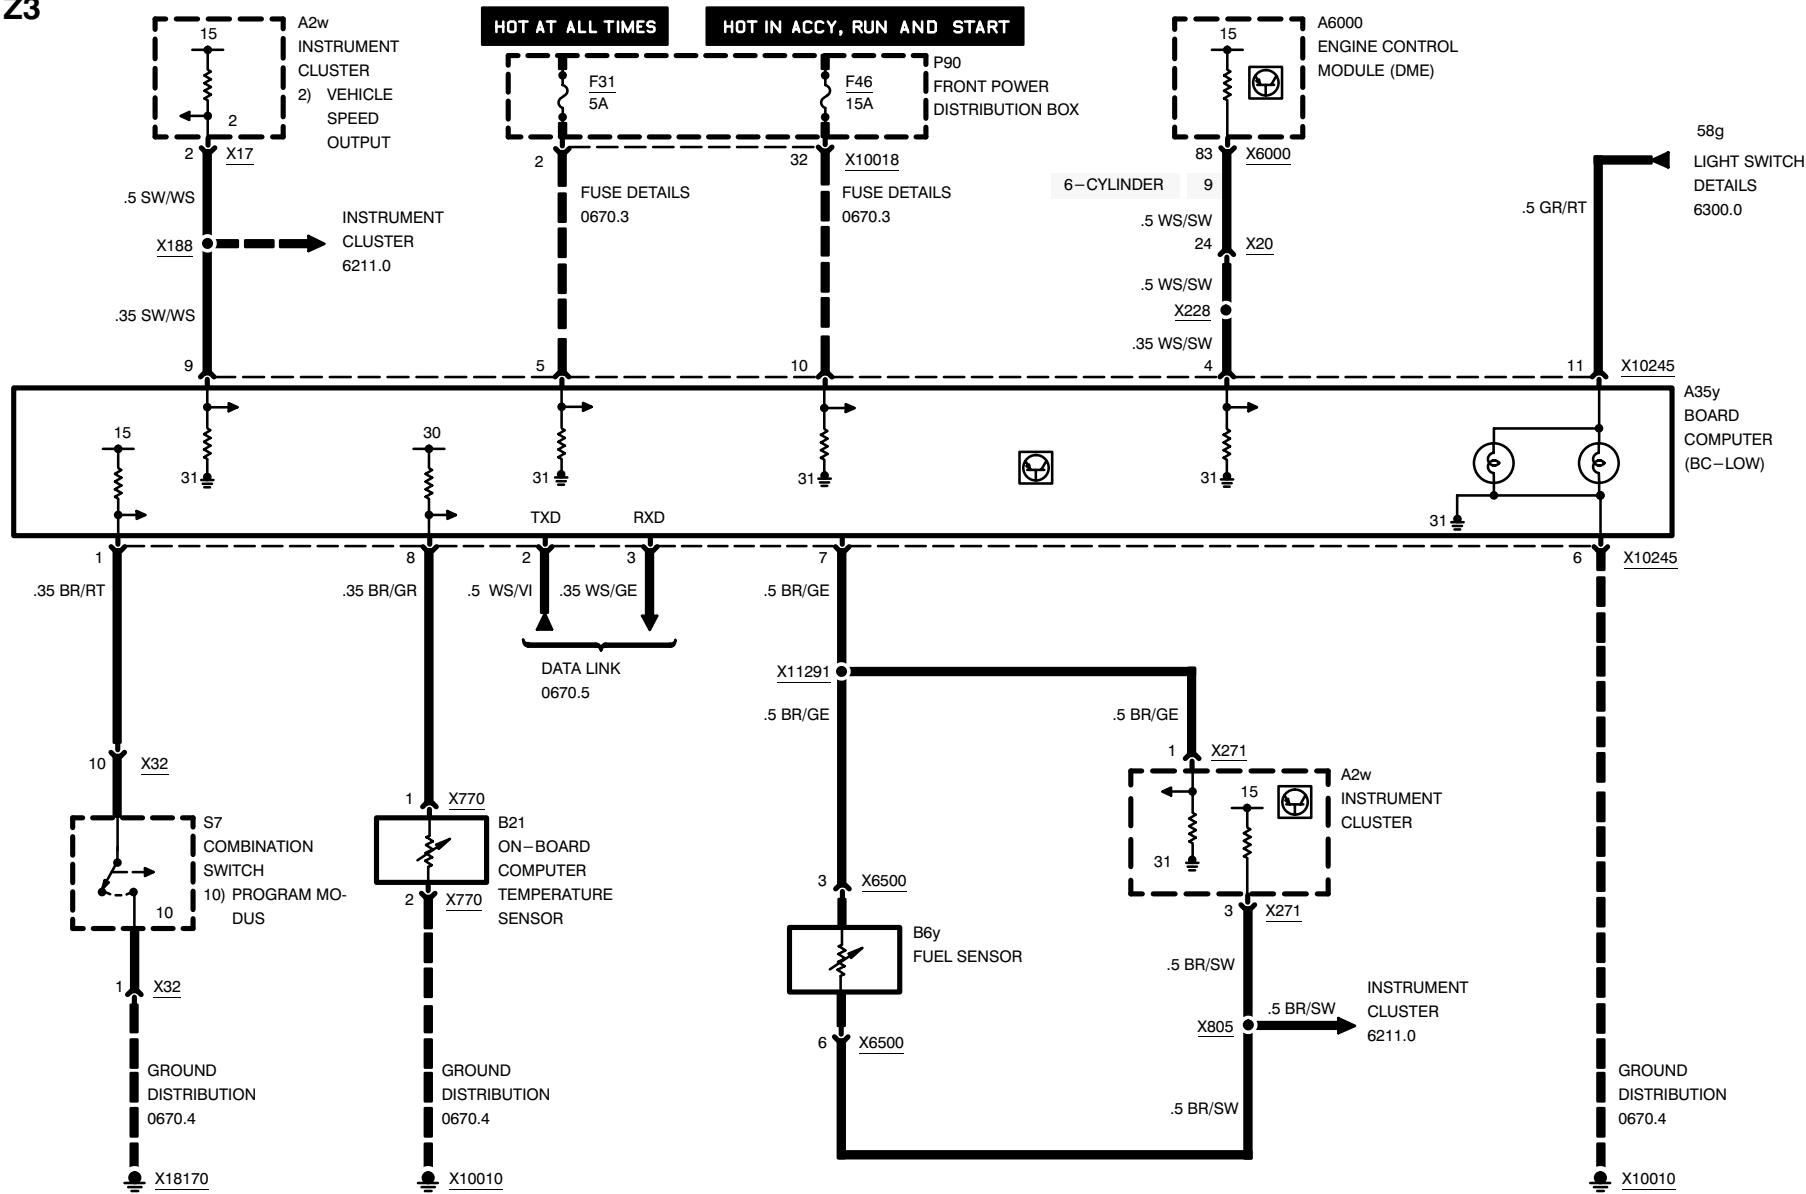



## COMPONENT LOCATION CHART

Z3

03/98

7000.0-0

1997

COMP.	DESCRIPTION	LOCATION	7100.0 8500.0
A2w ..	INSTRUMENT CLUSTER .....	LH side of dash .....	20-2
A8 ....	CRUISE CONTROL MODULE (TEMPOMAT)	behind glove box .....	00-2
A12 ...	SUPPLEMENTAL RESTRAINT SYSTEM CONTROL MODULE .....	below center console .....	22-2
A18 ...	HIFI AMPLIFIER .....	in RH side of luggage compartment behind trim panel .....	27-3
A35y ..	BOARD COMPUTER (BC-LOW) .....	center console .....	01-3
A51 ...	WIPER/WASHER MODULE .....	behind glove box .....	00-2
A52 ...	SLIP CONTROL MODULE (ABS/ASC) .....	behind glove box (4-cylinder) .....	00-1
A52 ...	SLIP CONTROL MODULE (ABS/ASC) .....	behind glove box (6-cylinder) .....	00-3
A64 ...	WIPER/WASHER MODULE (LOW II) .....	behind glove box .....	00-2
A104 ..	BODY ELECTRONICS CONTROL MODULE (ZKE IV) .....	behind glove box .....	00-2
A110 ..	DIGITAL CLOCK .....	center console .....	
A113 ..	SEAT OCCUPANCY DETECTOR .....	under RH front seat (WITH SPORT SEAT) .....	41-2
A113 ..	SEAT OCCUPANCY DETECTOR .....	under RH front seat .....	24-1
A202 ..	ABS CONTROL MODULE/HYDRAULIC UNIT .....	rear LH side of engine compartment .....	
A605 ..	FUSE HOLDER .....	center console (radio and console removed) .....	38-1
A835 ..	TRANSMITTER MODULE (EWS II) .....	near steering column .....	01-2
A836 ..	ELECTRONIC IMMOBILIZER CONTROL MODULE (EWS II) .....	behind glove box .....	00-1
A6000	ENGINE CONTROL MODULE (DME) .....	rear RH side of engine compartment in E-Box .....	01-1
A8500	TRANSMISSION CONTROL MODULE (EGS) .....	rear RH side of engine compartment in E-Box .....	01-1



## COMPONENT LOCATION CHART

Z3

03/98

7000.0-1

COMP.	DESCRIPTION	LOCATION	7100.0 8500.0
B1 ....	RIGHT FRONT SPEED SENSOR – ABS	on RH front wheel, above brake caliper	
B2 ....	LEFT FRONT SPEED SENSOR – ABS	on LH front wheel, above brake caliper	12-3
B3 ....	RIGHT REAR SPEED SENSOR – ABS	on RH rear wheel, above brake caliper	
B4 ....	LEFT REAR SPEED SENSOR – ABS	on LH rear wheel, above brake caliper	
B6y ...	FUEL SENSOR	in fuel tank	
B8y ...	PRESSURE SWITCH	front RH side of engine compartment	
B9 ....	INTERMEDIATE PRESSURE SWITCH	front RH side of engine compartment	
B10 ..	VEHICLE SPEED SENSOR	on differential	15-2
B14 ..	EVAPORATOR TEMPERATURE SENSOR	RH side of LH footwell	21-2
B16 ..	LEFT FRONT BRAKE PAD SENSOR	on LH front wheel, above brake caliper	12-3
B17 ..	RIGHT REAR BRAKE PAD SENSOR	behind RH rear wheel	
B18 ..	BRAKE FLUID LEVEL SWITCH	rear LH side of engine compartment	09-1
B21 ..	ON-BOARD COMPUTER TEMPERATURE SENSOR	on front LH wheel well (4-cylinder)	12-1
B21 ..	ON-BOARD COMPUTER TEMPERATURE SENSOR	in RH front bumper (6-cylinder)	35-2
B65 ..	FUEL TANK PRESSURE SENSOR	top of fuel tank	39-2
B900 ..	JUMPER PLUG	LH footwell	
B6203	CRANKSHAFT POSITION/RPM SENSOR	rear LH side of engine compartment	32-3
B6204	CAMSHAFT POSITION SENSOR (CYLINDER IDENTIFICATION)	front of engine	31-3
B6205	INTAKE AIR TEMPERATURE SENSOR	front LH side of engine compartment (4-cylinder)	11-2
B6205	INTAKE AIR TEMPERATURE SENSOR	front LH side of engine compartment (6-cylinder)	34-1

1997



## COMPONENT LOCATION CHART

### COMP. DESCRIPTION

### LOCATION

7100.0 8500.0

B6207	HOT FILM AIR MASS METER .....	LH side of engine compartment .....	33-3
B6209	HALL EFFECT CAMSHAFT SENSOR .....	front of engine	
B6210y	OXYGEN SENSOR (IN FRONT OF CATALYTIC CONVERTER) .....	under center of car .....	35-1
B6217	HOT FILM AIR MASS METER .....	front LH side of engine compartment .....	11-3
B6220y	OXYGEN SENSOR (BEHIND CATALYTIC CONVERTER) .....	under center of car .....	35-1
B6231	OIL PRESSURE SWITCH .....	lower LH side of engine .....	32-2
B6232	ENGINE COOLANT TEMPERATURE SENSOR .....	front of engine .....	10-2
B6240	KNOCK SENSOR .....	top front of engine (4-cylinder)	10-2
B6240	KNOCK SENSOR .....	top front of engine (6-cylinder)	33-2
B6247	CHARCOAL FILTER SHUT-OFF VALVE ...	under LH rear of car .....	36-1
B6256	DUAL TEMPERATURE SENSOR (COOLANT TEMPERATURE) .....	rear of engine compartment .....	32-1
B9508	PRESSURE SWITCH .....	front RH side of engine compartment .....	30-2
B62001	OXYGEN SENSOR (IN FRONT OF CATALYTIC CONVERTER) .....	under center of car .....	14-3
B62002	OXYGEN SENSOR (BEHIND CATALYTIC CONVERTER) .....	under center of car	
C101 .	CONTACT RING .....	top of steering column .....	38-3
D100 .	DATA LINK CONNECTOR .....	rear RH side of engine compartment .....	31-1
D110 .	OBD II CONNECTOR .....	center console right .....	28-3
E7 ....	LEFT HEADLIGHT .....	front LH side of engine compartment	

03/98

7000.0-2

1997



## COMPONENT LOCATION CHART

Z3

03/98

7000.0-3

1997

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
E8 ....	RIGHT HEADLIGHT .....	front RH side of engine compartment		
E9 ....	REAR DEFOGGER I .....	hard top		
E11 ...	LEFT HIGH BEAM LIGHT .....	near front LH headlight .....	29-1	
E12 ...	RIGHT HIGH BEAM LIGHT .....	near front RH headlight		
E13 ...	LEFT LOW BEAM LIGHT .....	near front LH headlight .....	29-1	
E14 ...	RIGHT LOW BEAM LIGHT .....	near front RH headlight .....	29-3	
E15 ...	LEFT PARK LIGHT .....	near front LH headlight		
E16 ...	LEFT REAR LIGHT ASSEMBLY .....	LH side of body rear end		
E17 ...	RIGHT REAR LIGHT ASSEMBLY .....	RH side of body rear end .....	03-1	
E19 ...	RIGHT PARK LIGHT .....	near front RH headlight		
E21 ...	LEFT FRONT MARKER LIGHT .....	front of vehicle		
E22 ...	RIGHT FRONT MARKER LIGHT .....	front of vehicle		
E25 ...	FRONT ASHTRAY LIGHT .....	center console		
E26 ...	LEFT FOG LIGHT .....	under LH front bumper		
E27 ...	RIGHT FOG LIGHT .....	under RH front bumper .....	13-2	
E28 ...	FRONT CIGAR LIGHTER .....	center console		
E29 ...	FRONT CIGAR LIGHTER LIGHT .....	center console .....	22-3	
E32 ...	TRUNK COMPARTMENT LIGHT .....	in luggage compartment		
E43 ...	LEFT LICENSE PLATE LIGHT .....	underside of trunk lid, near license plate		
E44 ...	RIGHT LICENSE PLATE LIGHT .....	underside of trunk lid, near license plate		
E51 ...	LEFT WASHER JET HEATER .....	on underside of engine hood .....	16-2	
E52 ...	RIGHT WASHER JET HEATER .....	on underside of engine hood .....	16-2	



## COMPONENT LOCATION CHART

Z3

03/98

7000.0-4

1997

COMP.	DESCRIPTION	LOCATION	7100.0 8500.0
E56 ...	DRIVER'S SEATBACK HEATER .....	in top of LH backrest	
E57 ...	DRIVER'S SEAT HEATER .....	under LH front seat	
E58 ...	PASSENGER'S SEAT HEATER .....	underside of RH front seat	
E59 ...	PASSENGER'S SEATBACK HEATER .....	in top of RH backrest	
E82 ...	TRANSMISSION POSITION INDICATOR LIGHT .....	center console .....	22-1
E99 ...	HARD TOP CONNECTOR 1 .....	near LH rear wheel well	
E104 .	THROTTLE FLAP HEATER .....	front of engine	
E105 .	HEAT/A/C CONTROL PANEL ILLUMINATION .....	center of dash .....	21-3
E106 .	HEAT/A/C CONTROL PANEL ILLUMINATION .....	center of dash .....	21-3
E800 .	FRONT LEFT INTERIOR LIGHT .....	near interior rear view mirror	
F97 ...	FUSIBLE LINK .....	in RH side of luggage compartment .....	03-1
G1 ...	BATTERY .....	in RH side of luggage compartment .....	03-1
G5 ...	DRIVER'S AIR BAG GAS GENERATOR .....	behind steering wheel	
G6 ...	PASSENGER'S AIR BAG GAS GENERATOR	behind glove box above	
G12 ..	DRIVER'S SIDE PYROTECHNICAL BELT TENSIONER .....	in LH front seat belt buckle .....	38-2
G13 ..	PASSENGER'S SIDE PYROTECHNICAL BELT TENSIONER .....	in RH front seat belt buckle .....	38-2
G6430	B+ JUMP START JUNCTION POINT .....	rear RH side of engine compartment .....	03-2
G6509	GENERATOR .....	front LH side of engine compartment .....	02-3
H1w ..	ANTI-THEFT HORN (ALPINE) .....	rear LH side of engine compartment .....	09-1



## COMPONENT LOCATION CHART

### COMP. DESCRIPTION

### LOCATION

7100.0 8500.0

H2 ... LEFT HORN .....	under LH front bumper	
H3 ... RIGHT HORN .....	RH front of wheel well .....	13-2
H4 ... RIGHT FRONT TURN LIGHT .....	front of vehicle	
H7 ... LEFT FRONT TURN LIGHT .....	front of vehicle	
H8 ... RIGHT FRONT AUXILIARY TURN LIGHT ....	front of vehicle	
H9 ... LEFT FRONT AUXILIARY TURN LIGHT .....	front of vehicle	
H10 ... CHIME MODULE .....	below LH side of dash	
H34 ... HIGH LEVEL STOP LIGHT .....	on lift gate	
H50 ... RIGHT FRONT HIGH RANGE SPEAKER ...	in upper RH front door	
H51 ... RIGHT FRONT LOW RANGE SPEAKER ....	in lower RH A-pillar	
H52 ... RIGHT REAR LOW RANGE SPEAKER .....	in rear speaker box	
H54 ... RIGHT FRONT MIDRANGE SPEAKER .....	in upper RH front door	
H54z . REAR RIGHT MID-HIGH RANGE SPEAKER .....	in rear speaker box .....	39-3
H55 ... LEFT FRONT MIDRANGE SPEAKER .....	in upper LH front door	
H55z . REAR LEFT MID-HIGH RANGE SPEAKER ..	in rear speaker box .....	40-1
H57 ... LEFT REAR LOW RANGE SPEAKER .....	in rear speaker box	
H58 ... LEFT FRONT LOW RANGE SPEAKER .....	in lower LH A-pillar	
H59 ... LEFT FRONT HIGH RANGE SPEAKER .....	in upper LH front door	
H500 . REAR WOOFER .....	in rear speaker box	
I1008 . SEAT MAT .....	in passenger's seat area	
K2 .... HORN RELAY .....	rear LH side of engine compartment in Power Distribution Box .....	09-2

03/98

7000.0-5

1997



## COMPONENT LOCATION CHART

### COMP. DESCRIPTION

### LOCATION

7100.0 8500.0

K4 ....	BLOWER RELAY .....	rear LH side of engine compartment in Power Distribution Box .....	09-2
K9 ....	UNLOADER RELAY, TERMINAL 15 .....	rear LH side of engine compartment in Power Distribution Box .....	09-3
K10 ...	ABS RELAY .....	rear LH side of engine compartment in Power Distribution Box .....	09-3
K16 ...	HAZARD FLASHER RELAY .....	rear LH side of engine compartment in Power Distribution Box .....	09-2
K19 ...	COMPRESSOR CONTROL RELAY .....	rear LH side of engine compartment in Power Distribution Box .....	09-3
K21 ...	NORMAL SPEED RELAY .....	rear LH side of engine compartment in Power Distribution Box .....	09-3
K22 ...	HIGH SPEED RELAY .....	rear LH side of engine compartment in Power Distribution Box .....	09-3
K46 ...	HIGH BEAM LIGHT RELAY .....	footwell, driver's side .....	19-1
K47 ...	FRONT FOG LIGHT RELAY .....	rear LH side of engine compartment in Power Distribution Box .....	09-2
K48 ...	LOW BEAM LIGHT RELAY .....	rear LH side of engine compartment in Power Distribution Box .....	09-2
K75 ...	ABS PUMP MOTOR RELAY .....	rear LH side of engine compartment in Power Distribution Box .....	09-3
K910 .	PASSENGER'S SEAT TILT ADJUST CUT-OFF RELAY .....	underside of RH front seat .....	41-1
K911 .	PASSENGER'S SEAT LENGTH ADJUST CUT-OFF RELAY .....	underside of RH front seat .....	41-1
K920 .	DRIVER'S SEAT TILT ADJUST CUT-OFF RELAY .....	underside of LH front seat .....	40-2
K921 .	DRIVER'S SEAT LENGTH ADJUST CUT-OFF RELAY .....	underside of LH front seat .....	40-2
K6300	ENGINE CONTROL MODULE RELAY .....	rear RH side of engine compartment in E-Box (6-cylinder) .....	01-1
K6300	ENGINE CONTROL MODULE RELAY .....	rear RH side of engine compartment in E-Box (4-cylinder) .....	36-3
K6304	SECONDARY AIR PUMP RELAY .....	rear RH side of engine compartment in E-Box (6-cylinder) .....	01-1
K6304	SECONDARY AIR PUMP RELAY .....	rear LH side of engine compartment (4-cylinder) .....	37-1

03/98

7000.0-6

1997



## COMPONENT LOCATION CHART

Z3

03/98

7000.0-7

1997

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
K6326	UNLOADER RELAY, TERMINAL 15 .....	rear RH side of engine compartment in E-Box (6-cylinder) .....	01-1	
K6326	UNLOADER RELAY, TERMINAL 15 .....	rear RH side of engine compartment in E-Box (4-cylinder) .....	36-3	
K6301w	FUEL PUMP RELAY .....	below LH side of dash .....	19-1	
K18363	CONVERTIBLE TOP RELAY I (CLOSE) .....	in LH side of luggage compartment .....	25-3	
K18364	CONVERTIBLE TOP RELAY II (OPEN) .....	in LH side of luggage compartment .....	25-3	
M2 ...	FUEL PUMP .....	in fuel tank		
M3 ...	WIPER MOTOR .....	rear of engine compartment		
M4 ...	WASHER PUMP .....	front RH side of engine compartment on washer fluid reservoir .....	08-3	
M7 ...	HEADLIGHT/FOG LIGHT WASHER PUMP ..	front RH side of engine compartment on washer fluid reservoir .....	08-3	
M9 ...	AUXILIARY FAN MOTOR .....	behind front grille		
M12 ..	DRIVER'S DOOR LOCK MOTOR .....	driver's door		
M13 ..	PASSENGER'S DOOR LOCK MOTOR .....	passenger's door		
M17 ..	TRUNK LOCK MOTOR .....	rear side of luggage compartment behind trim panel		
M21 ..	DRIVER'S WINDOW MOTOR .....	in driver's door .....	17-2	
M23 ..	PASSENGER'S WINDOW MOTOR .....	in passenger's door .....	18-3	
M25 ..	CRUISE CONTROL ACTUATOR (TEMPOMAT) .....	rear LH side of engine compartment .....	08-1	
M30 ..	BLOWER MOTOR .....	rear of engine compartment		
M51 ..	DRIVER'S SEAT MOVEMENT MOTOR .....	under LH front seat .....	25-1	
M51 ..	DRIVER'S SEAT MOVEMENT MOTOR .....	under LH front seat (WITH SPORT SEAT) .....	40-3	
M52 ..	DRIVER'S SEAT HEIGHT MOTOR .....	under LH front seat .....	25-1	
M52 ..	DRIVER'S SEAT HEIGHT MOTOR .....	under LH front seat (WITH SPORT SEAT) .....	40-3	



## COMPONENT LOCATION CHART

Z3

03/98

7000.0-8

1997

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
M59 ..	PASSENGER'S SEAT HEIGHT MOTOR ....	under RH front seat .....		24-1
M60 ..	PASSENGER'S SEAT MOVEMENT MOTOR	under RH front seat .....		24-1
M93 ..	AUXILIARY THROTTLE POSITION MOTOR (ADS) .....	front of engine .....		35-3
M101 ..	CONVERTIBLE TOP MOTOR .....	in LH side of luggage compartment .....		25-3
M111 ..	FRESH AIR RECIRCULATION MOTOR .....	RH side of LH footwell .....		21-2
M6510	STARTER .....	rear LH side of engine compartment .....		02-2
M6506	E-BOX FAN .....	front RH side of engine compartment in E-Box		
N8 ..	ANTENNA AMPLIFIER AM/FM .....	in LH side of luggage compartment behind trim panel		
N9 ..	RADIO .....	center console		
N12w ..	ANTI-THEFT CONTROL MODULE (ALPINE) .....	behind glove box		
N17 ..	CRASH CONTROL MODULE .....	footwell, driver's side .....		19-1
N22 ..	CD CHANGER .....	in LH forward side of luggage compartment		
P90 ...	FRONT POWER DISTRIBUTION BOX .....	rear LH side of engine compartment		
P97 ...	AUXILIARY FUSE BOX .....	below LH side of dash .....		19-1
R11 ..	BLOWER RESISTORS .....	rear of engine compartment behind firewall		
R31 ..	AUXILIARY THROTTLE POSITION SENSOR	front of engine (6-cylinder) .....		33-3
R31 ..	AUXILIARY THROTTLE POSITION SENSOR	front of engine (4-cylinder) .....		37-3
R6252	THROTTLE POSITION SENSOR .....	front of engine (4-cylinder) .....		10-3
R6252	THROTTLE POSITION SENSOR .....	front of engine (6-cylinder) .....		33-3
S2 ....	IGNITION SWITCH .....	LH side of dash		



## COMPONENT LOCATION CHART

### COMP. DESCRIPTION

### LOCATION

7100.0 8500.0

S3 ....	AUTOMATIC TRANSMISSION RANGE SWITCH .....	center console .....	22-1
S4 ....	HORN SWITCH .....	on steering wheel	
S5 ....	WIPER/WASHER SWITCH .....	LH side of dash RH side of steering column above	
S6 ....	ASC SWITCH .....	center console	
S7 ....	COMBINATION SWITCH .....	LH side of dash LH side of steering column above	
S8 ....	LIGHT SWITCH .....	LH side of dash	
S10 ...	FOG LIGHT SWITCH .....	LH side of dash	
S13 ...	PASSENGER'S DOOR JAMB SWITCH .....	RH B-pillar .....	26-1
S14 ...	DRIVER'S DOOR JAMB SWITCH .....	LH B-pillar .....	27-1
S17 ...	MIRROR CONTROL SWITCH .....	in upper LH front door	
S18 ...	HAZARD SWITCH .....	center console bottom	
S20w .	RADIO ANTI-THEFT SWITCH .....	center console (radio and console removed) .....	38-1
S21w .	ENGINE HOOD SWITCH .....	near LH headlight assembly .....	29-1
S28 ...	CRUISE CONTROL SWITCH .....	LH side of dash RH side of steering column above	
S30 ...	BRAKE LIGHT SWITCH .....	LH footwell .....	20-1
S31 ...	PARK BRAKE SWITCH .....	center console on rear of park brake lever	
S32 ...	CLUTCH SWITCH .....	LH footwell .....	20-1
S36 ...	TEMPERATURE SWITCH .....	front RH side of engine compartment .....	30-1
S36y .	DOUBLE TEMPERATURE SWITCH .....	front RH side of engine compartment .....	30-1
S47 ...	DRIVER'S DOOR LOCK SWITCH .....	in driver's door .....	17-1
S49 ...	PASSENGER'S DOOR LOCK SWITCH .....	in passenger's door	

03/98

7000.0-9

1997



## COMPONENT LOCATION CHART

### COMP. DESCRIPTION

### LOCATION

7100.0 8500.0

S51 ...	DRIVER'S SEAT, SEAT CONTROL SWITCH .	LH front seat	
S53 ...	DRIVER'S SEAT, SEAT HEATER SWITCH ...	center console (EARLY PRODUCTION) .....	23-1
S53 ...	DRIVER'S SEAT, SEAT HEATER SWITCH ...	center console (behind seat) (LATE PRODUCTION)	
S54 ...	PASSENGER'S SEAT, SEAT HEATER SWITCH .....	center console (EARLY PRODUCTION) .....	23-1
S54 ...	PASSENGER'S SEAT, SEAT HEATER SWITCH .....	center console (behind seat) (LATE PRODUCTION)	
S56 ...	PASSENGER'S SEAT, SEAT CONTROL SWITCH .....	RH front seat	
S58 ...	DRIVER'S SEAT BELT SWITCH .....	in LH front seat belt buckle	
S59 ...	PASSENGER'S SEAT BELT SWITCH .....	in RH front seat belt buckle	
S75 ...	BLOWER SWITCH .....	center of dash .....	21-3
S76 ...	REAR WINDOW DEFOGGER SWITCH .....	center console	
S126y	DRIVER'S POWER WINDOW SWITCH .....	center console near gearshift lever	
S127y	PASSENGER'S POWER WINDOW SWITCH	center console near gearshift lever	
S143 .	CONVERTIBLE TOP ACTUATING SWITCH .	center console	
S164 .	CONVERTIBLE TOP END-POSITION MICRO SWITCH .....	at convertible top linkage .....	17-3
S198 .	JET HEATER THERMOSWITCH .....	on front LH wheel well .....	12-1
S220 .	AIR CONDITIONING/RECIRCULATING SWITCH ASSEMBLY .....	center console .....	01-3
S221 .	EVAPORATOR CONTROLLER .....	RH side of LH footwell .....	21-2
S235 .	STARTER IMMOBILIZATION SWITCH .....	LH footwell	
S408 .	SIDE LIGHT SWITCH .....	near interior rear view mirror .....	28-2



## COMPONENT LOCATION CHART

Z3

03/98

7000.0-11

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
S531 .	TEMPERATURE WHEEL SWITCH .....	center of dash .....		21-3
S826 .	LUGGAGE COMPARTMENT LIGHT SWITCH .....	underside of trunk lid		
S910 .	DRIVER'S SEAT LIMIT SWITCH .....	in driver's seatback		
S911 .	PASSENGER'S SEAT LIMIT SWITCH .....	in passenger's seatback		
S8503	PROGRAM SWITCH .....	center console .....	22-1	
S8507	KICK-DOWN SWITCH .....	behind gas pedal .....	19-3	
S8511	REVERSING LIGHT SWITCH .....	LH side of transmission .....	14-2	
T6151	CYL. 1 IGNITION COIL .....	RH side of engine compartment		
T6152	CYL. 2 IGNITION COIL .....	RH side of engine compartment		
T6153	CYL. 3 IGNITION COIL .....	RH side of engine compartment		
T6154	CYL. 4 IGNITION COIL .....	RH side of engine compartment		
T6155	CYL. 5 IGNITION COIL .....	RH side of engine compartment		
T6156	CYL. 6 IGNITION COIL .....	RH side of engine compartment		
V7 ....	ASC DIODE .....	Power Distribution Box rear LH side of engine compartment		
X0 ....	B+ JUNCTION POINT .....	rear LH side of engine compartment in Power Distribution Box .....	02-1	
X2 ....	BATTERY B+ START POINT .....	rear LH side of engine compartment in Power Distribution Box		
X16 ...	(26 PINS, NATURAL) .....	LH side of dash rear side of instrument cluster, A2w .....	20-2	00-3
X17 ...	(26 PINS, BLUE) .....	LH side of dash rear side of instrument cluster, A2w .....	20-2	00-3
X20 ...	(25 PINS, BLACK) .....	rear LH side of engine compartment .....	08-1	04-4
X22 ...	(26 PINS, BLUE) .....	behind glove box .....	00-2	00-3
X29 ...	(1 PIN, ---) .....	LH side of steering column		

1997



## COMPONENT LOCATION CHART

03/98

70000-12

1997

COMP. DESCRIPTION	LOCATION	7100.0	8500.0
X32 ... (12 PINS, NATURAL) .....	on steering column .....	19-2	02-4
X33 ... (12 PINS, BLACK) .....	on steering column .....	19-2	02-4
X44 ... (9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....	03-4	
X45 ... (9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....	03-4	
X51 ... (9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....	03-4	
X52 ... (9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....	03-4	
X53 ... (9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....	03-4	
X54 ... (9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....	03-4	
X56 ... (9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....	03-4	
X58 ... (9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....	03-4	
X63 ... (9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....	03-4	
X64 ... (9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....	03-4	
X65 ... (9 PINS, BLACK) .....	below LH side of dash .....	03-4	
X69 ... (25 PINS, GRAY) .....	rear LH side of engine compartment .....	08-1	04-4
X70 ... (8 PINS, BLACK) .....	rear LH side of engine compartment .....	08-1	06-2
X72 ... (6 PINS, NATURAL) .....	on steering column .....	19-2	05-3
X74 ... (50 PINS, YELLOW) .....	below center console .....	22-2	10-2
X78 ... (4 PINS, BLACK) .....	on steering column .....	20-1	03-1
X82 ... (3 PINS, BLACK) .....	under radiator .....	13-1	05-4
X85 ... (3 PINS, BLACK) .....	rear LH side of engine compartment .....	11-1	05-4
X87 ... (3 PINS, BLACK) .....	RH top of radiator .....	30-1	05-4
X105 . (2 PINS, GRAY) .....	on underside of engine hood .....	16-2	



## COMPONENT LOCATION CHART

03/98

7000.0-13

1997

COMP. DESCRIPTION	LOCATION	7100.0	8500.0
X106 . (2 PINS, GRAY) .....	on underside of engine hood .....	16-2	
X107 . (2 PINS, GRAY) .....	front RH side of engine compartment on washer fluid reservoir .....	08-3	
X111 . (2 PINS, BLACK) .....	rear LH side of engine compartment .....	09-1	
X113 . (3 PINS, GRAY) .....	behind RH front wheel .....	13-3	06-3
X114 . (3 PINS, GRAY) .....	behind LH front wheel .....	12-2	06-3
X118 . (2 PINS, BLACK) .....	behind LH front wheel .....	12-2	
X121 . (2 PINS, WHITE) .....	LH footwell .....	20-1	
X123 . (2 PINS, GRAY) .....	front RH side of engine compartment on washer fluid reservoir .....	08-3	
X127 . (4 PINS, BLACK) .....	front RH side of engine compartment .....	30-2	05-3
X128 . (3 PINS, BLACK) .....	front LH side of engine compartment .....	11-2	02-5
X130 . (2 PINS, GRAY) .....	near front LH headlight .....	29-2	
X131 . (2 PINS, BLACK) .....	near front LH headlight .....	29-2	
X132 . (2 PINS, BLACK) .....	on front LH wheel well .....	12-1	
X133 . (2 PINS, BLACK) .....	on front LH wheel well .....	13-2	
X134 . (2 PINS, BLACK) .....	near front RH headlight .....	29-3	
X135 . (2 PINS, GRAY) .....	near front RH headlight .....	29-3	
X137 . (3 PINS, BLACK) .....	front RH side of engine compartment .....	30-3	02-5
X142 . (3 PINS, GRAY) .....	under LH rear of car, ASC .....		06-3
X142 . (2 PINS, GRAY) .....	under LH rear of car, ABS .....	16-1	
X143 . (3 PINS, GRAY) .....	under RH rear of car, ASC .....		06-3
X143 . (2 PINS, GRAY) .....	under RH rear of car, ABS .....	15-3	



## COMPONENT LOCATION CHART

03/98

7000.0-14

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X163 .	(3 PINS, BLACK) .....	front RH side of engine compartment on washer fluid reservoir near RH headlight assembly .....	30-2	05-4
X165 .	GROUND .....	front RH side of engine compartment .....	04-2	
X166 .	GROUND .....	front LH side of engine compartment .....	05-1	
X170 .	GROUND .....	behind LH footwell speaker grille .....	07-2	
X256 .	(26 PINS, BLACK) .....	RH A-pillar .....	18-1	03-5
X257 .	(26 PINS, BLACK) .....	LH A-pillar .....	16-3	03-5
X271 .	(12 PINS, BLACK) .....	LH side of dash rear side of instrument cluster, A2w .....	20-2	01-3
X275 .	(4 PINS, NATURAL) .....	under LH front seat .....	25-2	03-1
X275 .	(4 PINS, NATURAL) .....	under LH front seat (WITH SPORT SEAT) .....	40-3	03-1
X279 .	(4 PINS, NATURAL) .....	under RH front seat .....	24-2	03-1
X279 .	(4 PINS, NATURAL) .....	under RH front seat (WITH SPORT SEAT) .....	41-2	03-1
X285 .	(15 PINS, BLUE) .....	behind glove box .....	00-2	05-1
X295 .	(8 PINS, BLACK) .....	on steering column .....	19-2	03-3
X311 .	(3 PINS, BLACK) .....	in luggage compartment lid .....	28-1	01-1
X315 .	(2 PINS, BLACK) .....	in luggage compartment lid .....	28-1	
X316 .	(4 PINS, YELLOW) .....	center console near gearshift lever .....		07-1
X318 .	(8 PINS, BLACK) .....	in RH rear side of luggage compartment behind RH rear light assembly .....	03-1	02-1
X319 .	(8 PINS, BLACK) .....	in LH side of luggage compartment behind trim panel .....		02-1
X322 .	(6 PINS, BLACK) .....	footwell, driver's side .....	19-1	03-6
X324 .	(4 PINS, YELLOW) .....	center console near gearshift lever .....		07-1
X333 .	(4 PINS, NATURAL) .....	rear of engine compartment below center of cowl .....	03-1	

1997



## COMPONENT LOCATION CHART

03/98

7000.0-15

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X336 .	(3 PINS, BLACK) .....	in upper RH A-pillar .....		01-1
X351 .	(3 PINS, BLACK) .....	RH B-pillar .....	26-1	01-1
X352 .	(3 PINS, BLACK) .....	LH B-pillar .....	27-1	01-1
X357 .	(2 PINS, WHITE) .....	near interior rear view mirror .....	28-2	
X371 .	(3 PINS, BLACK) .....	near front LH headlight .....	29-1	02-5
X372 .	(2 PINS, GRAY) .....	rear LH side of engine compartment .....	09-1	
X379 .	(1 PIN, NATURAL) .....	HARD TOP CONNECTOR 1		
X380 .	(1 PIN, NATURAL) .....	HARD TOP CONNECTOR 1		
X383 .	(2 PINS, BLACK) .....	on differential .....		15-2
X389 .	(2 PINS, BLACK) .....	LEFT FRONT AUXILIARY TURN LIGHT		
X390 .	(2 PINS, BLACK) .....	RIGHT FRONT AUXILIARY TURN LIGHT		
X400 .	(8 PINS, BLACK) .....	center console (EARLY PRODUCTION) .....	23-2	02-1
X400 .	(8 PINS, BLACK) .....	center console (behind seat) (LATE PRODUCTION) .....		02-1
X413 .	(3 PINS, BLACK) .....	HIGH LEVEL STOP LIGHT .....		01-1
X423 .	(1 PIN, ---) .....	below center console on rear of park brake lever		
X424 .	(1 PIN, ---) .....	in LH side of luggage compartment behind trim panel		
X494 .	GROUND .....	below center console .....		07-1
X503 .	(12 PINS, BLACK) .....	LH side of dash .....	20-3	07-2
X504 .	(4 PINS, NATURAL) .....	LH side of dash .....	20-3	03-1
X511 .	(8 PINS, BLACK) .....	center console .....	22-1	02-1
X516 .	(5 PINS, BLACK) .....	center console .....		02-6
X521 .	(6 PINS, BLUE) .....	center console .....		04-5

1997



## COMPONENT LOCATION CHART

03/98

70000-16

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X522 .	(3 PINS, NATURAL) .....	RH side of LH footwell .....		04-3
X531 .	(1 PIN, NATURAL) .....	center console .....	22-3	
X532 .	(2 PINS, BLACK) .....	center console .....	22-3	
X537 .	(3 PINS, BLACK) .....	REAR LEFT MID-HIGH RANGE SPEAKER .....	40-1	01-1
X538 .	(3 PINS, BLACK) .....	REAR RIGHT MID-HIGH RANGE SPEAKER .....	39-3	01-1
X539 .	(2 PINS, BLACK) .....	center console (radio and console removed) .....	38-1	
X605 .	(12 PINS, BLACK) .....	in RH side of luggage compartment behind trim panel .....	27-3	01-5
X606 .	(26 PINS, BLACK) .....	in RH side of luggage compartment behind trim panel .....	27-3	00-3
X623 .	(4 PINS, BLACK) .....	in driver's door .....	17-2	07-1
X624 .	(4 PINS, BLACK) .....	in passenger's door .....	18-3	07-1
X625 .	(6 PINS, BLACK) .....	in driver's door .....	17-2	08-2
X641 .	(6 PINS, BLACK) .....	in passenger's door .....	18-2	07-4
X651 .	(6 PINS, YELLOW) .....	center console (EARLY PRODUCTION) .....	23-1	04-5
X651 .	(6 PINS, YELLOW) .....	center console (behind seat) (LATE PRODUCTION) .....		04-5
X658 .	(6 PINS, YELLOW) .....	center console (EARLY PRODUCTION) .....	23-1	04-5
X658 .	(6 PINS, YELLOW) .....	center console (behind seat) (LATE PRODUCTION) .....		04-5
X660 .	(6 PINS, BLACK) .....	LH front door behind door panel .....		07-4
X700 .	(1 PIN, ---) .....	behind RH footwell speaker grille .....	23-3	
X701 .	(1 PIN, ---) .....	behind LH footwell speaker grille .....		
X709 .	(2 PINS, BLACK) .....	underside of trunk lid, near license plate .....		
X710 .	(2 PINS, BLACK) .....	underside of trunk lid, near license plate .....		
X711 .	(2 PINS, BLACK) .....	in luggage compartment lid .....	28-1	

1997



## COMPONENT LOCATION CHART

03/98

### COMP. DESCRIPTION

### LOCATION

7100.0 8500.0

X712 . (1 PIN, BLACK) .....	in luggage compartment		
X713 . (2 PINS, BLACK) .....	under RH rear of car .....	15-3	
X726 . (2 PINS, NATURAL) .....	under LH front seat .....	25-1	
X726 . (2 PINS, NATURAL) .....	under LH front seat (WITH SPORT SEAT) .....	40-3	
X728 . (2 PINS, BLACK) .....	under LH front seat .....	25-1	
X728 . (2 PINS, BLACK) .....	under LH front seat (WITH SPORT SEAT) .....	40-3	
X733 . (4 PINS, BLACK) .....	under LH front seat .....	25-2	03-1
X733 . (4 PINS, BLACK) .....	under LH front seat (WITH SPORT SEAT) .....	40-3	03-1
X734 . (2 PINS, NATURAL) .....	under RH front seat .....	24-1	
X734 . (2 PINS, NATURAL) .....	under RH front seat (WITH SPORT SEAT) .....	41-1	
X737 . (2 PINS, BLACK) .....	under RH front seat .....	24-1	
X737 . (2 PINS, BLACK) .....	under RH front seat (WITH SPORT SEAT) .....	41-2	
X740 . (4 PINS, BLACK) .....	under RH front seat .....	24-2	03-1
X740 . (4 PINS, BLACK) .....	under RH front seat (WITH SPORT SEAT) .....	41-2	03-1
X742 . (2 PINS, YELLOW) .....	in passenger's door		
X744 . (4 PINS, GRAY) .....	in passenger's door .....	18-3	05-3
X746 . (3 PINS, YELLOW) .....	in passenger's door .....	18-3	05-2
X747 . (2 PINS, YELLOW) .....	in driver's door .....	17-1	
X749 . (2 PINS, GRAY) .....	in driver's door .....	17-2	
X753 . (3 PINS, YELLOW) .....	in driver's door .....	17-2	05-2
X766 . (2 PINS, BLACK) .....	LH front of vehicle		
X767 . (2 PINS, BLACK) .....	RH front of vehicle		

7000.0-17

1997



## COMPONENT LOCATION CHART

03/98

70000-18

1997

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X768 .	(2 PINS, BLACK) .....	on front LH wheel well .....	12-1	
X769 .	(2 PINS, BLACK) .....	RH front of wheel well .....	13-2	
X770 .	(2 PINS, YELLOW) .....	on front LH wheel well (4-cylinder) .....	12-1	
X770 .	(2 PINS, YELLOW) .....	in RH front bumper (6-cylinder) .....	35-2	
X771 .	(2 PINS, NATURAL) .....	RH side of LH footwell .....	21-2	
X778 .	(4 PINS, BLACK) .....	under LH front seat .....		07-1
X778 .	(4 PINS, BLACK) .....	under LH front seat (WITH SPORT SEAT) .....	40-2	07-1
X782 .	(3 PINS, ORANGE) .....	behind glove box above .....	00-3	07-5
X783 .	(3 PINS, ORANGE) .....	underside of steering column .....	38-3	07-5
X861 .	GROUND .....	LH side of engine compartment .....	05-1	
X898 .	(8 PINS, BLACK) .....	under rear storage compartment .....	26-2	08-3
X904 .	(4 PINS, BLACK) .....	rear of engine compartment behind firewall .....		03-1
X905 .	(7 PINS, BLACK) .....	center of dash .....	21-3	09-3
X1014	(1 PIN, BLACK) .....	center console .....	22-3	
X1098	(3 PINS, BLACK) .....	LH side of dash .....	20-3	01-1
X1116	GROUND .....	in LH side of luggage compartment .....	06-3	
X1148	(2 PINS, BLACK) .....	on front LH wheel well .....	12-1	
X1161	(9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....		03-4
X1166	GROUND .....	behind glove box .....	04-3	
X1170	(42 PINS, BLACK) .....	behind glove box .....	00-1	09-4
X1171	(55 PINS, NATURAL) .....	behind glove box .....	00-3	10-3
X1175	(42 PINS, BLACK) .....	behind glove box .....	00-1	09-4



## COMPONENT LOCATION CHART

03/98

70000-19

1997

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X1176	(25 PINS, BLACK) .....	rear LH side of engine compartment .....	35-3	04-4
X1178	(2 PINS, WHITE) .....	center console .....	27-2	
X1193	(3 PINS, BLACK) .....	center console .....	22-1	01-1
X1213	(2 PINS, BLACK) .....	center console		
X1265	(1 PIN, NATURAL) .....	HARD TOP CONNECTOR 1		
X1266	(1 PIN, NATURAL) .....	HARD TOP CONNECTOR 1		
X1380	(1 PIN, ---) .....	behind RH footwell speaker grille .....	23-3	
X1381	(1 PIN, ---) .....	behind LH footwell speaker grille		
X1441	GROUND .....	below center console .....	07-3	
X1517	(6 PINS, BLACK) .....	RH side of LH footwell .....	21-2	09-2
X1588	(2 PINS, BLACK) .....	below LH side of dash .....	19-1	
X1652	(5 PINS, BLACK) .....	behind glove box .....	00-1	06-4
X1659	(15 PINS, YELLOW) .....	behind glove box .....	00-1	05-1
X1715	(6 PINS, BLACK) .....	in RH side of luggage compartment behind trim panel .....	27-3	04-5
X1890	(3 PINS, BLACK) .....	under radiator .....		05-4
X5115	(2 PINS, BLACK) .....	center console (radio and console removed) .....	38-1	
X6000	(88 PINS, NATURAL) .....	rear RH side of engine compartment in E-Box .....	00-1	
X6002	(20 PINS, BLACK) .....	rear RH side of engine compartment .....		04-1
X6031	(12 PINS, BLACK) .....	rear LH side of engine compartment .....	08-1	01-6
X6091	(30 PINS, BLACK) .....	rear of engine compartment on firewall .....	10-1	01-2
X6101	(2 PINS, BLACK) .....	top center of engine		
X6102	(2 PINS, BLACK) .....	top center of engine		



## COMPONENT LOCATION CHART

03/98

7000.0-20

1997

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X6103	(2 PINS, BLACK) .....	top center of engine		
X6104	(2 PINS, BLACK) .....	top center of engine		
X6105	(2 PINS, BLACK) .....	top center of engine		
X6106	(2 PINS, BLACK) .....	top center of engine		
X6120	(2 PINS, BLACK) .....	LH side of engine compartment (4-cylinder) .....	08-2	
X6120	(2 PINS, BLACK) .....	LH side of engine compartment (6-cylinder) .....	34-2	
X6130	(3 PINS, BLACK) .....	front of engine (4-cylinder) .....	10-3	01-6
X6130	(3 PINS, BLACK) .....	front of engine (6-cylinder) .....		01-6
X6131	(2 PINS, BLACK) .....	front LH side of engine compartment .....	11-3	
X6133	(2 PINS, BLACK) .....	rear RH side of engine compartment (6-cylinder) .....	31-2	
X6133	(2 PINS, BLACK) .....	LH side of engine compartment (4-cylinder) .....	37-2	
X6150	(10 PINS, BLACK) .....	rear RH side of engine compartment .....		01-4
X6150	(7 PINS, BLACK) .....	rear RH side of engine compartment .....	31-1	04-2
X6151	(3 PINS, GRAY) .....	top RH side of engine (4-cylinder) .....		08-4
X6151	(3 PINS, BLACK) .....	top RH side of engine (6-cylinder) .....		08-4
X6152	(3 PINS, GRAY) .....	top RH side of engine (4-cylinder) .....		08-4
X6152	(3 PINS, BLACK) .....	top RH side of engine (6-cylinder) .....		08-4
X6153	(3 PINS, BLACK) .....	top RH side of engine (4-cylinder) .....		08-4
X6153	(3 PINS, GRAY) .....	top RH side of engine (6-cylinder) .....		08-4
X6154	(3 PINS, GRAY) .....	top RH side of engine (4-cylinder) .....		08-4
X6154	(3 PINS, BLACK) .....	top RH side of engine (6-cylinder) .....		08-4
X6155	(3 PINS, BLACK) .....	top RH side of engine .....		08-4



## COMPONENT LOCATION CHART

03/98

7000.0-21

1997

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X6156	(3 PINS, BLACK) .....	top RH side of engine .....		08-4
X6163	(2 PINS, BLACK) .....	LH side of engine compartment (6-cylinder) .....	31-3	
X6163	(2 PINS, BLACK) .....	LH side of engine compartment (4-cylinder) .....	37-3	
X6203	(3 PINS, BLACK) .....	front of engine below intake manifold .....	33-1	01-6
X6204	(3 PINS, BLACK) .....	front of engine below intake manifold .....	33-1	01-6
X6205	(2 PINS, BLACK) .....	front LH side of engine compartment (4-cylinder) .....	11-2	
X6205	(2 PINS, BLACK) .....	front LH side of engine compartment (6-cylinder) .....	34-1	
X6207	(4 PINS, BLACK) .....	LH side of engine compartment .....	33-3	03-2
X6209	(3 PINS, BLACK) .....	front of engine HALL EFFECT CAMSHAFT SENSOR .....		06-4
X6210	(4 PINS, BLACK) .....	under center of car .....	35-1	06-1
X6217	(4 PINS, GRAY) .....	front LH side of engine compartment .....	11-3	03-2
X6220	(4 PINS, BLACK) .....	under center of car .....	35-1	06-1
X6231	(2 PINS, BLACK) .....	RH front of engine (4-cylinder) .....	10-2	
X6231	(2 PINS, BLACK) .....	front of engine (6-cylinder) .....	32-2	
X6232	(4 PINS, BLACK) .....	RH front of engine .....	10-2	06-1
X6240	(4 PINS, BLACK) .....	LH side of engine near starter (4-cylinder) .....	02-2	06-1
X6240	(4 PINS, BLACK) .....	LH side of engine (6-cylinder) .....	33-1	06-1
X6247	(2 PINS, BLACK) .....	under LH rear of car .....	36-1	
X6252	(3 PINS, BLACK) .....	front of engine (4-cylinder) .....	10-3	06-4
X6252	(3 PINS, BLACK) .....	front of engine (6-cylinder) .....	33-3	01-6
X6256	(4 PINS, BLACK) .....	rear of engine compartment .....		02-6
X6263	(2 PINS, BLACK) .....	under LH center of car .....	36-2	



## COMPONENT LOCATION CHART

03/98

7000.0-22

1997

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X6275	(2 PINS, BLACK) .....	top center of engine .....	31-3	
X6300	(9 PINS, BLACK) .....	rear RH side of engine compartment in E-Box .....	03-4	
X6301	(9 PINS, BLACK) .....	below LH side of dash .....	03-4	
X6304	(9 PINS, BLACK) .....	rear RH side of engine compartment in E-Box (6-cylinder) .....	03-4	
X6304	(9 PINS, BLACK) .....	rear LH side of engine compartment (4-cylinder) .....	03-4	
X6326	(9 PINS, BLACK) .....	rear RH side of engine compartment in E-Box .....	03-4	
X6430	CABLE SOCKET B+ JUMP START JUNCTION POINT .....	rear RH side of engine compartment		
X6431	CABLE SOCKET B+ JUMP START JUNCTION POINT .....	rear RH side of engine compartment		
X6432	CABLE SOCKET B+ JUMP START JUNCTION POINT .....	rear RH side of engine compartment		
X6454	GROUND .....	rear RH side of engine compartment (4-cylinder) .....	04-1	
X6454	GROUND .....	rear RH side of engine compartment (6-cylinder) .....	04-2	
X6455	GROUND .....	rear RH side of engine compartment .....	04-2	
X6456	GROUND .....	rear RH side of engine compartment (4-cylinder) .....	04-1	
X6456	GROUND .....	rear RH side of engine compartment (6-cylinder) .....	06-1	
X6500	(6 PINS, BLACK) .....	under rear storage compartment .....	39-1	06-5
X6501	(3 PINS, BLACK) .....	under rear storage compartment .....	39-1	02-5
X6506	(2 PINS, BLACK) .....	rear RH side of engine compartment in E-Box		
X6509	CABLE SOCKET ALTERNATOR B+ .....	front LH side of engine compartment .....	02-3	
X6510	CABLE SOCKET STARTER, TERMINAL 50 ..	rear LH side of engine compartment at starter .....	02-2	
X6511	CABLE SOCKET STARTER, TERMINAL 30h	rear LH side of engine compartment at starter		



## COMPONENT LOCATION CHART

03/98

7000.0-23

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X6512	CABLE SOCKET STARTER, TERMINAL 30 .	rear LH side of engine compartment at starter .....	02-2	
X6524	(3 PINS, BLACK) .....	front LH side of engine compartment .....		01-6
X6550	(2 PINS, BLACK) .....	under LH center of car .....		34-3
X7509	CABLE SOCKET ALTERNATOR, TERMINAL D+ .....	front LH side of engine compartment .....	02-3	
X8500	(88 PINS, NATURAL) .....	rear RH side of engine compartment in E-Box .....		00-1
X8503	(6 PINS, YELLOW) .....	center console .....	22-1	04-5
X8505	(16 PINS, BLACK) .....	on RH side of transmission .....	15-1	10-4
X8507	(1 PIN, BLACK) .....	behind gas pedal .....		19-3
X8511	(2 PINS, BLACK) .....	LH side of transmission .....		14-2
X8516	(2 PINS, BLACK) .....	LH side of transmission .....		
X8521	(9 PINS, BLACK) .....	on RH side of transmission .....	15-1	09-1
X9633	GROUND .....	behind LH footwell speaker grille .....	07-2	
X9990	(3 PINS, BLACK) .....	in driver's seatback .....		10-1
X9991	(10 PINS, BLACK) .....	underside of LH front seat .....	40-2	01-2
X9994	(3 PINS, BLACK) .....	in passenger's seatback .....		10-1
X9995	(10 PINS, BLACK) .....	underside of RH front seat .....	41-1	01-2
X9997	(2 PINS, ORANGE) .....	behind steering wheel .....		
X10010	GROUND .....	behind glove box .....		04-3
X10013	(2 PINS, NATURAL) .....	behind steering wheel .....		
X10054	(8 PINS, BLACK) .....	RH side of LH footwell .....	21-1	02-1
X10065	(2 PINS, WHITE) .....	LH footwell .....		14-1

1997



## COMPONENT LOCATION CHART

Z3

03/98

7000.0-24

1997

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X10088	(2 PINS, BLACK) .....	front RH side of engine compartment .....	30-3	
X10094	(2 PINS, BLACK) .....	front of engine .....	35-3	
X10098	(1 PIN, NATURAL) .....	Power Distribution Box rear LH side of engine compartment		
X10099	(1 PIN, ---) .....	Power Distribution Box rear LH side of engine compartment		
X10182	(18 PINS, BLACK) .....	behind glove box .....	07-3	
X10214	(3 PINS, BLACK) .....	under LH front seat .....	40-2	05-2
X10215	(3 PINS, BLACK) .....	under RH front seat .....	41-1	05-2
X10216	(3 PINS, BLACK) .....	in LH front seat belt buckle .....	38-2	07-5
X10217	(3 PINS, BLACK) .....	in RH front seat belt buckle .....	38-2	07-5
X10218	(3 PINS, NATURAL) .....	under RH front seat (WITH SPORT SEAT) .....	41-2	01-1
X10218	(3 PINS, NATURAL) .....	under RH front seat .....	24-2	01-1
X10238	(3 PINS, BLACK) .....	front of engine		
X10239	(3 PINS, BLACK) .....	front of engine (6-cylinder) .....	33-3	01-6
X10239	(3 PINS, BLACK) .....	front of engine (4-cylinder) .....	37-3	01-6
X10244	(1 PIN, BLACK) .....	behind glove box .....	24-3	
X10245	(12 PINS, BLACK) .....	center console .....	01-3	01-3
X10246	(12 PINS, BLACK) .....	in rear left speaker box .....	26-3	01-3
X10260	(3 PINS, NATURAL) .....	near steering column .....	01-2	01-1
X10262	(9 PINS, BLACK) .....	below LH side of dash .....	03-4	
X10263	(6 PIN, BLACK) .....	center console .....	04-5	
X10299	(4 PINS, BLACK) .....	RH rear wheel well .....	17-3	03-1
X11104	(1 PIN, ---) .....	near interior rear view mirror .....	28-2	



## COMPONENT LOCATION CHART

03/98

7000.0-25

1997

COMP. DESCRIPTION	LOCATION	7100.0	8500.0
X11105 (1 PIN, ---) .....	near interior rear view mirror .....	28-2	
X11106 (1 PIN, ---) .....	near interior rear view mirror .....	28-2	
X11209 (4 PINS, BLACK) .....	near RH rear wheel well .....	17-3	03-1
X11287 CONNECTORS SOLDERED UP .....	center of dash		
X11379 (3 PINS, BLACK) .....	RH top of radiator .....	30-1	05-4
X11394 (25 PINS, BLACK) .....	rear LH side of engine compartment .....	00-2	
X13004 GROUND .....	behind glove box .....	04-3	
X13006 GROUND .....	in LH side of luggage compartment .....	05-3	
X13016 GROUND .....	in LH side of luggage compartment .....	05-2	
X13017 (2 PINS, BLUE) .....	hard top		
X13025 (12 PINS, BLACK) .....	behind glove box .....	24-3	02-4
X13032 GROUND .....	under rear storage compartment .....	06-2	
X13045 (6 PINS, NATURAL) .....	center console .....		04-5
X13146 (8 PINS, BLACK) .....	in LH side of luggage compartment .....	25-3	02-1
X13233 (1 PIN, BLACK) .....	center of dash behind center console		
X13252 (15 PINS, BLACK) .....	behind glove box .....	05-1	
X13253 (26 PINS, YELLOW) .....	behind glove box .....	00-3	
X13254 (26 PINS, GREEN) .....	behind glove box .....	00-3	
X13287 (1 PIN, WHITE) .....	center of dash behind center console		
X18080 (1 PIN, BLACK) .....	in LH side of luggage compartment		
X18126 (17 PINS, BLACK) .....	center console behind radio .....	02-2	
X18170 GROUND .....	below center console .....	07-1	



## COMPONENT LOCATION CHART

03/30

7000.0-26

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X18180	(3 PINS, BLACK)	in RH rear side of luggage compartment	01-1	
X18190	(3 PINS, BLACK)	in driver's door	17-2	05-2
X18196	(10 PINS, BLACK)	LH A-pillar	16-3	02-3
X18198	(10 PINS, BLACK)	RH A-pillar	18-1	02-3
X18279	(2 PINS, GRAY)	in driver's door		
X18280	(2 PINS, GRAY)	in passenger's door		
X18333	(2 PINS, BLACK)	on instrument cluster		
X18349	(8 PINS, BLACK)	center console	01-3	08-3
X18350	(6 PINS, BLACK)	RH side of LH footwell	21-2	03-6
X18363	(9 PINS, BLACK)	in LH side of luggage compartment	03-4	
X18364	(9 PINS, BLACK)	in LH side of luggage compartment	03-4	
X18516	(3 PINS, BLACK)	in passenger's door	18-3	05-2
X18518	(4 PINS, BLACK)	under RH front seat	07-1	
X18518	(4 PINS, BLACK)	under RH front seat (WITH SPORT SEAT)	41-1	07-1
X18520	(10 PINS, BLACK)	center console RADIO		
X18521	(10 PINS, BLACK)	RH side of luggage compartment CD CHANGER		
X18774	(4 PINS, NATURAL)	in rear speaker box	26-3	03-1
X18983	(2 PINS, BLACK)	center of dash		
X18984	(2 PINS, BLACK)	center of dash	21-3	
X18994	(3 PINS, YELLOW)	LH footwell	01-1	
X19527	(16 PINS, BLACK)	center console right	28-3	08-1
X19528	(3 PINS, NATURAL)	top of fuel tank	39-2	02-5

1997



## COMPONENT LOCATION CHART

03/98

7000.0-27

1997

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X23146	(2 PINS, BLACK) .....	in LH side of luggage compartment .....	25-3	
X62001	(4 PINS, BLACK) .....	under center of car .....	14-3	06-1
X62002	(4 PINS, BLACK) .....	under center of car .....		06-1
X90260	(3 PINS, BLACK) .....	near steering column .....	01-2	01-1
X91009	(2 PINS, BLACK) .....	under RH front seat .....	41-2	
Y1w ..	ABS HYDRAULIC UNIT .....	rear LH side of engine compartment (4-cylinder) .....	08-2	
Y1w ..	ABS HYDRAULIC UNIT .....	rear LH side of engine compartment (6-cylinder) .....	35-3	
Y2 ....	AIR CONDITIONING COMPRESSOR .....	front RH side of engine compartment		
Y4z ..	WATER VALVE .....	rear LH side of engine compartment .....	11-1	
Y5 ....	DRIVER'S SIDE MIRROR .....	in upper LH front door		
Y6 ....	PASSENGER'S SIDE MIRROR .....	in upper RH front door		
Y19 ...	SHIFT-LOCK .....	center console .....	27-2	
Y6101	CYL. 1 FUEL INJECTION VALVE .....	on cylinder head		
Y6102	CYL. 2 FUEL INJECTION VALVE .....	on cylinder head		
Y6103	CYL. 3 FUEL INJECTION VALVE .....	on cylinder head		
Y6104	CYL. 4 FUEL INJECTION VALVE .....	on cylinder head		
Y6105	CYL. 5 FUEL INJECTION VALVE .....	on cylinder head		
Y6106	CYL. 6 FUEL INJECTION VALVE .....	on cylinder head		
Y6120	EVAPORATIVE EMISSION VALVE .....	LH side of engine compartment (4-cylinder) .....	08-2	
Y6120	EVAPORATIVE EMISSION VALVE .....	LH side of engine compartment (6-cylinder) .....	34-2	
Y6130	IDLE SPEED CONTROL VALVE .....	front of engine (4-cylinder) .....	10-3	
Y6130	IDLE SPEED CONTROL VALVE .....	front of engine (6-cylinder)		



## COMPONENT LOCATION CHART

03/98



7000.0-28

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
Y6131	INTAKE AIR RESONANCE CHANGEOVER VALVE .....	front of engine .....	11-3	
Y6133	AIR PUMP .....	LH side of engine compartment (4-cylinder) .....	37-2	
Y6133	AIR PUMP .....	rear RH side of engine compartment (6-cylinder) .....	31-2	
Y6163	SECONDARY AIR PUMP VALVE .....	LH side of engine compartment (6-cylinder) .....	33-2	
Y6163	SECONDARY AIR PUMP VALVE .....	LH side of engine compartment (4-cylinder) .....	37-3	
Y6263	FUEL CHANGEOVER VALVE .....	under LH center of car .....	36-2	
Y6275	VARIABLE CAMSHAFT CONTROL VALVE 1	on cylinder head .....	31-3	
Y6550	SOLENOID VALVE ("RUNNING LOSSES") ..	under LH center of car .....	34-3	
Y8505y	TRANSMISSION VALVE UNIT .....	on RH side of transmission .....	15-1	
Y8521	TRANSMISSION VALVE UNIT .....	on RH side of transmission .....	15-1	

1997

## COMPONENT LOCATION VIEWS


### ELECTRICAL CONTROL MODULE LOCATIONS

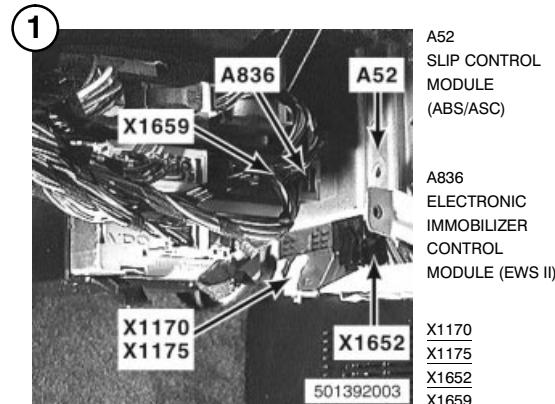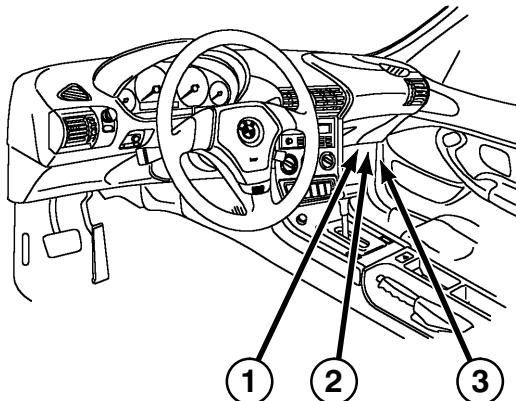

A52  
SLIP CONTROL  
MODULE  
(ABS/ASC)

A836  
ELECTRONIC  
IMMOBILIZER  
CONTROL  
MODULE (EWS II)

X1170  
X1175  
X1652  
X1659

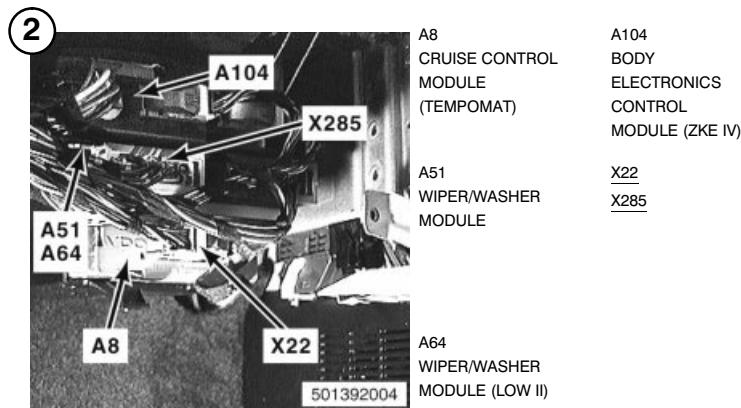

A8  
CRUISE CONTROL  
MODULE  
(TEMPOMAT)


X22  
X285

A104  
BODY  
ELECTRONICS  
CONTROL  
MODULE (ZKE IV)

A51  
WIPER/WASHER  
MODULE

A64  
WIPER/WASHER  
MODULE (LOW II)

501392004

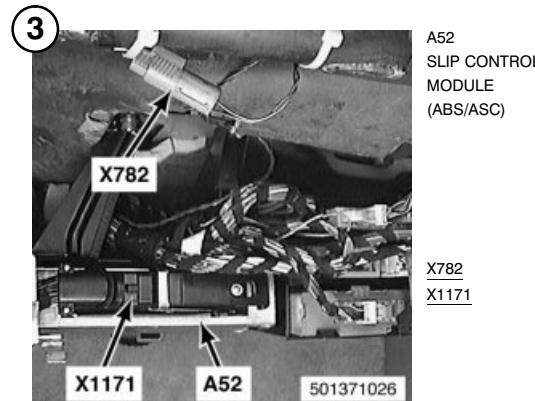



A52  
SLIP CONTROL  
MODULE  
(ABS/ASC)

X782  
X1171

501371026

## COMPONENT LOCATION VIEWS


### ELECTRICAL CONTROL MODULE LOCATIONS

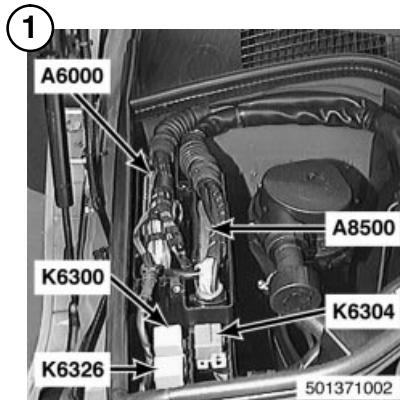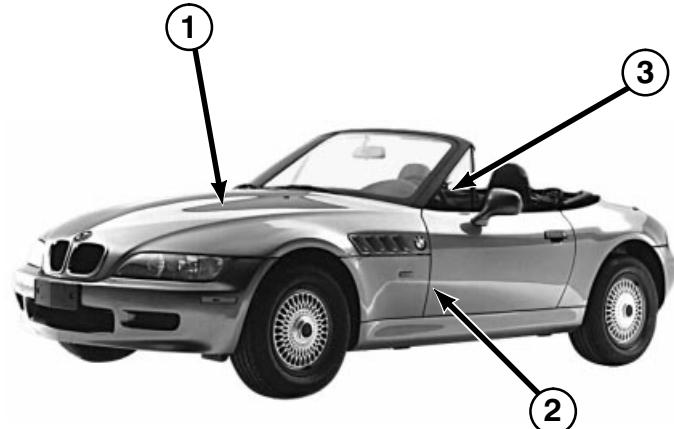

A6000  
ENGINE CONTROL  
MODULE (DME)  
K6304  
SECONDARY AIR  
PUMP RELAY


A8500  
TRANSMISSION  
CONTROL  
MODULE (EGS)  
K6326  
UNLOADER RELAY,  
TERMINAL 15

K6300  
ENGINE CONTROL  
MODULE RELAY

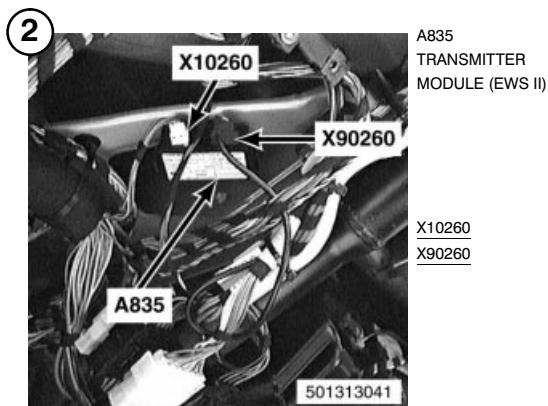

A835  
TRANSMITTER  
MODULE (EWS II)

X10260  
X90260

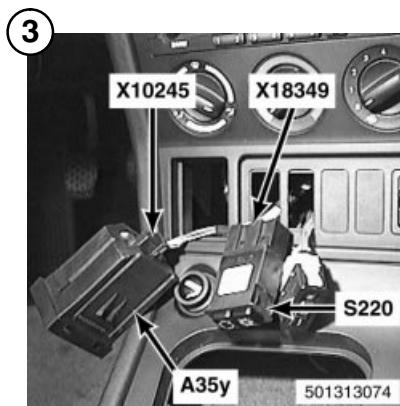

A35y  
BOARD  
COMPUTER  
(BC-LOW)

S220  
AIR CONDITIONING/  
RECIRCULATING  
SWITCH ASSEMBLY

X10245  
X18349





A35y  
501313074

## COMPONENT LOCATION VIEWS

03/98

7100.0-02

1997

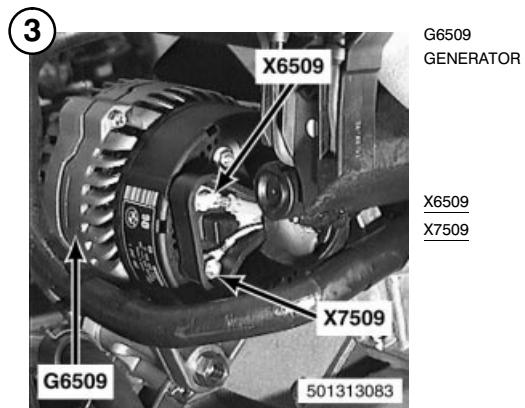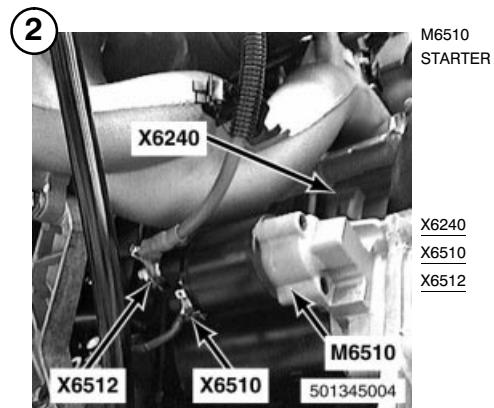
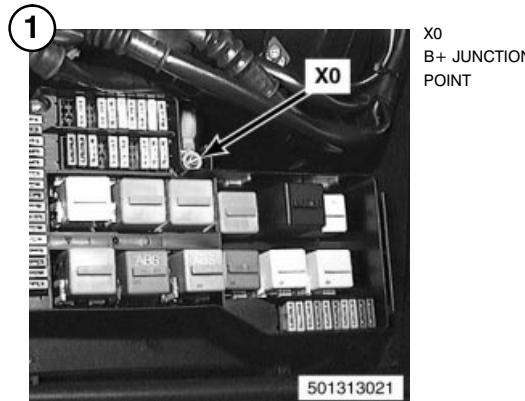
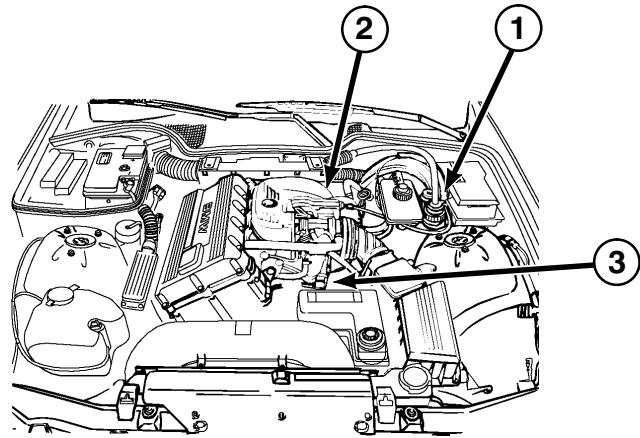


## COMPONENT LOCATION VIEWS

03/98

7100.0-03

1997

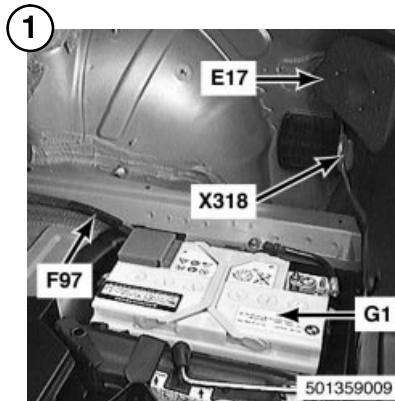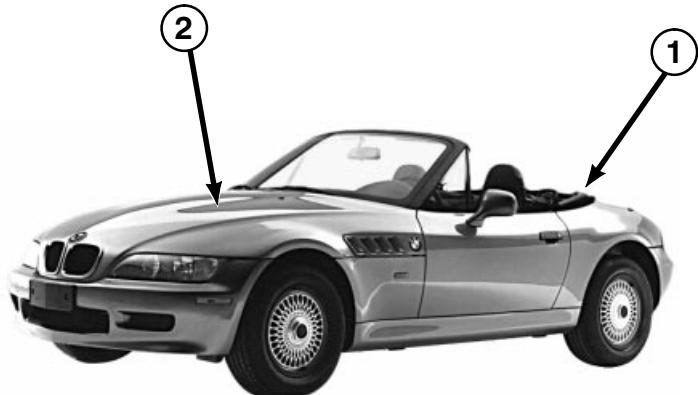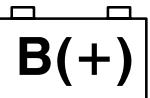

E17  
RIGHT REAR LIGHT  
ASSEMBLY

X318

F97  
FUSIBLE LINK

G1  
BATTERY



G6430  
B+ JUMP START  
JUNCTION POINT




501359024






## COMPONENT LOCATION VIEWS

Z3





B(-)

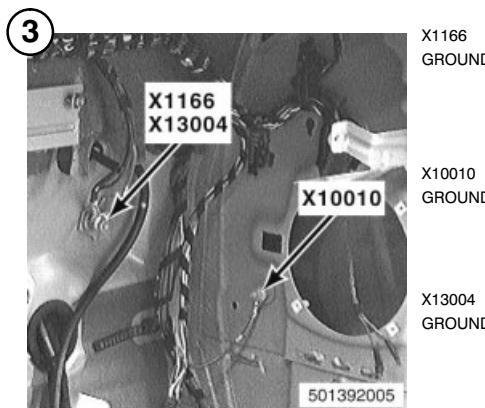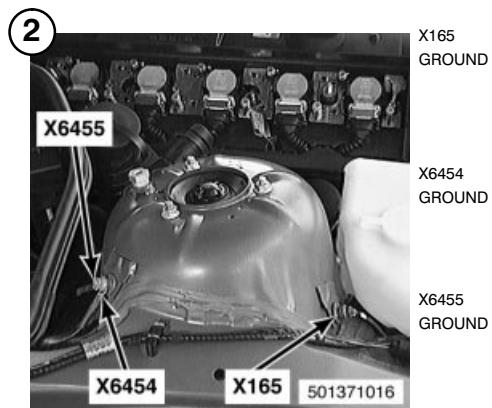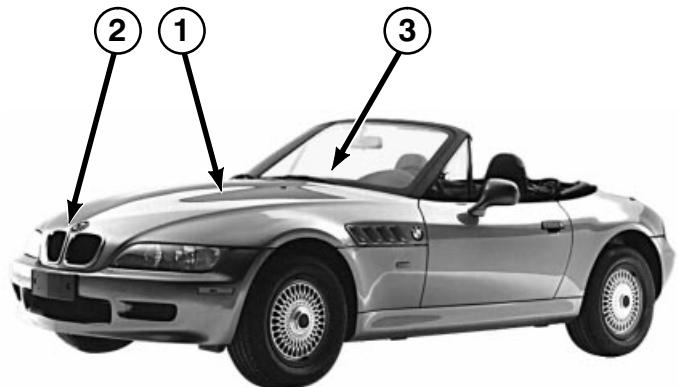

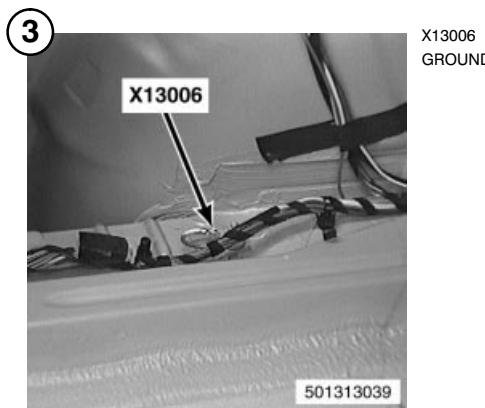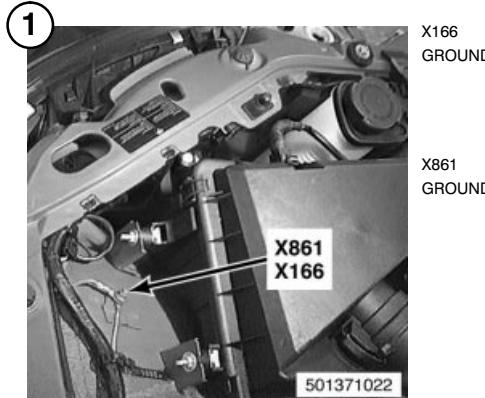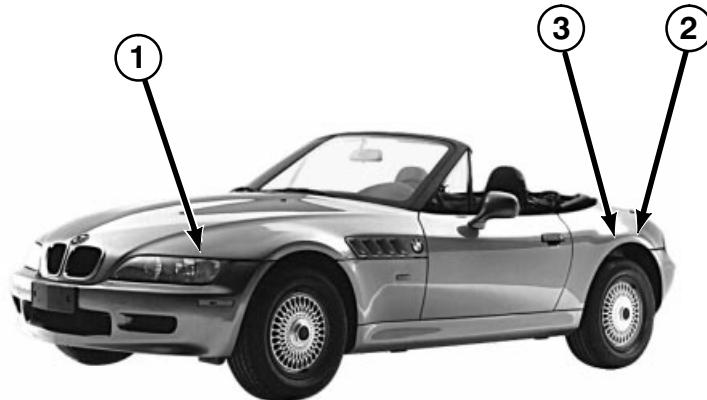

## COMPONENT LOCATION VIEWS

**B(-)**

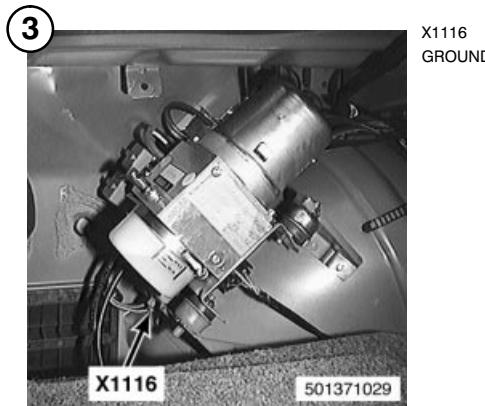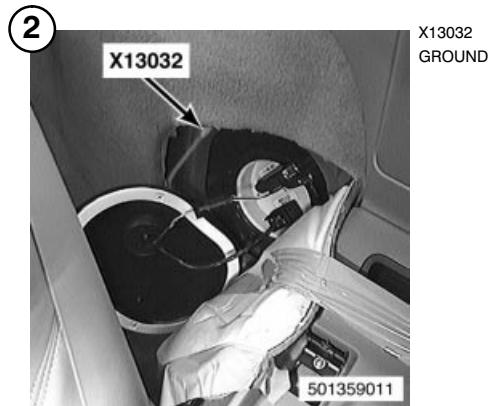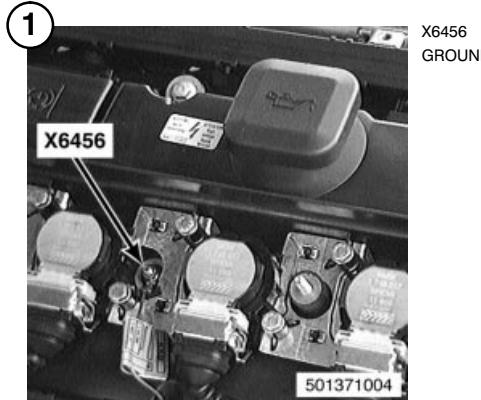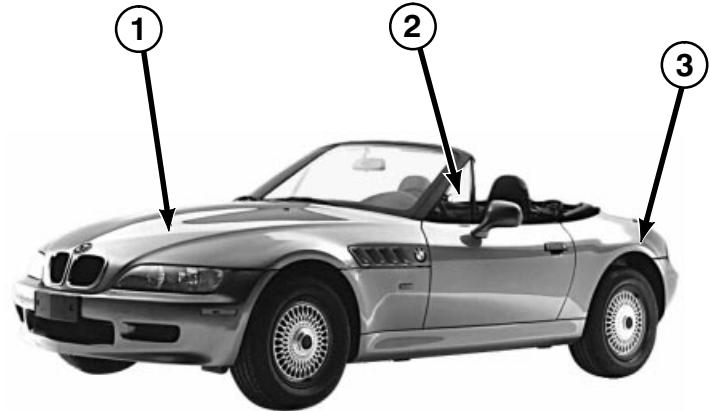

BMW

**Z3**




**B(-)**

## COMPONENT LOCATION VIEWS

8/98

7100.0-07

1997

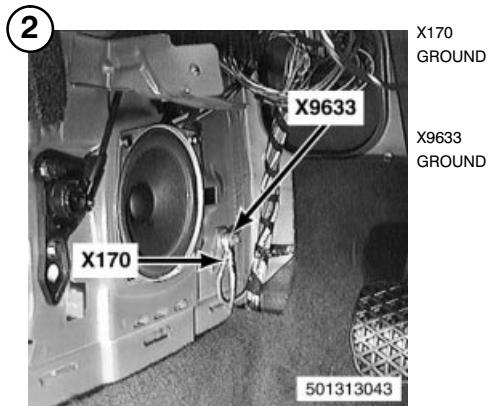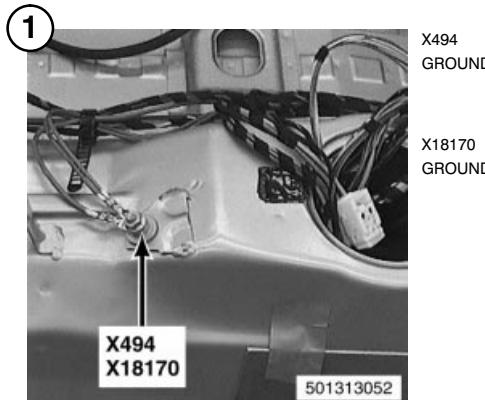
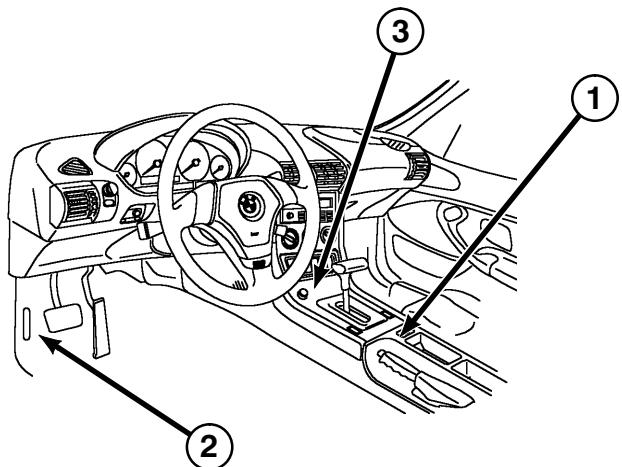


## COMPONENT LOCATION VIEWS

0/98


7100.0-08

1997

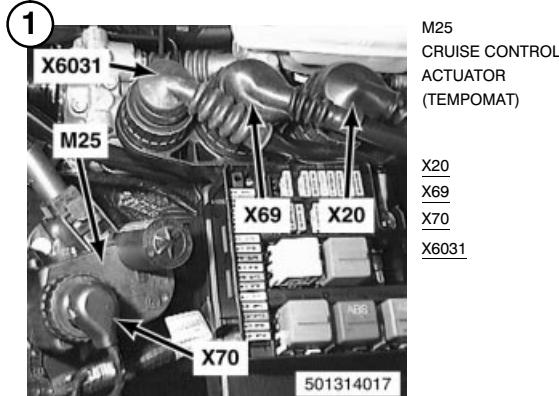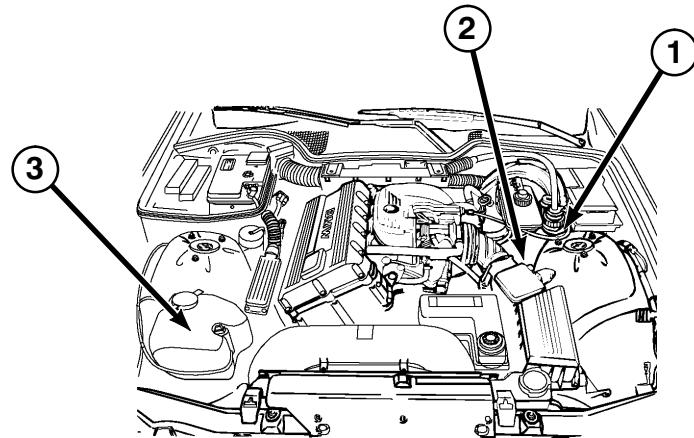

M25  
CRUISE CONTROL  
ACTUATOR  
(TEMPOMAT)

X20  
X69  
X70  
X6031

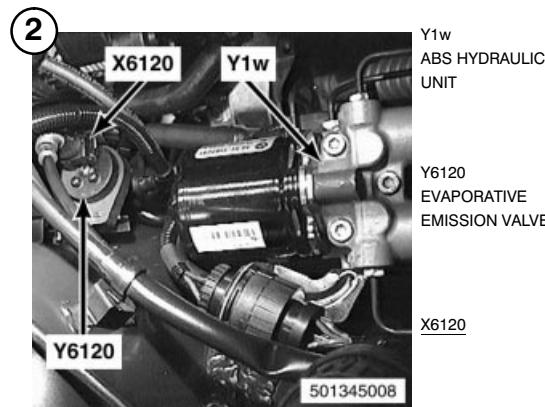


Y1w  
ABS HYDRAULIC  
UNIT

Y6120  
EVAPORATIVE  
EMISSION VALVE

X6120

501345008

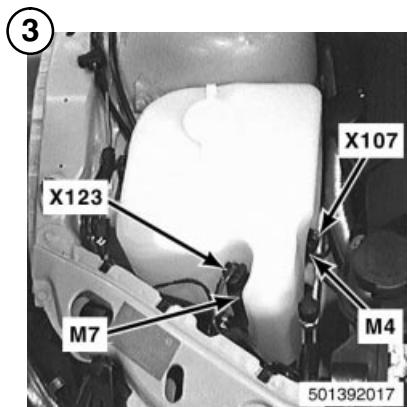



M4  
WASHER PUMP

M7  
HEADLIGHT/FOG  
LIGHT WASHER  
PUMP

X107  
X123

501392017


## COMPONENT LOCATION VIEWS

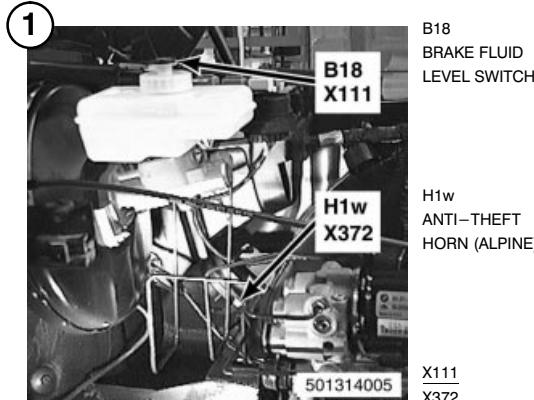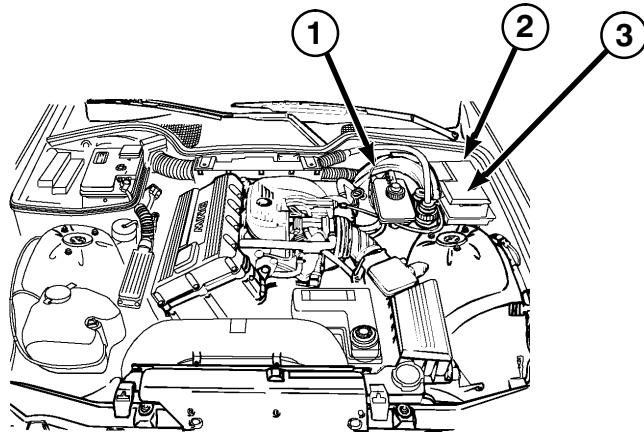

B18  
BRAKE FLUID  
LEVEL SWITCH

H1w  
ANTI-THEFT  
HORN (ALPINE)


X111  
X372

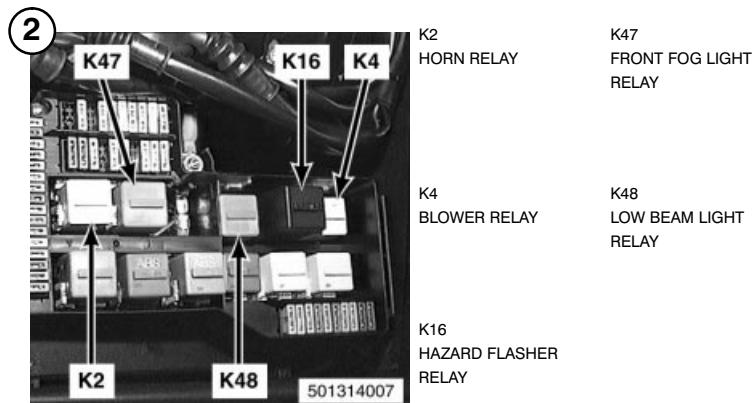

K2 HORN RELAY  
K47 FRONT FOG LIGHT  
RELAY

K4 BLOWER RELAY  
K48 LOW BEAM LIGHT  
RELAY

K16 HAZARD FLASHER  
RELAY




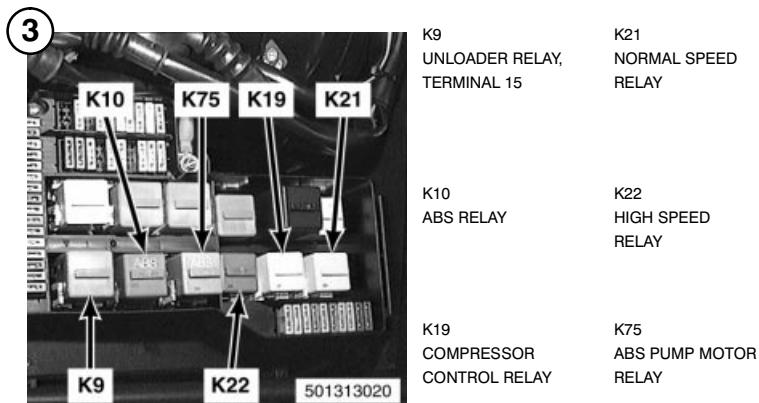






K9 UNLOADER RELAY,  
TERMINAL 15  
K21 NORMAL SPEED  
RELAY

K10 ABS RELAY  
K22 HIGH SPEED  
RELAY

K19 COMPRESSOR  
CONTROL RELAY  
K75 ABS PUMP MOTOR  
RELAY

## COMPONENT LOCATION VIEWS

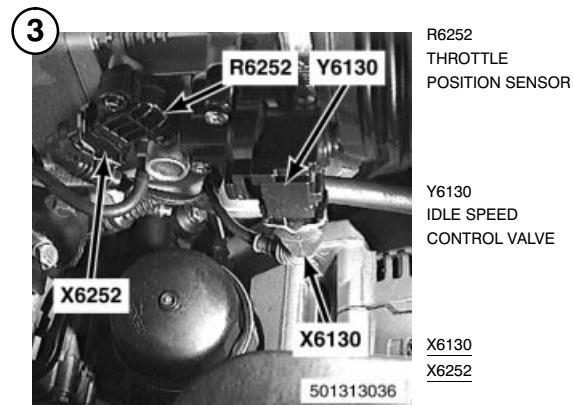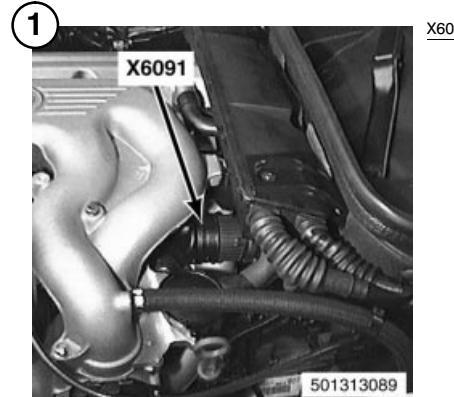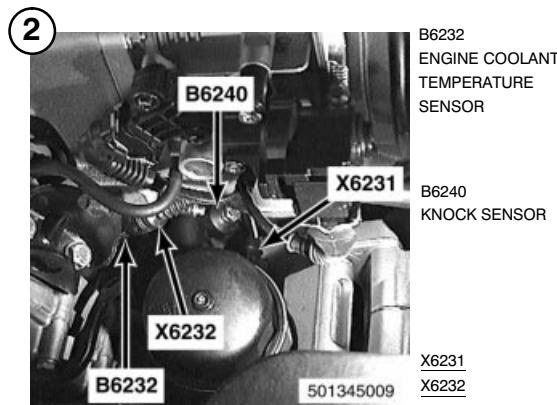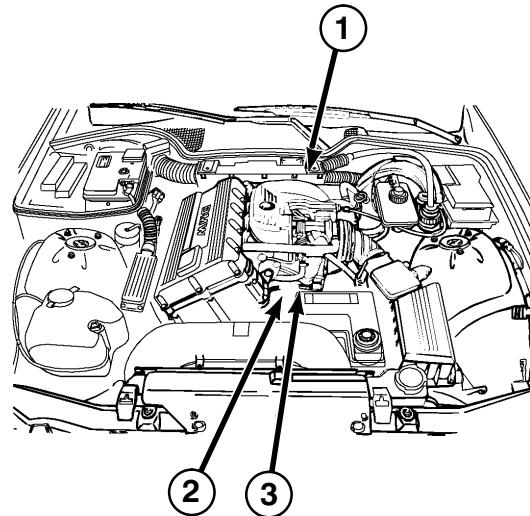

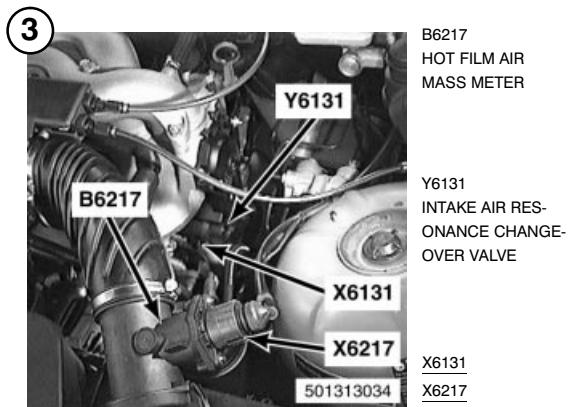
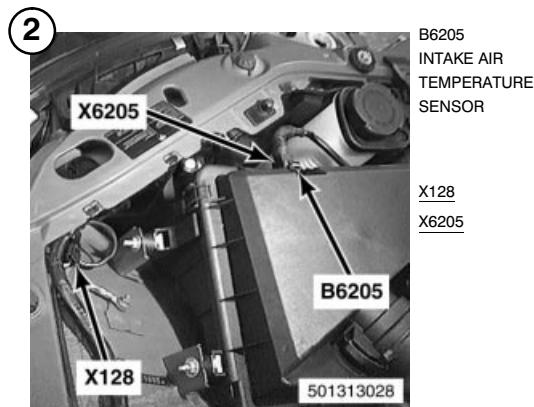
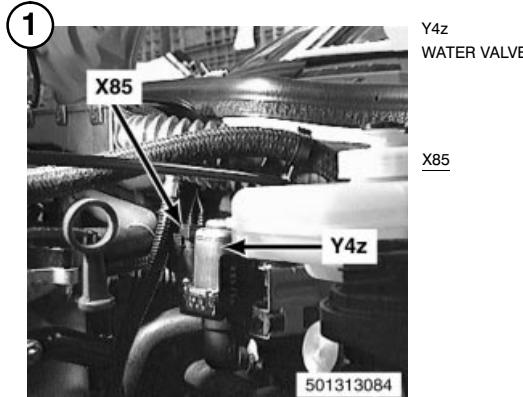
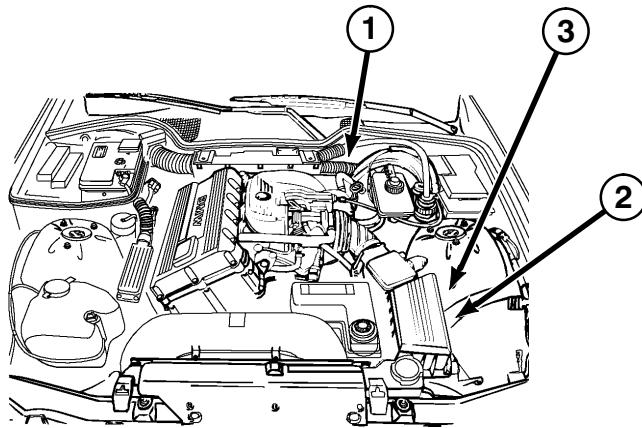
**COMPONENT LOCATION VIEWS**

## COMPONENT LOCATION VIEWS

03/98

7100.0-12

1997

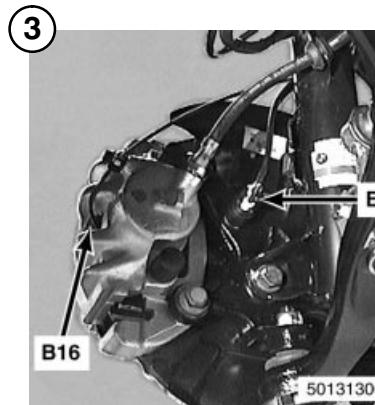
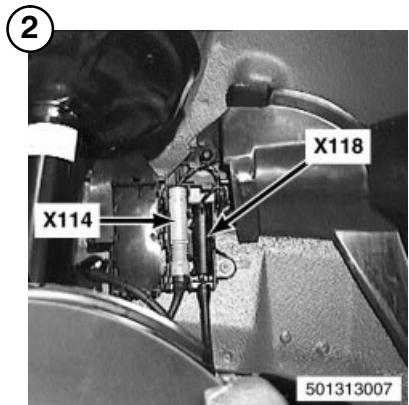
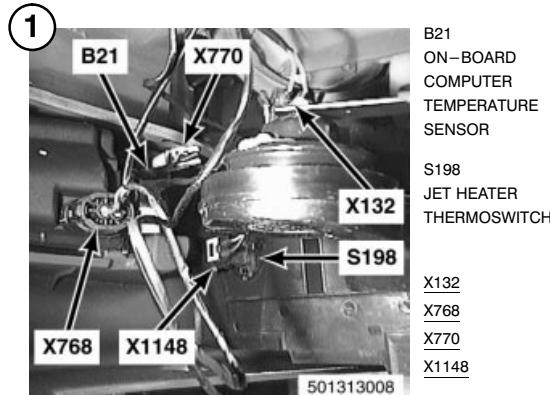
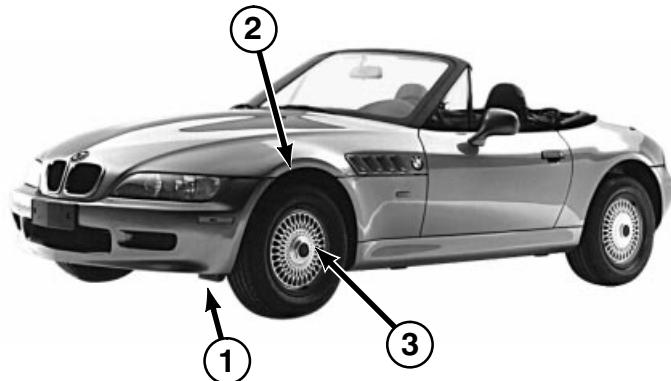


## COMPONENT LOCATION VIEWS



03/98

7100.0-13

1997

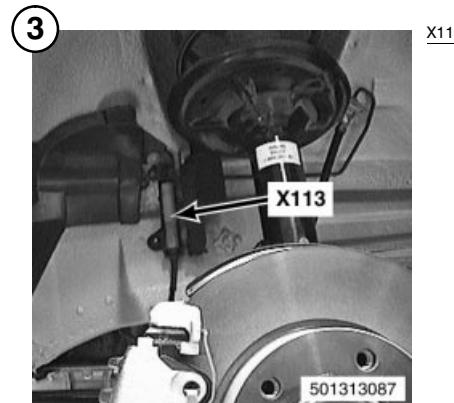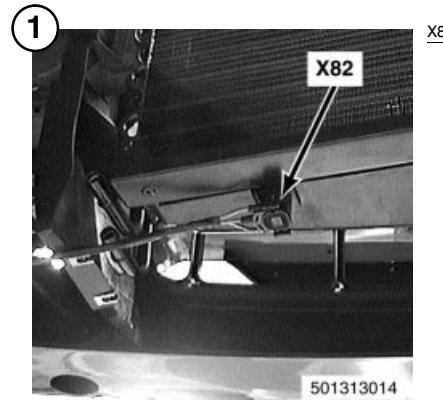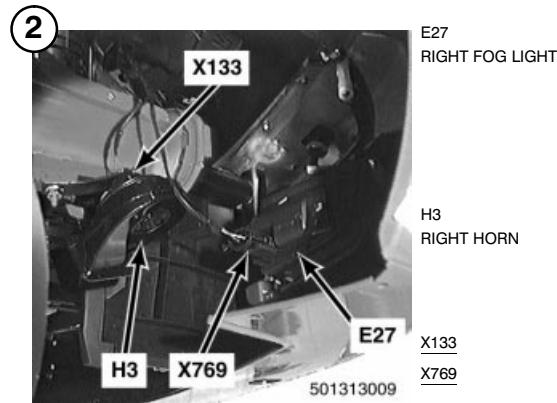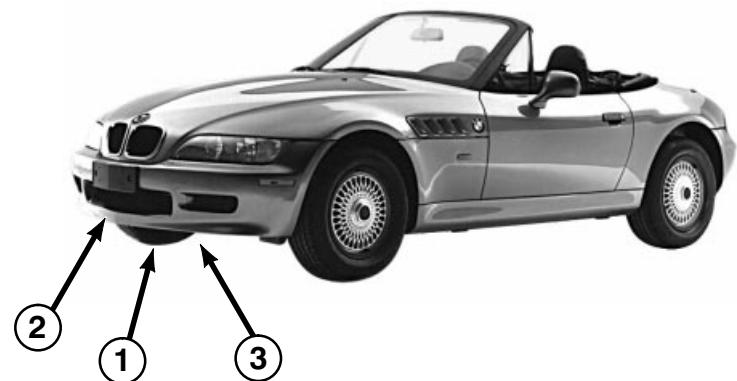


## COMPONENT LOCATION VIEWS

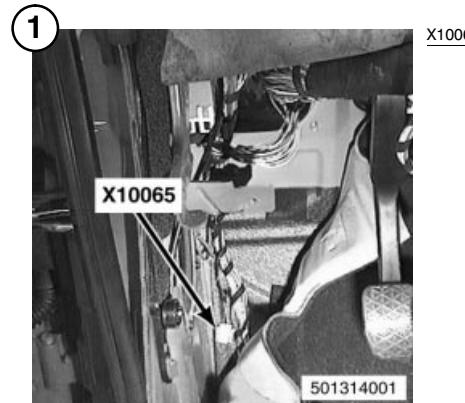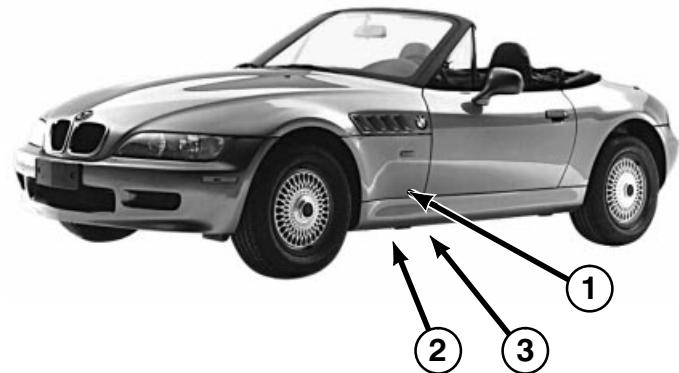

X10065


X10065

501314001

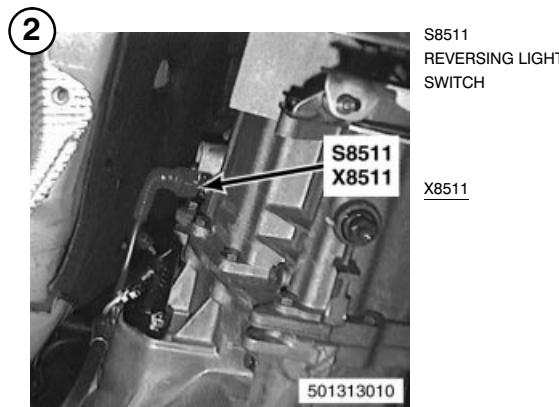S8511  
REVERSING LIGHT  
SWITCH

X8511





501313010

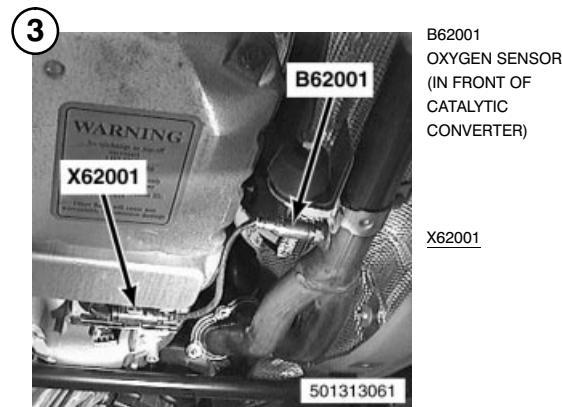B62001  
OXYGEN SENSOR  
(IN FRONT OF  
CATALYTIC  
CONVERTER)





X62001

501313061



## COMPONENT LOCATION VIEWS

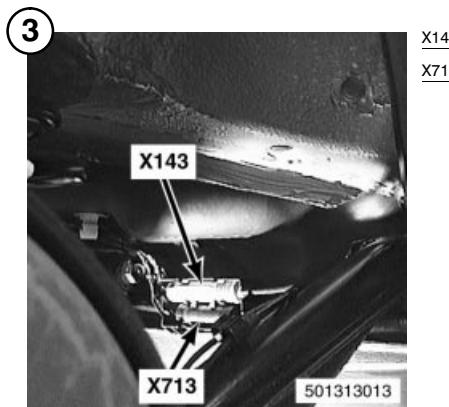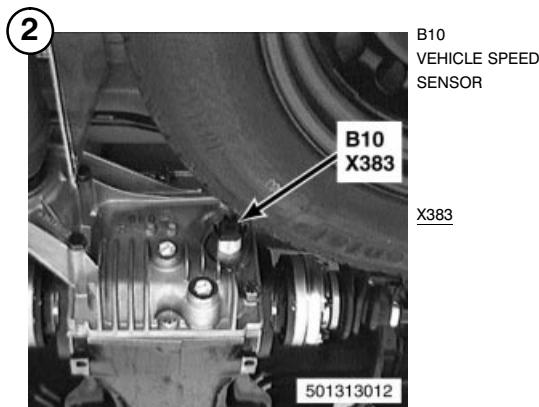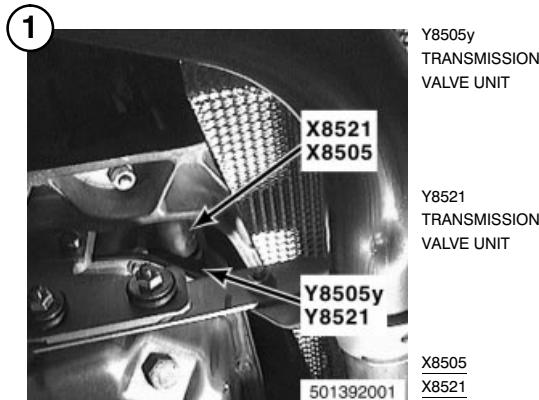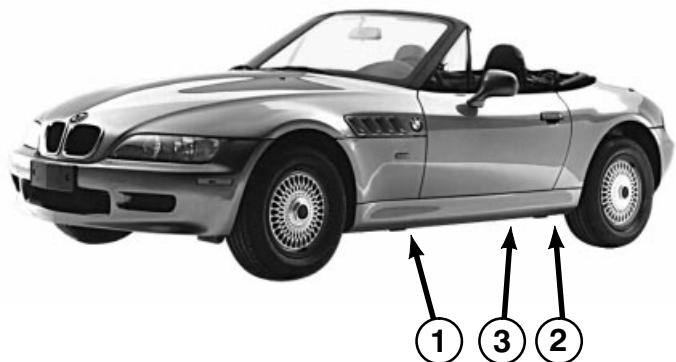

## COMPONENT LOCATION VIEWS

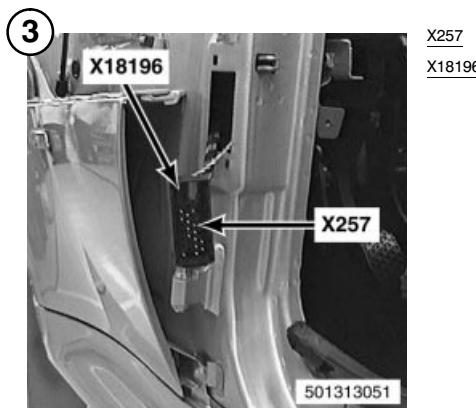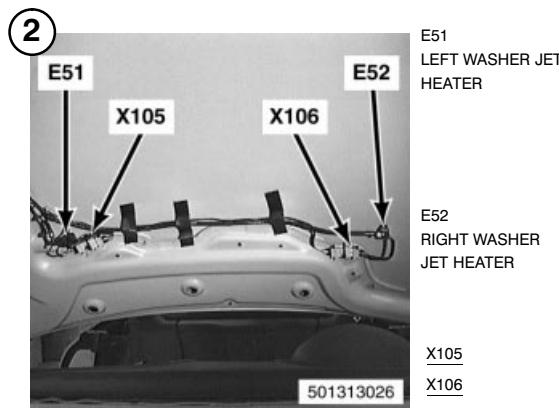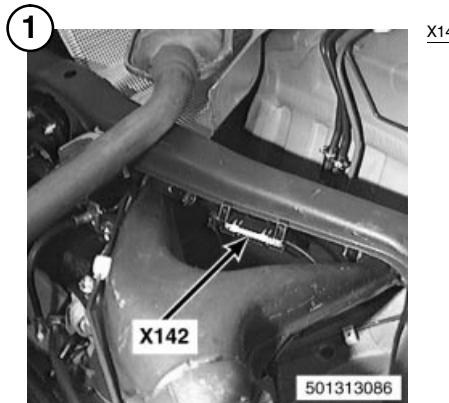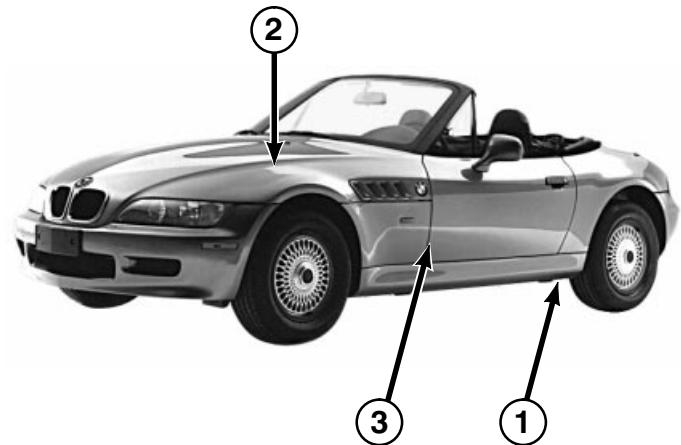


## COMPONENT LOCATION VIEWS

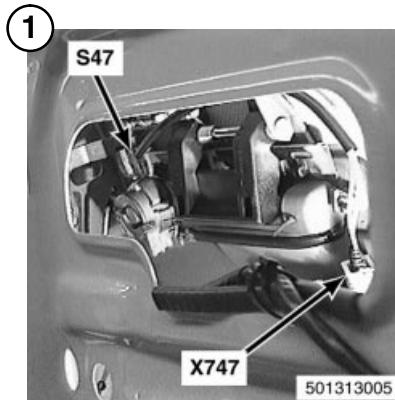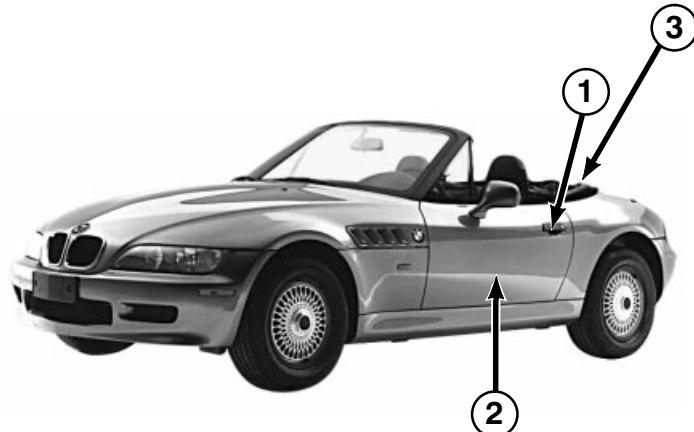


S47  
DRIVER'S DOOR  
LOCK SWITCH

X747

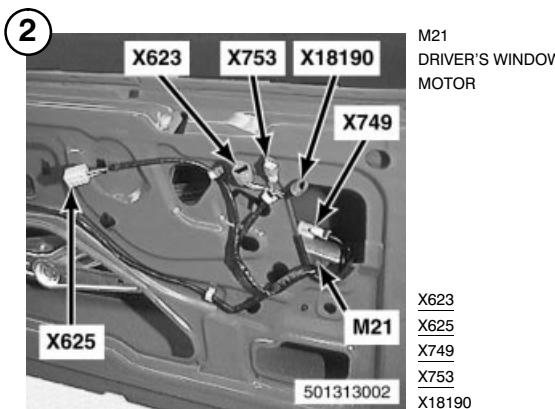

M21  
DRIVER'S WINDOW  
MOTOR

X623  
X625  
X749  
X753  
X18190




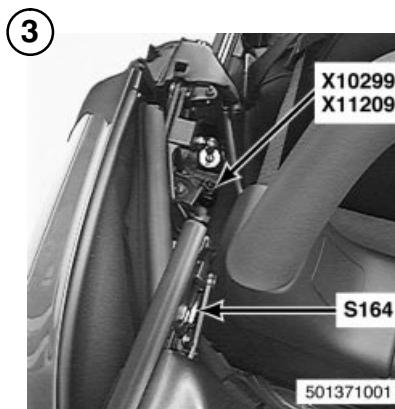


S164  
CONVERTIBLE TOP  
END-POSITION  
MICRO SWITCH





X10299  
X11209

S164

## COMPONENT LOCATION VIEWS

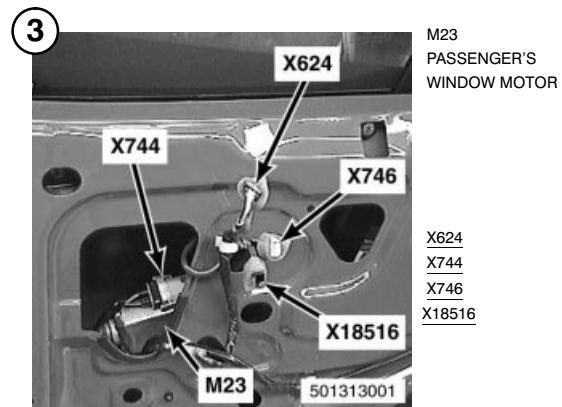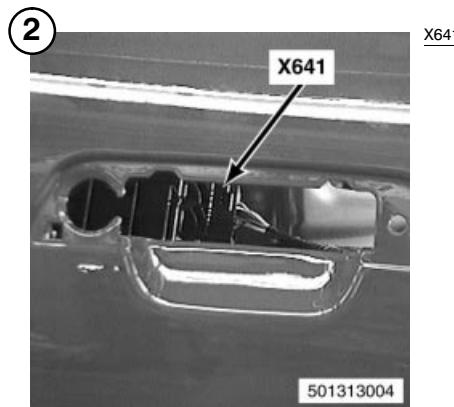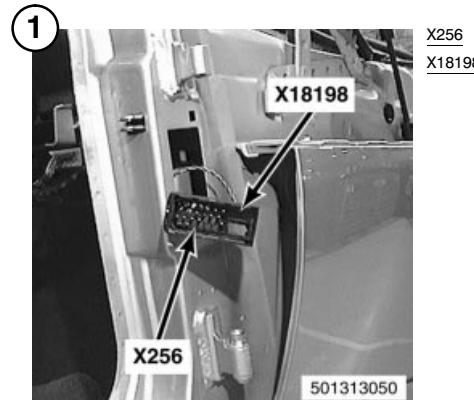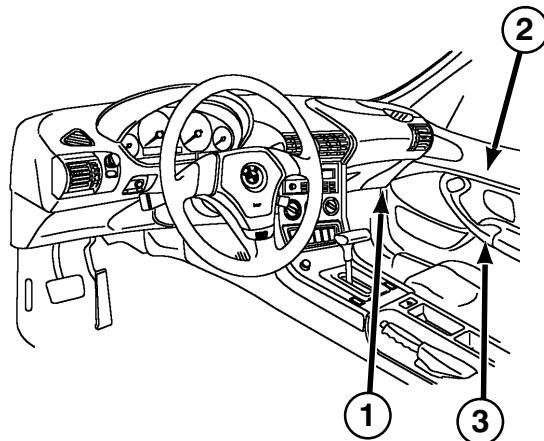

## COMPONENT LOCATION VIEWS

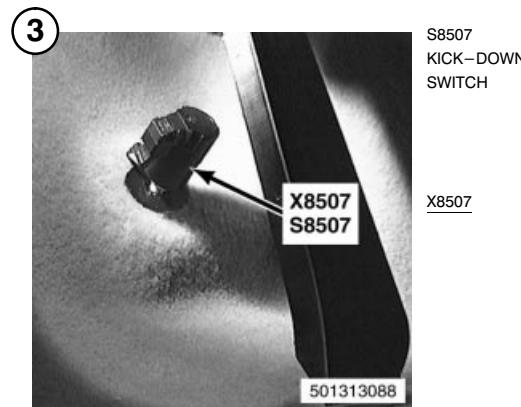
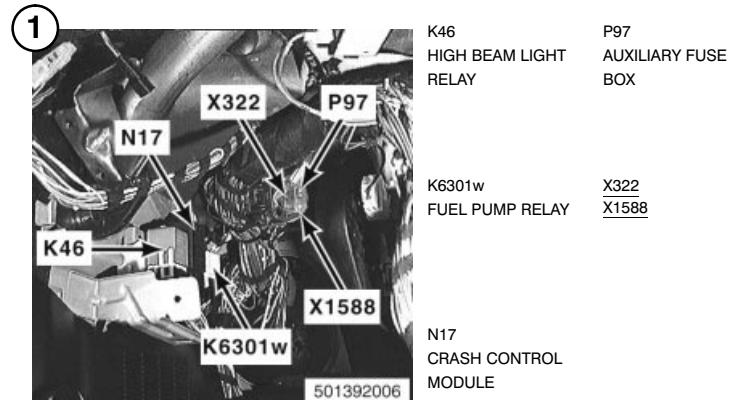
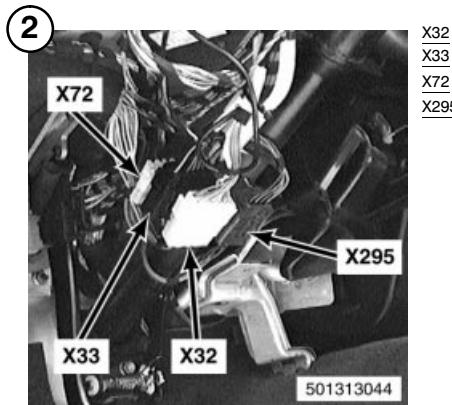
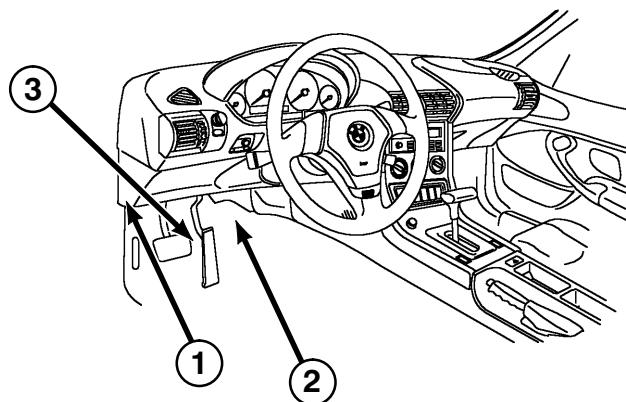


## COMPONENT LOCATION VIEWS

03/98

7100.0-20

1997

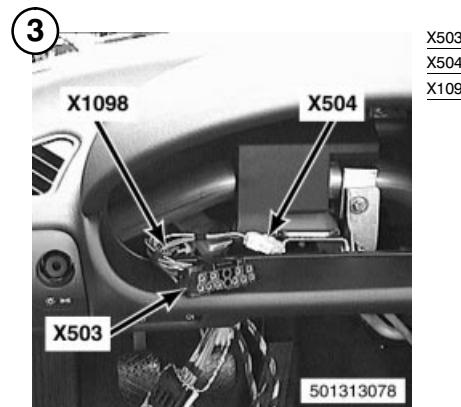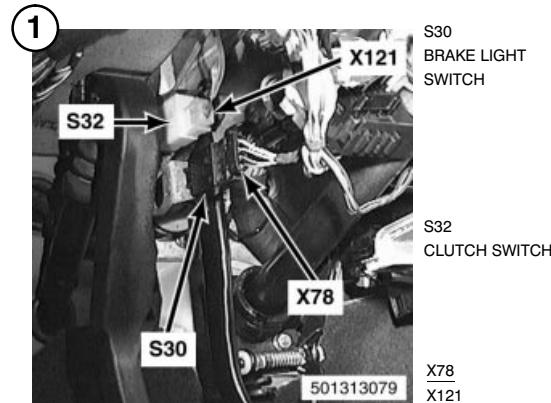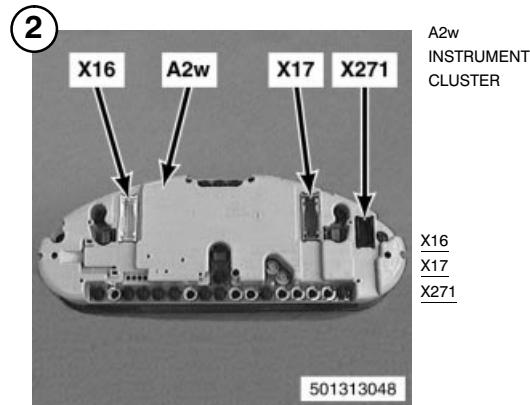
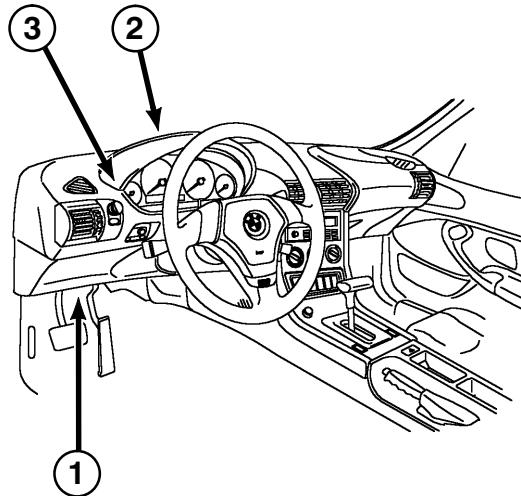


## COMPONENT LOCATION VIEWS

03/98

7100.0-21


1997

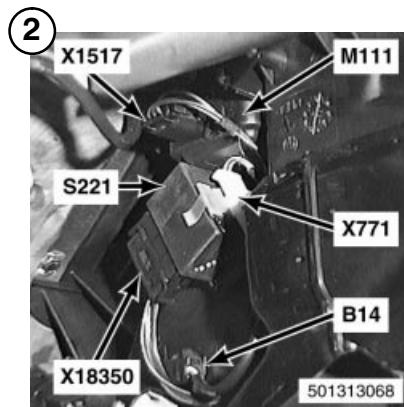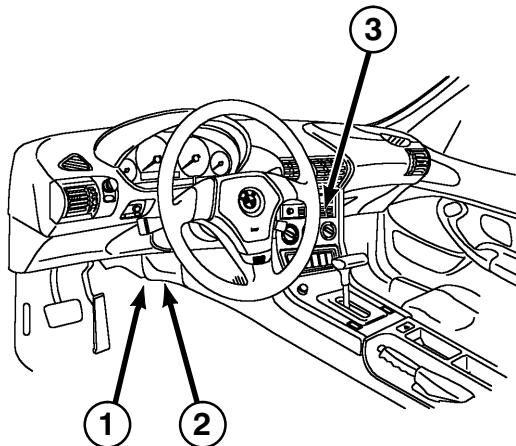

B14  
EVAPORATOR  
TEMPERATURE  
SENSOR  
X771  
X1517  
X18350


M111  
FRESH AIR  
RECIRCULATION  
MOTOR  
X771

S221  
EVAPORATOR  
CONTROLLER  
X18350  
501313068

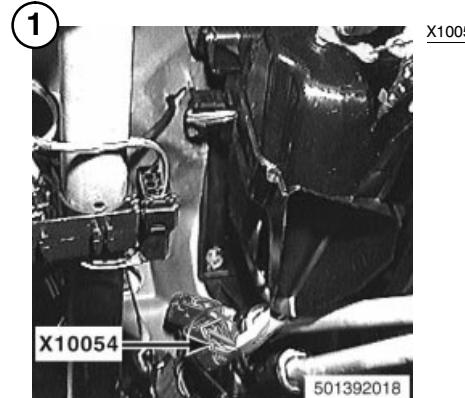

X10054

501392018

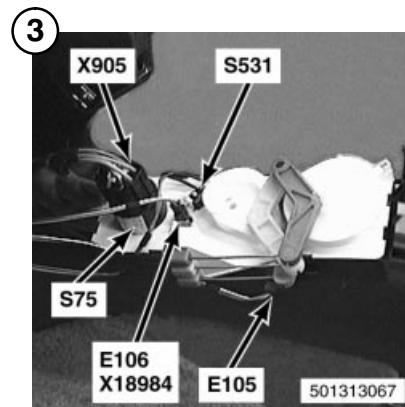

E105  
HEAT/A/C  
CONTROL PANEL  
ILLUMINATION  
X905  
S531  
S531  
TEMPERATURE  
WHEEL SWITCH

E106  
HEAT/A/C  
CONTROL PANEL  
ILLUMINATION  
X18984



S75  
BLOWER SWITCH  
501313067

## COMPONENT LOCATION VIEWS

03/98

7100.0-22


1997

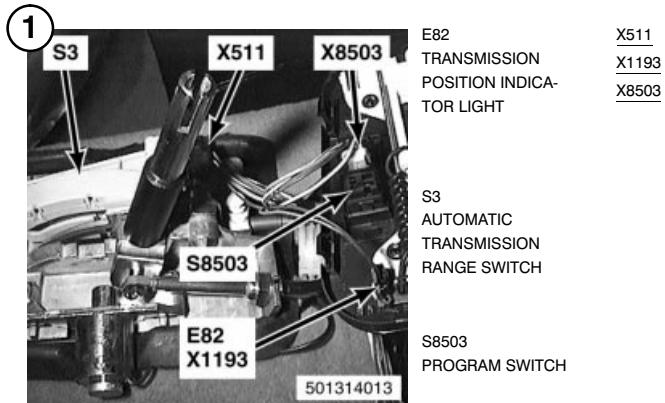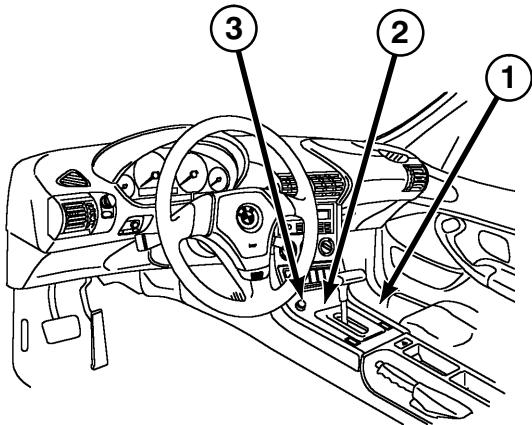

X511  
X1193  
X8503


S3  
AUTOMATIC  
TRANSMISSION  
RANGE SWITCH

S8503  
PROGRAM SWITCH

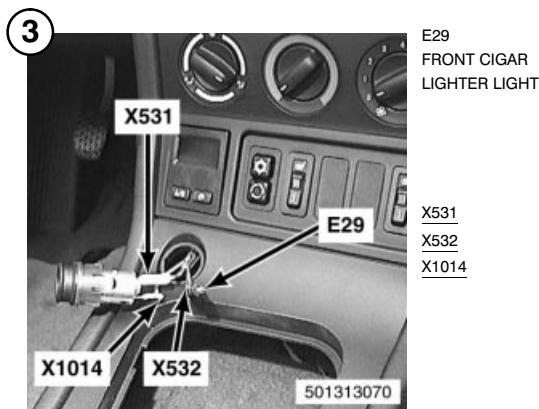

E29  
FRONT CIGAR  
LIGHTER LIGHT

X531  
X532  
X1014

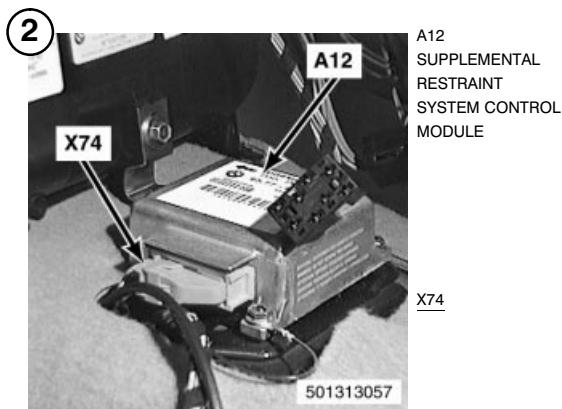

A12  
SUPPLEMENTAL  
RESTRAINT  
SYSTEM CONTROL  
MODULE

X74







## COMPONENT LOCATION VIEWS

03/98

7100.0-23

1997

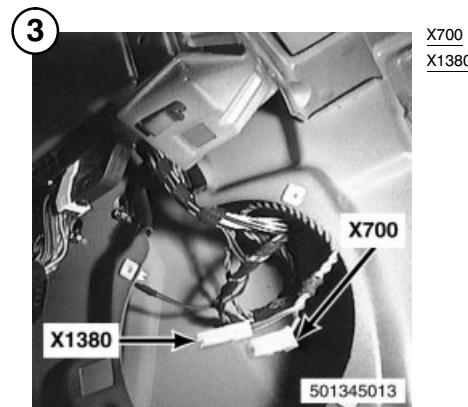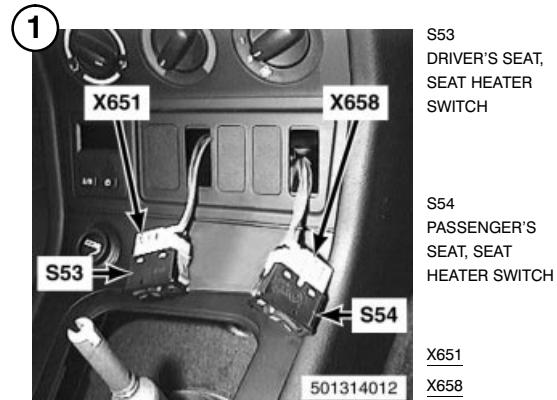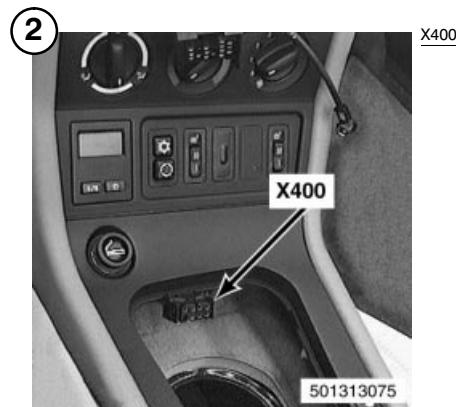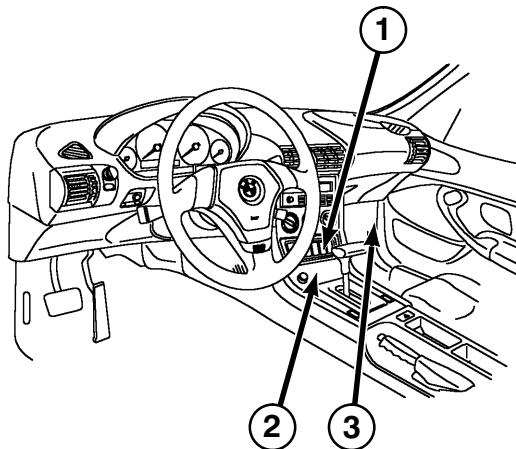

S53  
DRIVER'S SEAT,  
SEAT HEATER  
SWITCH

S54  
PASSENGER'S  
SEAT, SEAT  
HEATER SWITCH

X651  
X658

501314012

X700  
X1380





501345013

## COMPONENT LOCATION VIEWS

03/98

7100.0-24

1997

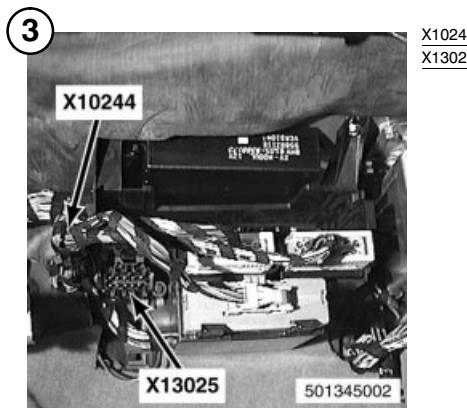
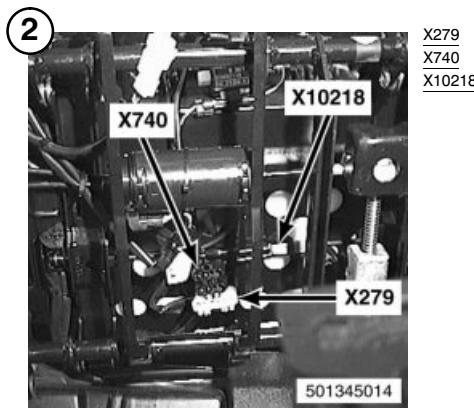
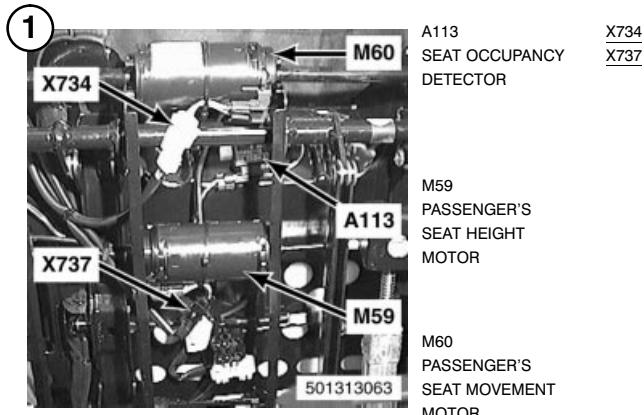
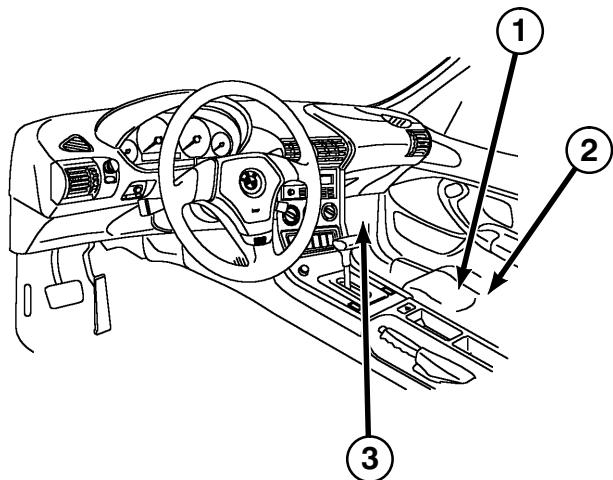


## COMPONENT LOCATION VIEWS

03/98

7100.0-25

1997

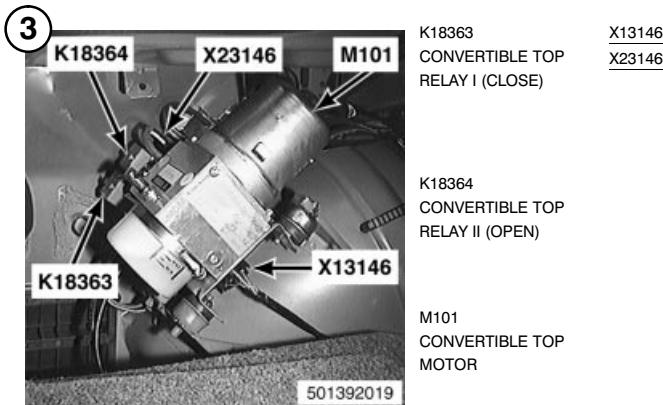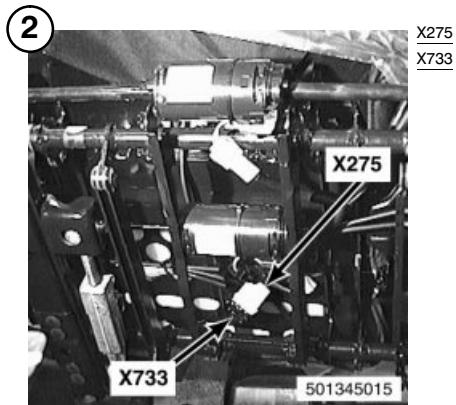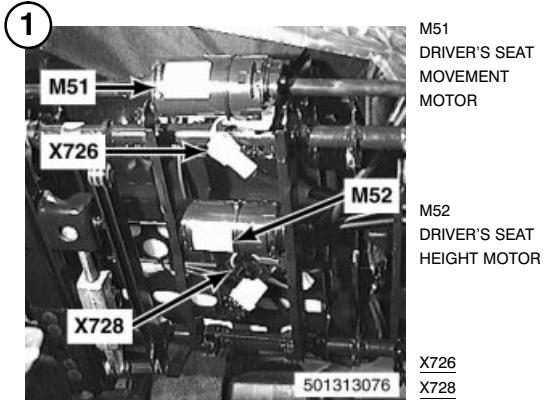
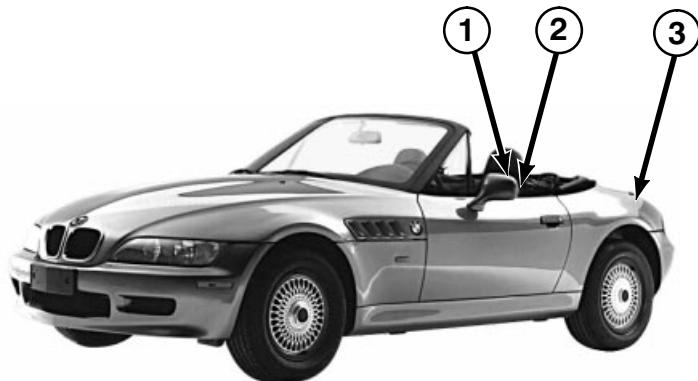


## COMPONENT LOCATION VIEWS

03/98

7100.0-26

1997

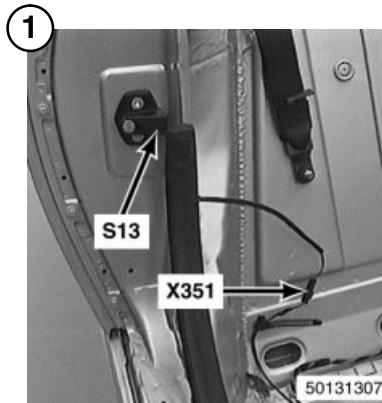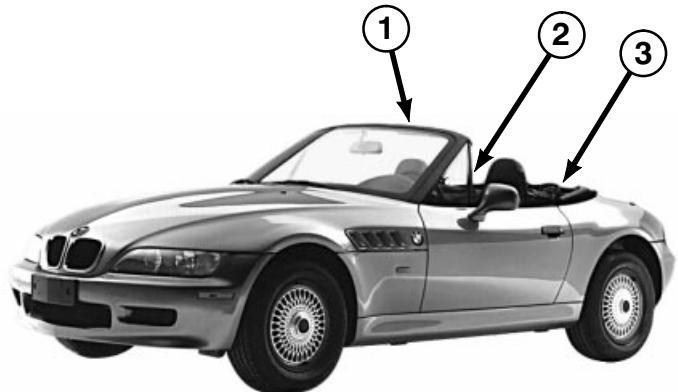


S13  
PASSENGER'S  
DOOR JAMB  
SWITCH

X351



X898

501392008

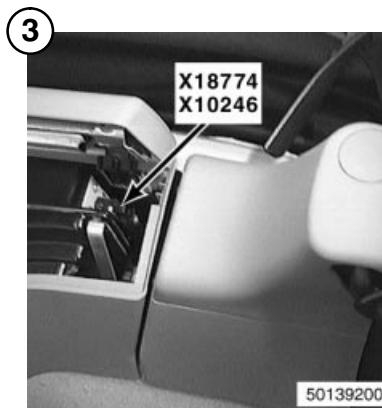

X10246  
X18774




501392007

## COMPONENT LOCATION VIEWS

03/98

7100.0-27

1997


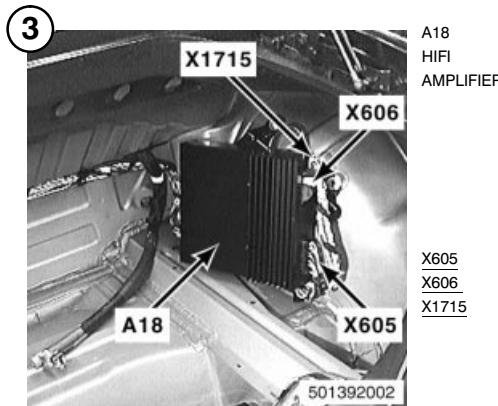
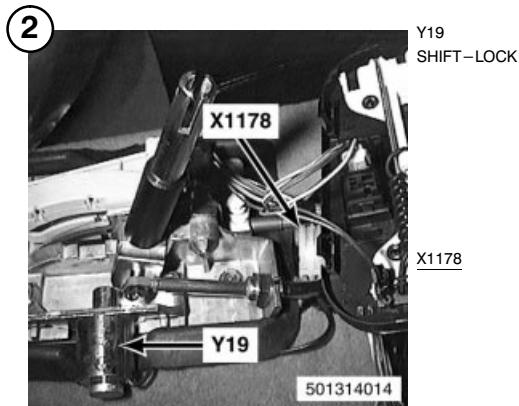
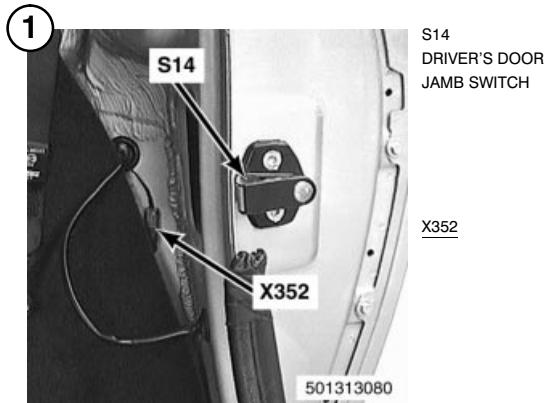


## COMPONENT LOCATION VIEWS

03/98

7100.0-28

1997

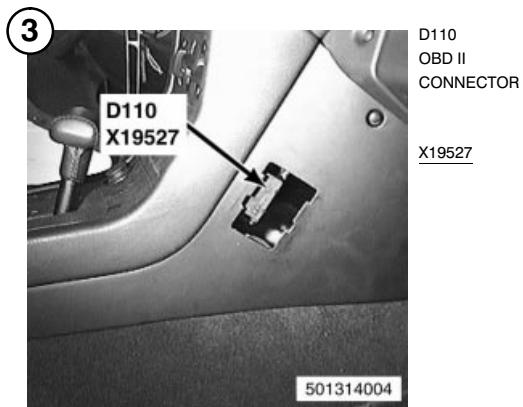
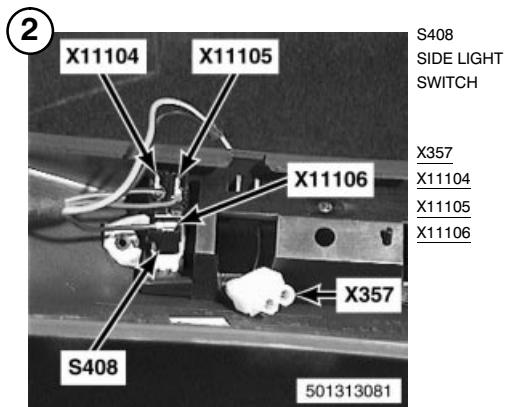
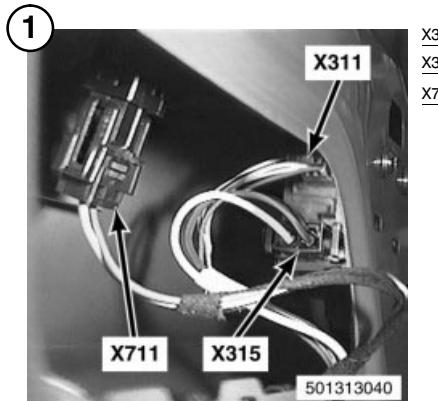
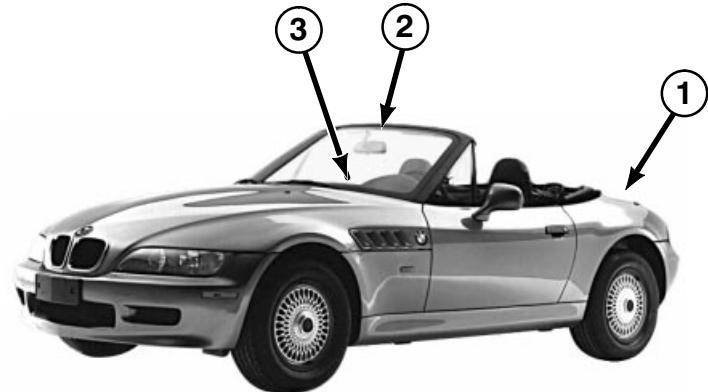


## COMPONENT LOCATION VIEWS

03/98

7100.0-29

1997

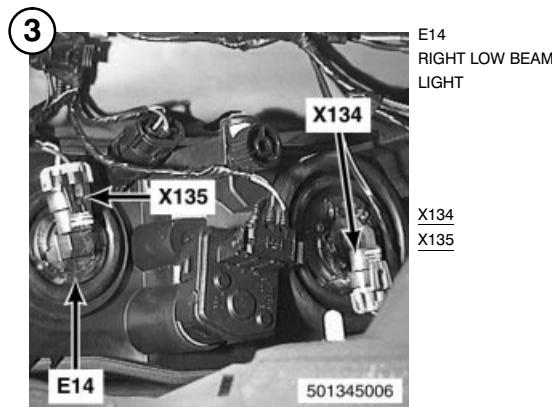
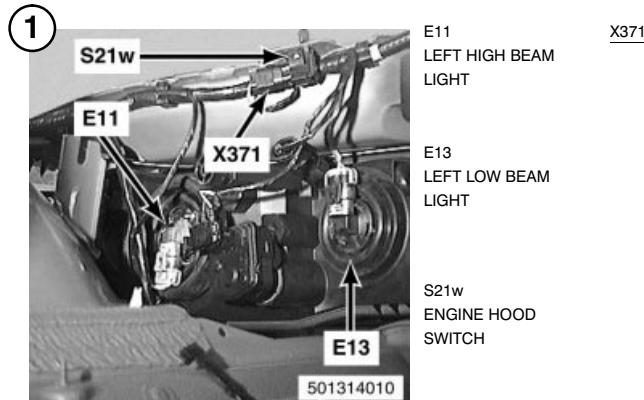
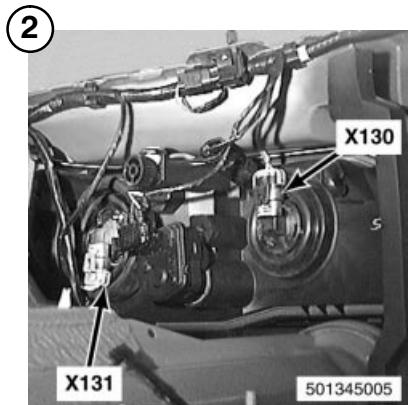
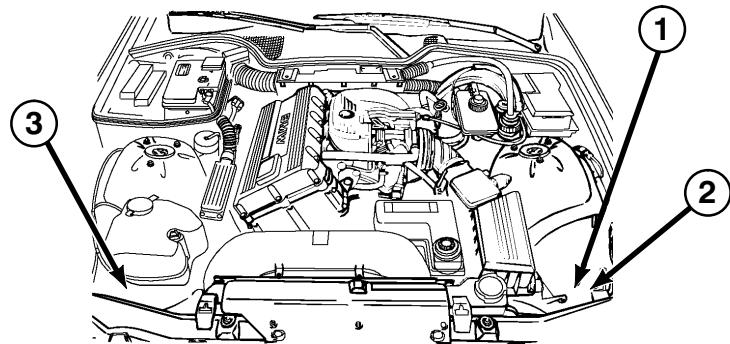


## COMPONENT LOCATION VIEWS

03/98

7100.0-30

1997

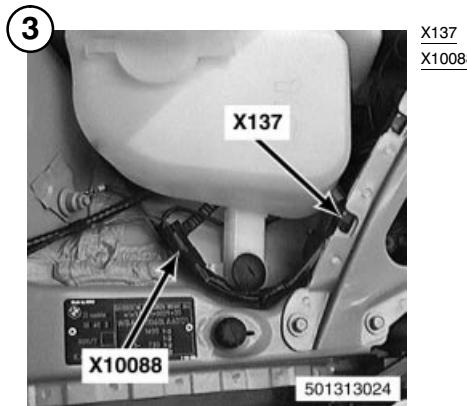
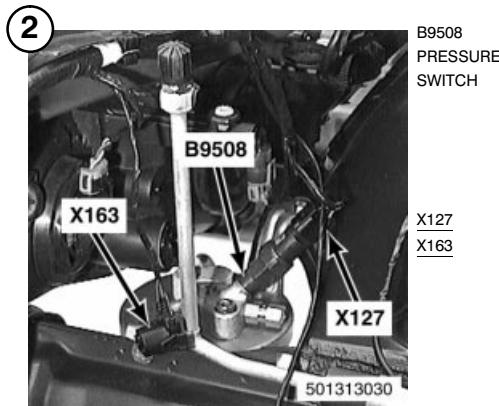
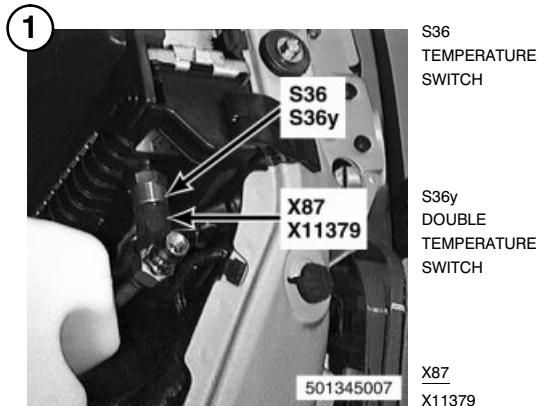
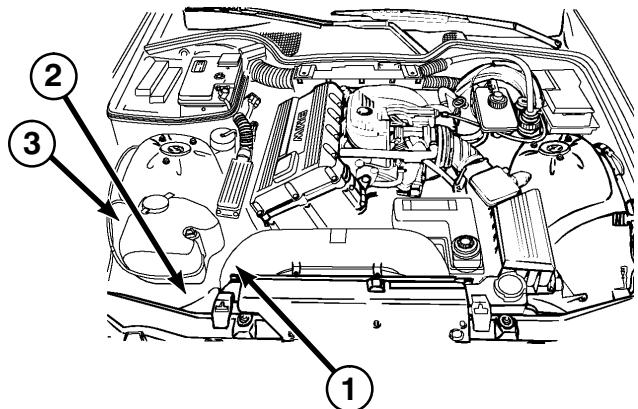


## COMPONENT LOCATION VIEWS

86/88

7100.0-31

1997

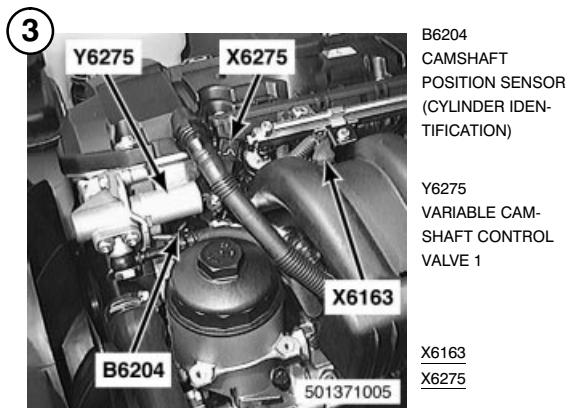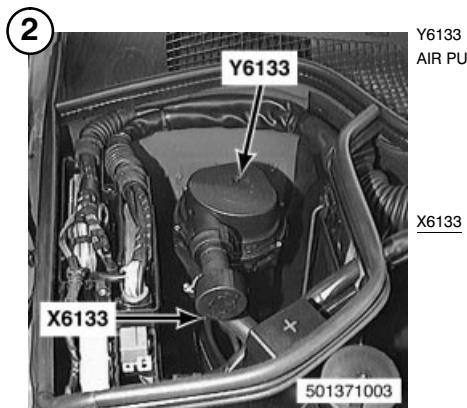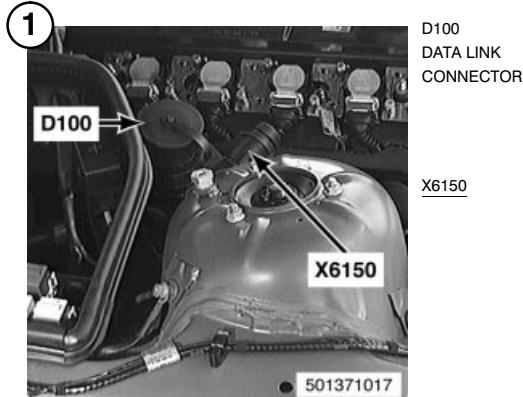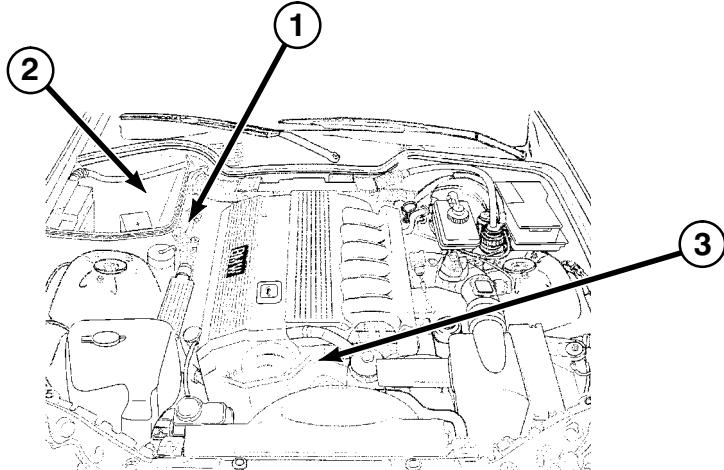


## COMPONENT LOCATION VIEWS


03/98

7100.0-32

1997

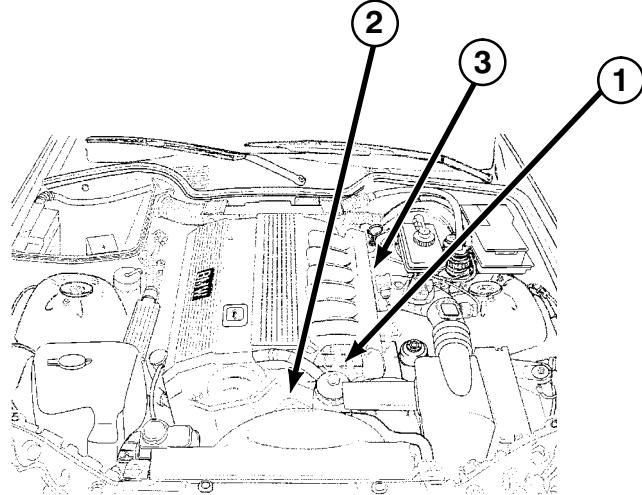


B6256  
DUAL  
TEMPERATURE  
SENSOR  
(COOLANT  
TEMPERATURE)

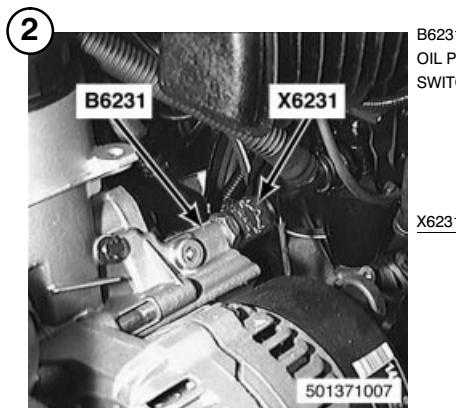

B6231  
OIL PRESSURE  
SWITCH

X6231

501371007

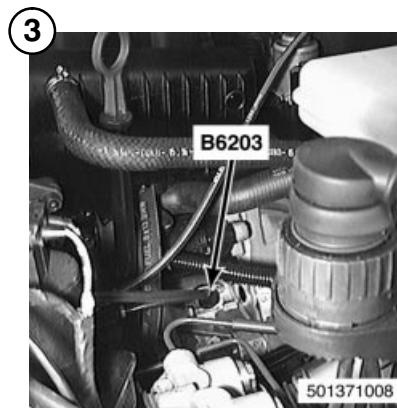

B6203  
CRANKSHAFT  
POSITION/RPM  
SENSOR





501371008

## COMPONENT LOCATION VIEWS

03/98

7100.0-33

1997

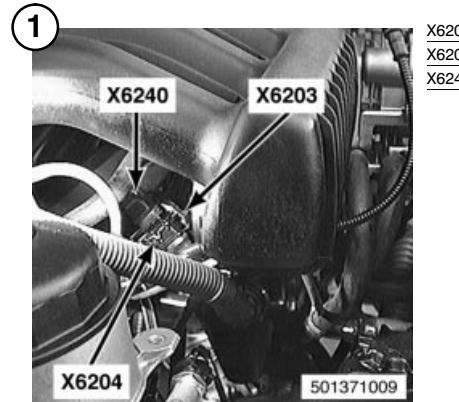
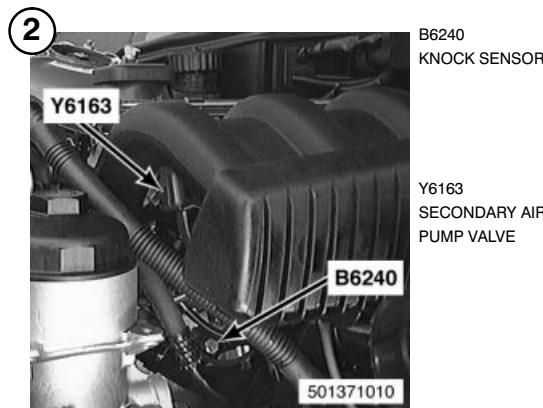
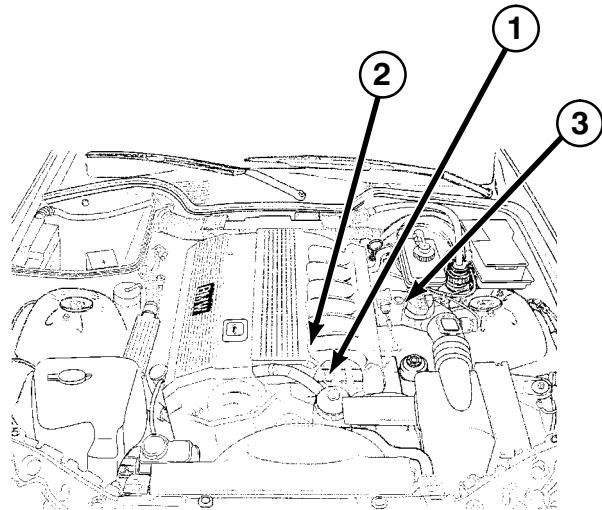
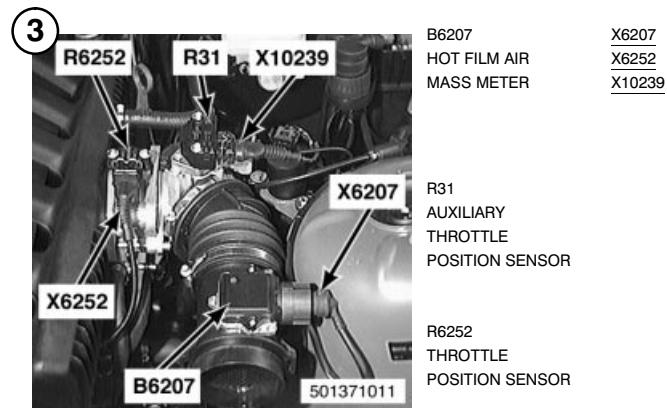
X6203  
X6204  
X6240B6207  
X6252  
X10239R31  
AUXILIARY  
THROTTLE  
POSITION SENSORR6252  
THROTTLE  
POSITION SENSOR

## COMPONENT LOCATION VIEWS





86/98

7100.0-34

1997

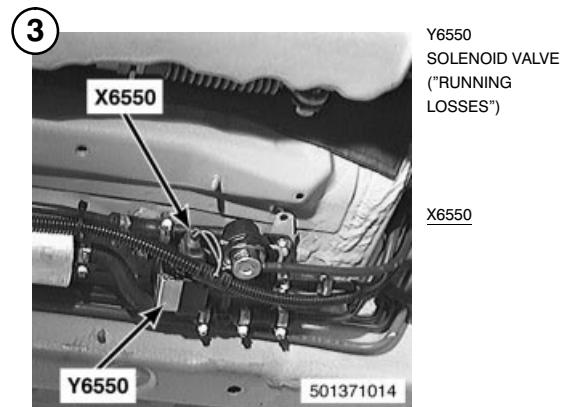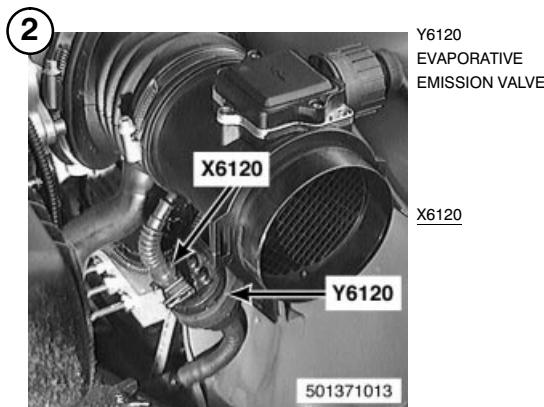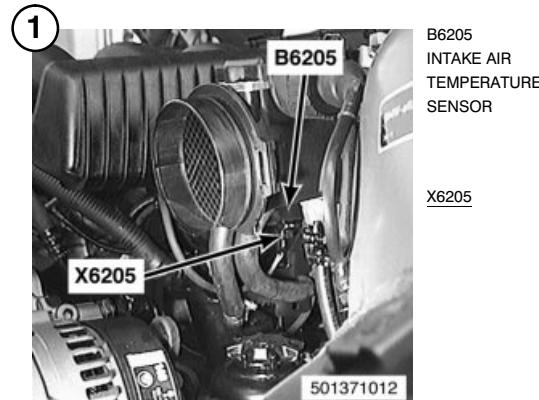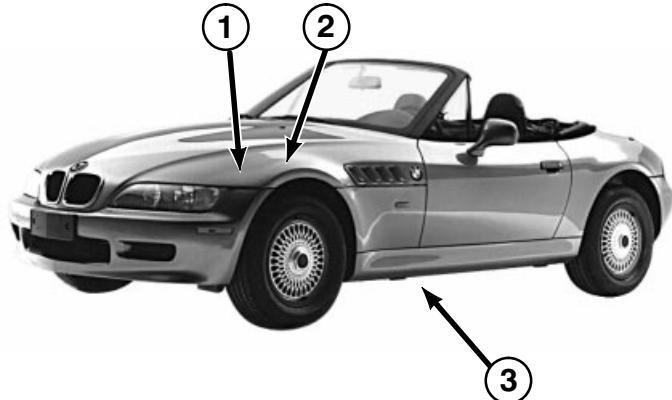

## COMPONENT LOCATION VIEWS

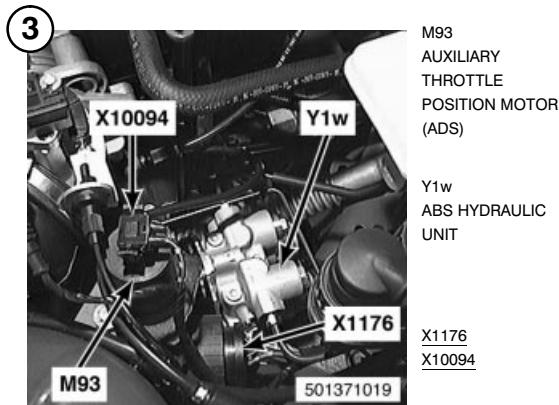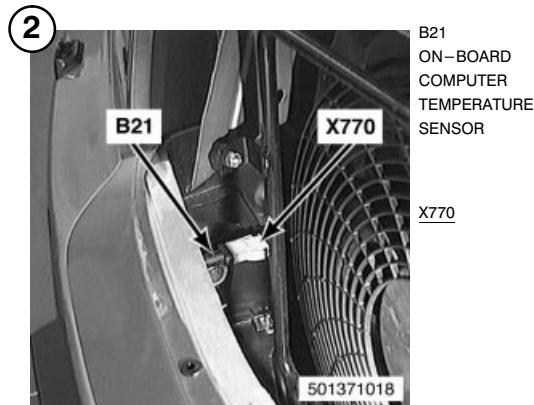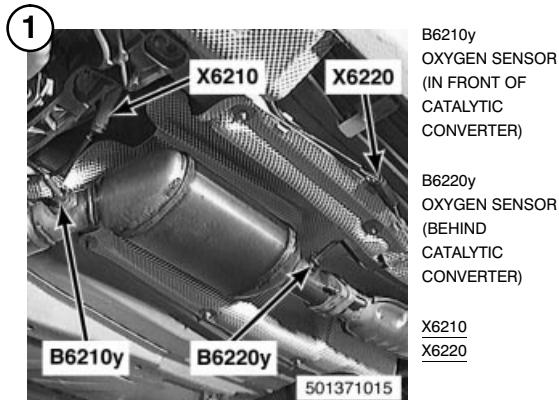
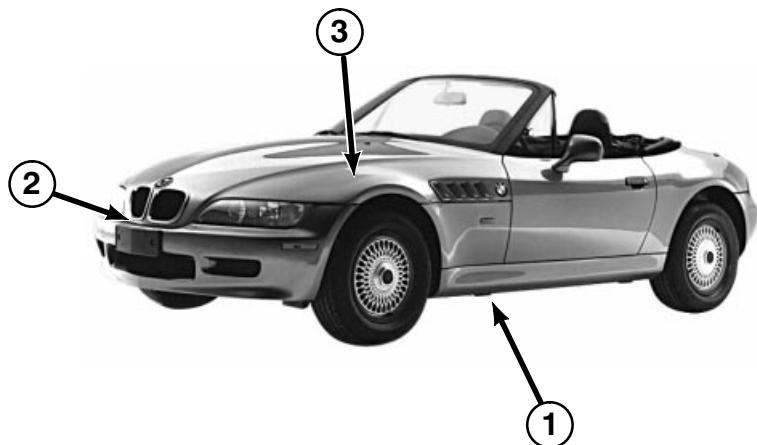


## COMPONENT LOCATION VIEWS

86/98


7100.0-36

1997

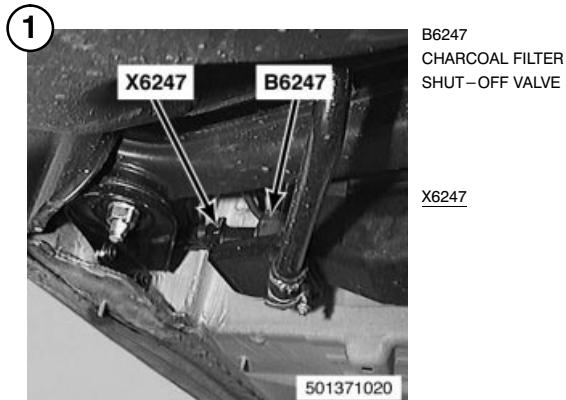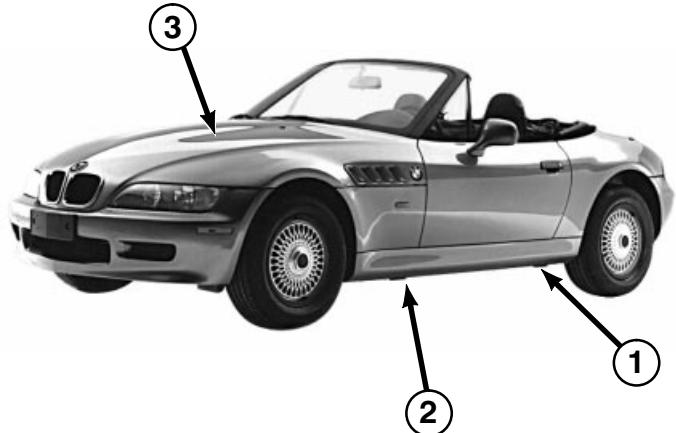


B6247  
CHARCOAL FILTER  
SHUT-OFF VALVE

X6247

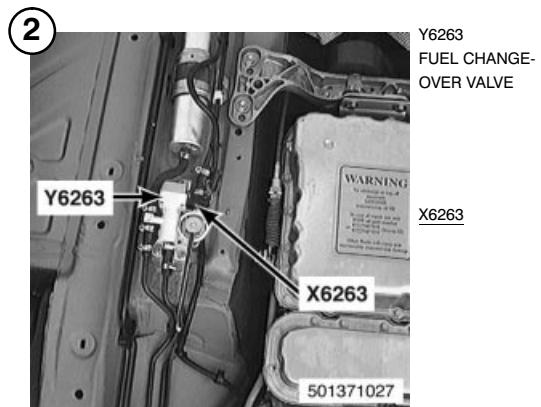

Y6263  
FUEL CHANGE-  
OVER VALVE

X6263


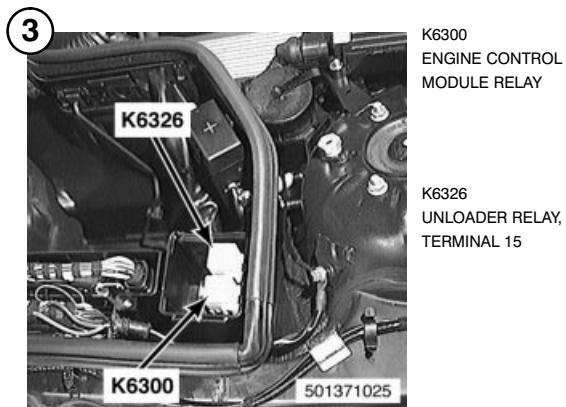


K6300  
ENGINE CONTROL  
MODULE RELAY


K6326  
UNLOADER RELAY,  
TERMINAL 15

K6300

## COMPONENT LOCATION VIEWS

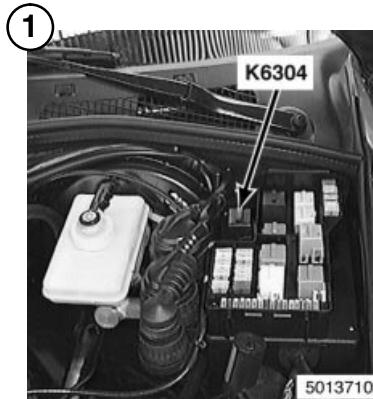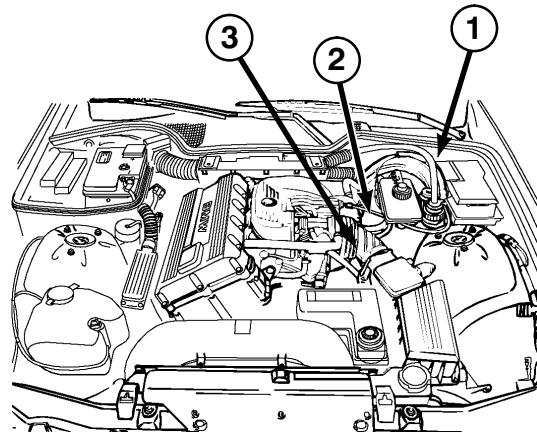


K6304  
SECONDARY AIR  
PUMP RELAY

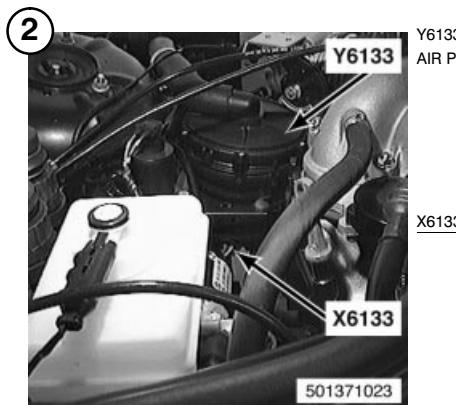

Y6133  
AIR PUMP

X6133

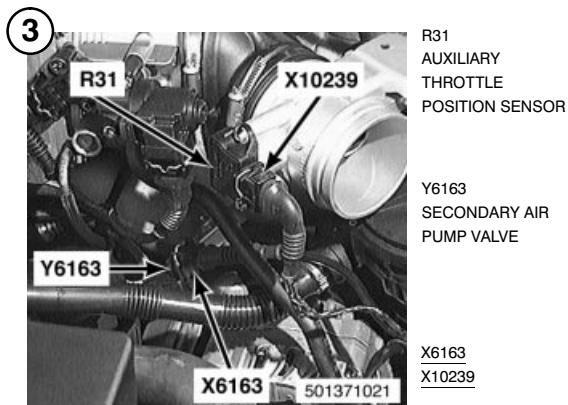

R31  
AUXILIARY  
THROTTLE  
POSITION SENSOR

Y6163  
SECONDARY AIR  
PUMP VALVE




X6163  
X10239

## COMPONENT LOCATION VIEWS

03/98

7100.0-38

1997

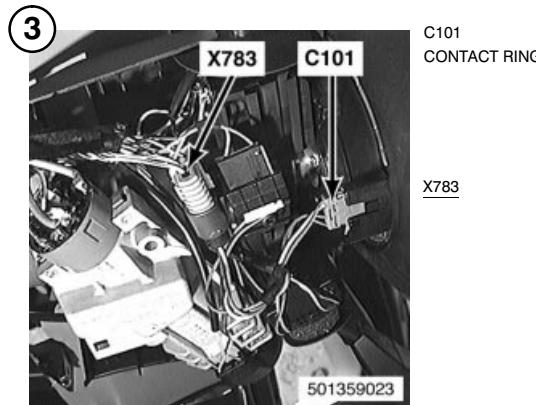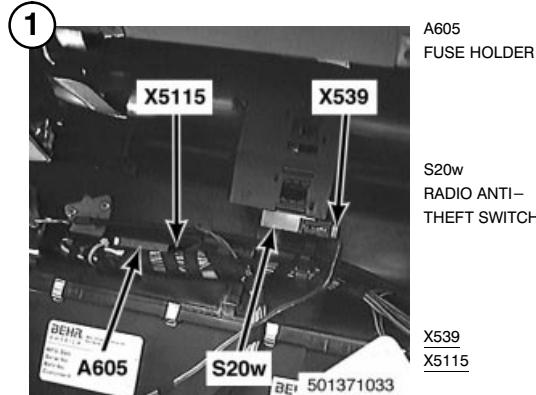
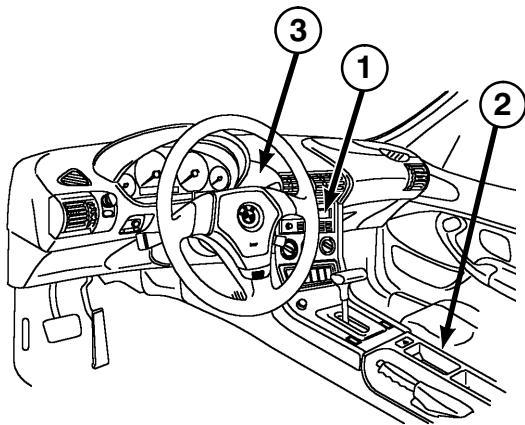


## COMPONENT LOCATION VIEWS


86/20

7100.0-39

1997

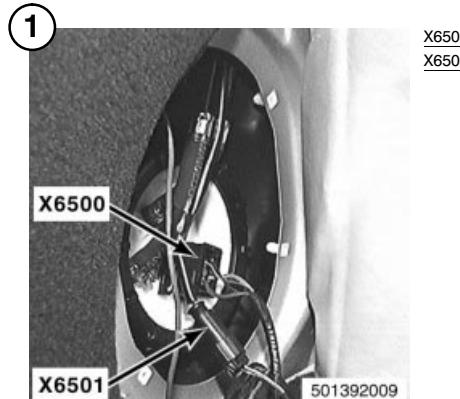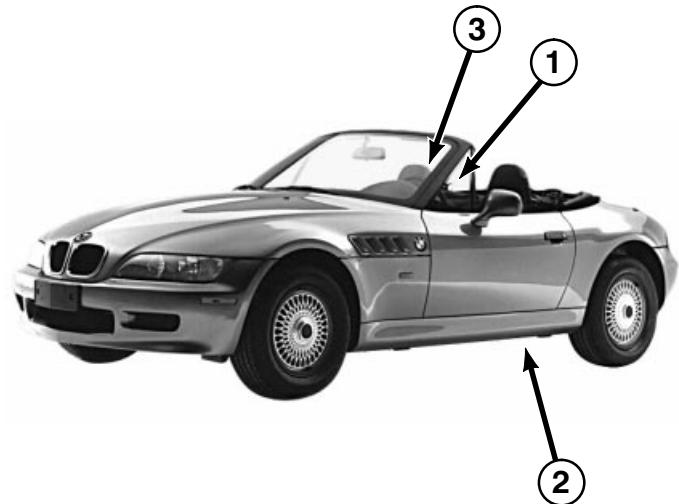

X6500  
X6501

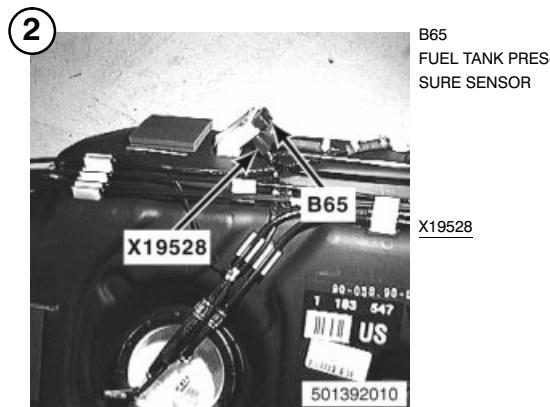


B65  
FUEL TANK PRES-  
SURE SENSOR

X19528

B65

X19528

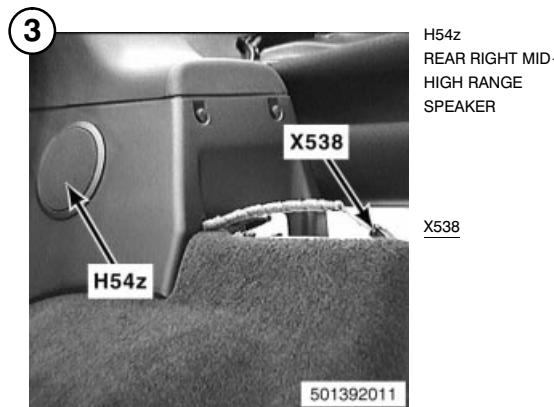





H54z  
REAR RIGHT MID-  
HIGH RANGE  
SPEAKER

X538



X538

501392011

## COMPONENT LOCATION VIEWS

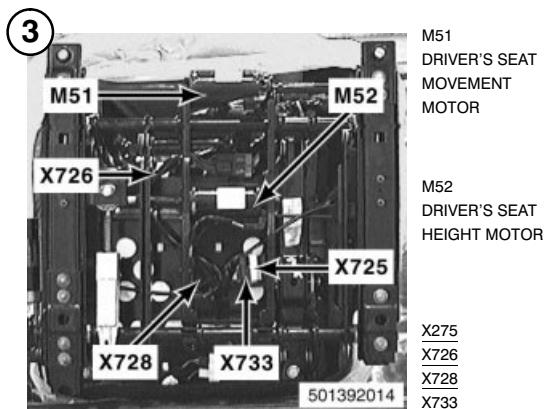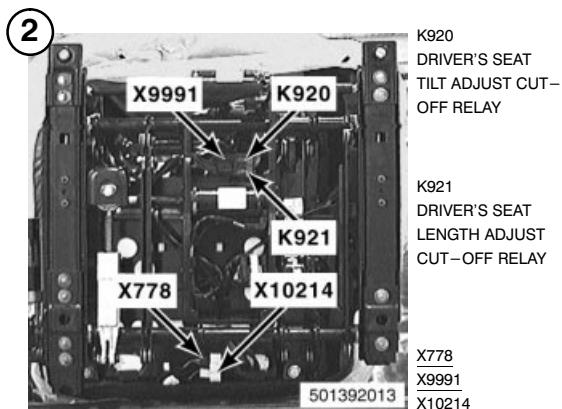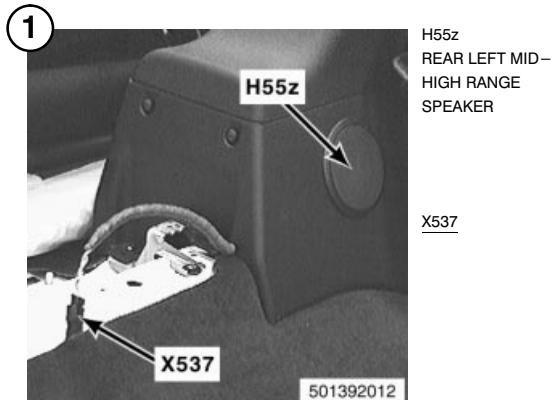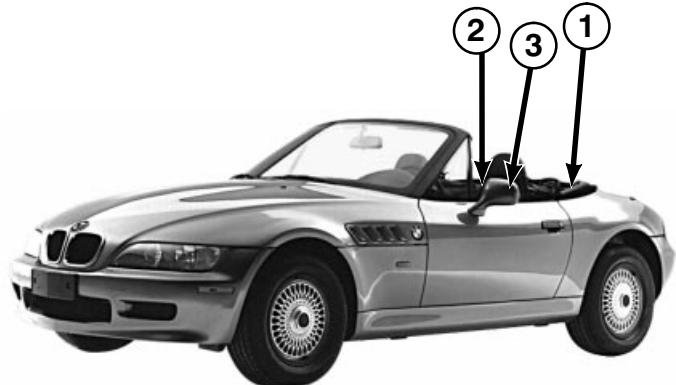


## COMPONENT LOCATION VIEWS

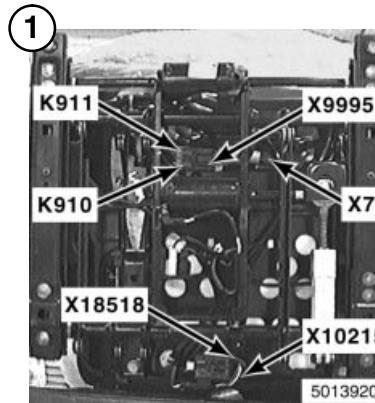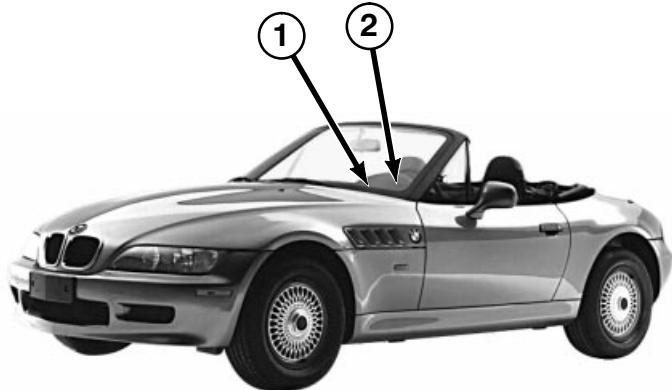

K910  
PASSENGER'S  
SEAT TILT ADJUST  
CUT-OFF RELAY

K911  
PASSENGER'S  
SEAT LENGTH AD-  
JUST CUT-OFF  
RELAY

X734  
X9995  
X10215  
X18518

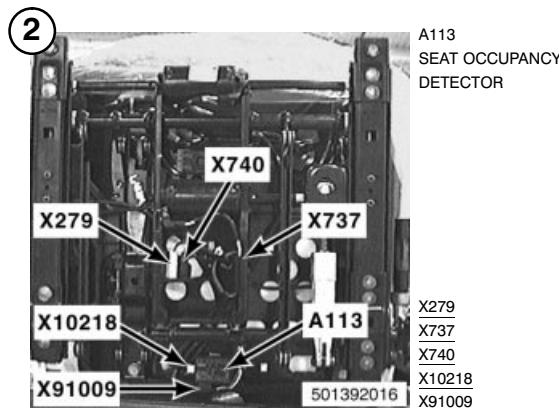



## SPLICING LOCATION VIEWS

Z3

03/98

8000.0-00

1997

SPLICING	HARNESS	PAGE NUMBER	SPLICING	HARNESS	PAGE NUMBER
X181-X188	BODY	8000.0-03	X849-X851	DRIVER'S DOOR	8000.0-04
X189	IHKS	8000.0-03	X876-X877	RADIO/HIFI/CD	8000.0-04
X191-X196	BODY	8000.0-03	X878-X888	BODY	8000.0-03
X197	BODY	8000.0-04	X942	PASSENGER'S DOOR	8000.0-04
X203-X223	BODY	8000.0-03	X985	IHKS	8000.0-03
X228	BODY	8000.0-04	X1015-X1019	BODY	8000.0-03
X245-X246	BODY	8000.0-03	X1022-X1047	BODY	8000.0-03
X443	BODY	8000.0-03	X1055	BODY	8000.0-04
X444	BODY	8000.0-04	X1066-X1079	BODY	8000.0-03
X445	BODY	8000.0-03	X1091	BODY	8000.0-04
X449	BODY	8000.0-04	X1100-X1115	BODY	8000.0-03
X450	BODY	8000.0-03	X1149	BODY	8000.0-04
X453-X460	BODY	8000.0-04	X1152-X1164	BODY	8000.0-03
X461	BODY	8000.0-03	X1167	BODY	8000.0-04
X462-X465	BODY	8000.0-04	X1168-X1186	BODY	8000.0-03
X470	BODY	8000.0-03	X1214	BODY	8000.0-03
X530	BODY	8000.0-03	X1225-X1226	BODY	8000.0-04
X576-X595	BODY	8000.0-03	X1234-X1238	BODY	8000.0-04
X697-X699	BODY	8000.0-03	X1258	BODY	8000.0-03
X805	BODY	8000.0-04	X1263	BODY	8000.0-04
X806	BODY	8000.0-03	X1264	BODY	8000.0-03
X814-X818	IHKS	8000.0-03	X1280	BODY	8000.0-03
X824-X830	RADIO/HIFI/CD	8000.0-04	X1403	BODY	8000.0-03



## SPLICING LOCATION VIEWS

Z3

03/98

8000.0-01

1997

SPLICING	HARNESS	PAGE NUMBER		
X1429-X1435 .....	IHKS .....	8000.0-03	X8000-X8015 .....	M52 ENGINE .....
X1541-X1542 .....	BODY .....	8000.0-03	X8004-X8005 .....	M44 ENGINE .....
X1608 .....	BODY .....	8000.0-04	X8008 .....	M44 ENGINE .....
X1610-X1616 .....	BODY .....	8000.0-03	X8015 .....	M44 ENGINE .....
X1617-X1618 .....	BODY .....	8000.0-04	X8038 .....	M52 ENGINE .....
X1620-X1625 .....	BODY .....	8000.0-03	X8051 .....	M52 ENGINE .....
X2233 .....	BODY .....	8000.0-03	X8056 .....	M44 ENGINE .....
X6410 .....	M44 ENGINE .....	8000.0-05	X8071-X8074 .....	M52 ENGINE .....
X6411-X6415 .....	M52 ENGINE .....	8000.0-06	X8073 .....	M44 ENGINE .....
X6420 .....	M52 ENGINE .....	8000.0-06	X8090-X8091 .....	M52 ENGINE .....
X6458-X6460 .....	M52 ENGINE .....	8000.0-06	X8103 .....	M52 ENGINE .....
X6460-X6492 .....	M44 ENGINE .....	8000.0-05	X8564-X8565 .....	M52 ENGINE .....
X6475 .....	M52 ENGINE .....	8000.0-06	X8564-X8576 .....	M44 ENGINE .....
X6492 .....	M52 ENGINE .....	8000.0-06	X9430 .....	BODY .....
X6810 .....	M52 ENGINE .....	8000.0-06	X9993 .....	DRIVER'S SEAT .....
X6820-X6822 .....	M52 ENGINE .....	8000.0-06	X9997 .....	PASSENGER'S SEAT .....
X6820-X6823 .....	M44 ENGINE .....	8000.0-05	X10008 .....	BODY .....
X6830-X6835 .....	M52 ENGINE .....	8000.0-06	X10009 .....	BODY .....
X6832-X6891 .....	M44 ENGINE .....	8000.0-05	X10014-X10055 .....	BODY .....
X6860-X6869 .....	M52 ENGINE .....	8000.0-06	X10064 .....	BODY .....
X6900 .....	M44 ENGINE .....	8000.0-05	X10100-X10126 .....	BODY .....
X6949 .....	BODY .....	8000.0-03	X10169 .....	M44 ENGINE .....
X7845-X7846 .....	M44 ENGINE .....	8000.0-05	X10189 .....	BODY .....



## SPLICING LOCATION VIEWS


SPLICING	HARNESS	PAGE NUMBER
X10251-X10252 ...	BODY .....	8000.0-03
X11264-X11284 ...	BODY .....	8000.0-03
X11291 .....	BODY .....	8000.0-04
X11337-X11353 ...	BODY .....	8000.0-03
X11355 .....	BODY .....	8000.0-04
X11357 .....	BODY .....	8000.0-03
X13007 .....	BODY .....	8000.0-03
X13011-X13047 ...	BODY .....	8000.0-04
X13134 .....	BODY .....	8000.0-03
X13289 .....	BODY .....	8000.0-03
X18061 .....	BODY .....	8000.0-03
X19513 .....	RADIO/HIFI/CD .....	8000.0-04
X19002-X19004 ...	BODY .....	8000.0-04
X19526 .....	BODY .....	8000.0-03
X64109 .....	BODY .....	8000.0-03
X64119 .....	BODY .....	8000.0-03
X64129 .....	BODY .....	8000.0-03
X64591 .....	BODY .....	8000.0-04
X68309 .....	IHKS .....	8000.0-03
X80253 .....	M52 ENGINE .....	8000.0-06

**SPlice Location Views****BODY HARNESS**

03/98

8000.0-03

1997

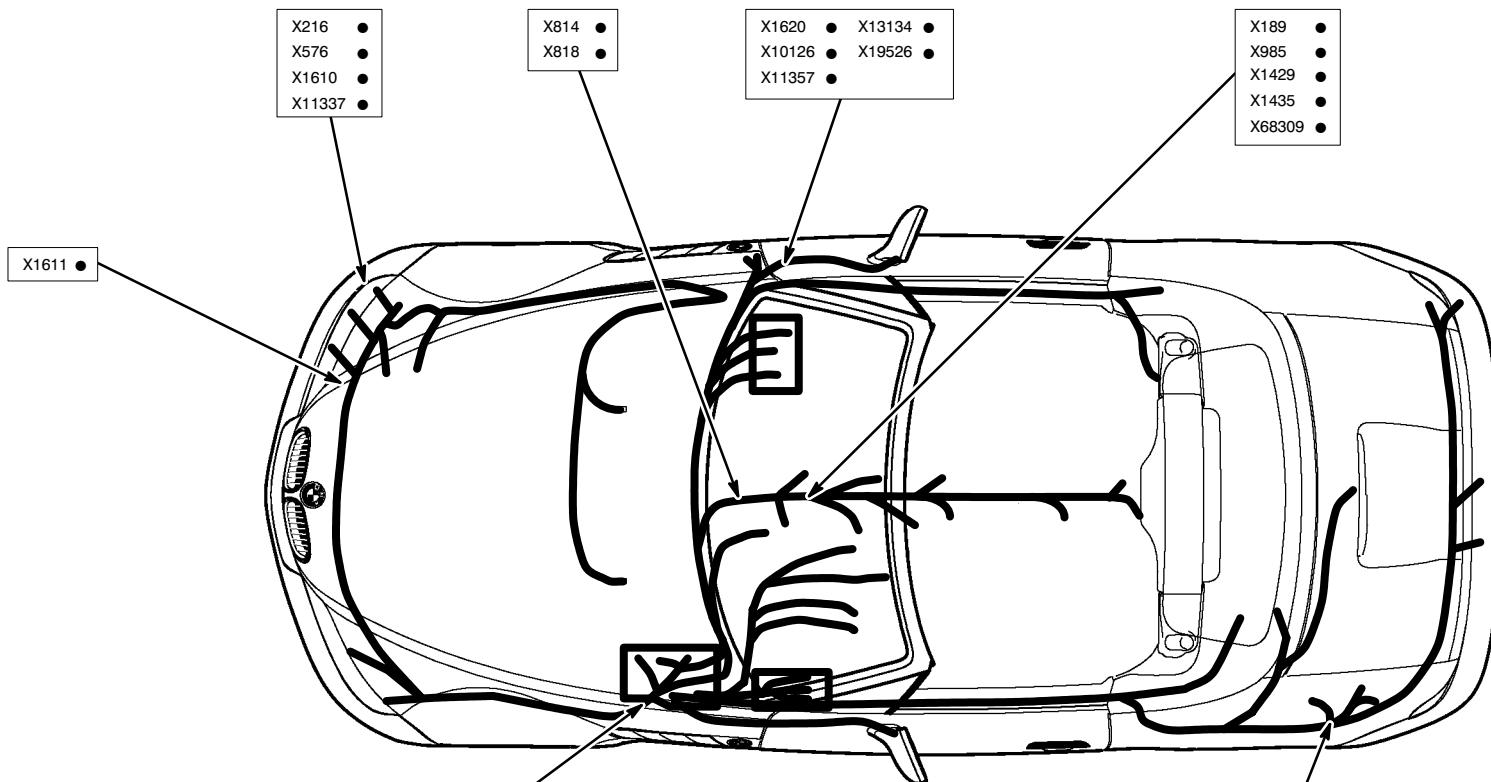

SPLICE PANEL


X181	●	X246	●	X888	●	X1076	●	X1258	●	X10021	●	X11339	●
X182	●	X443	●	X1015	●	X1079	●	X1264	●	X10022	●	X11353	●
X183	●	X445	●	X1019	●	X1100	●	X1280	●	X10024	●	X13289	●
X184	●	X450	●	X1022	●	X1107	●	X1403	●	X10027	●	X18061	●
X185	●	X461	●	X1027	●	X1115	●	X1541	●	X10048	●	X64109	●
X188	●	X470	●	X1028	●	X1152	●	X1542	●	X10055	●	X64119	●
X191	●	X530	●	X1029	●	X1159	●	X1614	●	X10100	●	X64129	●
X195	●	X595	●	X1036	●	X1163	●	X1616	●	X10251	●		
X196	●	X697	●	X1047	●	X1164	●	X2233	●	X10252	●		
X203	●	X698	●	X1066	●	X1168	●	X6949	●	X11264	●		
X213	●	X699	●	X1067	●	X1169	●	X9430	●	X11282	●		
X223	●	X806	●	X1069	●	X1182	●	X10008	●	X11283	●		
X245	●	X878	●	X1073	●	X1186	●	X10020	●	X11284	●		

**SPLICE LOCATION VIEWS****BODY HARNESS**

03/98

8000.0-04

1997

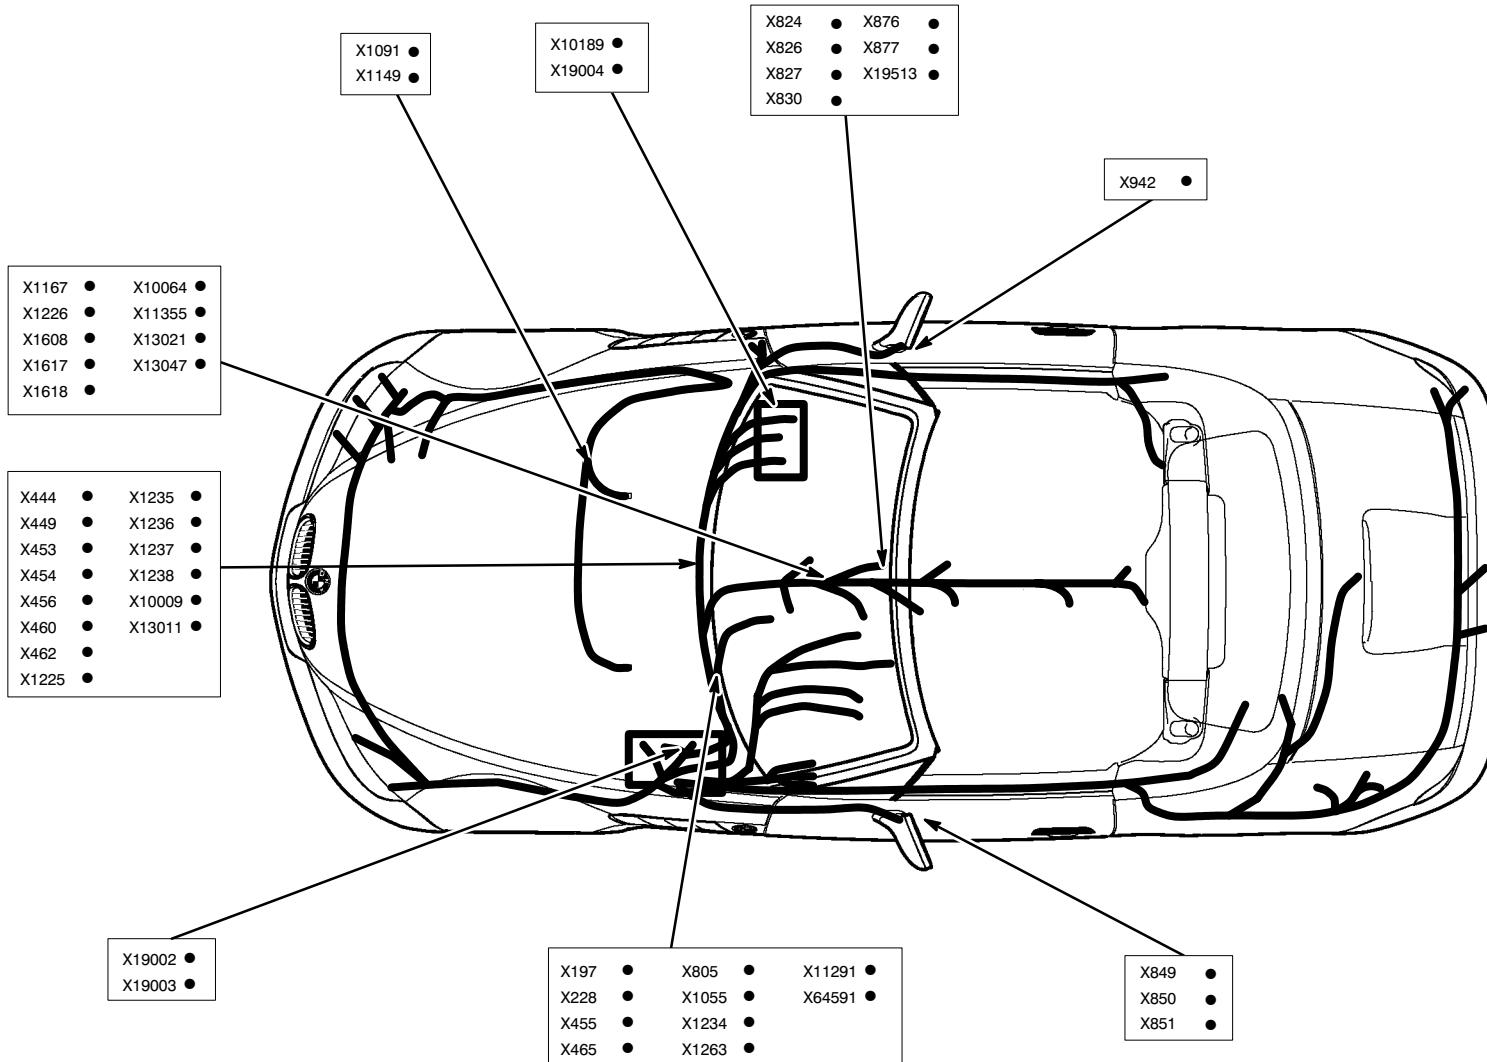


**SPLICE LOCATION VIEWS****ENGINE HARNESS M44**

03/98

8000.0-05

1997

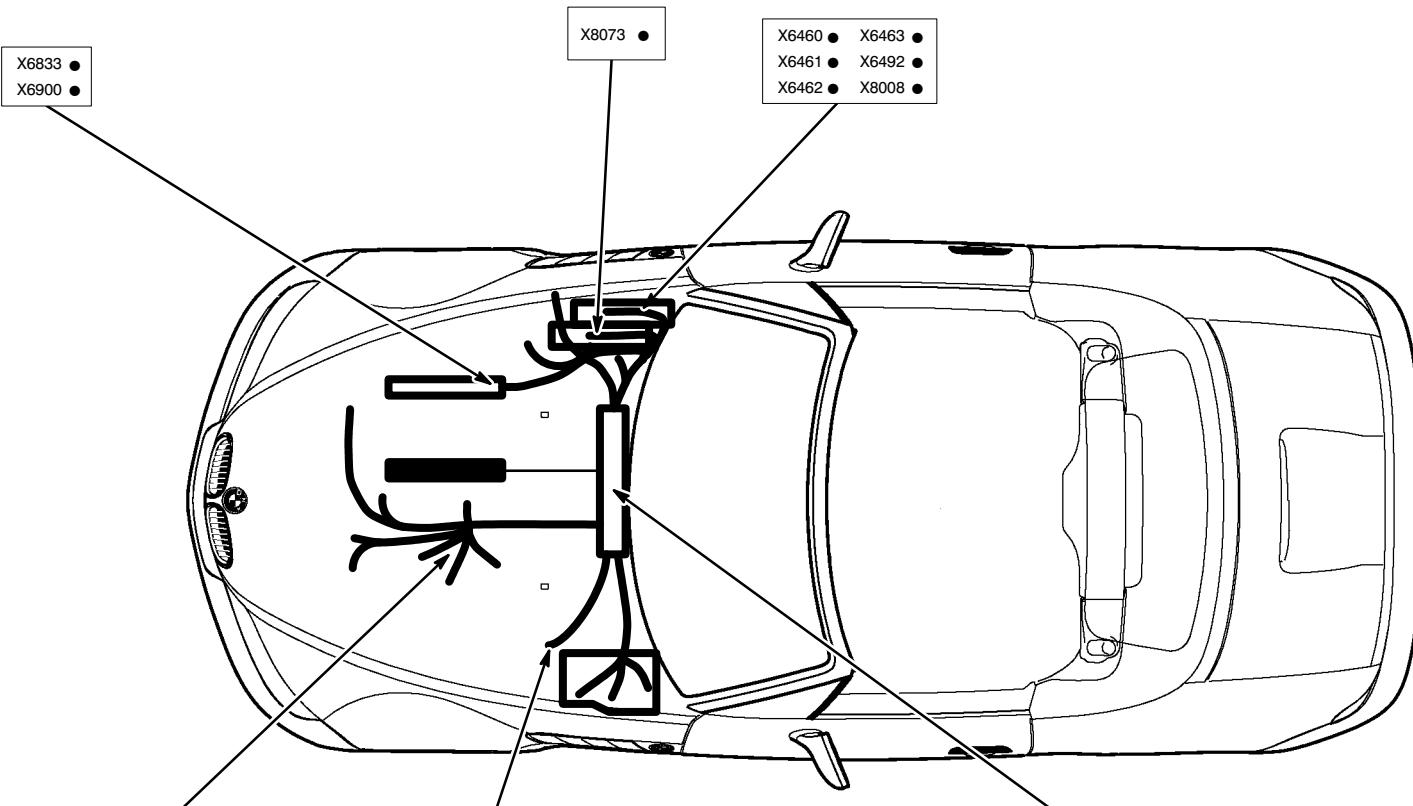

SPLICE PANEL		
X6410 •	X6891 •	X8565 •
X6821 •	X7845 •	X8576 •
X6823 •	X7846 •	X10169 •
X6835 •	X8004 •	
X6860 •	X8015 •	
X6863 •	X8056 •	
X6866 •	X8564 •	


## SPLICE LOCATION VIEWS

## ENGINE HARNESS M52

03/98

8000.0-06

1997

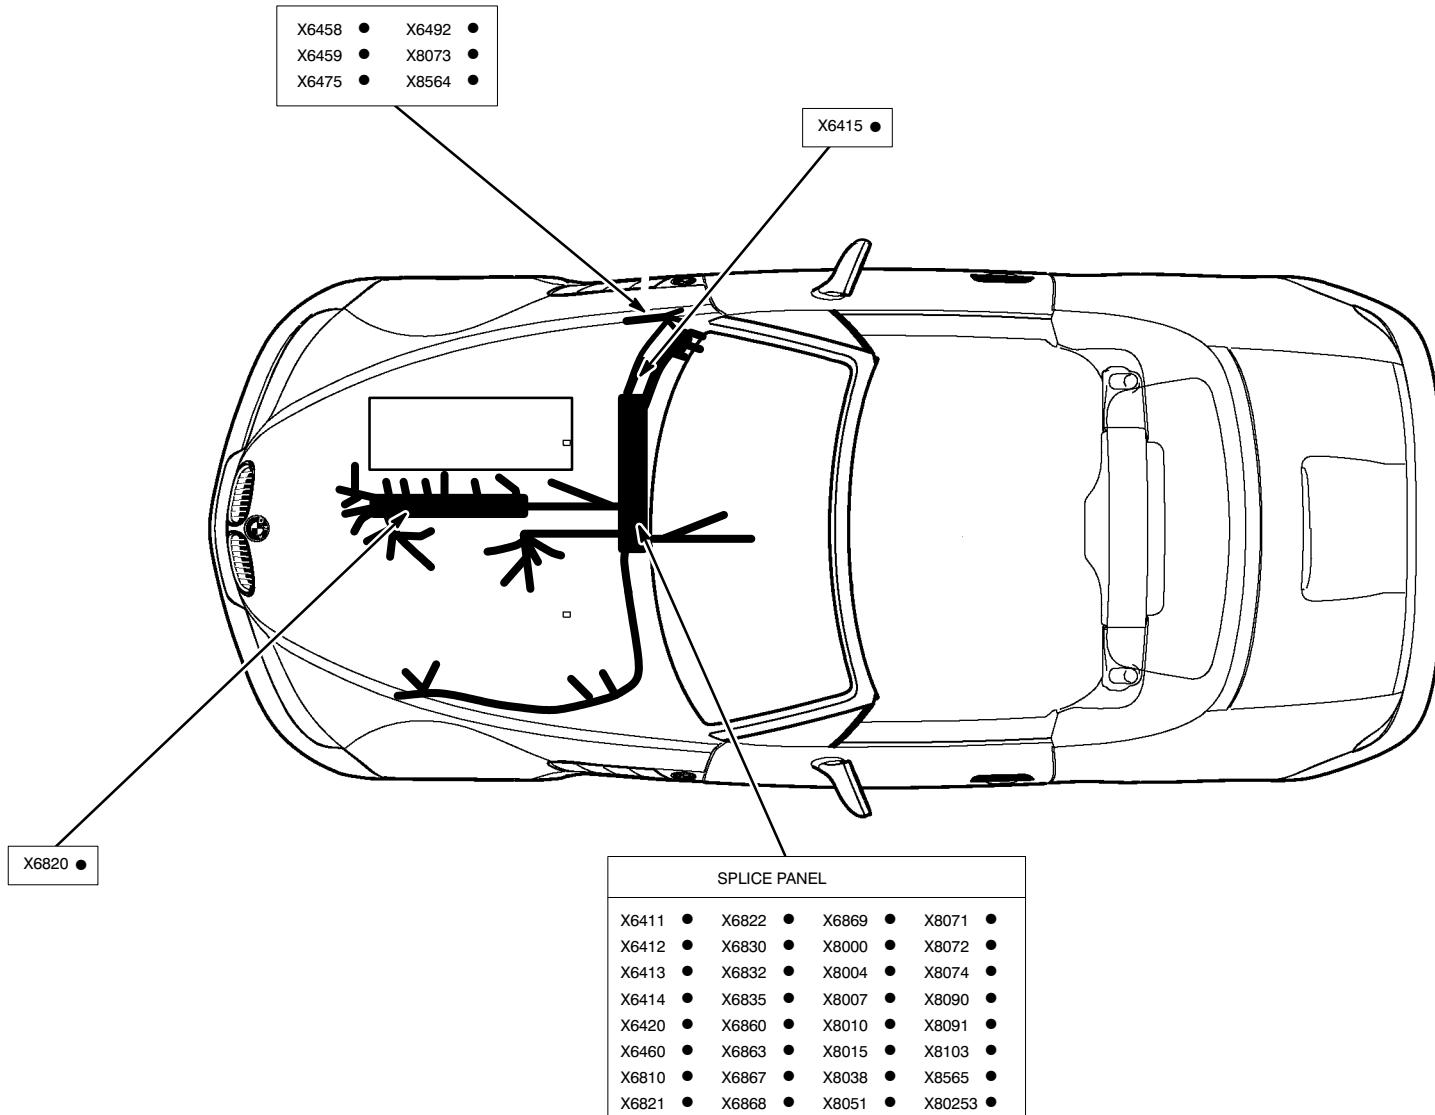

## CONNECTOR VIEWS


03/98

8500.0-00

1997


**FIG. 1**

B880001.00

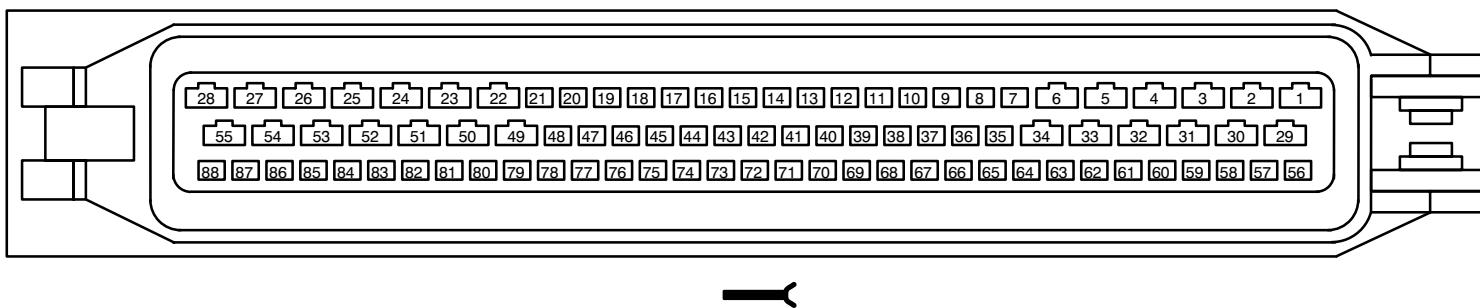


**FIG. 2**

B250004.00

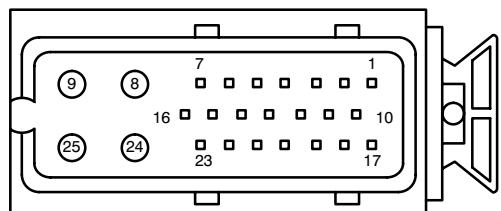

**FIG. 3**

B260005.00

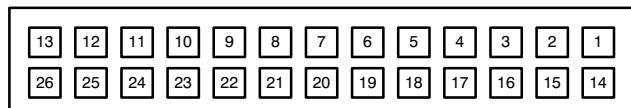

## CONNECTOR VIEWS


03/98

8500.0-01

1997


**FIG. 1**

B030024

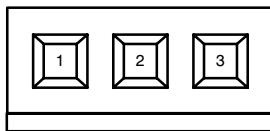


**FIG. 2**

B100004.02

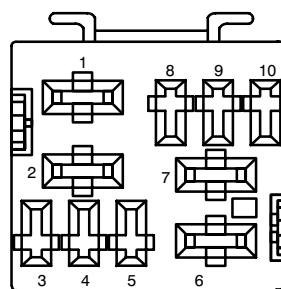


**FIG. 3**

B120001.01

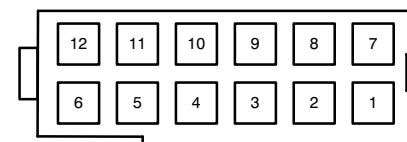


**FIG. 4**

B100001.00

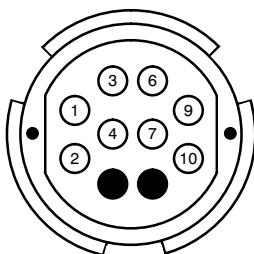


**FIG. 5**

B120002.02

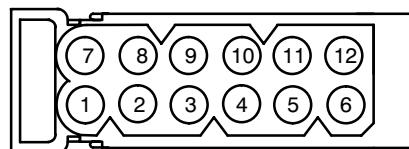

**FIG. 6**


B030018.02

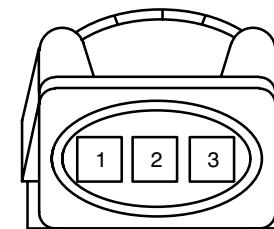

## CONNECTOR VIEWS


**FIG. 1**

B080002.00

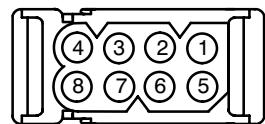


**FIG. 2**

B170001.00

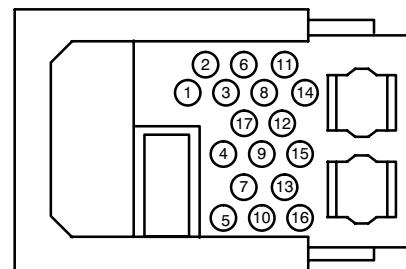


**FIG. 3**

B100008.00

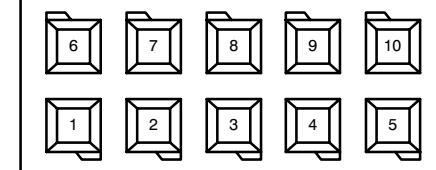


**FIG. 4**

B120004.01

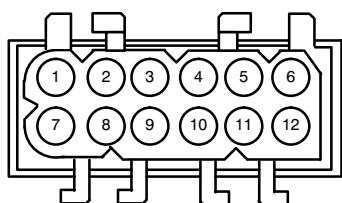


**FIG. 5**

B030004.01

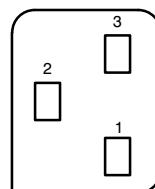


**FIG. 6**

B040023.02

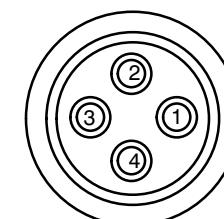


**FIG. 1**

B040004.00

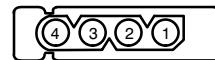


**FIG. 2**

B040023.01

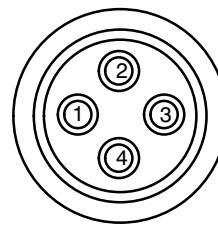


**FIG. 3**

B080001.00

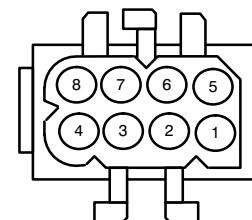


**FIG. 4**

B090002.00

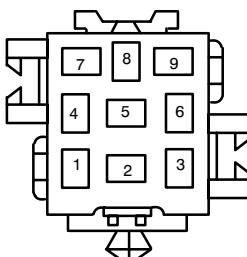


**FIG. 5**






B260002.01

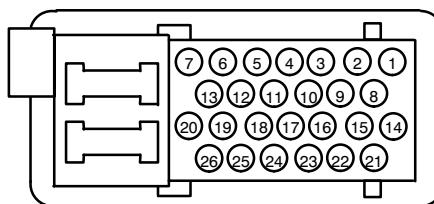

**FIG. 6**

B060001.02

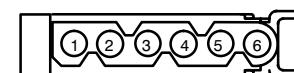

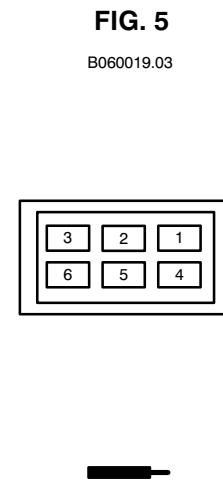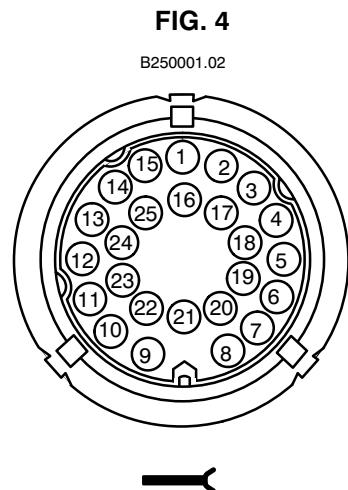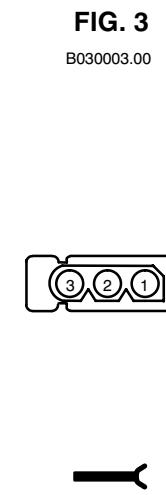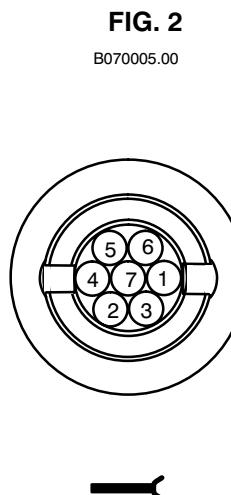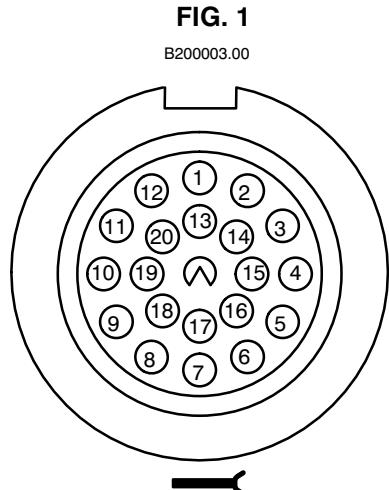

## CONNECTOR VIEWS


03/98

8500.0-05

1997


**FIG. 1**

B150002.00

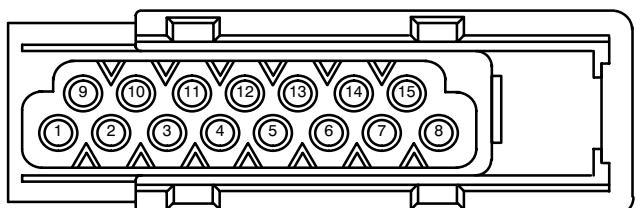


**FIG. 2**

B030036.01

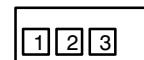


**FIG. 3**

B040027.00

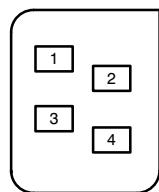

**FIG. 4**

B030006.00

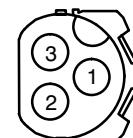

## CONNECTOR VIEWS


03/98

8500.0-06

1997


**FIG. 1**

B0400028.00

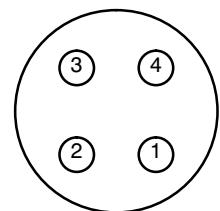


**FIG. 2**

B080020.00

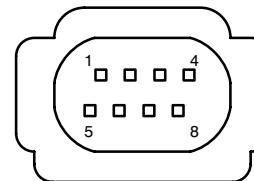


**FIG. 3**

B0300044.00

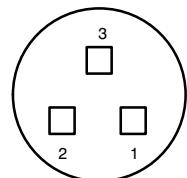


**FIG. 4**

B050001.00

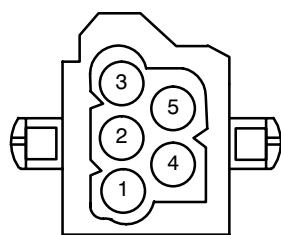

**FIG. 5**

B060041.00

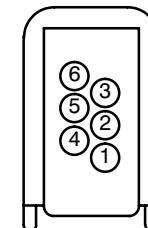

## CONNECTOR VIEWS


03/98

8500.0-07

1997


**FIG. 1**

B040026

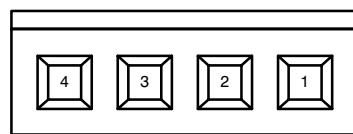


**FIG. 2**

B120006.00

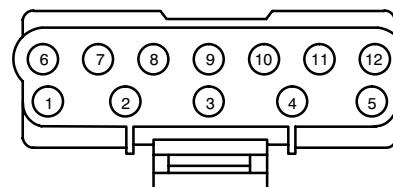


**FIG. 3**

B180000.00

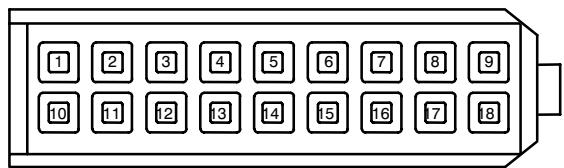


**FIG. 4**

B060037.00

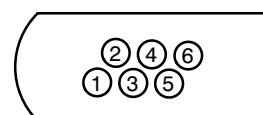

**FIG. 5**

B030042.00

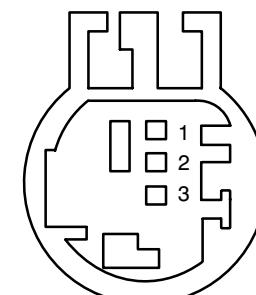

## CONNECTOR VIEWS


03/98

8500.0-08

1997


**FIG. 1**

B160002.00

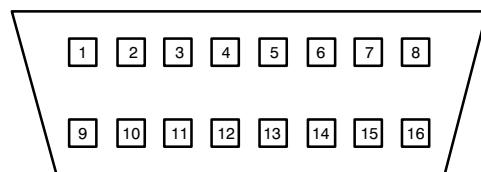


**FIG. 2**

B060013.00

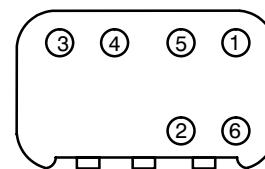


**FIG. 3**

B080013.00

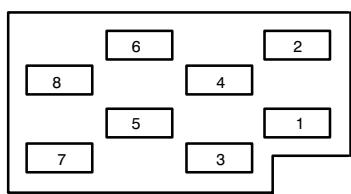

**FIG. 4**

B030015.08

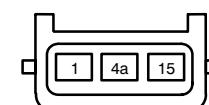

## CONNECTOR VIEWS


03/98

8500.0-09

1997


**FIG. 1**

B090006.01

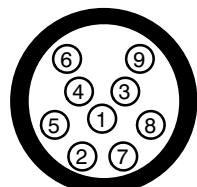


**FIG. 2**

B060043.00

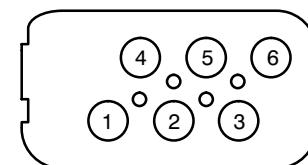


**FIG. 3**

B070012.00

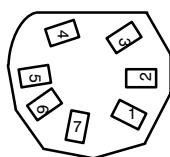

**FIG. 4**

B420000.00

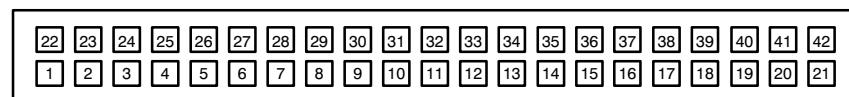

## CONNECTOR VIEWS


03/98

8500.0-10

1997


**FIG. 1**

B030022.00

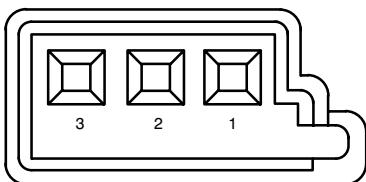


**FIG. 2**

B500000.00

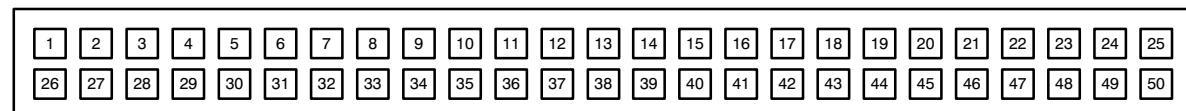

**FIG. 3**

B550002.00

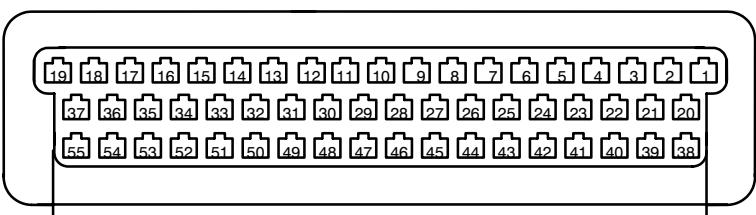

**FIG. 4**

B160001.00

